

User manual Multifunctional Mini Speaker speaker DC



Product appearance and buttons:




Preparation before use:

- Make sure battery has full power before use, or insert DC5V power as an external power supply equipment (minimum supply current >0. 5A).

Charging method:

- Connect the USB charging cable to the speaker DC power input connector or plug the USB cable to USB charger. See the battery level indicator on LCD screen for guideline
- Note: Do not use the charger which over 5. 4V to avoid the components inside the machine damaged.

Button illustration schematic diagram:

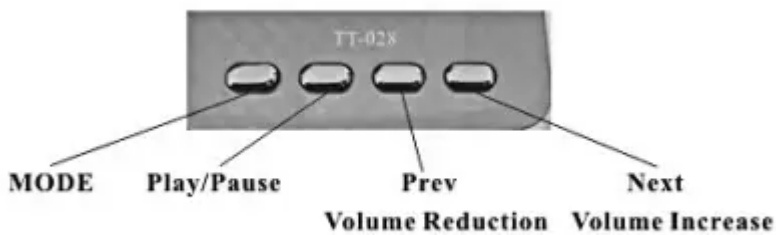

Product Key Features:

"MENU" Button:

- short time press for menu switch, long time press for flash on / off function


"PLAY/ " button:

- Under Micro SD Card / USB mode, short press shall move to PLAY /PAUSE Under FM Radio mode, long press could auto search channel and save channel

Next / PREV Button:

- Under Micro SD Card / USB mode, short press could adjust the music song, long press could adjust the volume Under FM Radio mode, short press could adjust FM channel, long press could adjust the volume

Product jack Description:

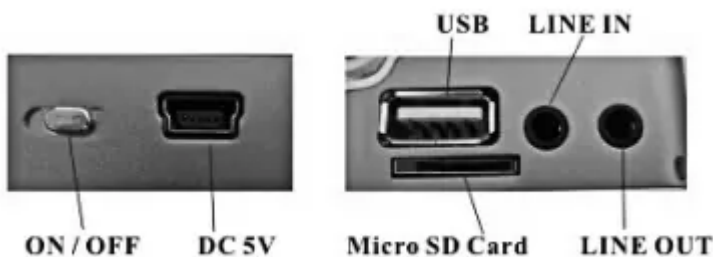

Note: When machine under lower power, may cause work not normally, please do recharge in time!

FAQ:

If can not turn on:

- Please check if the battery is in low power. Please recharge and then try to open again

Bad signal for FM Radio:

- Please see if pull out the FM antenna Please see if there is any electronic equipment to interfere the signal
- Please adjust the machine direction or position.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)