




CONTROLS AND CONNECTIONS

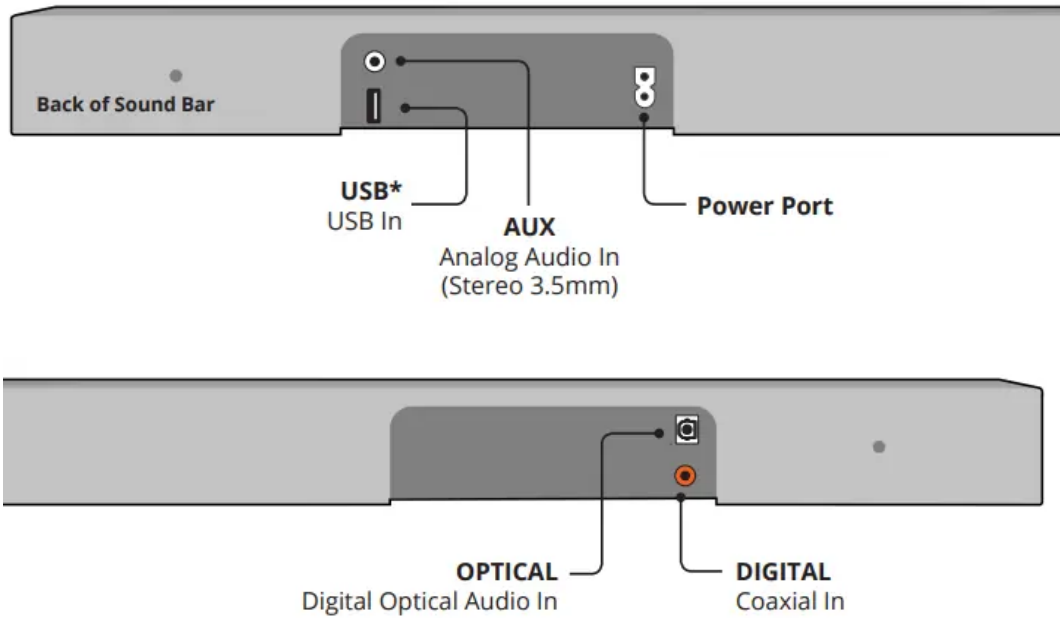


Top of Sound Bar

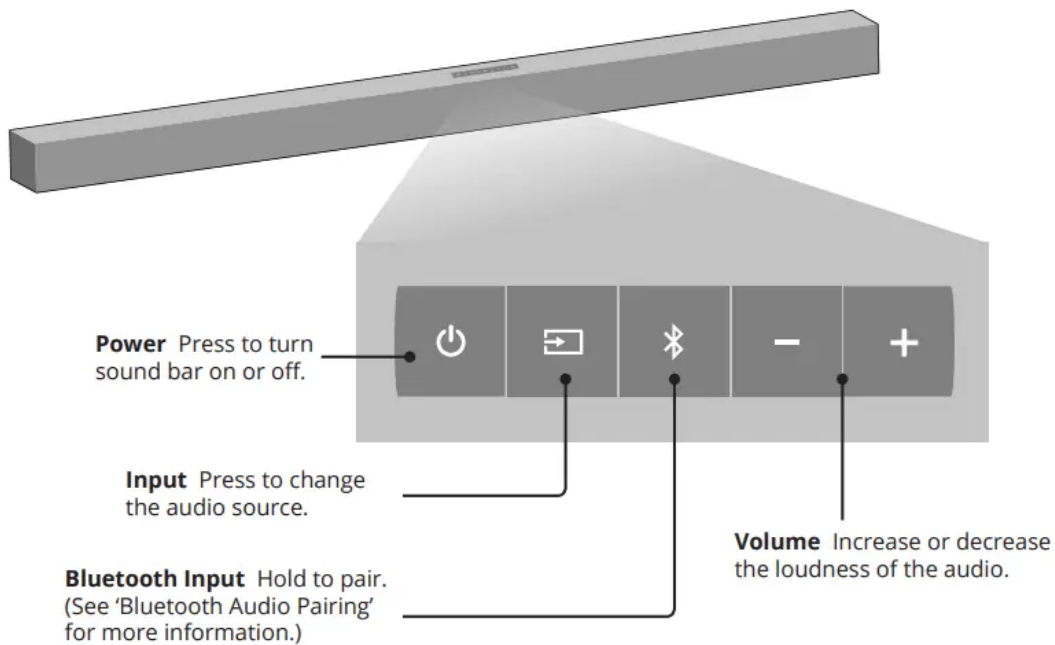

Back of Subwoofer

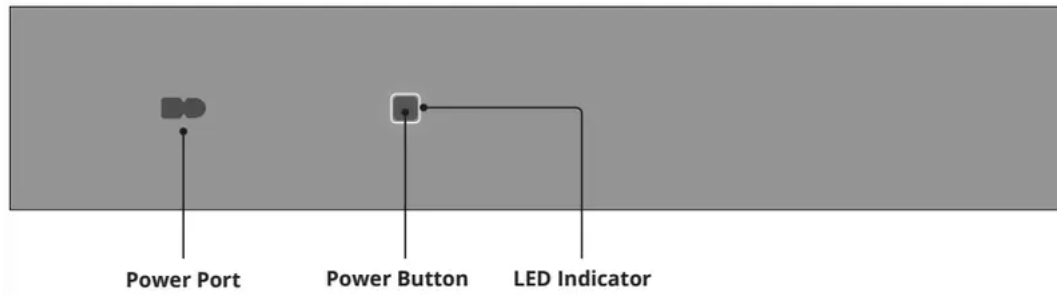


FIRST-TIME SETUP

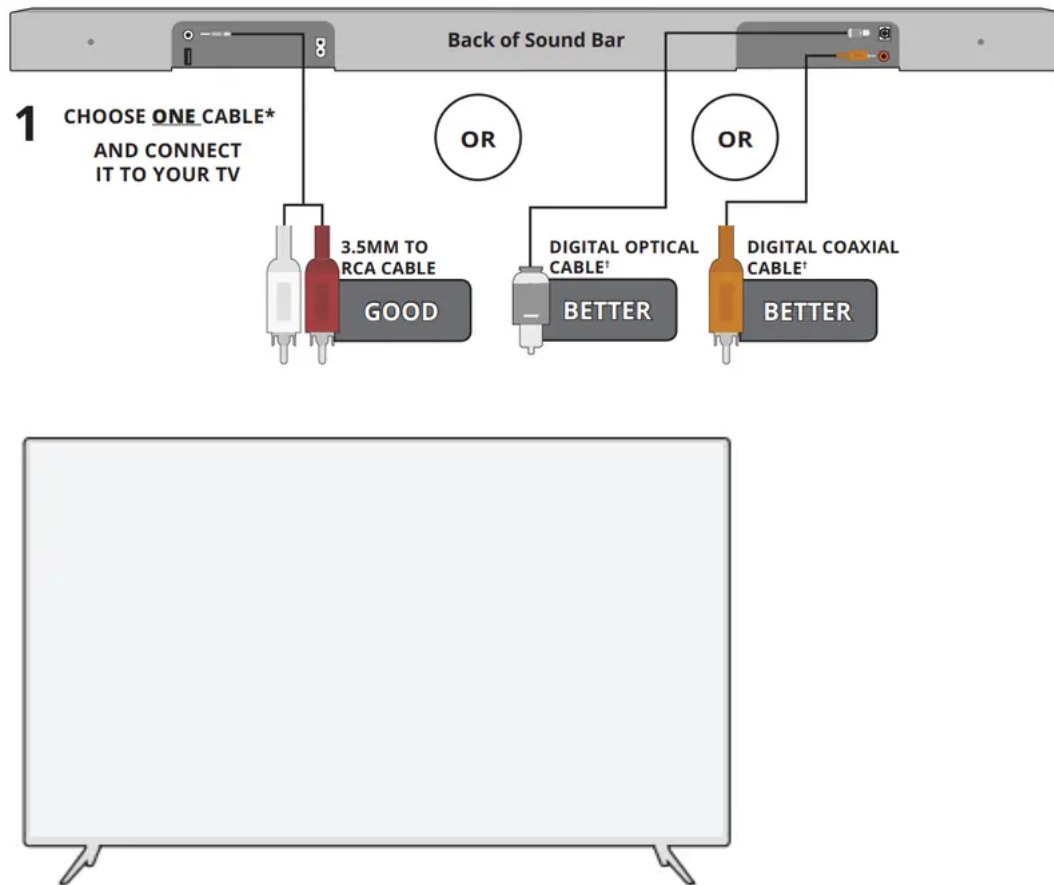

* Not all TVs have the audio outputs shown above. To connect the sound bar directly to your other devices (Blu-ray player, game system, etc.) see your device's user manual.

† When using either of the Digital Inputs, if there is no audio: (A) try setting the TV output to PCM or (B) Connect directly to your Blu-ray/other source, some TVs do not pass through digital audio.

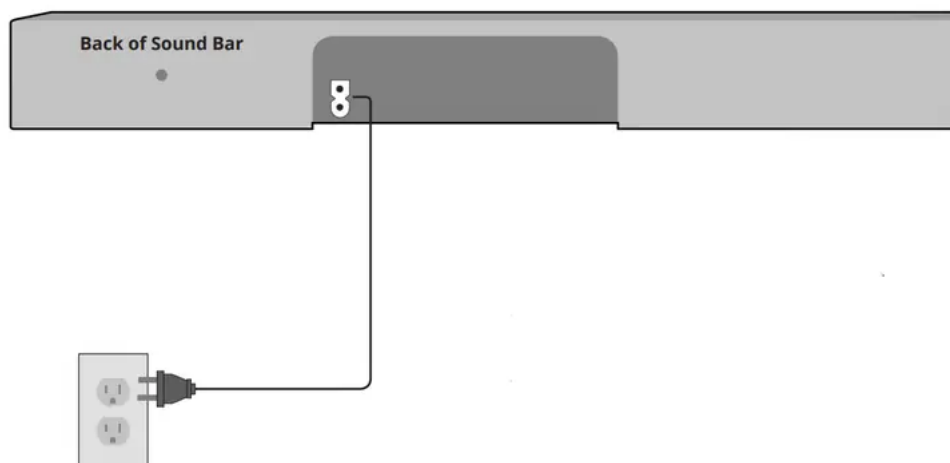

2

Connect the power cable to the sound bar AC IN as shown.

Plug the power cable into an electrical outlet.

The sound bar will automatically begin searching for an active input.*

The LED indicators on the front of the sound bar will begin cycling in pairs through inputs until an audio source is detected.**


Tip: Pressing the INPUT button will stop the auto detect function.

*Occurs only during first-time set up.


**Auto detect function only occurs once when the sound bar is first powered on. To enable this feature again, you must do a Factory Reset (see the Using Button Combinations section for more information) or press and hold the INPUT button for 3 seconds.

Back of Subwoofer




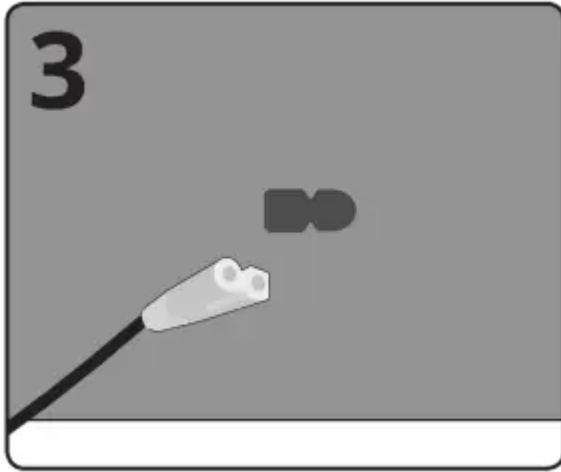

Connect a power cable to the subwoofer.

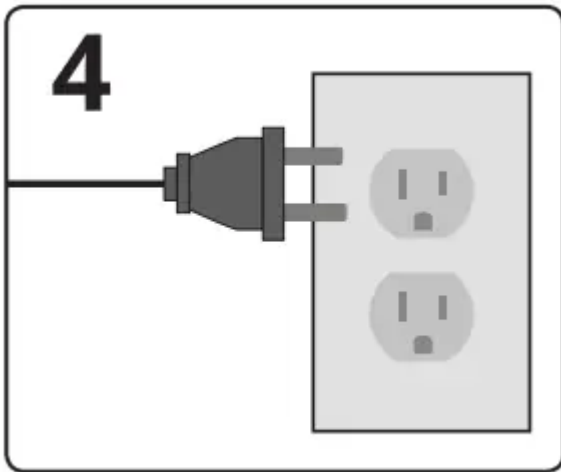

Plug the power cable into a power outlet.

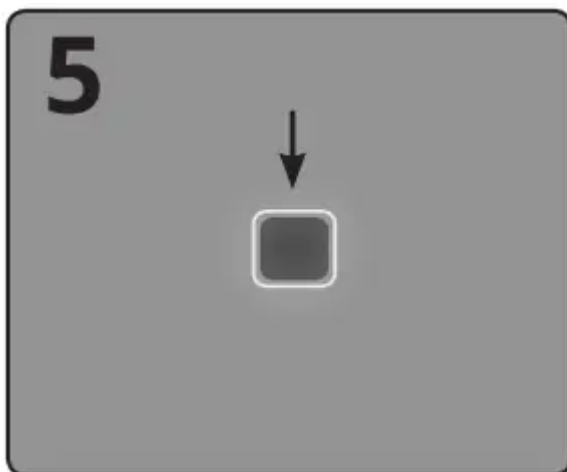

The subwoofer should automatically power on and link to the sound bar when plugged in. The LED will glow to solid to confirm.





Remove the battery cover by gently sliding it away from the remote.

7



Insert the included batteries and gently slide the battery cover back into place.

When needed, VIZIO recommends replacing the batteries that came with this remote with two, new Duracell 'AAA' alkaline batteries.

8

You can press the INPUT button to switch between audio sources. For example, if you connected your TV to AUX, set the sound bar to AUX.




PROPER PLACEMENT

For the best surround sound experience, position the sound bar and subwoofer as shown. The sound bar should be close to ear level. You'll get the best sound effect if your ceiling is flat and 7.5 ft to 12 ft high.


OPTION 1

If your couch permits, you can place the subwoofer underneath it.

Sound bar is centered below the TV.

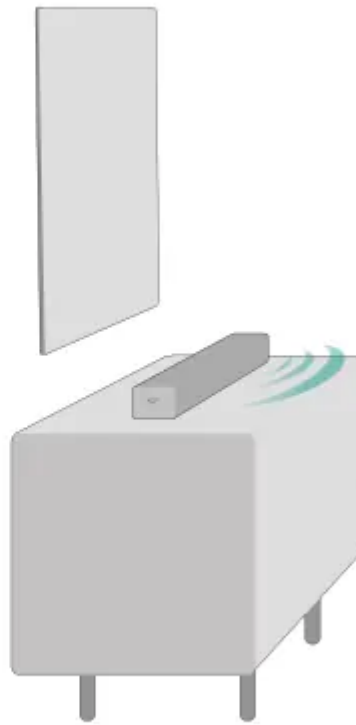

Note: Make sure there is sufficient room to freely place the subwoofer underneath your couch. Do not place the couch directly on top of the subwoofer if there isn't enough room.


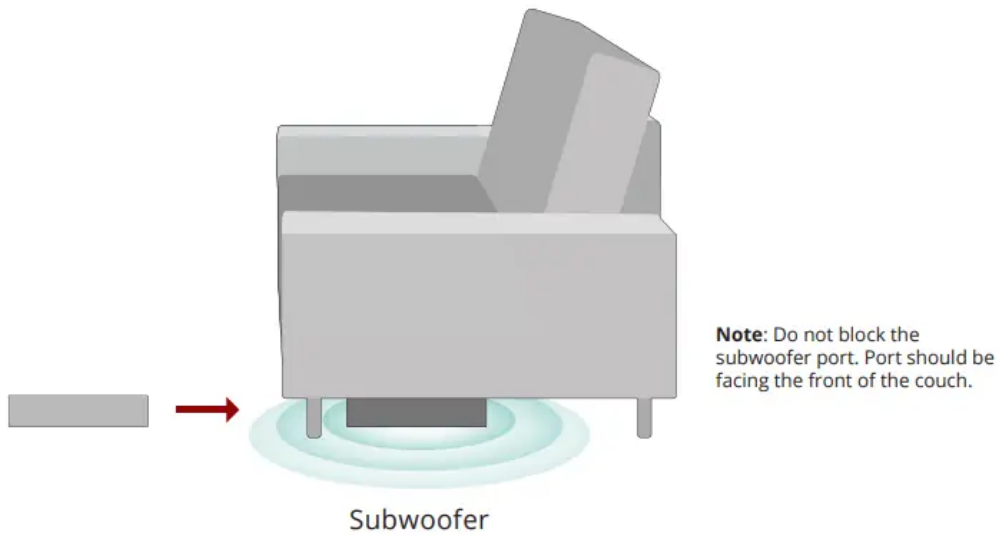


Note: Do not block the subwoofer port. Port should be facing the front of the couch.

OPTION 2

You can also stand the subwoofer upright with the ports facing out.


Sound bar is centered
below the TV.

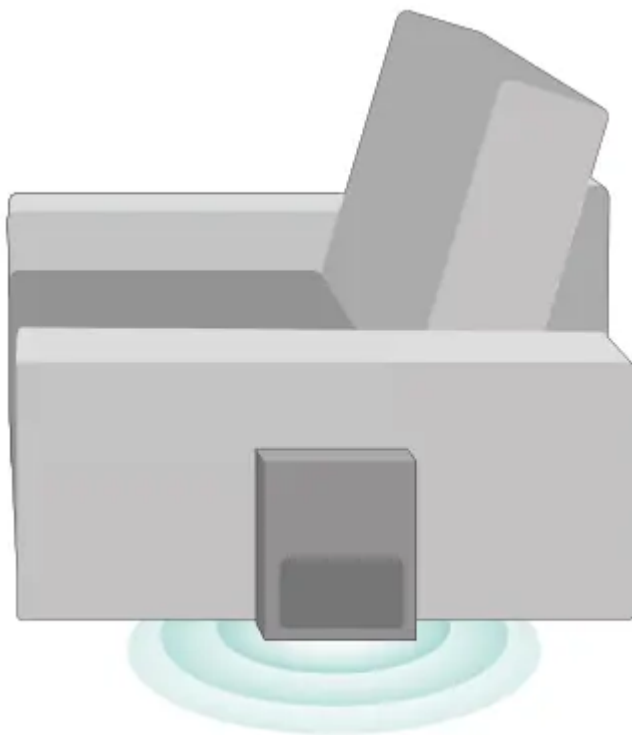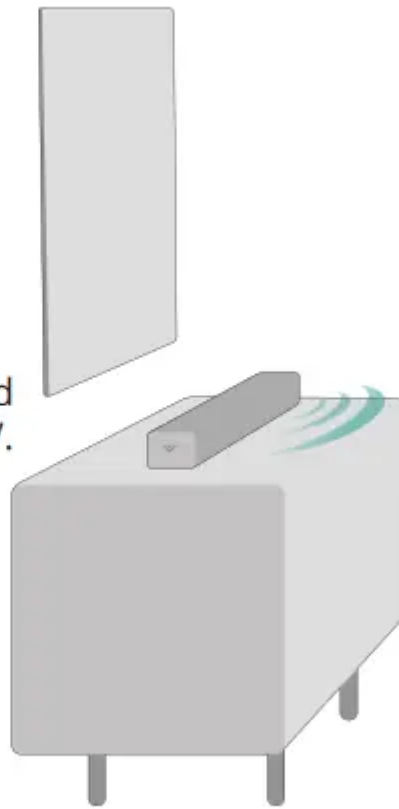

Subwoofer

Note: Do not block the subwoofer port.

USING THE REMOTE

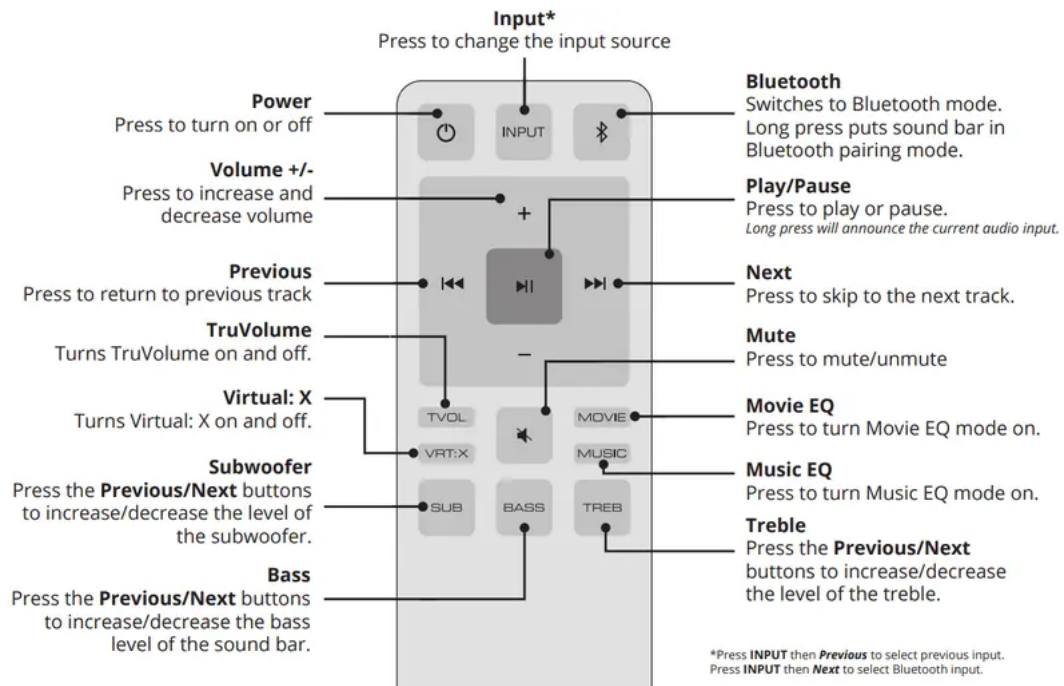

LED INDICATORS

The LED Indicators will behave differently with each button on the remote control.



LED Indicators are located here.

Function	LED Behavior	Description
Input		Press the INPUT button on the remote to cycle through the available inputs: <ul style="list-style-type: none"> •Analog Audio In - AUX Stereo RCA (1) •Coaxial In - Digital (2) •Digital Optical Audio In - Optical (3) •Bluetooth •USB In - USB (4) Press and hold the INPUT button on the remote control for 3 seconds to enable the auto input detect function.
Bluetooth Pairing	<p>(When searching for device) Flash from the bottom to the top and back continuously.</p>	Press and hold the button on the remote. The sound bar will be discoverable for 15 minutes. You can now search for the sound bar (VIZIO SB3621n) using your Bluetooth Device. The sound bar will power down if no device is found. <p>Note: Set your Bluetooth device into pairing mode prior to the Sound Bar.</p>
DTS TruVolume On/Off		Press the TVOL button to enable/disable TruVolume. <p>When enabled (On), TruVolume provides a consistent and comfortable volume level for a more enjoyable listening experience.</p>
Virtual:X On/Off		Press the VRT:X button to enable/disable Virtual:X. When enabled (On), all inputs will produce a virtual sound technology that simulates the effect of having overhead sound. When disabled (Off), all sources will playback in stereo.


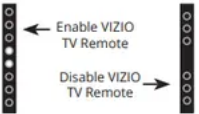

Function	LED Behavior	Description
Movie/Music Mode		Press either the Movie or Music remote button to turn on each equalizer setting. <p>Note: Movie mode is on my default.</p>
Subwoofer Levels	<p>Two center LEDs indicate subwoofer level 0.</p>	Press the SUB button then press the Next/Previous button to increase/decrease the treble level. The LED indicators will move to the top with increasing levels and to the bottom with decreasing levels. When set to the minimum level, the subwoofer will be muted.
Treble Levels	<p>Two center LEDs indicate treble level 0.</p>	Press the TREB button then press the Next/Previous button to increase/decrease the treble level. The LED indicators will move to the top with increasing levels and to the bottom with decreasing levels.
Bass Levels	<p>Two center LEDs indicate bass level 0.</p>	Press the BASS button then press the Next/Previous button to increase/decrease the bass level. The LED indicators will move to the top with increasing levels and to the bottom with decreasing levels.
When a Dolby Audio signal is detected.	<p>Dolby Audio audio format is detected.</p>	Dolby Audio is only available on either the Coaxial In or Digital Optical Audio In inputs. When a Dolby Audio signal is detected, the Dolby Audio indicator LED will light up for 3 seconds before fading away.

USING BUTTON COMBINATIONS

There are 3 functions that are triggered by 3 different button combinations on the sound bar.



Buttons are located here.




Function	LED Behavior	Description
Factory Reset	 All LEDs will flash 3 times	Reset the sound bar to the factory default settings. To perform a Factory Reset, Press and Hold the Bluetooth (⌘) and Volume Down (—) buttons for 5 seconds. Note: This will erase all settings and preferences that you have set.
VIZIO TV Remote Control	 ← Enable VIZIO TV Remote Disable VIZIO TV Remote →	Enable/disable the use of a VIZIO TV remote control to power on and adjust the volume of the sound bar. To enable/disable this function, Press and Hold the Power (⏻) and Volume Up (+) buttons for 5 seconds.
Energy Star/ Ecomode	 ← Enable Energy Star Disable Energy Star →	When the Energy Star setting is enabled, the sound bar will automatically power down after a period of inactivity. When disabled, the sound bar will remain powered on until you turn it off. To enable/disable this function, Press and Hold the Power (⏻) and Volume Down (—) buttons for 5 seconds. Note: Energy Star setting is enabled by default.


PROGRAMMING THE SOUND BAR

You can program your sound bar to accept TV remote IR commands. Press the Menu button on the remote, then use the Up/Down buttons to navigate to Prg Remote. Use the Next/Previous buttons to toggle through Learn Vol -, Learn Vol +, and Learn Mute.

Function	LED Behavior	Description
Learn Volume Down Learn Vol-	 (Waiting to learn) Flash from bottom to top and back continuously.	Press the Play and Volume Down buttons to put the sound bar into learning mode. While the sound bar is in learning mode, press the Volume Down button on the TV remote control. All of the LED Indicators on the sound bar will flash two times indicating that it has successfully recognized the TV remote.
Learn Volume Up Learn Vol+		Press the Play and Volume Up buttons to put the sound bar into learning mode. While the sound bar is in learning mode, press the Volume Up button on the TV remote control. All of the LED Indicators on the sound bar will flash two times indicating that it has successfully recognized the TV remote.
Learn Mute Learn Mute	 All of the LEDs will blink twice to confirm.	Press the Play and Mute buttons to put the sound bar into learning mode. While the sound bar is in learning mode, press the Mute button on the TV remote control. All of the LED Indicators on the sound bar will flash two times indicating that it has successfully recognized the TV remote.




Turn off your TV speakers when programming your sound bar.



Point both the sound bar and TV remotes towards the front of the sound bar when programming.

BLUETOOTH AUDIO PAIRING

To pair the sound bar with a Bluetooth device:


1. Press and hold the **Bluetooth** button  on the sound bar for five (5) seconds or select the Bluetooth button on the remote. When the sound bar is in Bluetooth Pairing Mode, the LED

Indicators on the display panel on the front of the sound bar will light sequentially from bottom to top and back again.

Once the device is paired, the LED Indicators will stop flashing.

2. You can now search for the sound bar (VIZIO SB3621n*) using your Bluetooth device. For more information, refer to the user documentation that came with the device.

3. Play audio from your Bluetooth device. Volume can be controlled on your source device and the sound bar.

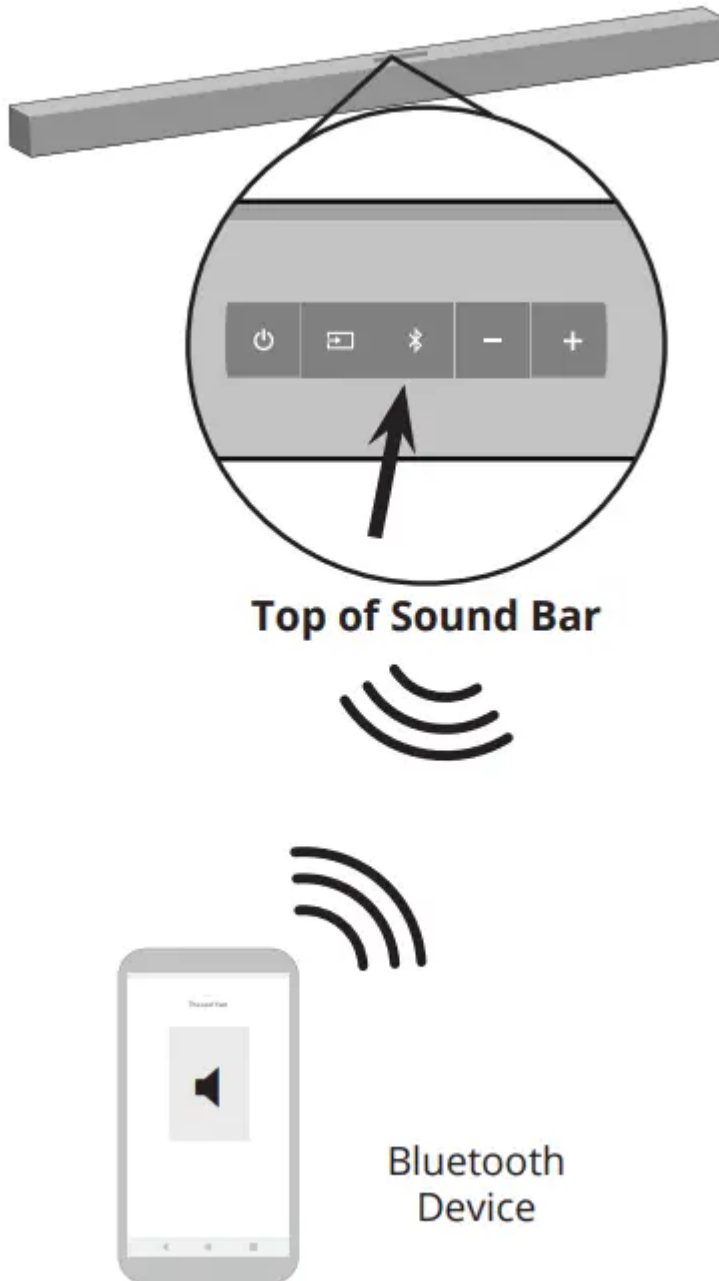

USING BLUETOOTH MODE

Your sound bar supports music streaming from smart phones, tablets, and computers with Bluetooth capability. Device compatibility will vary, see your device's documentation for more information. Once you have paired your source device to the sound bar, as long as you stay within range of the sound bar, your device should remain paired. If the input is changed, the Bluetooth device will disconnect. If the source is changed back to Bluetooth, any paired Bluetooth device will reconnect automatically.



Your sound bar is not equipped with a microphone, so it cannot operate as a hands-free device for a smart phone.

Maximizing Signal


A Bluetooth signal has a range of up to 30 feet. Keep in mind that Bluetooth is a compressed audio format, so streamed music may lose some integrity when compared to a wired connection.

Try the following if your sound quality is less than optimal:

- If you hear any break-up or disconnect while streaming music from your device, move the source device closer to the sound bar.
- Be sure that there are no solid obstructions in the line-of-sight between the sound bar and the source device.
- Other wireless devices can affect Bluetooth range, including wireless security cameras, wireless video baby monitors, cordless phones, and microwave ovens. Turning off or moving these devices may improve Bluetooth range.

Note: Reduce the volume levels on your device and on the sound bar before pressing Play. High volume levels can damage your hearing.

ADVANCED SETUP

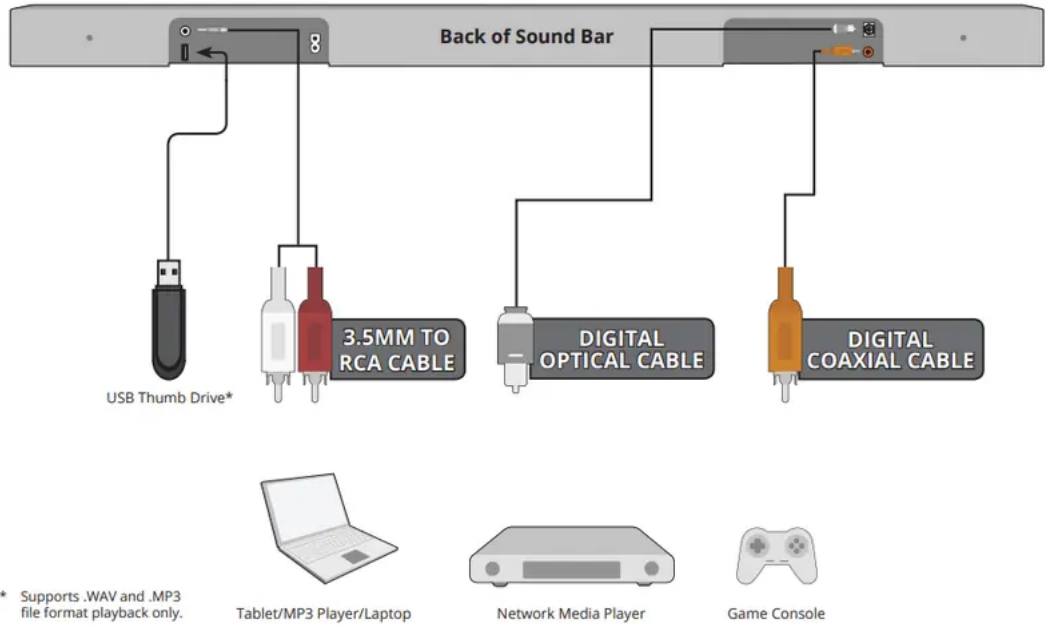

CONNECTING A SUBWOOFER




The subwoofer has already been paired with the sound bar by VIZIO. However, the subwoofer may need to be re-linked to the sound bar if there is no sound coming from the subwoofer.




What does pairing mean? Pairing means to wirelessly connect.



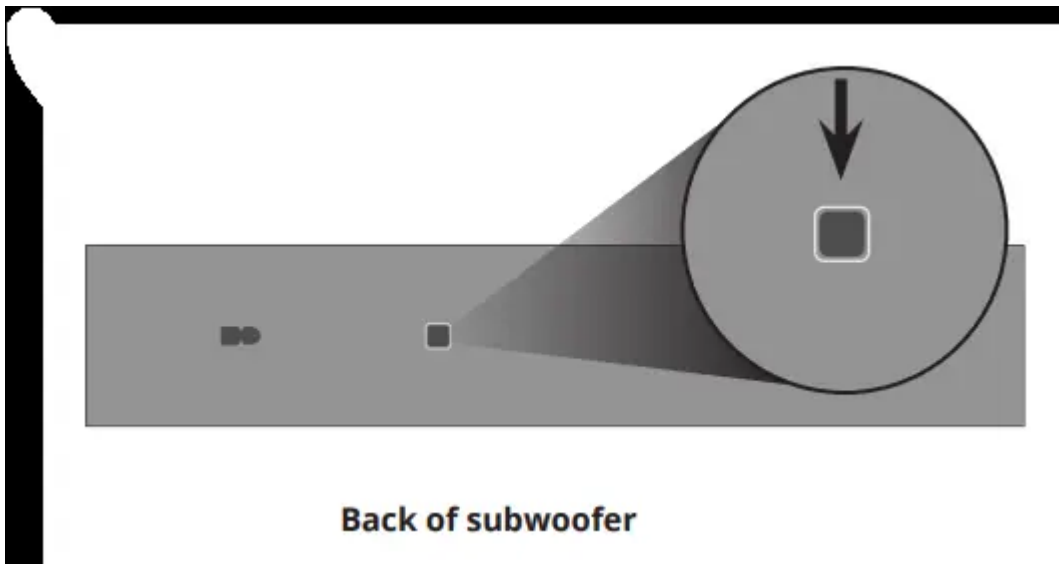

First confirm that the power LED is illuminated. Press and hold the ON/OFF button on the back of the subwoofer for 5 seconds. The LED on the back of the subwoofer will begin to blink.


2

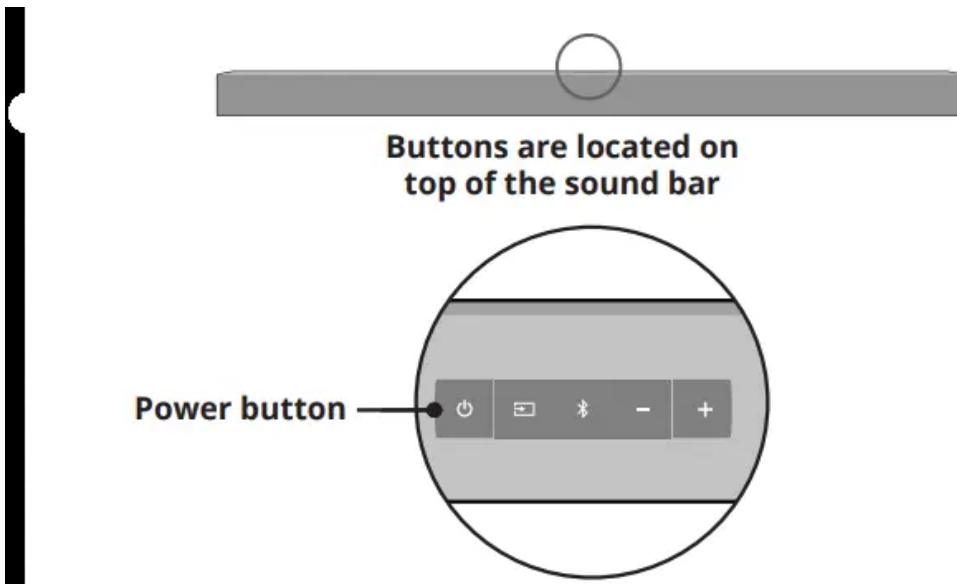

Press and hold the Power button on the top of the sound bar for 5 Seconds. The LED indicators on the front will flash 3 times. The subwoofer is now linked with the sound bar.

WALL-MOUNTING THE SOUND BAR

1

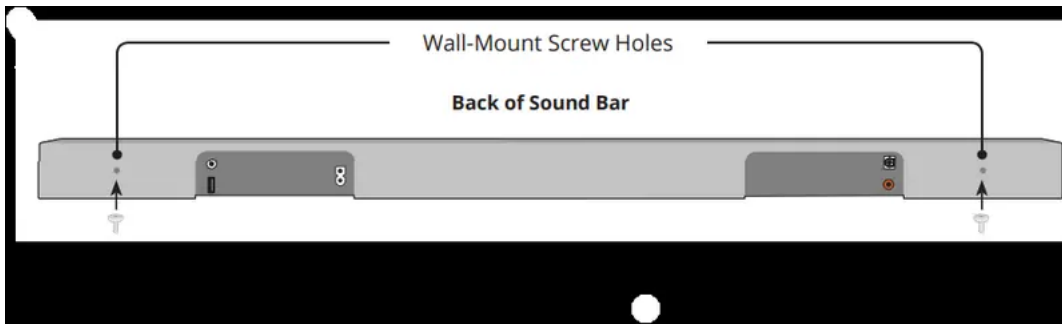

Insert the two wall-mount screws into the wall-mount screw holes, and then tighten them with a Phillips screwdriver.

2




Place the included wall mounting template against the wall under your TV. Mark the two bracket holes using a pencil.

3

Be sure your screws are attached to wood studs, drywall anchors (for drywall), or concrete anchors (for brick/concrete walls).

Screws for attaching the brackets to the wall are not included. Choose the screw type and length appropriate to your home's construction. If in doubt, consult a professional installer.

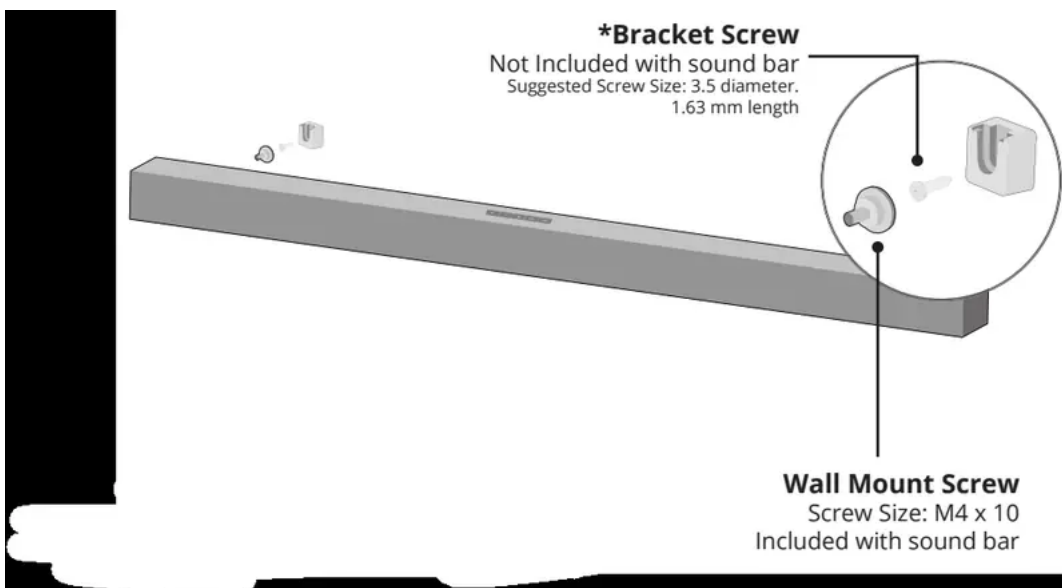

Note: If you are unfamiliar with power tools or the layout of electrical wiring in the walls of your home, consult a professional installer.

HELP & TROUBLESHOOTING

<p>There is no power.</p>	<ul style="list-style-type: none"> • Press the POWER button on the remote control or on the top of your sound bar. • Ensure the power cord is securely connected. • Plug a different device into the electrical outlet to verify that the outlet is working correctly.
<p>There is no sound.</p>	<ul style="list-style-type: none"> • Increase the volume. Press Volume Up on the remote control or on the top of your sound bar. • Press MUTE on the remote to ensure the sound bar is not muted. • Press INPUT on the remote or on the top of your sound bar to select a different input source. • When using either of the Digital Inputs, if there is no audio: (A) Try setting the TV output to PCM or (B) Connect directly to your Blu-ray/other source, some TVs do not pass through digital audio. • On digital inputs, the input LEDs will flash rapidly if an unsupported format is present. Set the source to output PCM. • Your TV may be set to variable audio output. Confirm that the audio output setting is set to FIXED or STANDARD, not VARIABLE. Consult your TV's user manual for more detailed information. • If using Bluetooth, ensure that the volume on your source device is turned up and that the device is not muted.
<p>I hear buzzing or humming.</p>	<ul style="list-style-type: none"> • Ensure all cables and wires are securely connected. • Connect a different source device (TV, Blu-ray player, etc) to see if the buzzing persists. If it does not, the problem may be with the original device. • Connect your device to a different input on the Sound Bar.
<p>The remote isn't working.</p>	<ul style="list-style-type: none"> • Replace the remote batteries with new ones. • Point the remote directly at the center of the sound bar when pressing a button. • If using a Bluetooth connection, some of the buttons on the remote may not be supported by the streaming



application (e.g., Pandora doesn't support the Back button).

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

