

## SPECIAL INSTRUCTIONS

- To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.
- If an extension cord is absolutely necessary, a 15-ampere and 120-volt should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## SAVE THESE INSTRUCTIONS.

This product is for household use only.

### POLARIZED PLUG


This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

### TAMPER-RESISTANT SCREW

Warning: This appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. To reduce the risk of fire or electric shock, do not attempt to remove the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

Note: If the power supply cord is damaged, it should be replaced Note: by qualified personnel or in Latin America by an authorized service center.

**Product may vary slightly from what is illustrated.**

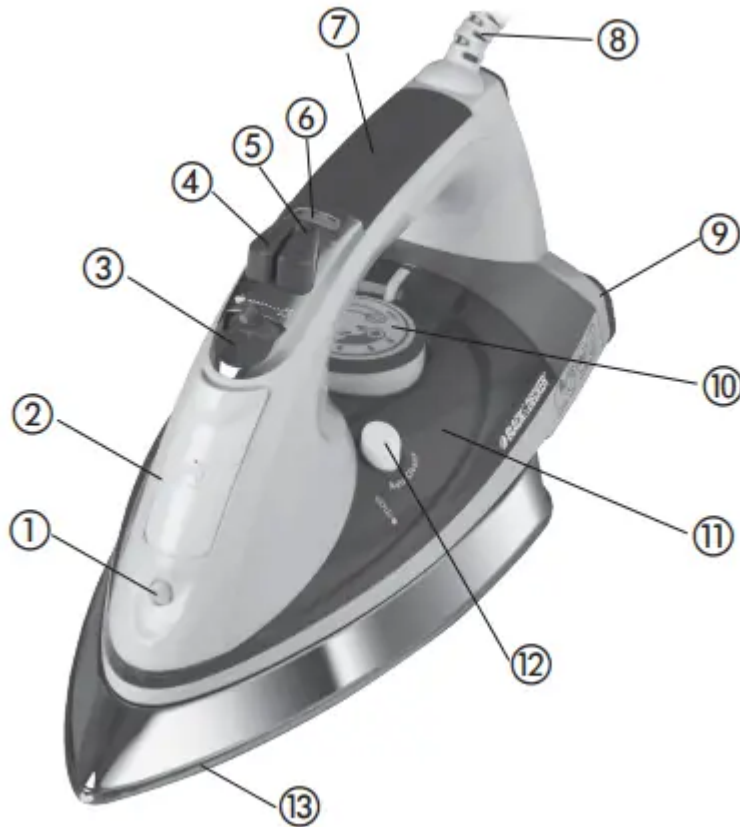

1. Spray nozzle
2. Water-fill cover
3. Variable steam selector
4. Steam button
5. Spray button
6. Power indicator light
7. Comfort Grip™ handle
8. 360° pivoting cord
9. Heel rest
10. Fabric-select dial
11. Water tank
12. Auto Clean® button
13. Soleplate

## How to Use

This product is for household use only.

### GETTING STARTED

- Remove any labels, stickers or tags attached to the body or soleplate of the iron.

- Please go to [www.prodprotect.com/applica](http://www.prodprotect.com/applica) to register your warranty.

Note: Use ordinary tap water for ironing. Do not use water processed through a home softening system.

Important: For optimum performance, let the iron stand for 90 seconds before beginning to iron.

Tip: If unsure of a garment's fiber, test a small area (on an inside seam or hem) before ironing.

### **FILLING WATER TANK**

1. With iron on a flat surface with soleplate down or tilted at a 45-degree angle, open the water-fill cover.
2. Using a clean measuring cup, pour water into opening until water reaches the MAX level mark on the side of the water tank. Do not overfill.

### **AUTOMATIC SHUTOFF IN 3 POSITIONS**

1. The iron will automatically turn to stand by mode after 30 seconds of inactivity if left on its soleplate or on its side. If left vertically on its heel rest, it will turn off after 8 minutes.
2. The red power indicator light starts blinking to let you know the iron has stopped heating.
3. Once the iron is picked up, an internal motion sensor is activated and the iron starts heating again.
4. Allow iron to reheat completely before resuming ironing.

### **SELECTING FABRIC SETTING**


1. Read fabric labels to help determine fabric type to be ironed.
2. Once you determine the fabric type, turn the fabric-select dial to select the appropriate fabric setting.

Important: Always stand the iron on its heel when powered on but not in use.

### **USING VARIABLE STEAM**

Be sure the water tank is filled. Note:

1. This iron produces steam at settings 4 through 6. Turn the fabric-select dial to the appropriate setting for your fabric.
2. Push the variable steam selector to desired amount of steam. The higher the setting selected, the more powerful the steam.

Note. For no steam, the variable steam selector should be set to the 

### **STEAM BUTTON**


Note: Be sure the water tank is filled.

1. With the water tank filled to the MAX mark, turn the fabric select dial to appropriate setting (between 4 and 6) and let iron stand on its heel rest about 90 seconds.

2. Press the steam button to generate a burst of steam. For best performance, leave an interval of 5 seconds between bursts.

Note: On first use, pump the steam button several times.

### **HORIZONTAL STEAM IRONING**

1. Fill water reservoir to MAX line.
2. Turn the fabric select dial to select desired setting.
3. Set the variable steam selector to desired amount of steam.
4. When finished ironing, turn the fabric-select dial to the lowest setting. Make sure the variable steam selector is set to dry  and unplug the iron.
5. Stand the iron on its heel rest and allow it to cool off.

### **VERTICAL STEAMING**

Use to remove wrinkles or creases from hanging garments or drapes.

1. Turn the fabric-select dial to select desired setting for the fabric to be ironed.
2. Hold iron close to, but not touching fabric.
3. Pull fabric taut with your free hand and press the steam button as you move the iron over the fabric.
4. For best performance, leave an interval of 5 seconds between bursts.

Important: Do not bring iron too close to hand holding fabric to avoid heat.

### **SPRAY BUTTON**


Note: Be sure the water tank is filled.

1. Press the spray button to generate a spray of water.

Note: On first use, pump the spray button several times.

Important: Do not spray silk.

### **DRY IRONING**

1. Set the variable steam selector to .
2. Turn the fabric-select dial to appropriate setting for your fabric.
3. When finished ironing, make sure to unplug the iron.

Important: Always stand the iron on its heel rest when powered on or not in use.

## **Care and Cleaning**

This product contains no user serviceable parts. Refer service to qualified service personnel.

## CLEANING

1. Make sure iron is unplugged and has cooled completely. Wipe the soleplate and outer surfaces with a soft cloth dampened with water and mild household detergent. Never use abrasives, heavy-duty cleansers, vinegar or scouring pads that may scratch or discolor the iron.
2. After cleaning, steam iron over an old cloth to remove any residue from the steam vents.


## AUTO CLEAN™ SYSTEM

To keep the steam vents free of any buildup, follow these instructions about once a month.

1. Fill the water tank well below MAX line. Plug in the iron.
2. Select fabric setting 6 on the fabric-select dial and stand the iron on its heel rest.
3. Wait 2 minutes for the iron to heat fully, then unplug the iron.
4. Hold iron over a sink with the soleplate facing down.
5. Press the Auto Clean™ button.
6. Continue to hold Auto Clean™ button until all the water has emptied. If necessary, move iron side-to-side and front-to-back.
7. When finished, release the button, stand the iron on its heel rest and plug it in. Heat for about 2 minutes to dry out any remaining water.

Important: Be careful, as after several seconds, hot water and steam will come out of the steam vents\_

## STORING YOUR IRON

1. Unplug the iron and let it cool completely.
2. Check that the fabric-select dial is set to .
3. Store iron on its heel rest.

## NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this book. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this manual.

## TWO-YEAR LIMITED WARRANTY

Applies only in the United States and Canada)

### **What does it cover?**

- Any defect in material or workmanship provided; however, Applica's liability will not exceed the purchase price of product.

### **For how long?**

- Two years from the date of original purchase with proof of such purchase.

### **What will we do to help you?**

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

### **How do you get service?**

- Save your receipt as proof of date of sale.
- Visit the online service website at [www.prodprotect.com/applica](http://www.prodprotect.com/applica), or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

### **What does your warranty not cover?**

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

### **How does state law relate to this warranty?**

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

#### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.