
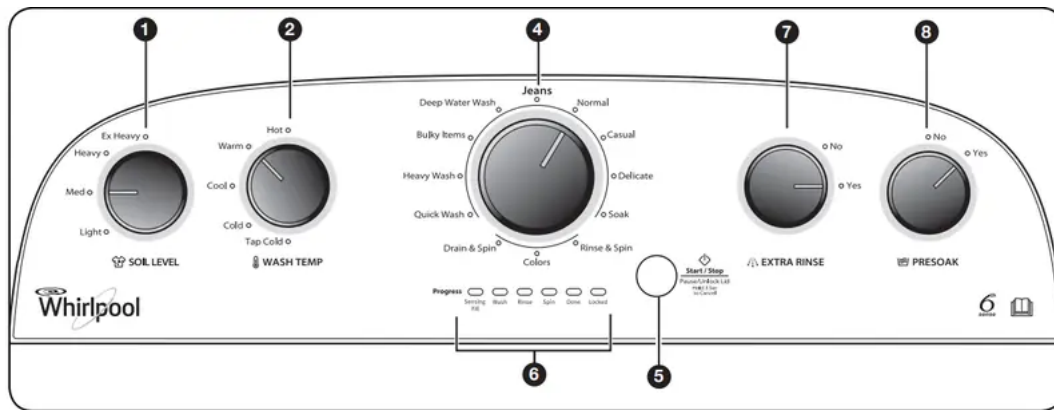


Control Panel and Features

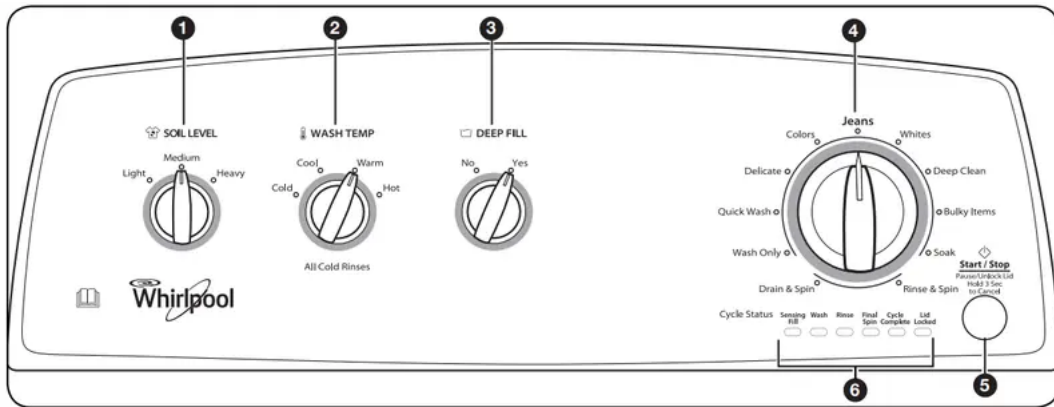

1. SOIL LEVEL

Soil Level settings adjust the agitation time as needed for your load. The Light setting is for lightly soiled garments and the Heavy setting is for garments that need a longer wash time to release the soils from the fabric.

2. WASH TEMP

Temperature Control senses and maintains uniform water temperatures by regulating incoming warm and cool water. This ensures the correct temperature is used to maximize cleaning while protecting the garments.

Select a wash temperature based on the type of fabric and soils being washed. For best results and following the garment label instructions, use the warmest wash water safe for your fabric.

3. DEEP FILL (on some models)

Set at “Yes” to add extra water to any cycle. Water will be added automatically, with the amount determined by the size of the load.

4. WASH CYCLE KNOB



Use the Wash Cycle knob to select available cycles on your washer. Turn the knob to select a cycle for your laundry load. See “Cycle Guide” for detailed descriptions of cycles.

 
5. START/STOP/PAUSE/UNLOCK LID BUTTON

- Press to start the selected cycle.
- Press again to pause the cycle and unlock the lid.
- Press and hold for 3 seconds to cancel a cycle.

Use to Manually Soak Garments:

Press START/STOP/PAUSE/UNLOCK LID and keep the lid closed. After items have soaked for the desired time, press START/STOP/PAUSE/UNLOCK LID to resume the wash cycle.

6. CYCLE STATUS LIGHTS INDICATOR




The Cycle Status Lights show the progress of a cycle. At each stage of the process, you may notice sounds or pauses that are different from traditional washers.

SENSING FILL




When the Start/Stop/Pause/Unlock Lid button is pressed, the washer will fill with water and begin the wash cycle.

 WASH




You will hear the agitator moving the load. The motor sounds may change at different stages in the cycle. The wash time is determined by the selected soil level.

 RINSE




You will hear sounds similar to the wash cycle as the washer rinses and moves the load. You may hear the motor turning on briefly (short hum) to move the basket while filling.

 FINAL SPIN/SPIN





The washer spins the load at increasing speeds for proper water removal, based on the selected cycle.

 CYCLE COMPLETE/DONE



Once the cycle is complete, this light will come on. Remove the load promptly for best results.

LID LOCKED/LOCKED
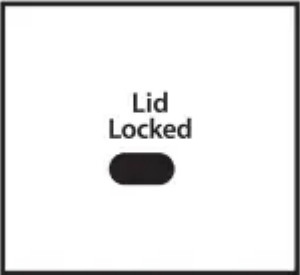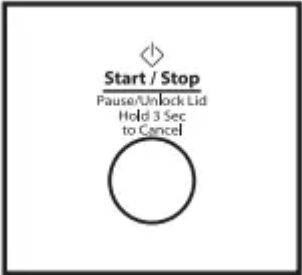
<p>To allow for higher spin speeds, the lid will lock and the Lid Locked light will turn on. When this light is lit, the lid is locked and cannot be opened. When this light is off, the lid is unlocked and can be opened.</p>	
<p>If you need to open the lid, press START/ STOP/PAUSE/UNLOCK LID. The lid will unlock once the washer movement has stopped. This may take several minutes if the load was spinning at high speed. Press START/ STOP/PAUSE/UNLOCK LID again to resume the cycle.</p>	

7. EXTRA RINSE (on some models)

This option can be used to automatically add a second rinse to most cycles.


NOTE: To open the lid during the rinse or extra rinse phase after the first spin, you must first press START/STOP/ PAUSE/UNLOCK LID to unlock the lid.

8. PRESOAK (on some models)

This option can be used to automatically add a presoak time to a wash cycle. Items will gently tumble through the detergent and water for the selected time to help loosen tough stains.


Using Your Washer

1. Sort and prepare your laundry

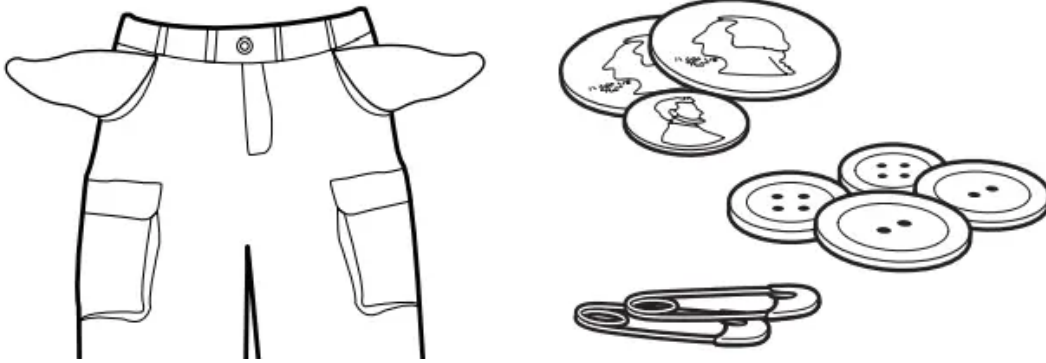

- Empty pockets. Loose change, buttons, or any small object can pass under the agitator and become trapped, causing unexpected sounds.
- Sort items by recommended cycle, water temperature, and colorfastness.
- Separate heavily soiled items from lightly soiled.
- Separate delicate items from sturdy fabrics.
- Do not dry garments if stains remain after washing because heat can set stains into fabric.
- Treat stains promptly.
- Close zippers, fasten hooks, tie strings, and sashes and remove non-washable trim and ornaments.
- Mend rips and tears to avoid further damage to items during washing.

2. Add laundry products

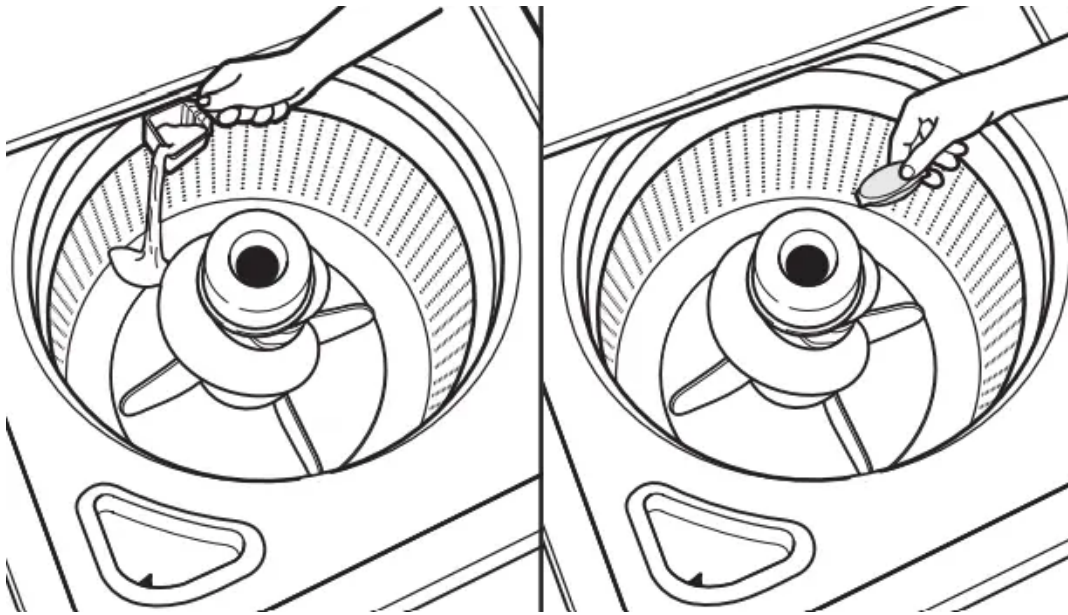


Add a measured amount of detergent (powder or liquid) or single-dose laundry packet into the basket.

If using Oxi-type boosters, color-safe bleach, or fabric softener crystals, add to the bottom of the washer basket before adding clothes.


NOTE: Follow the manufacturer's instructions to determine the amount of laundry products to use.

3. Load laundry into washer

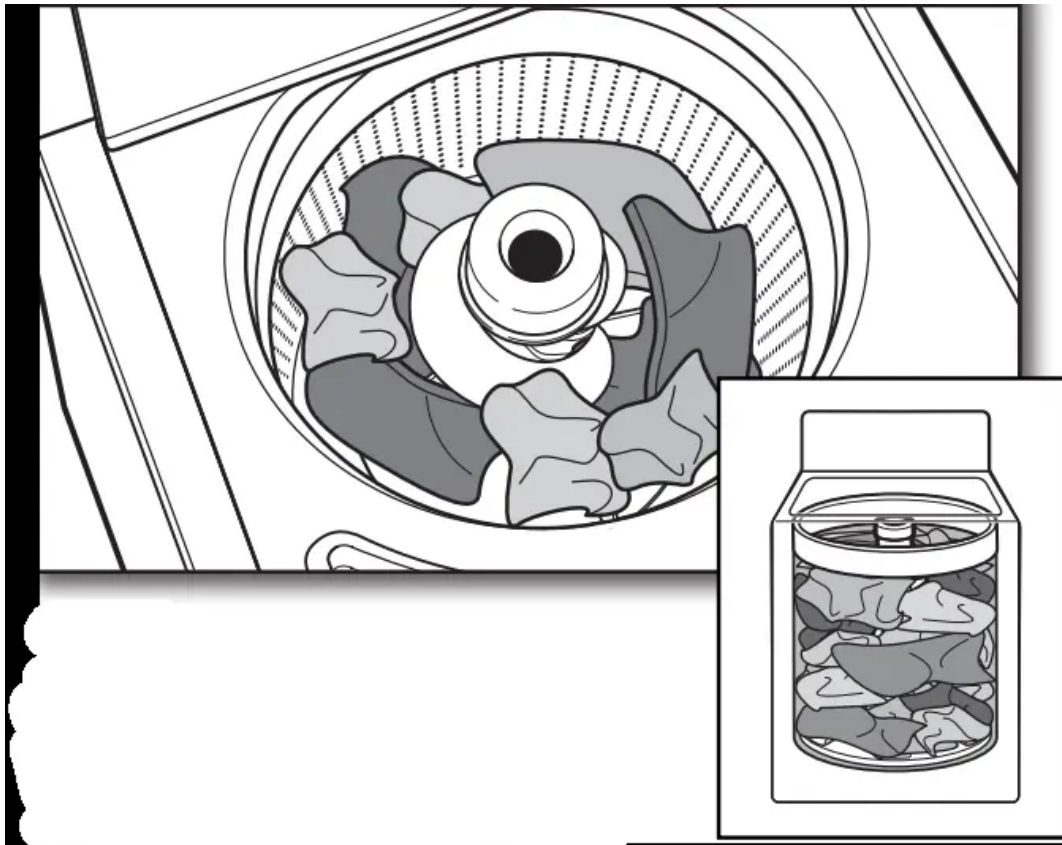

Load garments in loose heaps evenly around basket wall. For best results, do not pack the load tightly. Do not wrap large items such as sheets around the agitator; load them in loose piles around the sides of the basket. Try mixing different-sized items to reduce tangling.


4. Add liquid chlorine bleach to dispenser

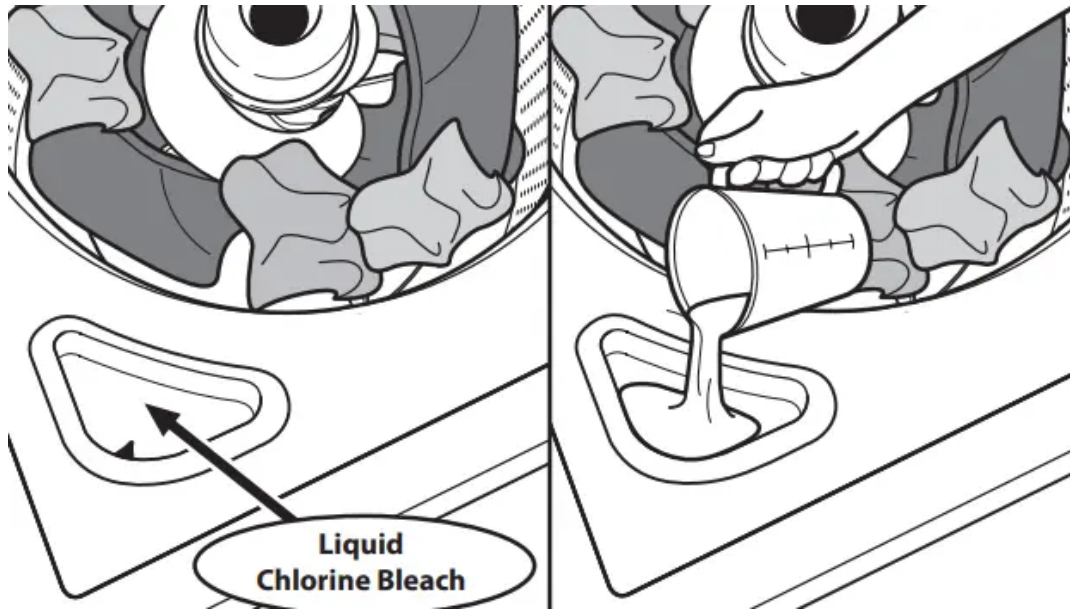

Do not overfill, dilute, or use more than 236 mL (1 cup).

Do not use color-safe bleach or Oxi products in the same cycle with liquid chlorine bleach.


5. Add fabric softener to dispenser (on some models)

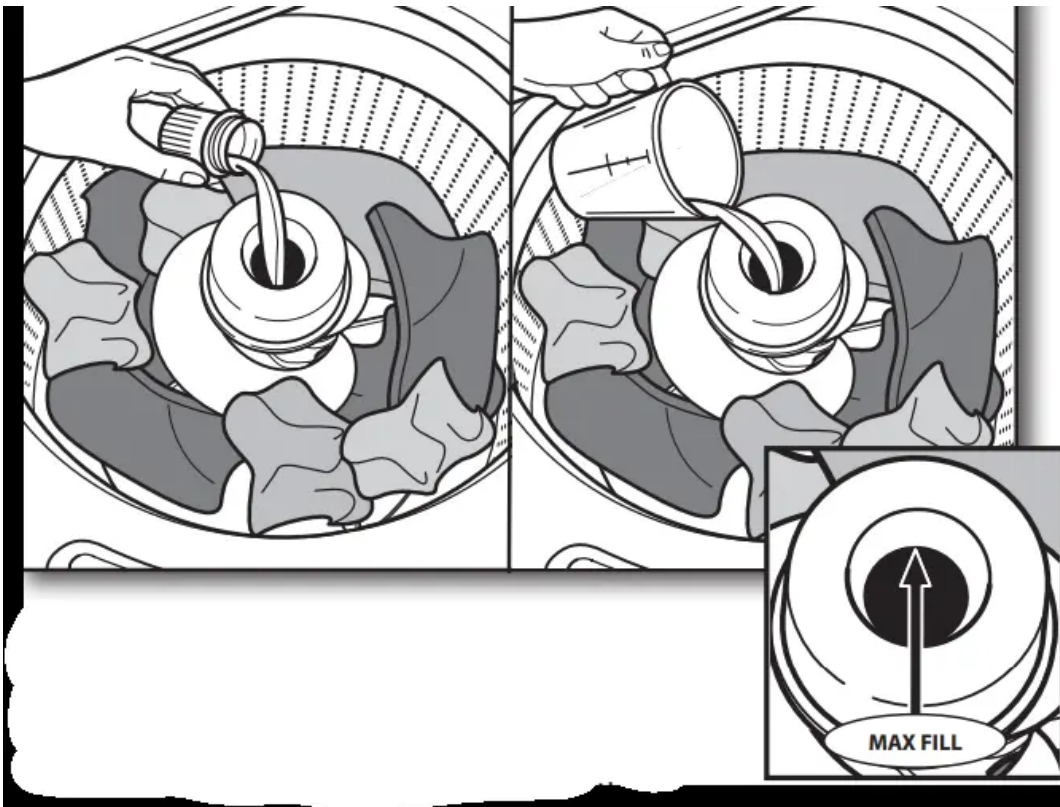

Pour a measured amount of liquid fabric softener into dispenser; always follow manufacturer's directions for correct amount of fabric softener based on your load size.


Dilute liquid fabric softener by filling the dispenser with warm water until liquid reaches the underside of the rim. See Max Fill Line arrows.

6. Select cycle

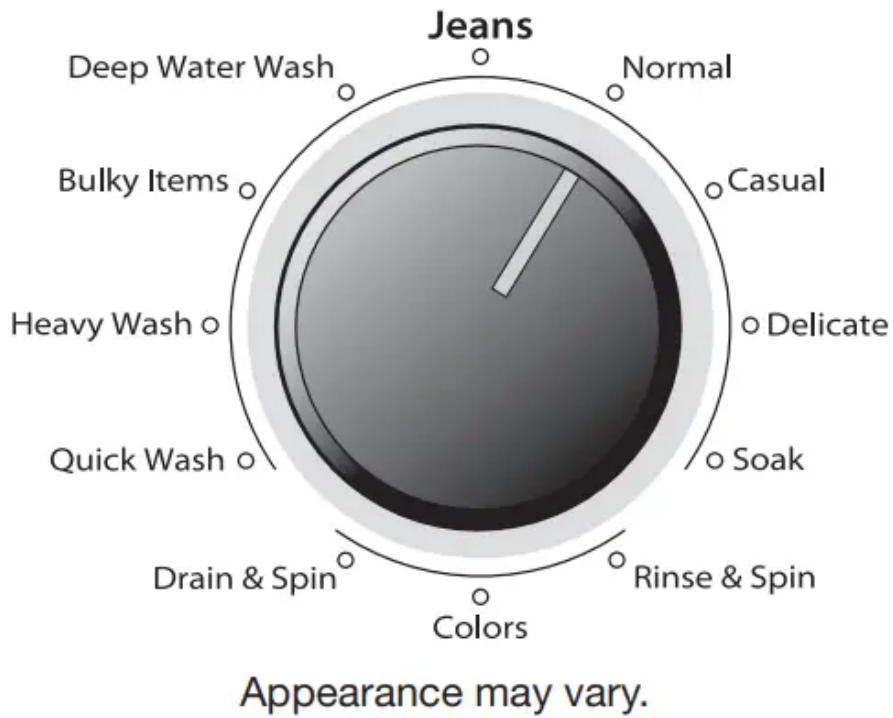

Turn cycle knob to choose your wash cycle. For more information, see “Cycle Guide.”

7. Select SOIL LEVEL

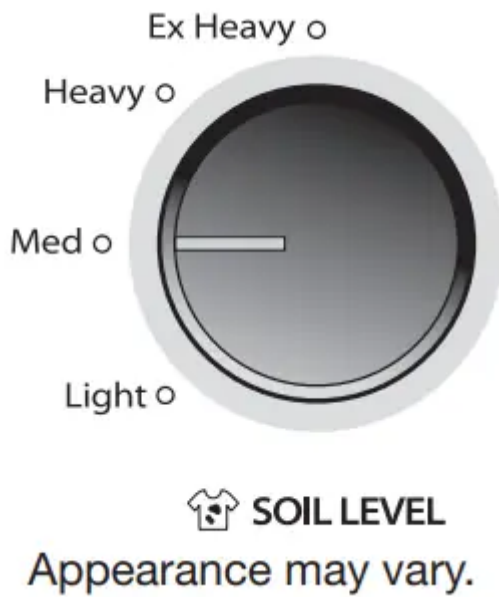

Soil Level settings adjust the agitation time as needed for your load. The Light setting is for lightly soiled garments and the Heavy setting is for garments that need longer wash time to release the soils from the fabric.

8. Select WASH TEMP





Appearance may vary.




Once you select a cycle, select the desired wash temperature by turning the Temperature knob to the appropriate setting based on your load. All rinses are tap cold.

NOTE: Always read and follow fabric care label instructions to avoid damage to your garments.

Wash Temp	Suggested Fabrics
Hot Some cold water is added to save energy. This may be cooler than your hot water heater setting.	Whites and pastels Durable garments Heavy soils
Warm Some cold water will be added, so this will be cooler than what your previous washer provided.	Bright colors Moderate to light soils
Cool Warm water may be added to assist in soil removal and to help dissolve detergents. Cool is slightly warmer than cold.	Colors that bleed or fade Light soils
Cold This is the temperature from your faucet. If your tap cold water is very cold, warm water may be added to assist in soil removal and help dissolve detergent.	Dark colors that bleed or fade Light soils
Tap Cold This is the temperature from your faucet.	Dark colors that bleed or fade Light soils

9. Select DEEP FILL, EXTRA RINSE, or PRESOAK (on some models)

 **DEEP FILL**

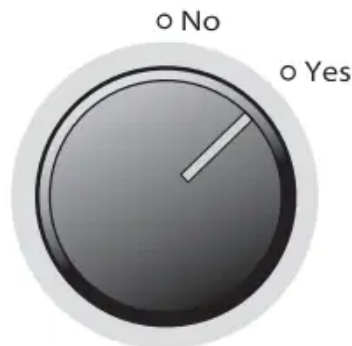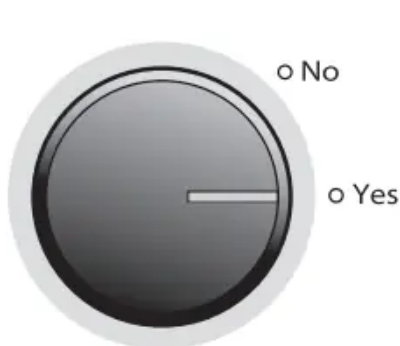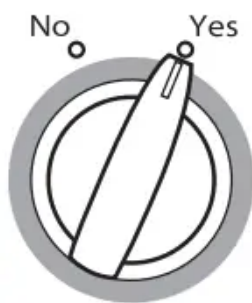

 **EXTRA RINSE**

 **PRESOAK**


Appearance may vary.

Deep Fill: Set at “Yes” to add extra water to your cycle. Water will be added automatically, with the amount determined by the size of the load.

NOTE: Washer will continue to operate with agitation even as water is added.

Extra Rinse/Presoak: Set at “Yes” to add an extra rinse or a presoak time to your cycle.

10. Press **START/STOP/PAUSE/ UNLOCK LID** to begin wash cycle

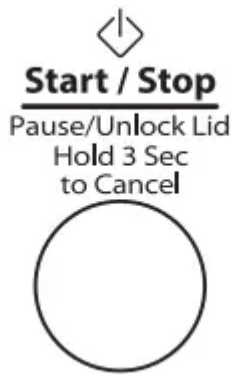

Press the Start/Stop/Pause/Unlock Lid button to start the wash cycle. When the cycle has finished, the Cycle Complete indicator will light. Promptly remove garments after cycle has completed to avoid odor and reduce wrinkling and rusting of metal hooks, zippers, and snaps.

Unlocking the lid to add garments

If you need to open the lid to add 1 or 2 missed garments:

Press **START/STOP/PAUSE/UNLOCK LID**; the lid will unlock once the washer movement has stopped. This may take several minutes if the load was spinning at high speed. Then close lid and press **START/STOP/PAUSE/UNLOCK LID** again to restart the cycle.

If lid is left open for more than 10 minutes, the water will pump out automatically.

Manually soaking garments

Press **START/STOP/PAUSE/UNLOCK LID** and keep the lid closed. After items have soaked for the desired time, press **START/STOP/PAUSE/UNLOCK LID** to resume the wash cycle.

Washer Maintenance

WATER INLET HOSES

Replace inlet hoses after 5 years of use to reduce the risk of hose failure. Periodically inspect and replace inlet hoses if bulges, kinks, cuts, wear, or leaks are found.

When replacing your inlet hoses, mark the date of replacement on the label with a permanent marker.

WASHER CARE

Recommendations to Help Keep Your Washer Clean and Performing at Its Best

1. Always follow the detergent manufacturer's instructions regarding the amount of detergent to use. Never use more than the recommended amount because that may increase the rate at which detergent and soil residue accumulate inside your washer, which, in turn, may result in undesirable odor.
2. Use warm and hot wash water settings sometimes (not exclusively cold water washes) because they do a better job of controlling the rate at which soils and detergent accumulate.
3. Always leave the washer lid open between uses to help dry out the washer and prevent the buildup of odor-causing residue.

Cleaning Your Top Loading Washer

Read these instructions completely before beginning the routine cleaning processes recommended below. This Washer Maintenance Procedure should be performed, at a minimum, once per month or every 30 wash cycles, whichever occurs sooner, to control the rate at which soils and detergent may otherwise accumulate in your washer.

Cleaning the Inside of the Washer

To keep your washer odor-free, follow the usage instructions provided above and use this recommended monthly cleaning procedure:

Recommended Cycle for Cleaning the Washer

Refer to the "Cycle Guide" for the optimal cycle for cleaning the inside of the washer. Use this cycle with Washer Cleaner or liquid chlorine bleach as described below.

Begin procedure

1. Clean Washer Cycle Procedure (recommended for best performance):
 - a. Open the washer lid and remove any clothing or items.
 - b. Place a Washer Cleaner tablet in the bottom of the washer basket.
 - c. Do not add any detergent or other chemical to the washer when following this procedure.
 - d. Close the washer lid.
 - e. Select the cycle recommended for cleaning the inside of the washer.
 - f. Press the Start/Stop/Pause/Unlock Lid button to start the cycle.

NOTE: For best results, do not interrupt cycle. If cycle must be interrupted, press START/STOP/PAUSE/UNLOCK LID once. After the cycle has stopped, run a Rinse & Spin cycle to rinse cleaner from washer.

2. Chlorine Bleach Procedure (Alternative):

- a. Open the washer lid and remove any clothing or items.
- b. Add 236 mL (1 cup) of liquid chlorine bleach to the bleach compartment.

NOTE: Use of more liquid chlorine bleach than is recommended above could cause washer damage over time.

- c. Close the washer lid.
- d. Do not add any detergent or other chemical to the washer when following this procedure.
- e. Select the cycle recommended for cleaning the inside of the washer.
- f. Press the Start/Stop/Pause/Unlock Lid button to start the cycle

Cleaning the Dispensers

After a period of using your washer, you may find some residue buildup in the washer's dispensers. To remove residue from the dispensers, wipe them with a damp cloth and towel dry. Do not attempt to remove the dispensers or trim for cleaning. The dispensers and trim are not removable. If your model has a dispenser drawer, however, remove the drawer and clean it before or after you run the Clean Washer cycle. Use an all-purpose surface cleaner, if needed.

Cleaning the Outside of the Washer

Use a soft, damp cloth or sponge to wipe away any spills.

Use only mild soaps or cleaners when cleaning external washer surfaces.

IMPORTANT: To avoid damaging the washer's finish, do not use abrasive products.

NON-USE AND VACATION CARE

Operate your washer only when you are home. If moving, or not using your washer for a period of time, follow these steps:

1. Unplug or disconnect power to washer.
2. Turn off water supply to washer to avoid flooding due to water pressure surge.

WINTER STORAGE CARE

IMPORTANT: To avoid damage, install and store washer where it will not freeze. Because some water may stay in hoses, freezing can damage washer. If storing or moving during freezing weather, winterize your washer.

To winterize washer:

1. Shut off both water faucets; disconnect and drain water inlet hoses.
2. Put 1 L (1 qt.) of R.V.-type antifreeze in basket and run washer on Rinse & Spin cycle for about 30 seconds to mix antifreeze and remaining water.
3. Unplug washer or disconnect power.

TRANSPORTING YOUR WASHER

1. Shut off both water faucets. Disconnect and drain water inlet hoses.
2. If washer will be moved during freezing weather, follow “Winter Storage Care” directions before moving.
3. Disconnect drain from drain system and drain any remaining water into a pan or bucket. Disconnect drain hose from back of washer.
4. Unplug power cord.
5. Place inlet hoses and drain hose inside washer basket.
6. Drape power cord over edge and into washer basket.
7. Place packing tray from original shipping materials back inside washer. If you do not have packing tray, place heavy blankets or towels into basket opening. Close lid and place tape over lid and down front of washer. Keep lid taped until washer is placed in new location.

IMPORTANT: Washer must be transported in the upright position and secured with shipping straps to avoid tipping.

REINSTALLING/USING WASHER AGAIN

To reinstall washer after non-use, vacation, winter storage, or moving:

1. Refer to “Installation Instructions” to locate, level, and connect washer.
2. Before using again, run washer through the following recommended procedure:

To use washer again:

1. Flush water pipes and hoses. Reconnect water inlet hoses. Turn on both water faucets.
2. Plug in washer or reconnect power.
3. Run washer through Clean Washer cycle (or Bulky Items cycle at a hot temperature for those models without Clean Washer cycle) to clean washer and remove antifreeze, if used. Use half the manufacturer’s recommended amount of detergent for a medium-size load.

Troubleshooting



If you experience	Possible Causes	Solution
Vibration or Off-Balance		
Check the following for proper installation or see “Using Your Washer”.	Feet may not be in contact with the floor and locked.	Front and rear feet must be in firm contact with floor and washer must be level to operate.
	Washer may not be level.	Check floor for flexing or sagging. If floor is uneven, a 19 mm (3/4") piece of plywood under the washer will reduce sound. See “Level the Washer” in “Installation”.
	Load could be unbalanced.	Load dry items in loose heaps evenly against the back wall. Adding wet items to washer or adding water to basket could unbalance washer.
		Wash smaller loads to reduce imbalance.
		Do not tightly pack. Avoid washing similar items together.
Use Jeans cycle and Heavy or Extra Heavy cycle for oversized, non-absorbent items such as comforters or poly-filled jackets. See “Load Capacity” for more information.		
Noises		
Clicking or metallic noises	Objects caught in washer drain system.	Empty pockets before washing. Loose coins could fall between basket and tub or pump. It may be necessary to call for service if you have items.



		It is normal to hear metal items on clothes rubbing together. Metal items such as metal snaps, buckles, or zippers touching the basket.
Gurgling or humming	Washer may be draining water.	It is normal to hear the pump making a humming sound with periodic gurgling as final amounts of water are removed during the Drain & Spin cycle.
Humming	Load sensing may be occurring.	You may hear the hum of the sensing motor when you have started the washer. This is normal.
Water Leaks		
Check the following for proper installation:	Washer not level.	Water may splash off basket if washer is not level. Check that load is not unbalanced or too heavy.
	Fill hoses not attached tightly.	Tighten fill-hose connection.
	Fill hose washers.	Make sure all 4 fill hose flat washers are properly seated.
	Drain hose connection.	Pull drain hose from washer cabinet and secure it to drainpipe or laundry tub.
		Do not place tape over drain opening.
	Check household plumbing for leaks or clogged sink or drain.	Water can back up out of a clogged sink or drainpipe. Check all household plumbing (laundry tubs, drain pipe, water pipes).
Washer not loaded as recommended.	Improper loading can cause basket to become unbalanced and cause water to splash. See "Using Your Washer" for loading instructions.	
Washer not performing as expected		



<p>Washer won't run or fill, washer stops working, or wash light remains on (indicating that the washer was unable to fill appropriately)</p>	<p>Check for proper water supply.</p>	<p>Both hoses must be attached and have water flowing to inlet valve.</p>
		<p>Both hot and cold water faucets must be open.</p>
		<p>Check that inlet valve screens have not become clogged.</p>
		<p>Check for any kinks in inlet hoses, which may restrict water flow.</p>



Washer won't run or fill, washer stops working, or wash light remains on (indicating that the washer was unable to fill appropriately) (cont.)	Check proper electrical supply.	Plug power cord into an earthed outlet.
		Do not use an extension cord.
		Ensure there is power to outlet.
		Reset a tripped circuit breaker. Replace fuses. NOTE: If problems continue, call an electrician.
Normal washer operation.		Lid must be closed for washer to run.
		Washer will pause during certain phases. Do not interrupt cycle.
		Washer spins the dry load for several minutes before refilling to determine if load is balanced. You may hear the hum of the spins. This is normal.
Washer may be tightly packed.		Remove several items, rearrange load in basket, and add detergent. Close lid and press START/STOP/ PAUSE/UNLOCK LID.
		Do not add more than 1 or 2 additional items after cycle has started to avoid tightly packed items causing unbalancing.
Washer not draining/spinning, loads are still wet, or spin light remains on (indicating that the washer was unable to pump out water within 10 minutes)	Small items may have been caught in pump or between basket and tub, which can slow draining.	Empty pockets and use garment hangers for items.



<p>Use a cycle with a low spin speed.</p>	<p>Cycles with lower spin speeds remove more water than cycles with high spin speeds. Use the recommended cycle/speed spin for your load. To remove extra water in the load, select a longer spin cycle. Load may need to be rearranged to a more even distribution of the load in the basket.</p>
<p>The washer may be tightly packed or unbalanced.</p>	<p>Tightly packed or unbalanced loads may prevent the washer to spin correctly, leaving more water than normal. Evenly arrange the wet items in the washer for balanced spinning. Select the Drain & Spin cycle to remove excess water.</p> <p>See “Using Your Washer” for more recommendations.</p>
<p>Check plumbing for correct drain hose installation. Drain hose extends into standpipe farther than 114 mm (4.5”).</p>	<p>Check drain hose for proper installation. Make sure the hose form and securely attach to drain pipe. Do not tape over drain opening. Lower the end of the hose if the end is higher than 2.4 m (96”) above the floor. Remove any clogs from drain hose.</p>
<p>Too much detergent causing suds to slow or stop draining and spinning.</p>	<p>Always measure and follow detergent instructions for your load. To remove extra suds, select a longer spin cycle. Do not add detergent.</p>



<p>Dry spots on load after cycle</p>	<p>High-speed spins extract more moisture than traditional top-load washers.</p>	<p>The high spin speeds combined with the final spin can cause items near the load to develop dry spots during the final spin. This is normal.</p>
<p>Incorrect or wrong wash or rinse temperatures</p>	<p>Check for proper water supply.</p>	<p>Make sure hot and cold inlet hoses are attached to the correct faucets.</p>
		<p>Both hoses must be attached to both hot and cold water faucets and have both hot and cold water inlet valves.</p>
		<p>Check that inlet valve screens are not clogged.</p>
<p>Energy-saving-controlled wash temperatures.</p>	<p>This washer uses cooler wash and rinse temperatures than your previous washer. The washer also includes cooler hot and warm washes.</p>	
<p>Load not rinsed</p>	<p>Check for proper water supply.</p>	<p>Make sure hot and cold inlet hoses are attached to the correct faucets.</p>
		<p>Both hoses must be attached and have water flowing to the inlet valve.</p>
		<p>Both hot and cold water faucets must be open.</p>
<p>Using too much detergent.</p>	<p>The suds from too much detergent can prevent the washer from operating correctly. Always measure detergent carefully and follow detergent directions based on load size and soil level.</p>	

Washer not loaded as recommended.



		<p>The washer is less efficient at rinsing tightly packed.</p> <p>Load garments in loose heaps evenly against basket wall. Load with dry items only.</p> <p>Use cycle designed for the fabrics being washed.</p> <p>Add only 1 or 2 additional garments after cycle has started.</p>
	Using too low a load size/water level selection.	Choose a load size (water level) that matches the load being washed.
Sand, pet hair, lint, etc. on load after washing	Heavy sand, pet hair, lint, and detergent or bleach residues may require additional rinsing.	Add an Extra Rinse to the selected cycle.
Load is tangling	Washer not loaded as recommended.	<p>See "Using Your Washer".</p> <p>Select a cycle with a slower wash action and spin speed; however, items will be wetter and may require additional drying. Using a higher speed spin. See the "Cycles" section to match your load with the best cycle.</p> <p>Load garments in loose heaps evenly against basket wall.</p> <p>Reduce tangling by mixing types of loads. Use the recommended cycle for the type of load being washed.</p>
Not cleaning or removing stains	Washer not loaded as recommended.	Washer is less efficient at cleaning when tightly packed.



	<p>Load garments in loose heaps evenly against the basket wall. Load with dry items only.</p> <p>Add only 1 or 2 additional garments after the wash cycle has started.</p>
Adding detergent on top of load.	Add detergent, Oxi products, and color protectors to the bottom of the basket before adding items.
Using too low a soil level selection.	Choose a soil level that matches the soil level of the items being washed.
Too much water is used, causing clothes to float and reducing clothes movement.	Do not add water; or if you do, add less water.



Not cleaning or removing stains (cont.)	Using too much detergent.	The suds from too much detergent can prevent the washer from operating correctly. Always measure detergent carefully and follow manufacturer's directions for the correct amount, size and soil level.
	Not using correct cycle for fabric type.	Use a higher soil level cycle option and a higher water temperature to improve cleaning.
		Use Deep Clean cycle for tough cleaning. Refer to the "Cycle Guide" to match your load with the correct cycle.
	Not using dispensers.	Use dispensers to avoid chlorine bleach and fabric softener staining.
		Load dispensers before starting a cycle.
Do not add products directly onto loads.		
Not washing like colors together.	Wash like colors together and remove items from the washer at the end of the cycle to avoid dye transfer.	
Incorrect dispenser operation	Clogged dispenser.	Use only liquid chlorine bleach in the bleach dispenser. Use only fabric softener in the fabric softener dispenser.
Fabric damage	Sharp items were in pockets during wash cycle.	Empty pockets, zip zippers, and snap fasteners before washing to avoid snags.
	Strings and straps could have tangled.	Tie all strings and straps before starting the cycle.
	Items may have been damaged before washing.	Mend rips and broken threads in items before washing.
	Fabric damage can occur if load is tightly packed.	Load garments in loose heaps evenly in the basket. Load with dry items only.



		Use cycle designed for the fabrics be
		Add only 1 or 2 additional garments a started.
	Liquid chlorine bleach may have been added incorrectly.	Do not pour liquid chlorine bleach dir Wipe up bleach spills.
		Undiluted bleach will damage fabrics. more than recommended by manufac
		Do not place load items on top of blea when loading and unloading washer.
	Garment care instructions may not have been followed.	Always read and follow garment man label instructions. See the "Cycle Gui your load with the best cycle.
Odors	Monthly maintenance not done as recommended.	See "Washer Care" in "Washer Maint
		Unload washer as soon as cycle is co
Odors	Using too much detergent.	Be sure to measure correctly. Always manufacturer's directions.
		See "Washer Care" section.
Lid Locked light is flashing	The lid is not closed.	Close the lid. The washer will not star lid open.
	A cycle was stopped or paused using the Start/Stop/Pause/Unlock Lid button.	The washer may still be spinning. Th unlock until the basket has stopped s may take several minutes if washing heavy fabrics.



Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)