

USER MANUALS

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put the hand mixer motor housing or cord in water or other liquid.

If hand mixer motor housing or cord falls into liquid, unplug the cord from outlet immediately. Do not reach into the liquid.
3. To avoid possible accidental injury, close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to reduce risk of injury to persons, and/or damage to the mixer.
6. Remove beaters from the mixer before washing.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized Cuisinart service facility for examination, repair, mechanical or electrical adjustment.
8. The use of attachments not recommended by Cuisinart may cause fire, electrical shock, or risk of injury.
9. Do not use outdoors or anywhere the cord or mixer might come into contact with water while in use.
10. To avoid possibility of mixer being accidentally pulled off work area, which could result in damage to the mixer or in personal injury, do not let cord hang over edge of table or counter.
11. To avoid damage to cord and possible fire or electrocution hazard, do not let cord contact hot surfaces, including the stove.
12. The chef's whisk should be used without any other attachment.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

NOTICE



This appliance has a polarized plug (one prong is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

INTRODUCTION

Get ready to enjoy more mixing opportunities with the extremely versatile Cuisinart® Power Advantage™ 7-Speed Hand Mixer.

A 220-watt motor breezes through big mixing jobs, and Automatic Feedback kicks in more power whenever it's needed. Don't worry about messy splatters...our SmoothStart® feature, with its 3 extra-low speeds, keeps all the ingredients right in the bowl where they belong!

FEATURES AND BENEFITS

220 Watts of Power

Powerful enough to easily cut through a double batch of cookie dough or butter right out of the refrigerator.

Maximum Comfort

Balanced to do more work for you. The shape of the mixer allows maximum possible power and balance. Stress-free grip provides unparalleled comfort and control, even during extended mixing.

Automatic Feedback

No need for a power boost. An electronic feedback mechanism automatically feeds in extra power when needed. It assures that the mixer will not bog down, even when mixing heavy loads.

SmoothStart®

When the mixer is turned on, the beaters start spinning very slowly to prevent ingredients from splattering.

3 Low Mixing Speeds

Lower mixing speeds provide greater control when folding or mixing dry ingredients.

Easy To Clean

The Power Advantage™ Hand Mixer has a smooth, sealed base; wipes clean instantly.

1. One-Step On/Off Switch

One-step power switch allows you to turn mixer on and off in a single operation.

2. LED Speed Display

Digital speed settings are easy to read.

3. One-Touch Speed Control

Allows you to change speeds quickly while you are mixing.

4. Exclusive Rotating Swivel Cord

Unique swivel cord can be positioned for comfortable right- or left-handed use.

5. Spatula

6. Beater Release Lever

Conveniently located for easy ejection of beaters or whisk.

7. Extra-Long Beaters


Extra-long, extra-wide beaters for superior, faster aerating, mixing, and whipping. Designed without center post to prevent ingredients from clogging up beaters. Beaters are easy to clean and dishwasher safe.

8. Chef's Whisk

Professional 3"-diameter whisk adds volume to whipped cream and creates stiff, fine-textured egg whites. Provides superior whipping and aerating.

9. Heel Rest


Allows mixer to rest squarely on countertop.

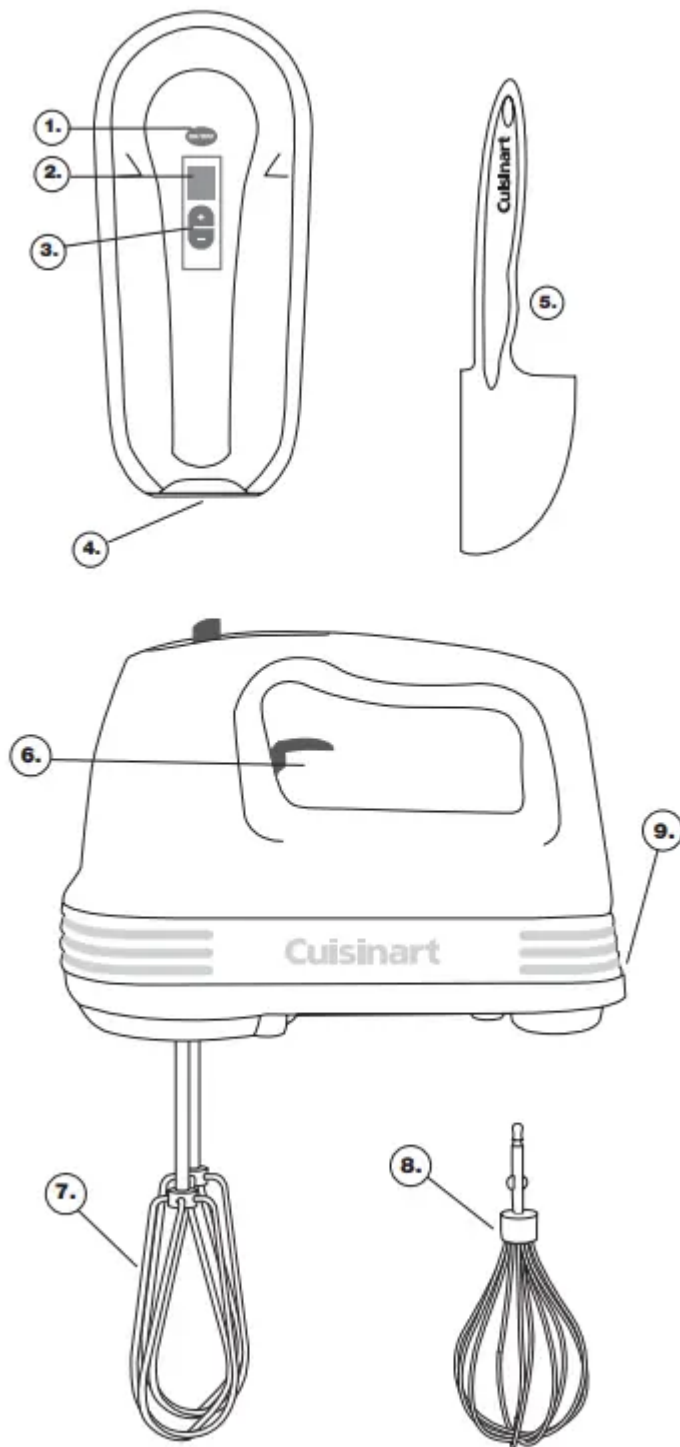

USE AND CARE

Inserting Beaters

1. Unplug mixer and set the power switch to the OFF position.
2. Insert beater with collar into the larger hole. Push beater in until it clicks into place. Insert the beater without collar into the smaller hole. Push beater in until it clicks into place.

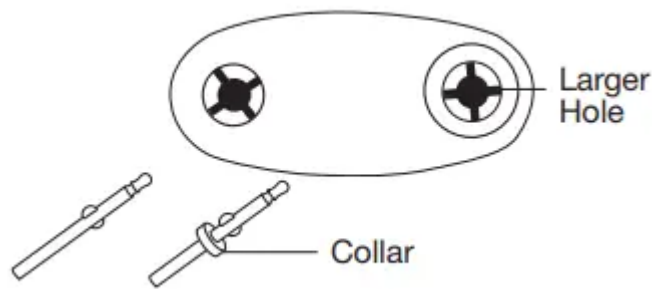

Inserting Chef's Whisk

1. Turn off and unplug mixer.
2. Hold chef's whisk at stem end, and insert into either hole. Push whisk in until it clicks. **DO NOT PUSH WHISK IN FROM WIRE END, AS YOU MAY DAMAGE WIRES.**

Turning Mixer On/Off

Plug mixer into outlet. Press On/Off switch to turn mixer On. Mixer will immediately begin to mix on Speed 1. To turn mixer off, press On/Off switch again.

Changing Speeds

Press the + button on the digital touchpad to increase the speed. Press the - button to decrease the speed.

Cleaning and Removing Beaters

1. Before cleaning the Power Advantage™ Hand Mixer, press the OFF switch and unplug from wall outlet. Lift the beater release lever and remove the beaters from the mixer. Wash the beaters after each use in hot, soapy water or in a dishwasher.

2. **NEVER PUT THE MOTOR HOUSING IN WATER OR OTHER LIQUID TO**

CLEAN. Wipe it with a damp cloth or sponge. Do not use abrasive cleansers, which could scratch the surface.

NOTE: DO NOT USE NONSTICK COOKWARE WITH THE CUISINART HAND MIXER.

QUICK REFERENCE GUIDE

Mixing Techniques

The Power Advantage™ Hand Mixer should always be set on the lowest speed when you start mixing.

NOTE: The chef's whisk attachment is used only for light whipping. See Speeds 4, 6, and 7 below. For all other mixing tasks, use the beaters.

With the Beaters

Speed 1

- Ultra-slow mixing to combine and aerate dry ingredients without splatter
- Add nuts, chips, dried fruit to cookie doughs/cake batters
- Fold delicate creams and egg whites into batters
- Start mixing frostings
- Stir sauces/gravies
- Mix muffins/pancakes

Speed 2

- Cream cold (not frozen) butter and sugar
- Mash potatoes/squash
- Add dry ingredients to batters/doughs

Speed 3

- Start mixing cake mixes
- Add eggs to batters/doughs
- Add dry ingredients alternately with liquid ingredients
- Cream softened butter and sugar
- Whip potatoes/squash

Speed 4

- Whip cream (**with chef's whisk**)
- Complete beating butter cream frostings
- Complete beating cake mixes

Speed 5

- Beat whole eggs/yolks
- Mix thin batters

With Chef's Whisk Attachment

Speed 6

- Add sugar to whipped egg whites for meringues
- Beat egg yolks until thick and light

Speed 7

- Whip egg whites

WARRANTY

LIMITED THREE-YEAR WARRANTY

This warranty is available to consumers only. You are a consumer if you own a Cuisinart® Power Advantage™ 7-Speed Hand Mixer that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Cuisinart® Power Advantage™ 7-Speed Hand Mixer will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase.

We suggest you complete and return the enclosed product registration card promptly to facilitate verification of the date of original purchase. However, return of the product registration card does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

If your Cuisinart® Power Advantage™ 7-Speed Hand Mixer should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply call our toll-free

number 1-800-726-0190 for additional information from our Customer Service Representatives, or send the defective product to Customer Service at Cuisinart,

150 Milford Road, East Windsor, NJ 08520.

To facilitate the speed and accuracy of your return, please enclose \$10.00 for shipping and handling of the product.

Please pay by check or money order (California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions).

NOTE: For added protection and secure handling of any Cuisinart® product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty. Please be sure to include your return address, daytime phone number, description of the product defect, product model number (located on bottom of product), original date of purchase, and any other information pertinent to the product's return.

Your Cuisinart® Power Advantage™ 7-Speed Hand Mixer has been manufactured to the strictest specifications and has been designed for use with the authorized accessories and replacement parts.

This warranty expressly excludes any defects or damages caused by accessories, replacement parts, or repair service other than those that have been authorized by Cuisinart.

This warranty does not cover any damage caused by accident, misuse, shipment or other ordinary household use.

This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so they may not apply to you.

CALIFORNIA RESIDENTS ONLY:

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store which sells Cuisinart products of the same type.

The retail store shall then, at its discretion, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at 1-800-726-0190.

Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such products under warranty.

BEFORE RETURNING YOUR CUISINART® PRODUCT

If you are experiencing problems with your Cuisinart® product, we suggest that you call our Cuisinart® Service Center at 1-800-726-0190 before returning the product serviced. If servicing is needed, a Representative can confirm whether the product is under warranty and direct you to the nearest service location.

Important: If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and the product is still under warranty.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

