

English

Important Safety Instructions

Installation Requirements

Electrical Requirements Venting Requirements Venting Methods Tools and Parts Dimensions and Clearances

Installation

Prepare Location Vent Cover Bracket Installation Installing the Range Hood Connect Vent System

Electrical Connection Install Duct Covers Complete Installation

Range Hood Use

Range Hood Description

Range Hood Controls Connectivity Cooktop / Hood Range

Range Hood Care

Stainless Steel Baffle Filter

Cleaning

Replacing a LED Lamp

Warranty (USA)

Warranty (Canada)

Table of Contents

Table of Contents

English

APPROVED FOR RESIDENTIAL APPLIANCES FOR RESIDENTIAL USE ONLY READ AND SAVE THESE INSTRUCTIONS

PLEASE READ ENTIRE INSTALLATION GUIDE BEFORE PROCEEDING.

INSTALLATION MUST COMPLY WITH ALL LOCAL CODES.

IMPORTANT: Save these Instructions for the Local Electrical Inspector's use.

INSTALLER: Please leave these Instructions with this unit for the owner.

OWNER: Please retain these instructions for future reference.

Symbols used in this manual

WARNING

Hazards or unsafe practices that may result in severe personal injury or death.

## CAUTION

Hazards or unsafe practices that may result in electric shock, personal injury, or property damage.

## NOTE

Useful tips and instructions

These warning icons and symbols are here to prevent injury to you and others.

Please follow them explicitly. After reading this section, keep it in a safe place for future reference.

## WARNING

Turn off power circuit at service panel and lock out panel before wiring this appliance.

Requirement 120 VAC, 60 Hz, 15 or 20 A Branch Circuit

State of California Proposition 65 warning (US only)

## WARNING

This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

### 1. FCC Notice

## CAUTION

FCC CAUTION: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of FCC Rules. Operation is Subject to following two conditions:

1) This device may not cause harmful interference, and 2) This device must accept any interference received including interference that cause undesired operation.

For products sold in the US and Canadian markets, only channels 1~11 are available. You cannot select any other channels.

Important Safety Instructions

Important Safety Instructions

FCC STATEMENT: This equipment has been tested and found to comply within the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorienting or relocating the receiving antenna
- Increasing the separation between the equipment and receiver
- Connecting the equipment to an outlet that is on a different circuit than the radio or TV
- Consulting the dealer or an experienced radio/TV technician for help.

FCC RADIATION EXPOSURE STATEMENT: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated so there is at least 8 inches (20 cm) between the radiator and your body. This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter.

2. IC Notice The term “IC” before the radio certification number only signifies that Industry Canada technical specifications were met. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003. For products sold in the US and Canadian markets, only channels 1~11 are available. You cannot select any other channels.

IC RADIATION EXPOSURE STATEMENT: This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated so there is at least 8 inches (20 cm) between the radiator and your body. This device and its antenna(s) must not be co-located or operated in conjunction with any other antenna or transmitter.

English

Important Safety Instructions

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING PRECAUTIONS: Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.

Before servicing or cleaning the unit, switch the power off at the service panel and lock the service panel to prevent power from being switched on accidentally. If the service panel cannot be locked, securely fasten a prominent warning device, such as a tag to the service panel.

Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.

Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent backdrafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the

National Fire Protection Association (NFPA), the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.

When cutting or drilling into the wall or ceiling; do not damage electrical wiring and other hidden utilities.

Ducted fans must always be vented outdoors.

CAUTION For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.

CAUTION To reduce risk of fire and to properly exhaust air, be sure to duct air outside - do not vent exhaust air into spaces within walls or ceilings, attics or into crawl spaces, or garages.

WARNING

TO REDUCE THE RISK OF FIRE, USE ONLY METAL DUCTWORK

WARNING

TO REDUCE THE RISK OF A RANGE TOP GREASE FIRE: Never leave surface units unattended at high settings. Boilovers cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.

Always turn the hood ON when cooking at high heat or when flambeing food (i.e. Crepes Suzette, Cherries Jubilee, Peppercorn Beef Flambé).

Clean ventilating fans frequently. Grease should not be allowed to accumulate on the fan or filter.

Use proper pan sizes. Always use cookware appropriate for the size of the surface element.

WARNING

TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A RANGE TOP GREASE FIRE, OBSERVE THE FOLLOWING PRECAUTIONS:

SMOTHER FLAMES with a close fitting lid, cookie sheet, or metal tray, then turn off the burner. BE CAREFUL TO PREVENT BURNS.

If the flames do not go out immediately, EVACUATE AND CALL THE

## **FIRE DEPARTMENT.**

NEVER PICK UP A FLAMING PAN - you may get burned.

DO NOT USE WATER, including wet dishcloths or towels a violent steam explosion will result.

Use an extinguisher ONLY if:

You know you have a class ABC extinguisher, and you already know how to operate it. – The fire is small and contained in the area where it started. – The fire department is being called. – You can fight the fire with your back to an exit.

## WARNING

To reduce the risk of fire or electrical shock, do not use this fan with any solid-state speed control device.

## WARNING

Do not let children near this appliance. Do not let children play with this appliance.

Keep all packaging materials out of children's reach. Properly dispose the packaging materials after this appliance is unpacked.

## Important Safety Instructions

Read and save these Instructions

English

## Electrical Requirements

**IMPORTANT** Observe all governing codes and ordinances.

It is the customer's responsibility: To contact a qualified electrical installer.

To assure that the electrical installation is adequate and in conformance with National Electrical Code, ANSI/NFPA 70 — latest edition\*, or CSA Standards C22.1-94, Canadian Electrical Code, Part 1 and C22.2 No.0-M91 - latest edition\*\* and all local codes and ordinances.

If codes permit and a separate ground wire is used, it is recommended that a qualified electrician determine that the ground path is adequate.

A copy of the above code standards can be obtained from:

National Fire Protection Association 1 Batterymarch Park Quincy, MA 02169-7471  
CSA International 8501 East Pleasant Valley Road Cleveland, OH 44131-5575

A 120 volt, 60 Hz, AC only, 15-amp, fused electrical circuit is required.

If the house has aluminum wiring, follow the procedure below:

1. Connect a section of solid copper wire to the pigtail leads.
2. Connect the aluminum wiring to the added section of copper wire using special connectors and/or tools designed and UL listed for joining copper to aluminum.

Follow the electrical connector manufacturer's recommended procedure. Aluminum/copper connection must conform with local codes and industry accepted wiring practices.

Wire sizes and connections must conform with the rating of the appliance as specified on the model/serial rating plate.

The model/serial plate is located behind the filter on the rear wall of the range hood.

Wire sizes must conform to the requirements of the National Electrical Code, ANSI/NFPA 70 (latest edition), or CSA

Standards C22. 1-94. Canadian Electrical Code. Part 1 and  
C22.2 No. 0-M91 (latest edition and all local codes and ordinances).  
Venting Requirements (ducted models only)

Vent system must terminate outdoors.

Do not terminate the vent system in an attic or other enclosed area.

Do not use a 4" (10.2 cm) laundry-type wall cap.

Use metal vent only. Rigid metal vent is recommended.

Plastic or metal foil vent is not recommended.

The length of the vent system and the number of elbows should be kept to a minimum to provide efficient performance.

For the most efficient and quiet operation:

Use no more than three 90° elbows.

Make sure there is a minimum of 24" (61 cm) of straight vent between the elbows if more than 1 elbow is used.

Do not install 2 elbows together.

Use clamps to seal all joints in the vent system.

The vent system must have a damper. If the roof or wall cap has a damper. do not use the damper supplied with the range hood.

Use caulking to seal the exterior wall or roof opening around the cap.

The size of the vent should be uniform.

Venting Methods This canopy hood is factory set for venting through the roof or wall. A 6" (15.2 cm) round vent system is needed for installation (not included). The hood exhaust opening is 6" (15.2 cm) round.

#### NOTE

Flexible vent is not recommended. Flexible vent creates back pressure and air turbulence that greatly reduce performance. The vent system can terminate either through the roof or wall. To vent through a wall. a 90° elbow is needed.

#### Mounting Height

Select a mounting height between a minimum of 24" (61 cm) for an electric cooking surface. a minimum of 30" (76.2 cm) for a gas cooking surface. and a suggested maximum of 36" (91.4 cm) above the range to the bottom of the hood.

Rear discharge A 90° elbow may be installed immediately above the hood.

For Non-Vented (recirculating) Installations

If it is not possible to vent cooking fumes and vapors to the outside, the hood can be used in the non-vented (recirculating) version, fitting a charcoal filter and the deflector. Fumes and vapors are recycled through the top grille.

Roof Venting Wall Venting Recirculating

A. Roof cap B. 6" (15.2 cm) round vent A. Wall cap B. 6" (15.2 cm) round vent A. Deflector B. 6" (15.2 cm) round vent

Installation Requirements

Installation Requirements

English

Tools and Parts

Parts supplied Removing the packaging

CAUTION Remove the carton carefully. Wear gloves to protect against sharp edges.

WARNING

Remove the protective film covering the product before putting into operation. Hood canopy assembly with blower and LED lamps already installed.

6" (15.2 cm) round air transition

Duct covers

Hardware bag with:

Part Qty Part Qty

5x45 mm 5.4x75 mm screws (for 10x60 mm wall anchors)

8x40 mm

Torx 10 adapter

3.5x9.5 mm

Duct cover bracket

4x8 mm

Mounting template

10 x 60 mm

Tools/Materials required

Level

Drill with 1¼" (3.2 cm), .8" (3.2 mm), and 1/16" (4. mm) drill bits

Pencil

Wire stripper or utility knife

Tape measure or ruler

Pliers

Caulking gun and weatherproof caulking compound

Vent clamps

Jigsaw or keyhole saw

Flat-blade screwdriver

Metal snips

Phillips & Torx 20 screwdriver

Parts needed

Home power supply cable

½" (12.7 mm) UL listed or CSA approved strain relief

3 UL listed wire connectors

1 wall or roof cap

Metal vent system

Dimensions and Clearances

NK30M9600WS NK30M9600WM NK36M9600WS NK36M9600WM

(76 cm) (91.2 cm)

1911/16" (50 cm)

C\* max. 398/16" (100.3 cm) min. 257/16" (64.5 cm)

D\*\* max. 435/16" (110 cm) min. 292/16" (73.9 cm)

6" (15.24 cm)

1010/16" (26.9 cm)

131/16" (33.2 cm)

23/8" (6 cm)

+For vented installations

+\*For non vented (recirculating) installations

Accessories

Model NK30M9600WS NK36M9600WS NK30M9600WM NK36M9600WM

Color Silver Stainless Matt Black Stainless

Extension Kit NK-AE905LWS/AA NK-AE905LWM/AA

Recirculation Kit NK-AF030FNB/AA

Charcoal Filter NK-AR050FNB/AA

Installation Requirements

Installation Requirements

English

Installation

**Installation Instructions** We recommend that a qualified technician install the range hood. It is the installer's responsibility to ensure the range hood complies with the installation clearances specified for the product.

**Preparing the Location**

We recommend you install the vent system before you install the hood.

Before making cutouts, make sure there is proper clearance within the ceiling or wall for the exhaust vent.

Check your ceiling height and the hood height maximum before you select your hood.

1. Disconnect power.
2. Determine which venting method to use: roof or wall.
3. Select a flat surface for assembling the range hood.

Place a covering over that surface.

**WARNING**

**TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING**

4. Using 2 or more people, lift the range hood onto covered surface.

**Range hood mounting screws installation**

1. Determine and mark the centerline on the wall where the canopy hood will be installed.

Disconnect power.

2. Select a mounting height between a minimum of 24" (60.9 cm) for an electric cooking surface, a minimum of 30" (76.2 cm) for a gas cooking surface, and a suggested maximum of 36" (91.4 cm) above the range to the bottom of the hood.

Mark a reference line on the wall.

3. Tape the template in place, aligning the template centerline and the bottom of the template with the hood bottom line and with the centerline marked on the wall.

A. Centerline B. Fastener locations C. Mounting height reference (hood bottom line)

4. Mark the fastener locations by pushing a pen or pencil tip through the template into the wall.

IMPORTANT: All screws must be installed into wood. If there is no wood to screw into, additional wall framing supports may be required.

5. Remove the template.

6. Drill 3/16" (4.8 mm) pilot holes at all locations where screws are being installed into wood.

7. Install the 2 - 5 x 45 mm mounting screws. Leave a 1/4" (6.4 mm) gap between the wall and the back of the screw head so you can slide the range hood into place.

1/4" (6.4 mm)

Vent cover bracket installation 1. Attach the vent cover bracket to the wall flush to the ceiling using 2 - 5 x 45 mm screws.

A. 8 x 40 mm drywall anchors B. Centerline on wall C. Vent cover support bracket D. 5 x 45 mm screws

Complete Preparation 1. Determine and make all necessary cuts in the wall for the vent system. Install the vent system before installing the hood. See the "Venting Requirements" section.

2. Determine the required height for the home power supply cable and drill a 1 1/4" (3.2 cm) hole at this location.

3. Run the home power supply cable according to the National

Electrical Code or CSA Standards and local codes and ordinances. There must be enough wire from the fused disconnect (or circuit breaker) box to make the connection in the hood's electrical terminal box.

#### NOTE

Do not reconnect power until installation is complete.

4. Use caulk to seal all openings.

Installing the range hood

1. Using 2 or more people, hang the range hood on 2 mounting screws by inserting the mounting screws through the mounting slots on the back of the hood.

A. Mounting screws

B. Mounting slots

C. Lower mounting screws

2. Mark the lower mounting hole's location with a pencil.

3. Remove the hood assembly from the wall, and then drill 3/16" (4.8 mm) pilot holes at the marked locations.

4. Hang the range hood again on the 2 upper mounting screws.

5. Level the range hood and tighten the upper mounting screws.
6. Install the 2 - 5 x 45 mm lower mounting screws and tighten.

Use the optional wall anchors if needed.

## Installation

### English

#### Connecting the Vent System

This hood is compatible with vented installations only.

1. Install the transition on the top of the hood (if removed for shipping) using 2 - 3.5 x 9.5 mm sheet metal screws.

A. Vent transition

B. 3.5 x 9.5 mm screw

2. Fit the vent system over the exhaust outlet.

3. Measure from the bottom of the air deflector to the bottom of the hood outlet. Cut the ductwork at the measured length.

Dimension to measure

Roof outlet

Wall outlet

4. Seal the connection with clamps.

5. Check that the back draft dampers work properly.

#### Electrical Connection

### WARNING

Electrical Shock Hazard Disconnect power before servicing.

Replace all parts and panels before operating.

Failure to do so can result in death or electrical shock.

1. Disconnect power.

2. Remove the terminal box cover.

3. Remove the knockout in the terminal box cover and install a UL listed or CSA approved 1/2" strain relief.

A. Terminal box

B. Knockout

C. Terminal box cover

4. Run the home power supply cable through the strain relief into the terminal box.

A. Home power supply cable B. UL listed or CSA approved strain relief C. Black wires (Normally L1. Confirm before connecting.)

D. UL listed wire connectors E. White wires (Normally neutral. Confirm before connecting.) F. Green (or bare) and yellow-green ground wires

5. Use UL listed wire connectors and connect the black wires (C) together.

6. Use UL listed wire connectors and connect the white wires (E) together.

#### WARNING

Electrical Shock Hazard

Electrically ground blower.

Connect the ground wire to the green and yellow ground wire in the terminal box. Failure to do so can result in death or electrical shock.

7. Connect the green (or bare) ground wire from the home power supply to the yellow-green ground wire (F) in the terminal box using

UL listed wire connectors.

8. Tighten the strain relief screw.

9. Install the terminal box cover.

10. Reconnect the power.

Installation

Installation

English

Installation

Install Duct Covers When using both upper and lower vent covers, push lower cover down onto hood and lift upper cover to ceiling and install with two mounting screws.

NOTE For vented installations, the upper vent cover may be reversed to hide slots.

A. Upper vent cover B. Lower vent cover C. 4.2 x 8 mm screws D. Bracket

Secure the bottom of the duct with 2 - 4 x 8 mm screws.

Completing the Installation For non-vented (recirculating) installations only.

1. Install charcoal filters over metal grease filter. See the "Range Hood Care" Section.

2. Install the metal baffle filters. See the "Range Hood Care" section.

3. Check the operation of the range hood blower and light.

## NOTE

To get the most efficient use from your new range hood, read the "Range Hood Use" section.

### Charcoal Filter

If the model is not vented to the outside, the air will be recirculated through disposable charcoal filters that help remove smoke and odors.

The charcoal filters are clipped on the motor housing frame.

## NOTE

To Reduce the Risk of Fire and Shock use only the charcoal filter NK-AR050FNB/AA.

Charcoal filters are not included with the hood.

They must be ordered from your supplier or Samsung service center.

Order the needed kit specifying your hood model and width size.

The range hood is designed to remove smoke, cooking vapors, and odors from the cooktop area. For best results, start the hood before cooking and allow it to operate several minutes after cooking is complete to clear all smoke and odors from the kitchen. The hood controls are located on the front side.

A. Baffle filter B. Baffle filter handle C. Blower and light controls D. LED lamps

### Installation

#### Range Hood Description

#### English

#### Range Hood Use

#### Range Hood Controls

A. Power B. Low Speed C. Medium Speed D. High Speed E. Boost Speed F. Auto

G. Timer Display H. Timer I. Light J. Auto Connectivity Bluetooth

A. POWER Press the POWER button and the hood will be activated at default speed (Default Speed : Low).

Press again and the hood will return to sleep mode.

B. LOW

Press the LOW button and the hood will be activated at Low speed.

C. MED Press the MED button and the hood will be activated at Medium speed.

D. HIGH

Press the HIGH button and the hood will be activated at High speed.

## E. BOOST

Press the BOOST button and the hood will be activated at Maximum speed for 10 minutes.

After 10 minutes. the hood will slow to High speed.

## F. AUTO

Press the Auto button and the Fan speed increase with heat to protect the electronics from heat damage.

The Auto mode is enabled if the hood is connected via Bluetooth with Samsung cooktop and cooktop is on.

## G. Timer Display

Shows the timer settings.

## H. Timer Setting the timer ON

Press the Timer button to set the working time.

Each time you press the Timer. you add 10 minutes to the displayed time. up to a maximum of 99 minutes. The hood will stay on for the amount of time you have set.

After the Timer counts down to zero. the Timer LED light will start to blink. The Timer LED will blink for 5 seconds. and then the hood will turn off automatically.

Setting the timer OFF Press the Timer button for 3 seconds and the Timer function will turn off.

## I. Light Press the Light button. The lights come on at the high setting.

Press the Light button a second time. The lights turn dimmer.

Press the Light button a third time. The lights turn off.

## Sound

Muting / Unmuting the hood. Press and hold the Light button for 3 seconds to turn off the hood sounds.

Press and hold again to turn on the sounds.

**COOKTOP AND RANGE HOOD CONNECTIVITY** This appliance has a feature which allows you to pair compatible Samsung cooktops and your hood via Bluetooth.

After you enable this function and pair your hood and a compatible cook top. the hood fan will automatically come on at Low speed when you turn on a cooktop element. The hood fan will also shut off automatically when you turn off the cooktop elements.

In addition. after the hood and compatible cooktop are paired. you can download the Samsung Smart Home app to a mobile device. and then use the Samsung Smart Home app to: Monitor and control the On/Off status of the hood.

Monitor and control the fan speed.

Monitor and control the lights.

Set the hood shut-off timer with the time-up alarm.

For more information about downloading the Samsung Smart Home app to your mobile device and using it to control your hood, visit: [www.samsung.com](http://www.samsung.com).

Bluetooth connection (Pairing) 1. Press the Auto Connectivity button on hood for 3 seconds. The pairing mode will be activated and the Bluetooth icon will blink.

2. Press the Auto Connectivity button on cooktop.

NOTE For a detailed description of the pairing method, see the user manual of a compatible Samsung cooktop.

3. After the pairing process finishes, the Bluetooth light will stay lit and appears in the display.

Bluetooth disconnection (Pairing reset) 1. Press and hold the Auto Connectivity button and Light button on the hood for 3 seconds.

2. The Bluetooth connection disconnects.

J. Auto Connectivity The Auto Connectivity function lets you quickly connect the hood via Bluetooth with a compatible Samsung cooktop after the hood and cook top have been paired. To turn the function on, press the Auto Connectivity button. To turn the function off and disconnect the hood and cooktop, press the Auto Connectivity button again.

While the hood and cooktop are connected, the hood fan will automatically come on at Auto speed when you turn on a cooktop element. The hood fan will also shut off automatically when you turn off the cooktop elements. You will also be able to control the hood with the Samsung Smart Home app as described above.

1. Press the Auto Connectivity button to activate the function.

2. The hood will turn on/off automatically following the cooktop.

3. Press again to deactivate the function.

Image Remote Control by Samsung Smart Home App

Auto Connectivity Hood Function

NOTE These functions are only available if you have installed a compatible Samsung Bluetooth cooktop.

Range Hood Use

English

Range Hood Care

Range Hood Use

Range Hood Care

**IMPORTANT:** Clean the hood and baffle filters frequently according to the following instructions. Replace the baffle filters before operating the hood.

**Exterior Surfaces:** To avoid damage to the exterior surface, do not use steel wool or soap filled scouring pads to clean the hood.

Always wipe dry to avoid water marks.

**Cleaning Method:** Liquid detergent soap and water or all-purpose cleanser

Wipe with a damp soft cloth or nonabrasive sponge, then rinse with clean water and wipe dry.

Do not use cleaning agents containing bleach.

**Stainless Steel Baffle Filter:** 1. Remove the filter by pulling the spring release handle, and then pulling down the filter.

A. Spring release handle

2. Wash the stainless steel baffle filter as needed in your dishwasher or a hot detergent solution.

3. To reinstall the filter, first make sure the spring release handles are toward the front. Insert the stainless steel filter into the upper track.

4. Push in the spring release handle.

5. Push up on the stainless steel filter, and then release the handle to latch the filter into place.

#### WARNING

When removing the filter, please hold it with both hands to make sure it does not fall.

**Replacing an LED Lamp** The LED lights are replaceable by a service technician only. See the support contact information in the Warranty section.

**Replacing the charcoal filter** After approximately one year of use, the charcoal filter should be replaced with a new one, as the odour reduction capacity will be reduced.

**NOTE** Charcoal filters are not included with the hood. They must be ordered from your supplier or Samsung service center.

Order the needed kit specifying your hood model and width size.

**Reset the filter alarm**

Press the POWER button for 3 seconds to reset the filter alarm.

#### NOTE

Every 50 hours of fan use, the filter alarm light (low button) will blink, indicating the filters may need to be cleaned.

**Performance (CFM) Conversion**

Press and hold the HIGH and BOOST button on the hood for 3 seconds to convert Blower performance.

Normal mode: appears in the display. The blower will operate normally (Max 390 CFM).

Power mode: appears in the display. The blower will operate powerfully (Max 600 CFM).

#### CAUTION

Do not activate this function without qualified person.

We recommend that a qualified technician install the range hood.

It is the installer's responsibility to ensure the range hood complies with the installation clearances specified for the product.

To activate Power mode of this function, the Make-up air system is required.

#### Makeup Air

When using ventilation systems with greater than specified CFM of air movement, review local building codes as they may require makeup air systems. Consult a HVAC professional for specific requirements for your area as CFM requirements can vary between locales.

Consult a HVAC professional to select the correct CFM capacity range hood for your application. The CFM capacity depends on the range or cooktop BTU rating, size and location, size of the kitchen and the range hood ductwork in the kitchen.

## SAMSUNG RANGE HOOD

#### Limited warranty to original purchaser

This SAMSUNG brand product, as supplied and distributed by Samsung Electronics America, Inc. (SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for a limited warranty period of:

#### ONE (1) YEAR PARTS AND LABOR

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in the United States. To receive warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures.

Warranty service can only be performed by a SAMSUNG authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center.

SAMSUNG will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

In-home service will be provided during the warranty labor period subject to availability within the contiguous United States.

In-home service is not available in all areas. To receive in-home service, the product must be unobstructed and accessible to service personnel. If during in-home service repair can not be completed, it may be necessary to remove, repair and return the product.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, noncommercial use of this product and shall not apply to the following, including, but not limited to: damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications, installations, repairs, external wiring or connectors not supplied or authorized by SAMSUNG which damage this product or result in service problems; incorrect electrical line voltage, fluctuations and surges; customer adjustments and failure to follow operating instructions, cleaning, maintenance and environmental instructions that are covered and prescribed in the instruction book; problems caused by pest infestations, and overheating by user.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTEE GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE, WITHOUT LIMITING THE FOREGOING, PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS, DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT IS NON TRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some provinces or territories may or may not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations

or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

To obtain warranty service, please contact SAMSUNG at: 1-800-SAMSUNG (726-7864) or [www.samsung.com/us/support](http://www.samsung.com/us/support)

## SAMSUNG RANGE HOOD

Limited warranty to original purchaser

This SAMSUNG brand product, as supplied and distributed by Samsung Electronics Canada, Inc. (SAMSUNG) and delivered new, in the original carton to the original consumer purchaser, is warranted by SAMSUNG against manufacturing defects in materials and workmanship for a limited warranty period of:

### ONE (1) YEAR PARTS AND LABOR

This limited warranty begins on the original date of purchase, and is valid only on products purchased and used in Canada. To receive warranty service, the purchaser must contact SAMSUNG for problem determination and service procedures. Warranty service can only be performed by a SAMSUNG authorized service center. The original dated bill of sale must be presented upon request as proof of purchase to SAMSUNG or SAMSUNG's authorized service center.

SAMSUNG will repair or replace this product, at our option and at no charge as stipulated herein, with new or reconditioned parts or products if found to be defective during the limited warranty period specified above. All replaced parts and products become the property of SAMSUNG and must be returned to SAMSUNG. Replacement parts and products assume the remaining original warranty, or ninety (90) days, whichever is longer.

In-home service will be provided during the warranty labor period subject to availability within the contiguous Canada.

In-home service is not available in all areas. To receive in-home service, the product must be unobstructed and accessible to service personnel. If during in-home service repair can not be completed, it may be necessary to remove, repair and return the product.

This limited warranty covers manufacturing defects in materials and workmanship encountered in normal, noncommercial use of this product and shall not apply to the following, including, but not limited to: damage which occurs in shipment; delivery and installation; applications and uses for which this product was not intended; altered product or serial numbers; cosmetic damage or exterior finish; accidents, abuse, neglect, fire, water, lightning or other acts of nature; use of products, equipment, systems, utilities, services, parts, supplies, accessories, applications.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS

STATED ABOVE. AND NO OTHER EXPRESS WARRANTY OR GUAR ANTY GIVEN BY ANY PERSON. FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG. SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS. FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS. OR ANY OTHER SPECIAL. INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE. MISUSE OR INABILITY TO USE THIS PRODUCT. REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED. AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE. WITHOUT LIMITING THE FOREGOING. PURCHASER ASSUMES ALL RISK AND LIABILITY FOR LOSS. DAMAGE OR INJURY TO PURCHASER AND PURCHASER'S PROPERTY AND TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE USE. MISUSE OR INABILITY TO USE THIS PRODUCT SOLD BY SAMSUNG NOT CAUSED DIRECTLY BY THE NEGLIGENCE OF SAMSUNG. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT IS NON TRANSFERABLE AND STATES YOUR EXCLUSIVE REMEDY.

Some provinces or territories may or may not allow limitations on how long an implied warranty lasts. or the exclusion or limitation of incidental or consequential damages. so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights. and you may also have other rights which vary from state to state.

To obtain warranty service. please contact SAMSUNG at: 1-800-SAMSUNG (726-7864) or [www.samsung.com/ca/support](http://www.samsung.com/ca/support) (English). [www.samsung.com/cafr/support](http://www.samsung.com/cafr/support) (French)

#### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.