

## Feature Overview

### Understanding features and terms


Your Electrolux refrigerator is designed for optimal convenience and storage flexibility. The illustration below is provided to assist you with familiarizing yourself with product features and terminology



## Controls

Use your appliance according to the following control regulations. Your appliance has comparable functions and modes as the control panels shown in the pictures below. When the appliance is

powered on for the first time, the backlighting of the icons on the display panel starts working. If no buttons have been pressed and the doors are closed, the backlighting will turn off.

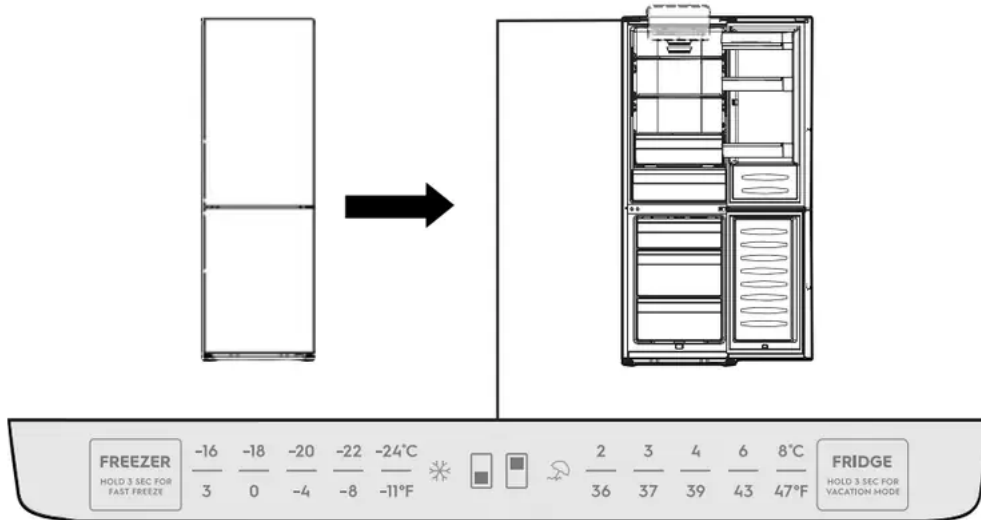


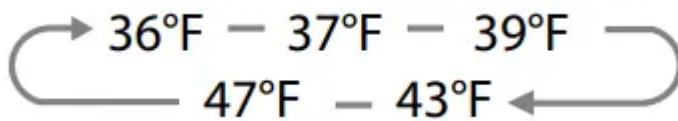
## Controlling the temperature

We recommend that when you start your refrigerator for the first time set the temperature for the refrigerator to 39°F and the freezer to 0°F. If you want to change the temperature, follow the instructions below.

### Fridge




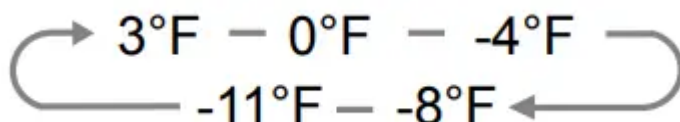
Press the middle part of button  to set fridge temperature between 36°F and 47°F as needed, and control panel will display corresponding figures according to the following sequence.



### Freezer



Press the middle part of button  to set freezer temperature between 3°F and -11°F as needed, and control panel will display corresponding figures according to the following sequence.



## Fast Freeze



Fast freeze will quickly lower the temperature within the freezer so food will freeze vitamins and nutrients of fresh food and keep food fresh longer.

- Press the middle part of button for 3 seconds to activate the fast freeze function. The light will come on.
- In case of the maximum amount of food to be frozen, please wait about 24 hours.
- Fast freeze automatically switches off after 26 hours.
- When fast freeze function is on you can switch off fast freeze function by pressing the middle part of button and the freezer temperature setting will revert back to the previous setting.

## Vacation



If you are going to be away for along period of time, you can activate this function by pressing the middle part of button for 3 seconds until the light comes on.

- When the vacation function is activated, the temperature of the refrigerator is automatically switched to 40°F to minimize the energy consumption.
- When the vacation function is on, you can switch it off by pressing the middle part of button. The fridge temperature setting will revert back to the previous setting.

## Storage Features

### Movable shelves/trays

- Various glass and plastic storage shelves or wire trays are included with your appliance.
- The walls of the refrigerator are equipped with a series of runners so that the shelves can be positioned as desired.
- To permit storage of food packages of various sizes, the door shelves can be placed at different heights.
- To adjust, gradually pull the shelf in the direction of the arrows until it comes free, then reposition as required.

### Vegetable drawer

For storing fruits and vegetables.

### Freezer drawer

For storing frozen foods.

### **Ice cube tray**

For making ice and storing ice cubes.

## **Care and Cleaning**

### **Protecting your investment**

Keeping your refrigerator clean maintains its appearance and prevents odor build-up. Wipe up any spills immediately and clean the freezer and fresh food compartments at least twice a year.

- Never use metallic scouring pads, brushes, abrasive cleaners, or strong alkaline solutions on any surface.
- Never use CHLORIDE or cleaners with bleach to clean stainless steel.
- Do not wash any removable parts in a dishwasher.
- Always unplug the electrical power cord from the wall outlet before cleaning.
- Remove adhesive labels by hand. Do not use razor blades or other sharp instruments which can scratch the appliance surface.
- Do not remove the serial plate. Removal of your serial plate voids your warranty.
- Before moving your refrigerator, raise the anti-tip brackets so the rollers will work correctly. This will prevent the floor from being damaged.

## Care and cleaning tips



Part	Cleaning Agents	Tips and Precautions
Interior & Door Liners	<ul style="list-style-type: none"> <li>• Soap and water</li> <li>• Baking soda and water</li> </ul>	<ul style="list-style-type: none"> <li>• Use two tablespoons of baking soda in one quart of warm water.</li> <li>• Be sure to wring excess water out of sponge or cloth before cleaning around controls, light bulb or any electrical part.</li> </ul>
Door Gaskets	<ul style="list-style-type: none"> <li>• Soap and water</li> </ul>	<ul style="list-style-type: none"> <li>• Wipe gaskets with a clean soft cloth.</li> </ul>
Drawers & Bins	<ul style="list-style-type: none"> <li>• Soap and water</li> </ul>	<ul style="list-style-type: none"> <li>• Use a soft cloth to clean drawer runners and tracks.</li> <li>• Do not wash any removable items (bins, drawers, etc.) in dishwasher.</li> </ul>
Glass Shelves	<ul style="list-style-type: none"> <li>• Soap and water</li> <li>• Glass cleaner</li> <li>• Mild liquid sprays</li> </ul>	<ul style="list-style-type: none"> <li>• Allow glass to warm to room temperature before immersing in warm water.</li> </ul>
Exterior & Handles	<ul style="list-style-type: none"> <li>• Soap and water</li> <li>• Non abrasive glass cleaner</li> </ul>	<ul style="list-style-type: none"> <li>• Do not use commercial household cleaners containing ammonia, bleach or alcohol to clean handles.</li> <li>• Use a soft cloth to clean smooth handles.</li> <li>• Do not use a dry cloth to clean smooth doors.</li> </ul>
Exterior & Handles (Stainless Steel Models Only)	<ul style="list-style-type: none"> <li>• Soap and water</li> <li>• Stainless steel cleaners</li> </ul>	<ul style="list-style-type: none"> <li>• Never use CHLORIDE or cleaners with bleach to clean stainless steel.</li> <li>• Clean stainless steel front and handles with non-abrasive soapy water and a dishcloth. Rinse with clean water and a soft cloth.</li> <li>• Use a non-abrasive stainless steel cleaner. These cleaners can be purchased at most home</li> </ul>



		<p>improvement or major department stores. Always follow manufacturer's instruction. Do not use household cleaners containing ammonia or bleach.</p> <ul style="list-style-type: none"> <li>• NOTE: Always clean, wipe and dry with grain to prevent scratching.</li> <li>• Wash the rest of the cabinet with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.</li> </ul>
--	--	---

### Vacation and moving tips

Occasion	Tips
Short Vacations	<ul style="list-style-type: none"> <li>• Leave refrigerator operating during vacations of three weeks or less.</li> <li>• Use all perishable items from refrigerator compartment.</li> <li>• Turn automatic ice maker off and empty ice bucket, even if you will only be gone a few days.</li> </ul>
Long Vacations	<ul style="list-style-type: none"> <li>• Remove all food and ice if you will be gone one month or more.</li> <li>• Turn the cooling system to vacation mode (see Controls section).</li> <li>• Clean interior thoroughly.</li> <li>• Leave doors open to prevent odors and mold build-up. Block doors open if necessary.</li> </ul>
Moving	<ul style="list-style-type: none"> <li>• Remove all food and ice.</li> <li>• If using a handcart, load from the side.</li> <li>• Adjust rollers all the way up to protect them during sliding or moving.</li> <li>• Pad cabinet to avoid scratching surface.</li> </ul>



## Common Solutions for Concerns

### Before you call...

If you experience a concern with your refrigerator or notice a product behavior or condition that you do not understand, you can usually avoid a call to your service representative by referring to this section for an answer. Beginning with the following table, this information includes concerns, potential causes, and common solutions.

<b>Opening/Closing Of Doors/Drawers</b>		
Concern	Potential Cause	Common Solution
Door(s) will not close.	<ul style="list-style-type: none"> <li>• Refrigerator is not level. It rocks on the floor when moved slightly.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure floor is level and solid, and can adequately support the refrigerator. Contact a carpenter to correct a sagging or sloping floor.</li> </ul>
	<ul style="list-style-type: none"> <li>• An object has fallen from the baskets blocking the door from closing.</li> </ul>	<ul style="list-style-type: none"> <li>• Check for ice or food items blocking drawer.</li> </ul>
Drawers are difficult to move.	<ul style="list-style-type: none"> <li>• Food is touching shelf on top of drawer.</li> </ul>	<ul style="list-style-type: none"> <li>• Keep less food in drawer.</li> </ul>
	<ul style="list-style-type: none"> <li>• Drawer is overloaded.</li> </ul>	<ul style="list-style-type: none"> <li>• Remove or redistribute food.</li> </ul>
<b>Refrigerator Operations</b>		
Concern	Potential Cause	Common Solution
Compressor does not run.	<ul style="list-style-type: none"> <li>• Cooling system is turned Off.</li> </ul>	<ul style="list-style-type: none"> <li>• Turn cooling system On. See Controls Section for location of cooling system On/Off button.</li> </ul>
	<ul style="list-style-type: none"> <li>• Refrigerator is in defrost cycle</li> </ul>	<ul style="list-style-type: none"> <li>• This is normal for a fully automatic defrost refrigerator. The defrost cycle occurs periodically, lasting about 30 minutes.</li> </ul>
	<ul style="list-style-type: none"> <li>• Plug at wall outlet is disconnected.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure plug is tightly pushed into outlet.</li> </ul>
	<ul style="list-style-type: none"> <li>• House fuse is blown or a tripped circuit breaker.</li> </ul>	<ul style="list-style-type: none"> <li>• Check/replace fuse with a 15 amp time-delay fuse. Reset circuit breaker.</li> </ul>
	<ul style="list-style-type: none"> <li>• Power outage.</li> </ul>	<ul style="list-style-type: none"> <li>• Check house lights. Call local Electric Company.</li> </ul>
	<ul style="list-style-type: none"> <li>• Electronic control system keeps the</li> </ul>	

	refrigerator at a constant temperature.	<ul style="list-style-type: none"> <li>• This is normal. Refrigerator goes on and off to keep temperature constant.</li> </ul>
Refrigerator runs too much or too long.	<ul style="list-style-type: none"> <li>• Room or outside weather is hot.</li> </ul>	<ul style="list-style-type: none"> <li>• It's normal for the refrigerator to work longer under these conditions.</li> </ul>
	<ul style="list-style-type: none"> <li>• Refrigerator has recently been disconnected for a period of time.</li> </ul>	<ul style="list-style-type: none"> <li>• It takes 8-12 hours for the refrigerator to cool down completely.</li> </ul>
	<ul style="list-style-type: none"> <li>• Doors are opened too frequently or too long.</li> </ul>	<ul style="list-style-type: none"> <li>• Warm air entering the refrigerator causes it to run more. Open doors less often.</li> </ul>
	<ul style="list-style-type: none"> <li>• Refrigerator/freezer door may be slightly open.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure refrigerator is level. Keep food and containers from blocking door.</li> </ul>
	<ul style="list-style-type: none"> <li>• Freezer control is set too cold.</li> </ul>	<ul style="list-style-type: none"> <li>• Set freezer control to warmer setting until refrigerator temperature is satisfactory. Allow 24 hours for temperature to stabilize.</li> </ul>
	<ul style="list-style-type: none"> <li>• Fresh food/freezer gasket is dirty, worn, cracked, or poorly fitted.</li> </ul>	<ul style="list-style-type: none"> <li>• Clean or change gasket. Leaks in door seal will cause refrigerator to run longer in order to maintain desired temperatures.</li> </ul>
	<ul style="list-style-type: none"> <li>• This model is provided with a high-efficiency, variable speed compressor.</li> </ul>	<ul style="list-style-type: none"> <li>• It is normal for the compressor to run for long periods of time.</li> </ul>
Digital temperature displays are flashing.	<ul style="list-style-type: none"> <li>• Electronic control system has detected a performance problem.</li> </ul>	<ul style="list-style-type: none"> <li>• Call your Electrolux service representative, who can interpret any messages or number codes flashing on the digital displays.</li> </ul>

<b>Temperatures Are Too Cold</b>		
Concern	Potential Cause	Common Solution
Freezer temperature too cold. Refrigerator temperature is satisfactory	<ul style="list-style-type: none"> <li>• Fast freeze function is activated.</li> </ul>	<ul style="list-style-type: none"> <li>• Deactivate fast freeze function.</li> </ul>
	<ul style="list-style-type: none"> <li>• Freezer control is set too cold.</li> </ul>	<ul style="list-style-type: none"> <li>• Set freezer control to a warmer setting. Allow 24 hours for temperature to stabilize.</li> </ul>
Refrigerator temperature too cold. Freezer temperature is satisfactory.	<ul style="list-style-type: none"> <li>• Refrigerator control is set too cold.</li> </ul>	<ul style="list-style-type: none"> <li>• Set refrigerator control to a warmer setting. Allow 24 hours for temperature to stabilize.</li> </ul>
Food stored in drawers freezes.	<ul style="list-style-type: none"> <li>• Refrigerator control is set too cold.</li> </ul>	<ul style="list-style-type: none"> <li>• Set refrigerator control to a warmer setting. Allow 24 hours for temperature to stabilize.</li> </ul>
<b>Temperatures Are Too Warm</b>		
Concern	Potential Cause	Common Solution
Freezer/ Refrigerator temperature is too warm.	<ul style="list-style-type: none"> <li>• Doors are opened too frequently or too long.</li> </ul>	<ul style="list-style-type: none"> <li>• Warm air enters the refrigerator whenever the door is opened. Open the door less often.</li> </ul>
	<ul style="list-style-type: none"> <li>• Door is slightly open.</li> </ul>	<ul style="list-style-type: none"> <li>• Close door.</li> </ul>
Freezer temperature is too warm. Refrigerator temperature is satisfactory.	<ul style="list-style-type: none"> <li>• Freezer control is set too warm.</li> </ul>	<ul style="list-style-type: none"> <li>• Set freezer control to a colder setting. Allow 24 hours for temperature to stabilize.</li> </ul>
Refrigerator temperature is too warm. Freezer temperature is satisfactory	<ul style="list-style-type: none"> <li>• Refrigerator control is set too warm.</li> </ul>	<ul style="list-style-type: none"> <li>• Set refrigerator control to a colder setting. Allow 24 hours for temperature to stabilize.</li> </ul>
<b>Water/Moisture/Frost Inside Refrigerator</b>		

Concern	Potential Cause	Common Solution
Moisture collects on inside of refrigerator walls.	• Weather is hot and humid.	• The rate of frost buildup and internal sweating increases.
	• Door is slightly open.	• Close door.
	• Door is opened too often or too long.	• Open door less often to allow internal temperature to stabilize.
	• Open containers.	• Keep containers covered.
Water collects on bottom side of drawer cover.	• Vegetables contain and give off moisture.	<ul style="list-style-type: none"> <li>• Moisture on the bottom side of the cover is not unusual.</li> <li>• Move humidity control (select models) to lower setting.</li> </ul>
Moisture collects in bottom of drawer.	<ul style="list-style-type: none"> <li>• Washed vegetables and fruit drain while in the drawer.</li> <li>• Fruits and vegetables are kept past their prime</li> </ul>	<ul style="list-style-type: none"> <li>• Dry items before putting them in the drawer. Water collecting in bottom of drawer is normal.</li> <li>• Routinely clean out old fruits and vegetables especially if they begin to break down.</li> </ul>
Moisture collects on outside of refrigerator or between doors.	• Weather is humid.	• This is normal in humid weather.
	• Door is slightly open, causing cold air from inside refrigerator to meet warm air from outside.	• Close door.

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.