

BEFORE FIRST USE

1. Remove all accessories and shipping materials packed inside the Oven.
2. Wash the Rack and Pan in warm soapy water. Wipe the inside of the Oven with a damp cloth or sponge. Blot dry with paper towels to be sure the unit is dry before using.
3. Place Oven on a flat counter or other stable surface **DO NOT OPERATE ON THE SAME CIRCUIT WITH ANOTHER APPLIANCE.**
4. Make sure the Crumb Tray is properly installed before using.

 
 
For the first time only, Set the Temperature Knob to MAX, the function setting on toast and the timer to 15 minutes. This will burn off any oils still on the Oven.

NOTE The oven may smoke during this process. This is normal for a new

PRODUCT INSTRUCTION

NAMES OF PARTS


When using electrical appliance, basic safety precautions should always be followed, including the following:

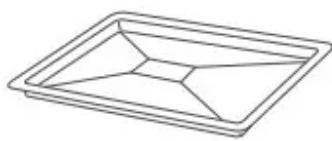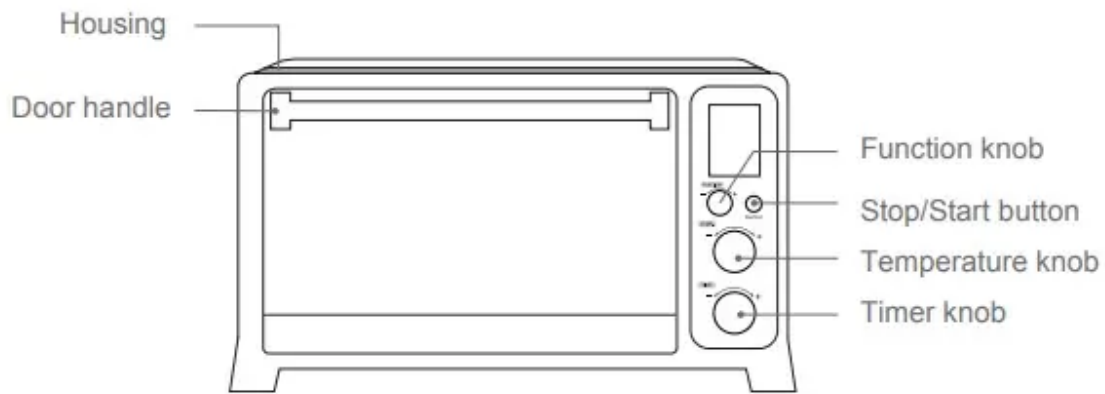

Baking Pan



 Baking Rack

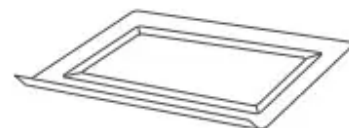

Crump Tray



Rotisserie Kit



Rotisserie Kit



Rotisserie Kit

OPERATION

 
HOW TO USE

CAUTION: the oven surfaces are hot during and after use general instructions


1. Place the Baking Rack in position that will accommodate the height of the food to be cooked.
2. Set the food on the Rack. Make sure that you always use an ovenproof container in the oven, never use plastic or cardboard containers in the Oven .
3. Never use glass or ceramic pans or lids.
4. DO NOT let juices run to the bottom of the oven. Use the Drip Tray and Crumb Tray when cooking.
5. Set the temperature as suggested by the recipe or as desired.
6. Securely shut the door and set the cooking time to begin operating the oven.

When the oven is electrified, the buzzer will ring once. The default function is TOAST. In the process of cooking , pressing " Stop/Start " can stop cooking.

CONTROL PANEL

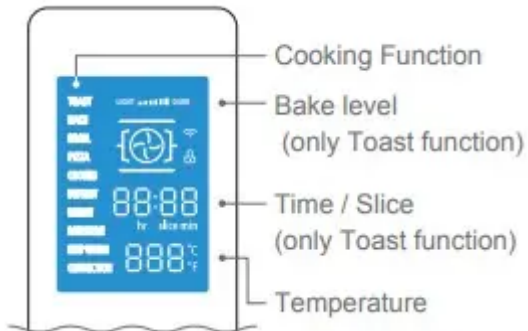

COOKING STEP

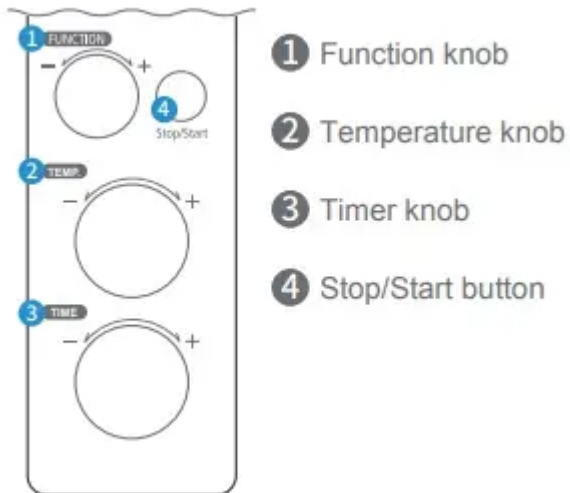 

FUNCTION INSTRUCTION

OVEN FUNCTION

COOKING FUNCTION	PRESET TEMP	TEMP RANGE	PRESET TIME	TIME RANGE
Toast		Fixed Temp		Fixed Time
Bake	450°F	150°F~450°F	30min	0.01~2Hour
Broil	350°F			
Pizza 6 inch	450°F		7min	1min~30min
Pizza 9 inch			8.5min	
Pizza 12 inch			9min	
Cookie	350°F		30min	0.01~2Hour
Defrost	180°F	100°F~180°F	1hour30min	
Reheat	350°F	150°F~450°F	30min	
Rotisserie			1hour	
Keep warm	180°F	100°F~180°F	1hour30min	
Convection	450°F	150°F~450°F	30min	

TOAST



Fixed temperature & time

- Preset power level : 4
- Power level range : 1-6 level
- Preset toast quantity : 4
- Toast quantity range : 1-6 slice

BAKE



- Preset temperature : 450°F
- Temp range : 150°F- 450°F
- Preset time : 30min
- Time range : 0.01 ~ 2 Hour

BROIL



- Preset temperature : 350°F
- Temp range : 150°F- 450°F
- Preset time : 30min
- Time range : 0.01 ~ 2 Hour

PIZZA



- Preset temperature : 450°F
- Temp range : 150°F- 450°F
- Preset time : 30min
- Time range : 0.01 ~ 2 Hour

COOKIES



- Preset temperature : 350°F
- Temp range : 150°F- 450°F
- Preset time : 30min
- Time range : 0.01 ~ 2 Hour

ROTISSERIE



- Preset temperature : 350°F
- Temp range : 150°F- 450°F
- Preset time : 1hour
- Time range : 0.01 ~ 2 Hour

DEFROST



- Preset temperature : 180°F
- Temp range : 100°F- 180°F
- Preset time : 1hour 30min
- Time range : 0.01 ~ 2 Hour

KEEP WARM



- Preset temperature : 180°F
- Temp range : 100°F- 180°F
- Preset time : 1hour 30min
- Time range : 0.01 ~ 2 Hour

REHEAT



- Preset temperature : 350°F
- Temp range : 150°F- 450°F
- Preset time : 30min
- Time range : 0.01 ~ 2 Hour

CONVECTION



- Preset temperature : 450°F
- Temp range : 150°F- 450°F
- Preset time : 30min
- Time range : 0.01 ~ 2 Hour

ROTISSERIE FUNCTION

1. Remove the Baking Rack from the oven and set aside.
2. Place the Baking Pan in the lowest level of the oven. This will catch all the drippings from the food that is on the Rotisserie Forks as it cooks. Do Not attempt to use the Rotisserie Function without placing the Baking Pan in the correct position of the oven
3. Set the Function knob to " ROTIS"
4. Select the length of time you want to Rotisserie the food.
5. Rotate the Temperature knob clockwise to desired temperature.

ROTISSERIE FUNCTIO USING THE ROTISSERIE FORKS

1. Secure the food with weight centered on the forks.
2. Slide the Holding Forks onto each of the forks and press firmly into the food, piercing the food to hold in place on the forks. Insert the Holding Forks at different angles to hold the food more firmly. Tighten the screws, turning clockwise so that the holding forks will stay in place during the Rotisserie cooking session.
3. Insert the pointed end of the Rotisserie forks into the Rotisserie Socket on the inside right side of the oven.
4. Lift the Rotisserie Forks on the left side just a bit to allow the notch to fit into the Rotisserie Bracket on the left side of the oven.
5. Set the Temperature knob and the Time knob to begin operating the oven.
6. Once the cooking time has been complete and you have checked the internal temperature of the food to ensure that it has cooked properly, you can remove the Rotisserie Forks with the Rotisserie Helper Handle.
7. Hold the handle in your right hand and support handle in your left hand.
8. Place the hooks on the Helper Hander underneath the Rotisserie Forks.
9. Lift the left side of the Rotisserie Forks out of the Bracket first and pull slightly toward.
10. Gently remove the right pointed side of the Rotisserie Forks from the Rotisserie Socket and remove the food on the forks out of the oven.
11. Place the food on a heat safe plate or dish when you have removed from the oven. Let it cool slightly before attempting to remove the holding forks and Rotisserie Forks from the food
12. To remove the Holding Forks, turn the screws counterclockwise and pull the Holding.

CARE AND CLEANING

1. Before cleaning unplug the toaster oven and allow it to cool completely.

2. Wash all the attachments with mild, soaped water including the rack and the baking tray.
3. Do not use abrasive cleansers, scrubbing brushes and chemical cleaner as this will cause damage to the non-stick coating of baking tray.
4. Using a wet cloth to wipe the inner of the oven.
5. To clean the door by using a wet cloth saturated with detergent or soap.
6. Never immerse the unit in water or other liquid.
7. Any other servicing should be performed by an authorized service representative.

SPECIFICATION

MODEL	AC25CEW-SS	POWER	1500W
CUBAGE	25L	L*W*H	18.9x15.6x10.8 inch
VOLTAGE	120V, 1Ph	Rated Energy Consumption	1.5KW/H
AC FREQUENCY	60Hz		

IMPORTANT SAFEGUARDS

BASIC SAFETY PRECAUTIONS

When using electrical appliance, basic safety precautions should always be followed, including the following:

1. Read all instructions before using.
2. To protect against any electrical hazards, DO NOT place unit or cord in water or any other liquids.
3. Do not touch any hot surfaces. Use oven mitts for removing or touching any hot parts. Always place Toast Oven on heat protected surface.
4. Leave about 100-150mm open space all around the exterior of this appliance. Place the appliance on a dry, horizontal surface.
5. Unplug the unit from outlet when not in use and before cleaning. Always allow to cool before attaching or removing any parts.
6. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
7. Then plug cord into the wall outlet. To disconnect, turn any control to " off ", then remove plug from wall outlet
8. Do not let cord hang over edge of table or counter, or touch hot surface.

9. Do not place the Toaster Oven inside an heated oven or near a hot gas or electric burner.
10. Do not use outdoors.
11. If the electric circuit is overloaded with other appliances, this appliance may not operate properly. The Toaster Oven should be operated on a separate electrical circuit from other operating appliances.
12. The temperature of accessible surfaces may be high when the appliance is operating.
13. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
14. Store only the accessories provided with this unit inside the oven when not in use.
15. Do not store any other materials.
16. A fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not put any items on top of the appliance when in operation.
17. Do not place any cardboard, paper or plastic inside the oven.
18. All containers placed inside the oven must not be airtight. Also, they need to have enough room to allow for expansion of fluids.
19. Clean this appliance regularly as build – up of grease may cause a fire. Make sure that this appliance is not placed near curtains, any drapery, or other flammable material.
20. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock. In order to prevent accidental burns, always use the handle and knobs to operate this appliance.
21. The temperature of the door or outer surface may be high when the appliance operating.
22. Oversize foods or metal utensils must not be inserted in a toast oven as they may create a fire or risk of electric shock.
23. Do not cover crumb tray or any part of the oven with metal foil.
24. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. Use extreme caution when removing tray or disposing of hot grease.
25. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. Or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
26. Children should be supervised to ensure that they do not play with the appliance.
27. The appliance is not intended to be operated by means of an external timer or separate remote-control system.

28. The rear surface of appliance shall be placed against a wall.
29. Do not use appliance for other than intended use.
30. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
31. Extreme caution should be exercised when using containers constructed of other than metal or glass.

CAUTION: Do not insert your fingers into any gaps or holes; it may cause injuries.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

