


CONTROL PANEL

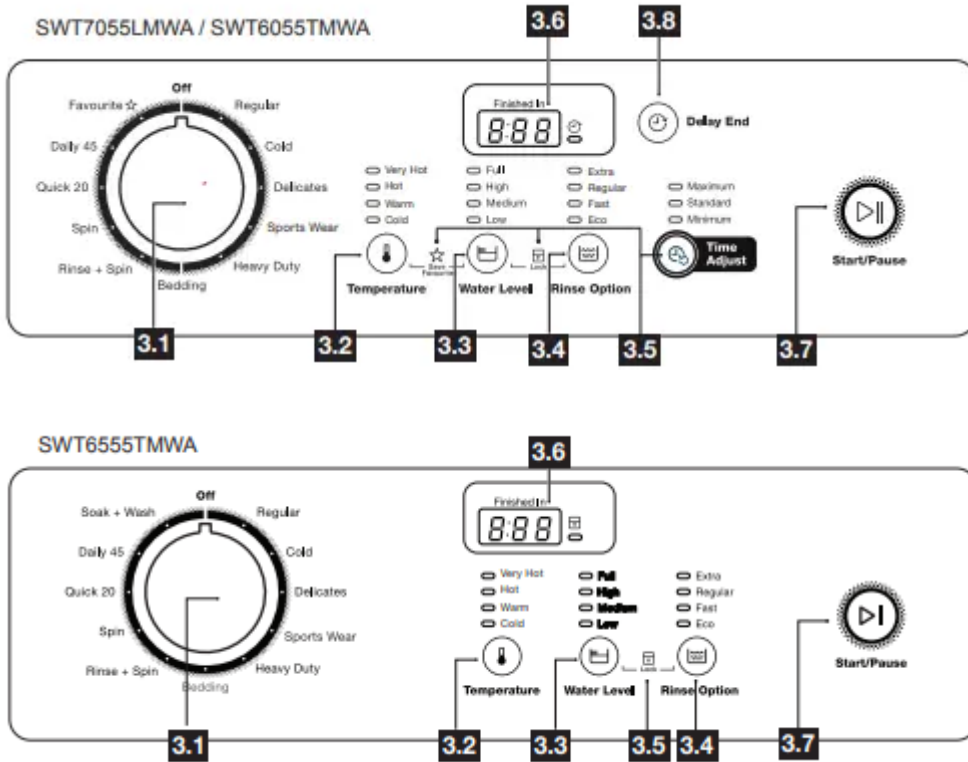

PROGRAM SELECTOR KNOB

Turn the Program Selector knob to choose the wash program you want. The table “Your Program Guide” shown on page 13 will help you in selecting the right program.

The Program Selector knob is not a timer. Once you select a wash program, the Program Selector knob will stay at that position for the whole wash cycle.

WATER TEMPERATURES BUTTON

For each wash program your washing machine automatically selects a suitable fill water temperature. If you want to use a different wash water temperature, press the Temperature button repeatedly.

The water temp lights will tell you the temperature for each press of the button.

You have four temperatures to choose from Very hot, Hot, Warm, and Cold.

The temperature of warm water will depend on the temperature and pressure of your hot and cold water supplies. The recommended temperature for warm is 35°C.

You can adjust the flow rate of the water supplies to adjust the Warm temperature. All rinse water temperatures are cold.


Always check your label for the washing temperature symbols which the International Care Labelling Code now uses



NOTE:

If you have a cold water connection ONLY and the hot inlet valve is capped off (refer installation instructions) you must select Cold washes only. To fill detergent, you must follow steps as below:

1. Measure the correct amount of powder detergent by following the recommendations on the package.
2. Mix powder detergent in one litre of hot or warm water.
3. Add the pre-mixed detergent to the wash load.

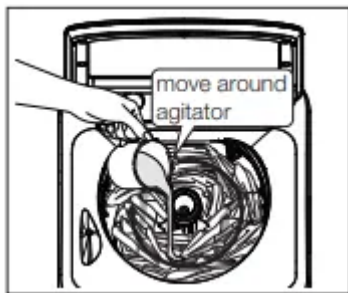

Proportion of Hot and Cold water based on temperature selection.

Temp.	Descriptions	Water from HOT valve	Water from COLD valve
Very hot	for normally soiled white cottons and linen (e.g. tea cloths, towels, tablecloths, sheets...).	100 %	0 %
Hot	for normally soiled, colourfast garments (e.g. shirts, night dresses, pyjamas...) in linen, cotton or synthetic fibres and for lightly soiled white cotton (e.g. underwear).	65 %	35 %
Warm	for delicate items (e.g. net curtains), mixed laundry including synthetic fibres and	50 %	50 %
Cold	woollens bearing the label pure new wool, machine washable, non-shrink.	10 %	90 %

WATER LEVEL BUTTON

Choose the water level by pressing Water Level button. Use only the amount of water you need for the wash load.

CHOOSE THE WATER LEVEL



Water Level	Appropriate Clothes Load (kg)	
	Model SWT6055TMWA	Model SWT6555TMWA SWT7055LMWA
Full	4 to 6.0	5 to 7
High	3 to 4.5	3 to 5
Medium	1.5 to 3	1.5 to 3
Low	0 to 1.5	0 to 1.5


- 1) Model SWT6055TMWA Maximum mass of dry cloth is 6.0 kg.
- 2) Model SWT6555TMWA Maximum mass of dry cloth is 6.5 kg.
- 3) Model SWT7055LMWA Maximum mass of dry cloth is 7.0 kg.

1. Choose the water level by pressing Water Level button.

You can select:

- Full, High , Medium and Low

2. Use only the amount of water you need for the wash load.

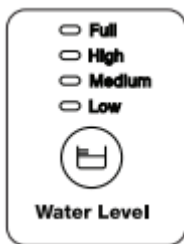

RINSE OPTION BUTTON

Pressing the Rinse Option button to choose the rinse type for your wash load. For most washes the machine automatically selects “Regular” rinse for you.


There are four rinses to choose from Extra, Regular, Fast and Eco.

- Extra rinse, the machine fills twice, giving you two deep rinses.
- Regular rinse, the machine fills once, giving you one regular rinse.
- Fast Rinse , Fast rinse uses less time then Eco rinse by performing only 3 Eco sprays but the amount of water in each spray is increased.
- Eco rinse, is a spray rinse giving you maximum water saving.

After cycle has finished, You must drain the water from the washing tub by pressing “Start/Pause” button to continue the cycle.

How does Eco Rinse work ?

When Eco rinse is used, rinse water is sprayed into the washbowl in pulses. After each pulse the washbowl will spin to remove detergent laden water from the clothes.

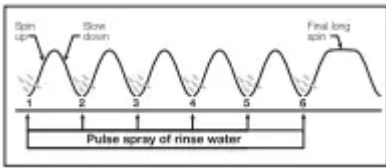

The machine will go through a series of maximum six pulses spray and short spin cycles in this manner, depending on program selection, followed by a final long spin that removes the water from the clothes to complete the full wash program.

NOTE:

- Compare this with Regular rinse where much more water is used.
- Regular rinse, water enters the machine filling up to the wash water level selected. The washer agitates and finally empties the rinse water through the drain hose.
- Extra rinse, this is special option for those people who suffer from allergies, this extra rinse will provide two Regular rinses to ensure all detergent residue has been removed.
- Eco Rinse and Fast Rinse CANNOT be selected with Bedding program.
- We strongly recommend you use Eco rinse for your washes whenever you can. There is considerable saving of water when Eco is used instead of Regular or Extra to rinse clothes.
- Eco and Fast rinse is not designed to be used with fabric softener. Select Regular or Extra rinse if you are going to use fabric softener. Regular rinse ensures the fabric softener is correctly dispensed and thoroughly removed from your clothes during rinsing.
- Daily 45 program rinse is fixed with
- Regular rinse only.
- Quick20 program rinse is fixed with
- Fast rinse only.

TIME ADJUST, FAVOURITE , CHILD LOCK

TIME ADJUST

(SWT7055LMWA / SWT6055TMWA)


This option allows you to increase/decrease washing time from 3 available options. (Default is "Standard"): Standard > Minimum > Maximum

Time adjust is only applicable to: Regular, Cold, Delicates, Hand Wash, Heavy Duty, Bedding



FAVOURITE

(SWT7055LMWA / SWT6055TMWA)

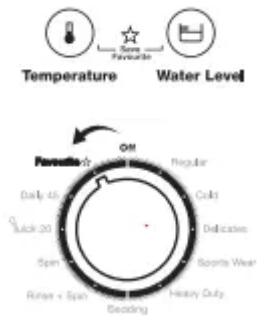


Selector Knob

The favourite function is the ability to tailor individual wash features and save them as a custom programme until the next time.

To save Favourite, select a wash program, Spin, Temperature, Rinse then press and hold Temperature and Water Level buttons simultaneously for > 2 seconds. Buzzer will sound then display will **FAV** show "FAV". The program is now stored for later use by selecting Favourite via selector knob.

CHILD LOCK

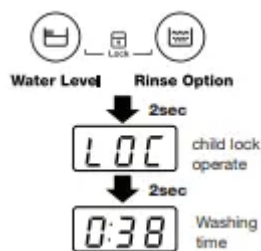

Your appliance is provided with CHILD SAFETY LOCK which permits you to leave the appliance unsupervised with the door closed without having to worry that children might be injured by or cause damage to the appliance.

To Activate the child lock :

: Hold down the "Water Level" and "Rinse Option" buttons at the same time for 2 seconds. when activated buzzer will sound then display will show "LOC" for 2 seconds before going back to standby mode showing wash time.

(Model SWT6555TMWA display shows “LOC” and  icon will turn on) 



To Deactivate the child lock :

: Hold down the “Water Level” and “Rinse Option” buttons at the same time for 2 seconds.

When deactivated buzzer will sound then display will show "unL" for 2 seconds then going back to show washing time.

(Model SWT6555TMWA display shows “unL” and  icon will turn off) 

DISPLAY

The display shows the following information:

Machine In Pause Mode



 
Time digits and colon LEDs at rate of 1s.

Estimated time of the selected program




After selecting a program, the estimated time is displayed in hours and minutes (for example 1.05). The estimated time is calculated automatically on the basis of the maximum recommended load for each program. After the program has started, the time remaining is updated every minute.

End Of Program




When the program is completed display show will show “End”.

 Alarm Codes




In the event of operating problems, some alarm codes can be displayed, for example (see “Troubleshooting” and “Troubleshooting fault displays” on page 26, 27, 28).

 Stand by/ Auto off



Colon ":" LED lights up, Static.

 Incorrect Option Selection



If an option is not compatible with selected program, display will flash "---" with 3 consecutive short beeps.

START/PAUSE BUTTON

To start the selected program, press the "Start/Pause" button.

If you have started your wash and you wish to stop it for some reason, press the "Start/Pause" button to enter PAUSE mode. To restart the program from the point at which it was interrupted, press the "Start/Pause" again.

If the lid has been opened any time during operation of the machine, the Start/Pause button has to be pressed when the lid is closed to continue operation.

DELAY END OPTION BUTTON (SWT6055TMWA ,SWT7055LMWA)

Before you start the program, this option makes it possible to delay the end of the washing program by 2, 4, 6, 8, 10 or 12 hours, by pressing Delay End button to choose the end time as your wish. This option must be selected after choosing the wash program, and before pressing the "Start/Pause" button. If after having set the Delay-End option (and pressed "Start/Pause" button) and you wish the cancel or modify it, follow the below steps:

- set the washing machine to PAUSE by press "Start/Pause" button;
- deselect the Delay-End option, changing the status;
- press the "Start/Pause" to start the program.

YOUR PROGRAM GUIDE

Program	Available Model		Select this program	Recommended			
	SWT7055LMWA SWT6055TMWA	SWT6555TMWA		Water Level	Temp	Spin	Rinse Option
Regular *	Yes	Yes	For normally soiled cotton load at rated load capacity.	Full	Warm	High	Regular /Eco*
Cold	Yes	Yes	For synthetic or mixed fabrics, underwear, coloured garments, non-shrink shirts, blouses.	Full	Cold	High	Regular
Delicates	Yes	Yes	For lingerie, lace, trimmed and embroidered items.	Full	Cold	Medium	Regular
Sports Wear	Yes	Yes	For a Sport ware fabrics labelled "Machine Washable"	Full	Warm	High	Regular
Heavy Duty **	Yes	Yes	For a heavily soiled cotton wash load.	Full	Warm	High	Regular
Bedding	Yes	Yes	For bedding fabrics labelled "Machine Washable"	Full	Hot	High	Regular
Rinse+Spin	Yes	Yes	For items that you want to rinse and spin eg. clothes items you have hand washed in a wash tub.	High	Cold	High	Regular
Spin	Yes	Yes	For very wet clothes to remove the water.	-	-	High	-
Quick 20	Yes	Yes	For a very small load of mixed fabrics.	Low	Warm	High	Fast
Daily 45	Yes	Yes	For a small load of mixed fabrics.	Full	Warm	High	Regular
Soak & Wash	No	Yes	For normally soiled cotton load.	Full	Warm	High	Regular
Favourite ☆	Yes	No	For using favourite program.	-	-	-	-
Delay End	Yes	No	For using Delay End program.	-	-	-	-
Child Lock	Yes	Yes	For using Child Lock program.	-	-	-	-
Favourite (save)	Yes	No	For using Favourite program.	-	-	-	-

Remarks

* "Regular wash, Warm Temp, Full Water Level, No Soak, Eco rinse, Maximum Time Adjust" is recommended for a full load of normally soiled cottons. (SWT7055LMWA/SWT6055TMWA)

* "Regular Wash, Warm Temp, Full Water Level, No Soak, Eco Rinse" is recommended for a full load of normally soiled cottons. (SWT6555TMWA)

**"Heavy Duty" has a built-in Soak period of 6 minutes.

WASHING INSTRUCTIONS

These Washing Instructions are of a general nature and you should get good wash results by following them.

However, due to the variables of fabric types, soil levels, detergent types and available program settings you may find some combinations of these which do not always result in the perfect wash.

If for example you see residuals of detergent or soils on some items, please read the section Residues on washed items paragraph.

Over time you will learn what is the best set-up of programs, detergent and load sorting for different load types and soils.

SORT YOUR WASHING INTO SEPARATE WASH LOADS



- Each load of washing should contain clothing which needs the same washing conditions. For example, you should not wash delicate clothes with very dirty work clothes.
- Colour fast and non-colourfast fabrics should be separated. Knowing the type of fabrics you have and how dirty they are will help when you make selections from the wash program options.
- Some fabrics are lint collectors and can pick up lint, dirt and colour from other fabrics which are lint producers. Some examples are listed below:


Lint collectors	Lint producers
- Corduroy	- Towels
- Synthetics	- Nappies
- Permanent press fabrics	- Chenille/ Candlewick

NOTE: Make sure that you wash lint collectors separately from lint producers.

- Never wash whites and coloureds together. Whites may lose their “whiteness” in the wash.
- New coloured items may run in the first wash; they should therefore be washed separately the first time.

IMPORTANT! Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins).

- Button up pillowcases, close zip fasteners, hooks and poppers.

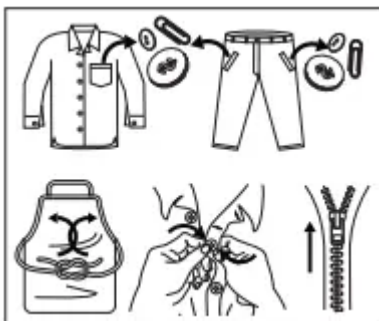

- Tie any belts or long tapes.
- Remove persistent stains before washing.
- Rub particularly soiled areas with a special detergent or detergent paste.

- Treat curtains with special care.
- Wash bras, pantyhose and other delicates in a mesh laundry bag, which you can purchase from your supermarket.



- Remove hooks or tie them up in a bag or net.

PRE-TREATMENT SPRAYS AND STAIN REMOVERS

WARNING!

Pre-treatment sprays and stain remover can damage plastic components on your washing machine.

If you use pre-treatment sprays or stain removers, apply them to the clothing well away from your washing machine.

DETERGENT

Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment.

Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature.

The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling.

Don't use the wrong type of detergent. You must use a low sudsing detergent designed for front load washing machines or high efficiency top loaders, such as Cold Power for Front Loaders and High Efficiency Top Loaders or detergents labelled "Matic".

Don't use soap-based products in your washing machine.

Don't use too much detergent. This can result in excessive suds that can cause low spin speeds, poor rinsing and overloading the motor during spin stages of the wash program.

Don't use too little detergent because you will get a poor wash. If you think you need more, increase dosages by only small amounts to avoid excessive suds.

Quantity of detergent to be used

The type and quantity of detergent will depend on the type of fabric, load size, degree of soiling and hardness of the water used.

Water hardness is classified in so-called “degrees” of hardness.

Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority

Follow the product manufacturers’ instructions on quantities to use

- Not enough washing powder causes: the washload to turn grey, greasy clothes.
- Too much washing powder causes: sudsing, reduced washing effect, inadequate rinsing.
- Use less detergent if: you are washing a small load, the laundry is lightly soiled, large amounts of foam form during washing.

DAILY USE

STARTING YOUR WASHING MACHINE

1. Connect the mains plug to the mains socket.
2. Turn the water tap on.

LOAD THE WASHING MACHINE

When loading the clothes into your washing machine, there are four things to remember:




1. Clothes must be loaded evenly around the agitator. For best results load small items first, followed by large items. For example, a typical load should be loaded using the following sequence: handkerchiefs, wash cloths, undershorts, pillow cases, T-shirts, business shirts, tablecloths, sheets, bath towels.
2. Clothes must not be wrapped around the agitator.
3. The washing machine must not be overloaded. Clothes must be able to move during wash.

4. The load should contain only three or four large items, for example sheets. The rest of the load should be small items. A mixed load of large and small items will wash cleaner than a load of all large items.

ADD THE DETERGENT

1. Measure the correct amount of powder or liquid detergent by following the recommendations on the package.
2. Mix detergent in one litre of hot or warm water.
3. Add the pre-mixed detergent to the wash load.

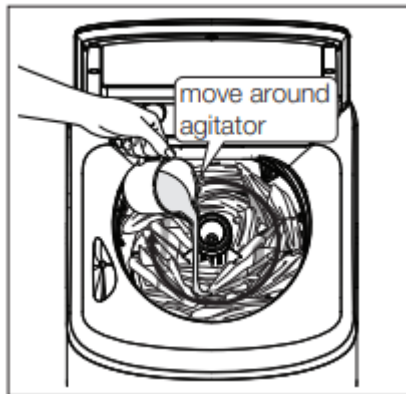

Don't do these things:

Using too little detergent will give you a poor wash result.

Using excessive detergent will create too much suds and may cause overloading of the motor during the spin stage of the wash cycle. To avoid excessive suds, reduce the amount of detergent you use. It is best to use detergent labelled low sudsing. Good quality, front load detergent will perform well in this machine.

Use soap based products in your washing machine.

ADD FABRIC SOFTENER

FOR SWT6055TMWA, SWT6555TMWA



1. Measure the correct amount of fabric softener by following the recommendations on the package.
2. Mix softener with an equal amount of warm water but only mix enough to fill to the line marked inside the cup. The softener cup holds 75ml.
3. Pour the mixed softener into the cup in the top of the agitator. Do not overfill the cup.
4. If you are going to use fabric softener, you must select the Regular rinse option, ie deselect the ECO RINSE option. NOTE: You do not have to use fabric softener, your washing machine will wash the clothes perfectly well without it.


FOR SWT7055LMWA

Before adding softener to the dispenser, make sure the siphon cap is pushed firmly down onto the spigot in the drawer.

The softener will not siphon out if the cap is incorrectly fitted, is missing or blocked with residue. You are now ready to add fabric softener.

Measure the correct amount as recommended on the softener package into a cup and then pour it into the softener compartment of the dispenser drawer.


Caution: Do not overfill the fabric softener dispenser.

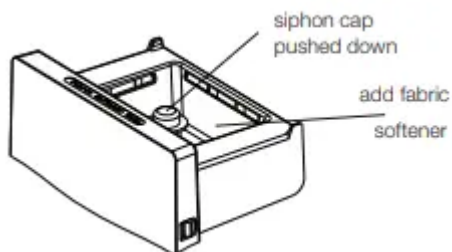

Overfilling and then siphoning out too early can cause softener and detergent to mix resulting in staining problems.

The softener dispenser holds in the drawer when filled up to the MAX marker. Any level lower than MAX will function correctly.

Caution: Only for fabric softener. Do not add detergent in this compartment.

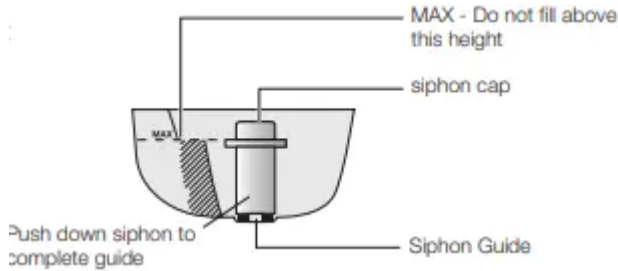

ADDING BLEACH

Bleaching of clothes can help to remove stains, heavy soiling and to kill bacteria.

Oxygen Type


This is generally a powder type bleach. Mix the required quantity with water and pour down the bleach hole in the top panel during the fill when there is some water in the washbowl.

Chlorine Type

This type of bleach should not be mixed with detergent. Mix the bleach with water as per the instructions on the container.

How to soak with bleach, proceed as follows:

1. Turn Program Selector to a Regular Wash position.
2. Press the Start/Pause button to commence water fill.

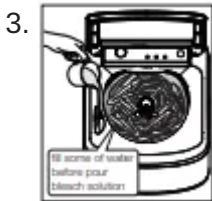

Pour the bleach solution down the hole in the top panel during fill when there is some water in the wash bowl.

4. Allow the machine to agitate for a few minutes, then let it stand for the required time by pressing Start/Pause button to pause the machine.
5. When soaking bleach reached to the required time, turn Program Selector to Drain+Spin position and press the Start/Pause button to empty the wash bowl.

SETTING A PROGRAM

1. Turn the program selector to the required program.
 - Your washing machine is now in STAND-BY-MODE and ready to wash your clothes.
 - The relevant light will light up.

- The buzzer will sound.
- Once you selected a program, the program selected will stay at that position for the whole of the cycle.
- The selector dial can be turned either clockwise or anticlockwise.
- The display shows the program duration.

If the settings shown on the control panel are what you want to use, press the Start/Pause button to start your wash.

2. If you want your laundry to be washed with functions different from the one proposed by the machine, press Temperature, Water Level, Soak Time and Rinse Option buttons.

NOTE:

Different functions can be combined which is dependent on the program selected.

When these buttons are pressed, the corresponding pilot lights come on.

3. If you want to define the end of the washing program, press the “Delay End” button repeatedly to choose your machine end time.

STARTING A PROGRAM

To start a program, press the Start/Pause button, a default program duration will be displayed on the screen.

NOTE; When you select the Drain+Spin program, there will be a delay of at least 2 minutes before the washing machine starts to spin. This delay is a pump out (Drain) period to ensure the bowl is empty of water, which is necessary before spin commences. Even though you may have only put wet clothes into an empty bowl, the delay before spin will still occur to be safe and to protect your washing machine.

CHANGING A PROGRAM

You can turn the Program Selector Knob to a new program position at any time. If you do move the Program Selector Knob the effect will be different depending on the status of the machine at the time you do this, as follows:

- When the machine is running, moving the Knob to a new position will result in the machine continuing the wash and the display will show “---” and flashing with 3 consecutive short beeps to remind you that this option is not allowed.

INTERRUPTION OF A PROGRAM

If you have started your wash and you wish to stop it for some reason, press the Start/Pause button to enter PAUSE mode. Time digits and colon LEDs blink.

Press the Start/Pause again. The program will continue.

AT THE END OF THE PROGRAM

- The appliance stops automatically.
- The display will show “End”
- Turn the Program Selector knob to the position “Off”.
- Remove the laundry from the appliance. Make sure that the washing tub is empty.
- Keep the lid ajar, to prevent the mildew and odours.
- Turn off the water tap.

CARING FOR YOUR WASHING MACHINE

Your washing machine will give you long and trouble-free service, if you follow the instructions in this section. These instructions show you how to care for your washing machine.

WHAT TO DO AFTER YOU HAVE FINISHED YOUR WASHING.


1. Turn the Program Selector knob to the position “Off”.
2. Switch off the electricity at the power point.
3. Turn off the water taps. This will extend the life of the inlet hoses.
4. Leave lid open for a while. This allows time for moisture inside the washing machine to evaporate and for any odours to disperse.

CLEANING THE LINT FILTER


Lint is a collection of threads and fluff which comes off your clothes during washing. Your washing machine collects this lint in the lint filter. It is important to clean out this lint filter preferably after each wash. **How to clean the lint filter: SWT6055TMWA/SWT6555TMWA**

1. Remove the softener dispenser cup and filter column from the centre of the agitator.


1. Remove the softener dispenser cup and filter column from the centre of the agitator.

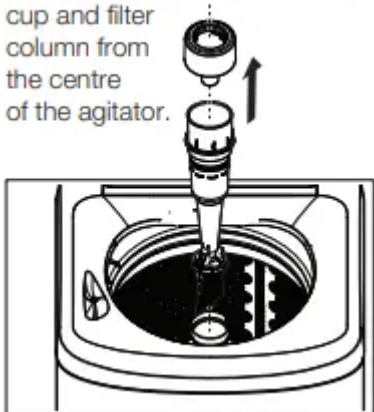

2. Unclip the filter bag from the column.

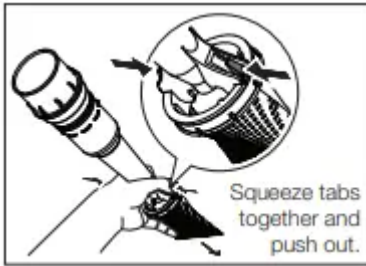


3. Turn the bag inside out and remove the lint.

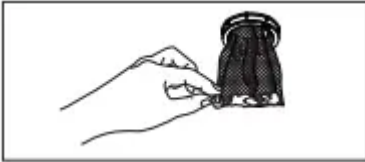

4. Wash the filter bag and dispenser cup in hot water.

5. Reassemble the filter to the column and place it back in the centre of the agitator.

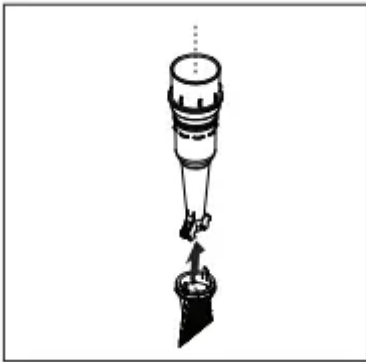


CLEANING THE DISPENSER (SWT7055LMWA)

The dispenser needs to be cleaned regularly, preferably after each wash. Inspect the dispenser after each wash to see if there is any residue of detergent.

To do this proceed as follows:

- Pull the dispenser drawer forward until it stops.
- Lift the front of the drawer up and forward to remove it from the runners.
- Clean the dispenser drawer with hot water and a brush, eg. an old toothbrush.
- Dry the drawer.
- Before replacing the dispenser back in its recess, clean the inside of the drawer with an old toothbrush.
- Put the dispenser back into its runners and close the drawer.

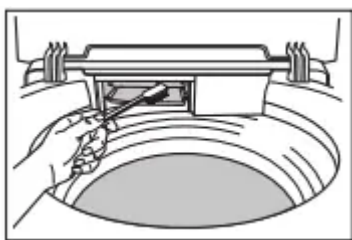


CLEANING YOUR WASHING MACHINE

To clean the inside and outside of your washing machine you should:

1. Wipe the surface with a mild dishwashing detergent and warm water.
2. Wipe dry with a soft cloth.

IMPORTANT

Never use solvents, aerosol cleaners, spray pack cleaners, glass, cleaners, metal polishes, caustic materials, scourers or general household cleaners on or near top panel and lid, control panel or other parts of your washing machine.

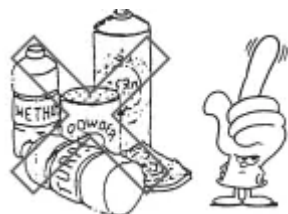

CLEANING STAINS IN THE WASHBOWL

Stains in the wash bowl can be caused by:

- metal objects such as bobby pins, dressmaking pins and nails;
- salt;
- body oils and grease from very dirty or sweaty clothes being deposited around the top of the washbowl;
- excessive foam during wash if incorrect or too much detergent is used.

IMPORTANT:

- Check all pockets before loading clothes into your washing machine.
- Don't leave wet clothing (especially swimwear) in the bowl for too long before you wash it.

How To Clean the Stainless Steel Wash Bowl :

Wipe with a cleaning product which is marked suitable for stainless steel.

Oily deposits can be removed by wiping surfaces with a mild dishwashing detergent and warm water.

IMPORTANT

Never use bleach cleaners or steel wool to clean the stainless steel washbowl.

AVOIDING BUILD UP OF UNDISSOLVED DETERGENTS

If you only wash with cold water, undissolved detergent and body oils will build up in the washing machine. This build-up can cause spotting on your clothes.

To avoid this build-up :

- do not use too much fabric softener with cold water;
- select a hot water wash at least once a month;
- always dissolve the detergent in one litre of warm water.

HELPFUL HINTS IN DEALING WITH WASHING PROBLEMS

RESIDUES ON WASHED ITEMS

Some detergents have ingredients which do not fully dissolve and as a consequence, may leave white residue or particles evident on the surface of darker clothes in the finished wash load. Similarly some soils may not dissolve fully, resulting in residue evident on lighter coloured clothes.

If you are experiencing residue on some clothes, the following tips will help:

- Check that you are using frontload type detergent to minimise over-sudsing. You may find different brands of detergent give better results. Liquid detergent may be better than powder in your situation.
- Pre-mix the detergent thoroughly in warm or hot water to improve the dissolving.
- Reduce detergent dosage to between a 1/2 and 2/3 of the manufacturer's standard recommendation to avoid over concentration (the lower water usage requires lower detergent usage.)
- Some residue maybe re-deposited lint, so be careful not to have lint-producing items in a load which has darker clothes.
- Select deep rinse and not eco rinse to help flush more particles away.
- Reduce the clothes load size per wash to give more freedom for the clothes to move around in the wash bowl.
- Use another program as below, which has been designed to minimise residual particles (they are in order of increasing benefit and will help you choose the best program for your wash load.)
- The Colours Program
- The Heavy Duty Program

STAINED CLOTHES - HINTS FOR REMOVING STAINS

The guide to stain removal on page 24 may assist you in stain removal.

Treat all stains as soon as possible. The longer you leave a stain the harder it will be to remove. Try soakers and stain removers first.

If you use pre-treatment sprays or stain removers, apply them to the clothes items in a well ventilated area away from your washing machine.

- Avoid the use of hot water on stains as hot water will set stains.
- Use light strokes and don't rub the stain remover into the fabric.
- If you use a chlorine bleach, follow the instructions on the bottle and dilute it before putting it on clothing.
- Test coloured fabrics on an inside seam for colour fastness before using any stain removers or bleaches.
- Test synthetic fabric on an inside seam before using any chemicals or bleaches.

NOTE: Chemicals referred to for stain removal are available from your local supermarket, hardware store or the chemist.

WARNING! Pre-treatment sprays and stain removers can damage plastic components on your washing machine.

CAUTION! Do not use dry cleaning fluids or solvents near your washing machine. These fluids will damage your washing machine and may cause an explosion.

YELLOWING OR GREYING CLOTHES

Greyness

- Incorrect wash times and using insufficient detergent which can cause redepositing of detergent on clothes.
- Using incorrect type or too much detergent can cause poor rinsing and poor spin performance.
- Mixing whites with very dirty clothes, eg work clothes.
- Using soap flakes instead of laundry detergent.
 1. ONLY use low sudsing, front load washer detergent in this machine, such as Cold Power for Front Loaders and High Efficiency Top Loaders or detergent labelled "Matic".
 2. Re-sort load, then re-wash using program selections suitable for the fabric using hot or warm water.
 3. If the water is very dirty or very sudsy, repeat 2 above reducing the amount of detergent you use.

Yellowing

- A build-up of oils in clothes that come into close contact with the skin, eg underwear, T-shirts.
 - Ageing of clothes. Iron deposits in the wash water.
 - Use of chlorine bleaches on fabrics with resin finishes.
 - Incorrect drying.
 - Incorrect water temperatures ie. too hot or too cold.
1. Re-sort load, then re-wash using wash program selections suitable for the fabric using hot or warm water.
 2. If the water is very dirty or very sudsy, repeat 1 above reducing the amount of detergent you use.

NOTE: Synthetics which have been washed in very hot water will not respond to any treatment.

A GUIDE TO STAIN REMOVAL

Ball Point Pen Ink

- Sponge with methylated spirit. Bleach if required.
Same as for whites - use oxygen type bleach.

Beetroot

- Rinse as soon as possible under cold water. Bleach if necessary.
Same as for whites - use oxygen type bleach.

Blood, Meat Juice, Egg (Dry Stain)

- Cover area with meat tenderiser (msg). Apply warm water to make a paste. Wait 15-20 minutes. Sponge with cool water or with diluted bleach.
Same as for whites but select water temperature suitable to fabric - use oxygen type bleach.

Blood, Meat Juice, Egg (Fresh Stain)

- Rinse in cold water. If stain remains, sprinkle with meat tenderiser (msg). Let stand for 15-20 minutes. If stain still remains, then sponge with diluted bleach. Wash using hot water.
Same as for whites but select water temperature suitable to fabric - use oxygen type bleach.

Candle Wax

- Scrape off excess, place stain between clean white blotter or several layers of facial tissue. Sponge with dry cleaning fluid. If spot remains, bleach.

Same as for whites - use oxygen type bleach.

Chewing Gum

- Rub with ice to harden. Scrape off excess with blunt knife. Sponge with dry cleaning fluid.

Same as for whites.

Chocolate

- Soak in warm water with pre-soak product, and wash in lukewarm water. Use dry cleaning fluid (white spirits) to remove any grease spots.

Soak in warm water with pre-soak or detergent solution. Treat any remaining Chocolate stain with oxygen bleach.

Coffee/tea (Milk Or Cream)

- Rinse or soak in cold water. Work detergent into stain. Thoroughly rinse and dry. If a stain remains, sponge with dry cleaning fluid. If stain remains, bleach.

Same as for whites - use oxygen type bleach.

Coffee/tea (Black), Fruit Juice, White Wine

- Pour boiling water through stain. Bleach if necessary.

Soak or rinse in cold water or sponge with warm water and detergent. Use oxygen type bleach.

Correcting Fluid

- Scrape off as much as possible. Rub clean with paint thinner or white spirits.

Same as for whites.

Cosmetics

- Sponge with prewash stain remover, liquid detergent or rub with soap. If greasy stain persists, soak in enzyme product then wash.

Same as for whites.

Curries

- Soak/rinse in lukewarm water until a majority of the colour is removed. Sponge with solvent to break down any remaining fats and oils then wash.

Same as for whites. Check for colour fastness before applying solvent.

Fat/Grease/Oil

- Sponge with dry cleaning fluid (white spirits).

Same as for whites.

Fruit

- Sponge with warm water and wash. Bleach remaining stain with oxygen bleach.

Pour boiling water through stain. Bleach remaining stain.

Grass, Green Vegetables

- Sponge with methylated spirit. Wash using warm water.

Same as for whites. Check colourfastness before applying methylated spirit. For acetate, sponge with dry cleaning fluid.

Ice Cream, Cream Milk

- Rinse or soak in cold water then wash. If ice cream contains fruit or chocolate treat as such.

Same as for whites

Iodine

- Wash using hot water.

Wash using warm water.

Iron Rust

- Apply oxalic acid and place in sun.

Apply lemon juice and place in sun.

Lipstick

- Rub with lard and wash using hot water. Bleach if necessary.

Rub with lard and wash using hot water. Bleach if necessary.

Mildew

- Wash using hot water. Moisten with lemon juice and let dry in sun. If stain persists, bleach. Old stains are hard to remove.

Same as for whites but select water temperature to suit fabric.

Mustard

- Wash using hot water and bleach.

Wash using warm water and use oxygen bleach.

Nail Polish

- Sponge with dry cleaning fluid or nail polish remover. Bleach remove dye.
Sponge with dry cleaning fluid.

Paint (Oil Based)

- Scrape off fresh paint. Soften dry paint with lard or oil, then sponge with turpentine (turps).
Same as for whites.

Red Wine

- Rub salt into the stain. Pour boiling water through stain. Bleach if necessary.
Same as for whites.

Scorch

- Moisten and place in sunlight. Bleach if necessary.
Usually a permanent stain. Brush wools lightly with sandpaper.

Tomato Sauce

- Soak in cool water for 10 minutes. Rub in liquid detergent then wash. If stain persists, try dry cleaning fluid or bleach.
Same as for whites - use oxygen type bleach.

TROUBLE SHOOTING

DO NOT call for service until you have checked the points listed below.

If you call for service and there is nothing wrong with your washing machine, you will have to pay for the service call.

You will have to pay even when your washing machine is under warranty. Before you call for service, check the points in the table below.

Machine not working.

- Power not switched on.
Switch on power point.
- No electricity supply through the power point.
Check power point with another appliance.

E10

- Water taps not turned on.
Turn on taps

EF0

- Out of balance detected.

Open lid, redistribute load and close lid.

Ld

- Lid not fully closed.

Close lid.

Machine has washed load but will not spinning. Water in wash bowl.

EF0

- Out of balance.

Open lid, redistribute load, close lid.

Ld

- Lid not fully closed.

Close lid.

E20

- Drain hose blocked.

Check drain hose for blockage. Wait a short while, press start to continue.

Will not fill with water.

E10

- Water taps not turned on.

Turn taps on.

- Inlet hoses blocked.

Clean inlet hose filters.

Water flowing into wash bowl indefinitely.

E10

- Drain hose too low.

Raise drain hose or fit a syphon break. Refer to installation instructions for correct positioning of hose.

Machine goes out of balance or vibrates excessively when spinning.

EF0

- Machine not levelled.

Level the machine properly.

- Levelling feet not adjusted.

Adjust feet to touch the floor.

- Clothes not evenly distributed.

Redistribute clothes evenly.

Water on floor.

- Loose inlet hose connections.

Check connections at taps and rear of machine.

- Loose drain hose connections.

Check connections at rear of machine.

Water splash.

- Machine not levelled.

Level the machine properly.

- Water Level selection not correct.

See water level description on page 9.

Clothes still dirty after wash completed.

- Not enough or no detergent.

Check detergent use and rewash clothes.

- maximum load exceeded.

Remove some clothes and rewash.

- Incorrect wash program or temperature selected.

Reselect program or temperature and rewash.

Scraping noise on spin.

- Bra wire or other thin items caught between inner and outer washbowls.

If the item is visible, remove it with pliers. Use a wash bag in future.

Humming, clicking and other noises.

- Bowl rotation at start of wash.

Normal noise.

- Brake activation when stopping after spin.

Normal noise.

TROUBLESHOOTING FAULT DISPLAYS

If you have a problem with your washing machine and before you call service, make sure you have followed ALL of the instructions that may remedy the problem. You will find instructions in the 'Troubleshooting' section and in the table below.

When the washing machine detects a problem that requires your attention, you will be alerted. The machine will warn you of this problem by displaying a fault code in the digital display, accompanied by "Beeping".

Fault information and the action you should take are described in the following table.

Not filling with water

- E10

Make sure both taps are on and hose filters are not blocked. Raise drain hose if water is flowing out of drain hose. Press "Start/Pause" to re-start wash. If problem remains, call Service.

Flood

- E30

If the water is pouring onto the floor, turn OFF both taps. Wait a few minutes to see if the fault is corrected. If not, call Service.

Draining problem

- E20

Wait a few minutes to see if the fault is corrected. If not, set the washing machine to PAUSE by press "Start/Pause" button then check the drain hose for blockage. Press "Start/Pause" to continue the wash. If problem remains, call Service.

Loss of water, while washing

- E10

If water level in wash bowl is low and water is leaking on the floor, rotate the PROGRAM KNOB to "Spin" program, then press "Start/Pause" button.

Should this make things worse, turn off the machine and call Service.

Otherwise, press "Start/Pause" to continue the wash.

Water level problem

- E30

Wait, this fault may clear itself. If not, rotate the PROGRAM KNOB to "Spin" program, then press "Start/Pause" button to drain the wash bowl. If this problem is repeated, call Service.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)