

## **User Guide Frigidaire FAH106S1T Air conditioner**

### **Table of contents**

- Important Safety
- Instructions Operation of Current Devloe
- Air Conditioner Features
- Care and Cleaning
- Energy Saving Ideas
- Avoid Service Checklist
- Warranty Product
- Registration Packaging
- Nomal Sounds

### ***PRESS TO LOWER***

- Tap or hold the up ("or downy) button until the desired temperature is seen on display.
- This temperature will be automatically maintained anywhere between 60F (16-C) and 90F (32°C) for cooling mode.
- The Temperature will be automatically maintained anywhere between 55F (13°C) and 80F (27°C) for heating mode. If you want the display to read the actual room temperature, FAN SEE ONLY MODE

### ***TO USE AUTO FAN FEATURE:***

- The fan speed will begin in HI, then adjust to MED and LO as the room temperature conditions indicate. For example in cooling.
- If the room doesn't get too warm it will stay at LO. If the room temperature rises quickly, such as a door being opened, it will automatically go to HI speed.
- The fan speeds will adjust back to LO as the room returns to the original set temperature.

### ***PRESS MODE BUTTON CHOOSE FAN ONLY***

- Use this function only when cooling is not desired, such as for room air circulation.
- You can choose any fan speed you prefer, EXCEPT AUTO FAN. During this function, the display will show the actual current temperature, not the set temperature as in the cooling mode.
- Fan Only cannot be selected when the unit is in the "Remote Sensing Mode". On the 92 units with remote control.

### ***TO USE THE ENERGY SAVER FEATURE***


- In this mode, the fan will continue to run for 3 minutes after the compressor shuts off.

- The fan then cycles on for 2 minutes at 10 minute intervals until the room temperature is above the set temperature, at which time the unit cooling system starts again..

## LIGHT ON

- For Delay Stop, the unit must be in the ON position. Note 2: For Delay Start, the unit must be in the OFF position,
- To adjust timer setting, tap or hold the UP arrow (M) or DOWN arrow (W) to change the delay time by 5 hour increments up to 10 hours, then by 1 hour increments up to 24 hours.
- The control will countdown the timer remaining until start (8, 7.5, 7, etc.). The Delay Start mode automatically selects High Cool mode (if Cool, Energy Saver, or Fan Only was the last mode selected) or High Heat (if Heat was the last mode selected).
- The temperature maintained will be the same as previously set.
- To change the set temperature, press "cool" then Up or Down arrows until the desired temperature is indicated on the display. After 5 seconds, the control will automatically change the display back to the hours remaining until the unit will start/stop.
- Turning the unit "ON" or "OFF" at any time will cancel the Delay Start/Stop function. The delay Start/Stop feature will work until the unit either starts or stops. Once this has happened then the above steps have to be repeated again

## Air Conditioner Feature

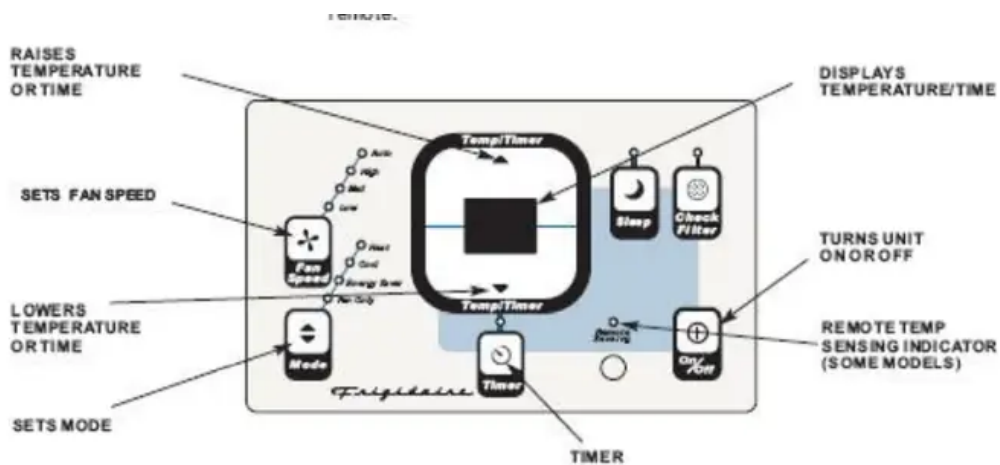

## PRESS SLEEP PAD

- The Sleep Mode can be selected with a Heating or Cooling Mode. Note: In this "MODE" the selected cooling temperature will increase by 2 degrees F. 30 minutes after the mode is selected.

- The temperature will then increase by another 2 degrees F. after an additional 30 minutes.
- This new temperature will be maintained for 7 hours before it returns to the originally selected temperature. If this Mode is selected with Heat, the set temperature will Decrease at the same time period
- This ends the 'Sleep' MODE and the unit will continue to operate as originally programmed. The Sleep' MODE program can be cancelled at any time during operation by pressing "Sleep" MODE button.

### ***PRESS MODE BUTTON***

- This feature can be used with any combination of FAN Speeds (Low speed only on 115V modes), Timer, or Sleep Modes.
- When in the "Heat" Mode, the fan will run continuously while heat is needed. The temperature will automatically be maintained anywhere between 55 °F(13C) and 80F(27 Ch.
- When the room set temperature is satisfied the fan will cycle off and on to circulate and sample the room air,

### ***ADDITIONAL THINGS YOU SHOULD KNOW***

- Now that you have mastered the operating procedure, here are more features in your control that you should know.
- The Remote Control will operate all the control panel features, follow the same instructions.
- The "Cool circuit has an automatic 3 minute time delay start if the unit is turned off and on quickly. This prevents overheating of the compressor and possible circuit breaker tripping. The fan will continue to run during this time.
- The control will maintain any set temperature between 60F and 90F degrees (cooling). 55F and 80F (heating).
- The control is capable of displaying temperature in degrees Fahrenheit or degrees Celsius. To convert from one to the other, press and hold the Up and Down Temperature Selection Pads at the same time for

### **Air Filter Cleaning**

- The air filter should be checked at least once a month to see if cleaning is necessary. Trapped particles in the filter can build up and cause an accumulation of frost on the cooling coils.
- Grasp the filter by the center and pull up and out. Wash the filter using liquid dish washing detergent and warm water. Rinse filter thoroughly.
- Gently shake excess water from the filter. Be sure filter is thoroughly dry before replacing.

- Or, instead of washing you may vacuum the Wiler clean.

### ***Cabinet Cleaning***

- Be sure to unplug the air conditioner to prevent shock or fire hazard.
- The cabinet and front may be dusted with an oil-free cloth or washed with a cloth dampened in a solution of warm water and mild liquid dishwashing detergent.
- Rinse thoroughly and wipe dry. Never use harsh cleaners, Wax or polish on the cabinet front. Be sure to wring excess water from the cloth before wiping around the controls.
- Excess water in or around the controls may cause damage to the air conditioner. Plug in air conditioner.

### ***Winter Storage***

- If you plan to store the air conditioner for the winter, cover it with plastic or return it to the original carton.

### **NOTE:**

- To prevent rust or electrical connections from being damaged, store air conditioner in an upright position and a dry place.

#### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.