

User Manual Toaster



1. Extra-wide slots with self-adjusting guides
2. Toast control lever with extra lift
3. Frozen button
4. Cancel button
5. Toast shade selector
6. Bagel button
7. Cord wrap (under unit)
8. Crumb door (under unit)

POLARIZED PLUG (120V MODELS ONLY)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If

the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way

ELECTRICAL CORD

- a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- c) If a long detachable power-supply cord or extension cord is used,
 - 1) The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance,
 - 2) The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

HOW TO USE

GETTING STARTED

- Place toaster on a flat, level surface, where the top of the unit has enough space for the heat to flow without damaging the cabinets or walls.
- Remove tie from cord and unwind.
- Plug unit into electrical outlet.

IMPORTANT INFORMATION ABOUT YOUR TOASTER

- For first-time use, select setting 4 (medium). Re-adjust the setting to suit your personal preference on successive toasting operations.
- If the wrong button is selected, press the CANCEL button, press the lever down and reselect the desired setting.

CONTROL LEVER WITH BUILT-IN EXTRA LIFT

This toaster has a built-in toast control lever with extra lift. If toasted food does not clear the top of the toaster use the toast control lever to raise the food for easy removal.

TOASTING CYCLE

1. Adjust toast shade selector to the desired setting (1 through 7).

2. Insert slices of bread, bagels or other foods to be toasted in appropriate slot and press toast control lever until it locks into the down position. The self-adjusting guides automatically center food being toasted.
3. When selecting BAGEL or FROZEN function, you must press the toast control lever before selecting one of these settings
4. When toasting is complete, the toast control lever releases and the appliance shuts off.
5. Unplug the toaster when not in use.

REMOVING EXCESS CRUMBS

1. To remove excess crumbs, let unit cool, unplug unit, open crumb door - shake excess into appropriate trash receptacle. Close and latch crumb door before using.

CARE AND CLEANING

CLEANING

Always unplug the cord from electrical outlet and allow toaster to cool before cleaning.
Do not immerse toaster in water

CLEANING OUTSIDE SURFACES

- Wipe the exterior with a damp cloth or sponge and dry with a paper towel.
- Do not use strong cleaners or abrasives that may scratch surfaces and never spray cleaners directly onto the toaster.

NEED HELP?

What does it cover?

- Any defect in material or workmanship provided; however, Applica's liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.

How do you get service?

- Save your receipt as proof of date of sale.

- Visit the online service website at the page, or call toll-free 1-800-231- 9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.