


## What's included

Make sure all the supplied parts and accessories are included in the product package (see page 14). If you have a question about the dryer or the accessories, contact a local Samsung service center or the retailer.

### Dryer at a glance

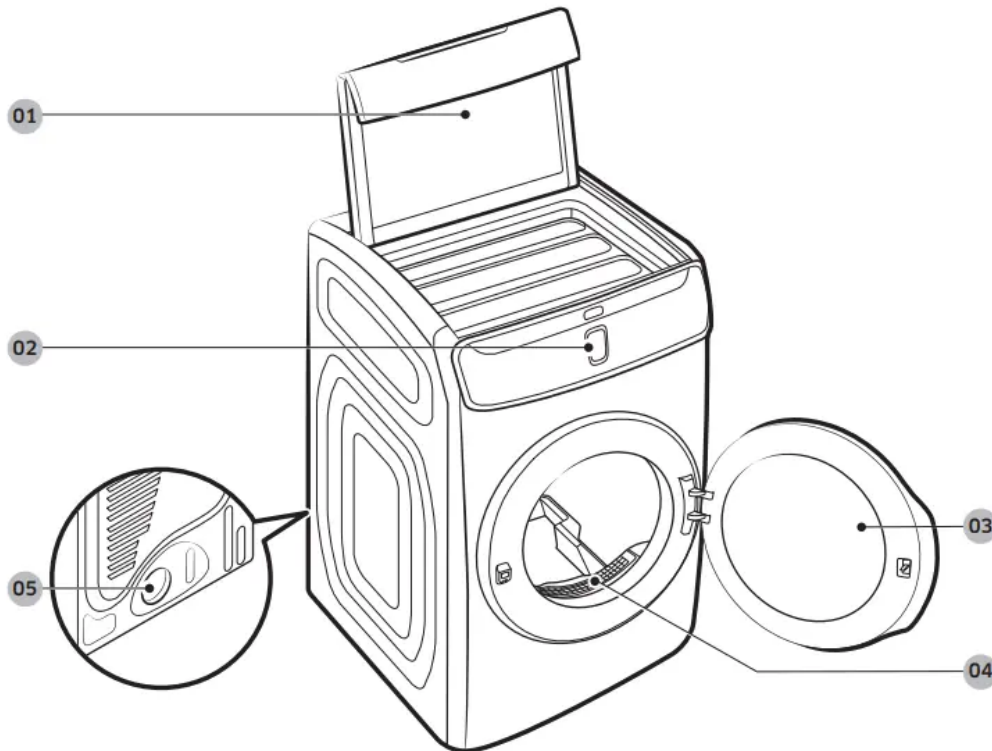


- 01. Top door
- 02. Main panel
- 03. Front door
- 04. Lint filter
- 05. Exhaust duct

## Operations

### Delicate Dryer

#### Control panel

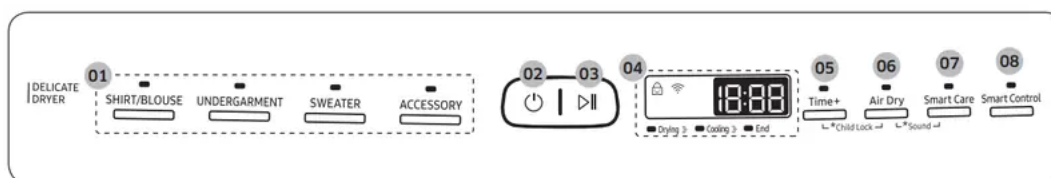

01. Cycle bar	Press to select a cycle.
02. POWER	Press to turn the Delicate Dryer on or off.
03. START/ PAUSE	Press to start the operation, or press to stop the operation temporarily.
04. Status bar	The status bar shows current cycle information and estimated time remaining or an information code if the Delicate Dryer needs to be checked.
05. Time+	Press to increase the drying time in 20-minute increments. You can adjust the drying time up to 100 minutes according to the type and amount of the clothing.
06. Air Dry	You can dry heat-sensitive clothing without heat, in room temperature air. Such clothing may require more time to dry. To extend the drying time, use Time+. This option is for the “shirt/blouse”, “undergarment” and “accessory” cycle
07. Smart Care	The Smart Care function helps you diagnose and troubleshoot your dryer if it has an issue.
08. Smart Control (Elec.) / Smart Monitor (Gas)	Press to turn the Smart Control function on or off. You can control or monitor the dryer remotely. When started, the Smart Control (Smart Monitor) indicator blinks. For details, see the Samsung Smart Home section later in this manual.

### Cycle Overview

Each cycle of the Delicate Dryer has a predefined drying time. You must adjust the drying time manually if necessary. To extend the drying time, use Time+.




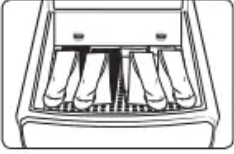
Cycle	Description
SHIRT/BLOUSE	<ul style="list-style-type: none"> <li>• For synthetic blouses and blouses with accessories (ornaments)</li> </ul>
UNDERGARMENT	<ul style="list-style-type: none"> <li>• For synthetic reshaping innerwear, innerwear with laces, spandex fabrics for Pilates or Yoga, and leggings</li> </ul>
SWEATER	<ul style="list-style-type: none"> <li>• For washable wool or wool-blended sweaters, cotton or cottonblended sweaters, and knitted cardigans</li> </ul>
ACCESSORY	<ul style="list-style-type: none"> <li>• For scarfs, mufflers, gloves, and stockings</li> </ul>

### **Recommended for the Delicate Dryer**

- The drying time depends on the load and the item type. To shorten the drying time, use Super Speed.
- Overloads may delay the drying time. To extend the drying time, use Time+.
- For manual-wash items, use a towel to remove moisture from the items before drying.
- For machine-washable items, you can reduce the drying time by choosing a higher spinning rate.
- Arrange items as even and straight as possible. Overlapped items may not be dried well. Available or recommended items for a specific cycle are as below:


The max load is calculated on the condition of using the drying rack.





Cycle	Picture	Load	Item
SWEATER		1 EA (max. 2 EA)	Wool or wool-blended sweaters, cotton or cotton-blended sweaters, knitted cardigans
SHIRT/BLOUSE		1 EA (max. 2 EA)	Synthetic blouses, blouses with accessories (ornaments)
UNDERGARMENT		3 EA (max. 6 EA)	Synthetic reshaping innerwear, innerwear with laces, spandex fabrics for Pilates or Yoga, leggings
ACCESSORY		2 EA (max. 4 EA)	Scarfs, mufflers, gloves, stockings

Caution : Clothing with accessories or hooks may get stuck in the mesh of the rack.


- Clothing with accessories must face upwards.
- Clothing with hooks must be hooked up before being placed.

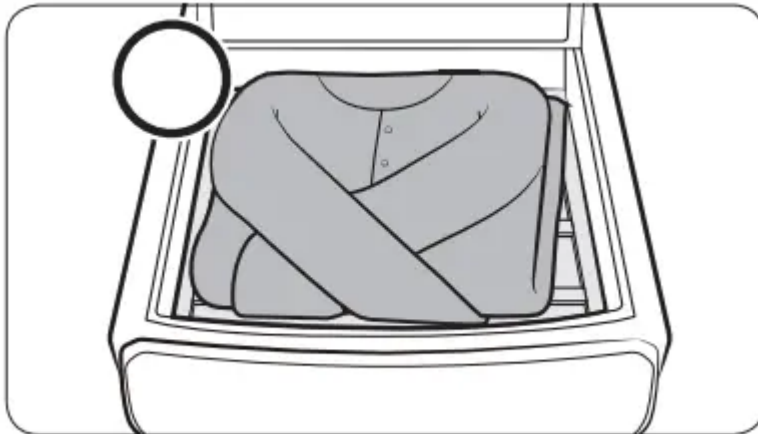

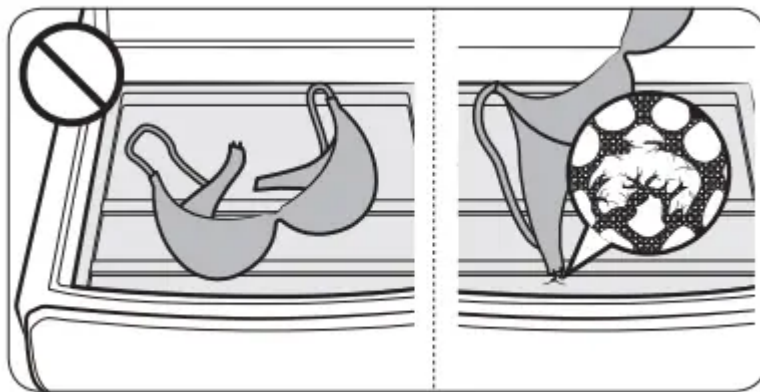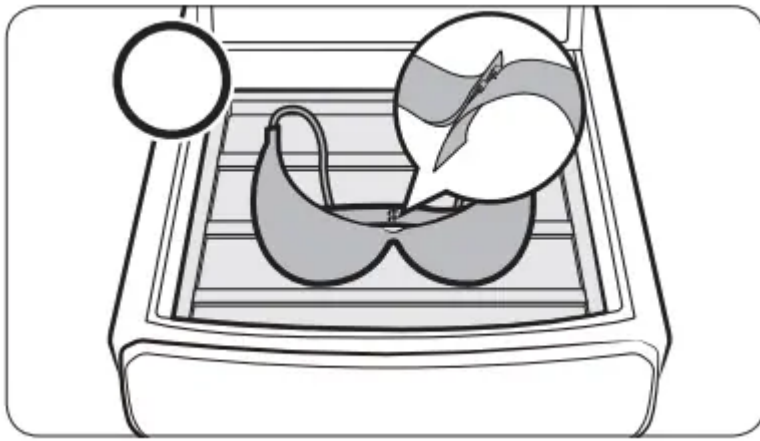


**Not Recommended for the Delicate Dryer**

Do not dry shoes, bags, down/fur products, rugs, carpets, or bulky items in the Delicate Dryer.

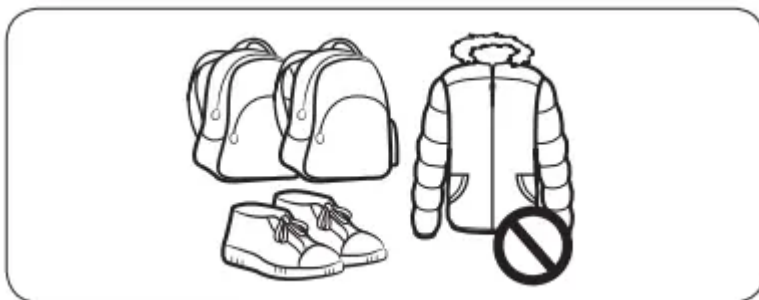


Use the Tumble Dryer for normal items (ex: blue jeans, bulky cotton items, towels, etc.)



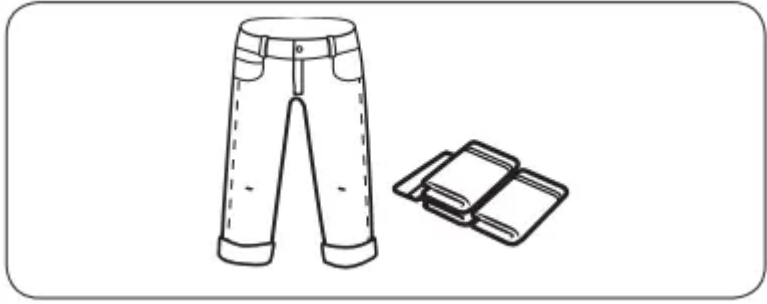



**Tumble Dryer**

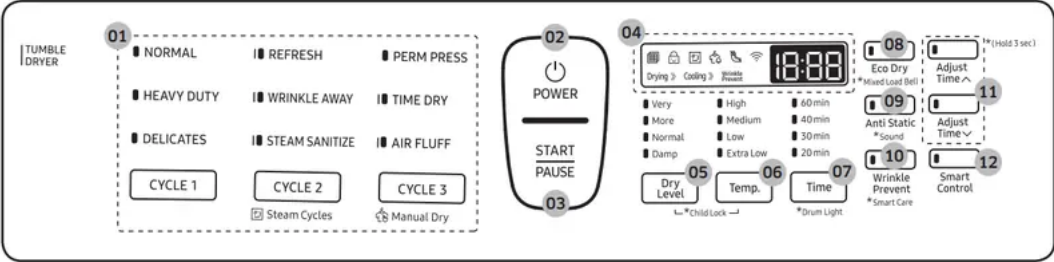**Control panel**



01. Cycle buttons	<p>Each Cycle button activates three separate cycles. Press the button that activates the cycle you want repeatedly until the LED for that cycle illuminates. For more information, see the Cycle overview starting on page 45.</p> <ul style="list-style-type: none"> <li>• CYCLE 1: NORMAL, HEAVY DUTY, DELICATES</li> <li>• CYCLE 2: REFRESH, WRINKLE AWAY, STEAM SANITIZE</li> <li>• CYCLE 3: PERM PRESS, TIME DRY, AIR FLUFF</li> </ul>
02. POWER	Press to turn the Tumble Dryer on or off.
03. START/ PAUSE	Press to start operation or press to stop operation temporarily.
04. Status bar	The status bar shows current cycle information and estimated time remaining or an information code if the Tumble Dryer needs to be checked.
05. Dry Level	<p>Press Dry Level to select a dry level.</p> <ul style="list-style-type: none"> <li>• Larger or bulkier loads may require Very or More for complete dryness.</li> <li>• The Damp dry level is designed to partially dry items. Use for items that lay flat or hang to dry.</li> </ul>
06. Temp.	<p>Press Temp. to change the temperature of the current cycle.</p> <p>High: For sturdy cottons or those labeled Tumble Dry.</p> <p>Medium: For permanent press, synthetics, lightweight cottons, or items labeled Tumble Dry Medium.</p> <p>Low: For heat sensitive items labeled Tumble Dry Low or Tumble Dry Warm.</p> <p>Extra Low: Provides the lowest heated drying temperature possible.</p>
07. Time	<p>Press Time to select a drying time for the selected cycle. This is available only with TIME DRY, AIR FLUFF, and WRINKLE AWAY. This button is not available for Sensor Dry cycles because exact drying times are determined by fluctuating humidity levels.</p>
08. Eco Dry	

	<p>This function is available with NORMAL and TIME DRY. With the Eco Dry activated, drying takes a longer time but power consumption is reduced. The drying time can be extended by up to 3 times normal depending on the temperature and load. The Eco Dry function is enabled by default.</p>
09. Anti Static	<p>Anti Static reduces static electricity that occurs from clothing friction. This is done by spraying steam into the drum in a later stage of the drying cycle.</p>
10. Wrinkle Prevent	<p>Wrinkle Prevent provides approximately 180 minutes of intermittent tumbling in unheated air at the end of the cycle to reduce wrinkling. Press Wrinkle Prevent to activate this feature. The load is dry and can be removed at any time during the Wrinkle Prevent cycle.</p>
11. Adjust Time	<p>You can change the set time for the selected cycle. This is available only with TIME DRY, AIR FLUFF, and WRINKLE AWAY. To change the cycle time, press Adjust Time  or Adjust Time  until the desired time is displayed.</p>
12. Smart Control (Elec.) / Smart Monitor (Gas)	<p>After connecting the Tumble Dryer to your home network using the Samsung Smart Home app, you can control or monitor the dryer remotely. When started, the Smart Control (Smart Monitor) indicator blinks. The dryer enters waiting mode and waits for remote commands.</p>

## Cycle overview

### Sensor Dry

<b>Cycle</b>	<b>Description</b>
NORMAL	<ul style="list-style-type: none"> <li>• For most fabrics including cottons and linens.</li> <li>• If NORMAL is selected, the Eco Dry function is enabled by default. For more information, see Eco Dry in the Control panel section.</li> </ul>
HEAVY DUTY	<ul style="list-style-type: none"> <li>• For drying items made out of heavy fabrics, such as jeans, corduroys, or work clothes, with high-temperature heat.</li> </ul>
DELICATES	<ul style="list-style-type: none"> <li>• For heat-sensitive items at a low drying temperature.</li> </ul>
PERM PRESS	<ul style="list-style-type: none"> <li>• Use to dry wrinkle-free cottons, synthetic fabrics, knits, and permanent press fabrics automatically.</li> </ul>

### **Steam Cycles**


<b>Cycle</b>	<b>Description</b>
REFRESH	<ul style="list-style-type: none"> <li>• Use to smooth out wrinkles and reduce odors in loads of one to four items. With this cycle selected, a small amount of water is sprayed into the dryer drum after several minutes of tumbling with heat. Before removing the laundry, confirm that the laundry load is dry.</li> </ul>
WRINKLE AWAY	<ul style="list-style-type: none"> <li>• For best results, load 2-3 items at once. You can extend the drying time by a minimum of 20 minutes, depending on the item type or load. Before removing the laundry, confirm that the laundry load is dry.</li> </ul>
STEAM SANITIZE	<ul style="list-style-type: none"> <li>• Use to sanitize items by applying steam and high-temperature heat to the fabric. This cycle can make items soft and reduce smells. Confirm that the laundry load is wet or partially wet before starting this cycle.</li> </ul>

### **Manual Dry**



Cycle	Description
TIME DRY	<ul style="list-style-type: none"> <li>You can specify a cycle time in minutes.</li> <li>If TIME DRY is selected, the Eco Dry function is enabled by default. For more information, see Eco Dry in the Control panel section.</li> </ul>
AIR FLUFF	<ul style="list-style-type: none"> <li>Tumbles the load in room temperature air.</li> </ul>

### Simple steps to start

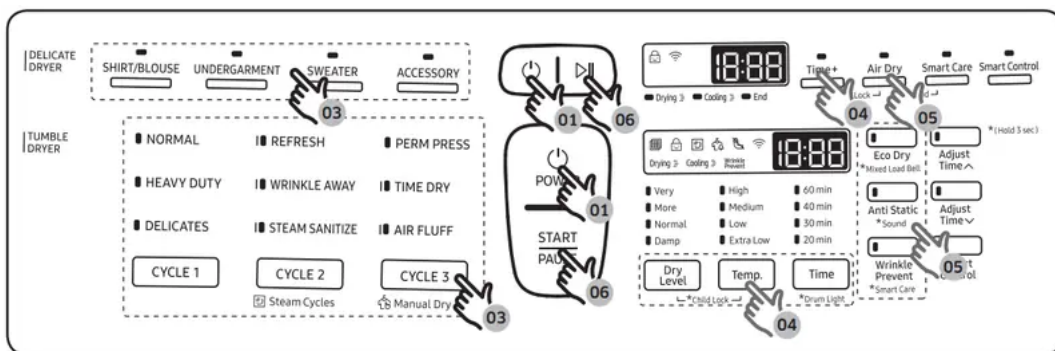

1. Press POWER on the control panel of a desired dryer (Delicate, Tumble) to turn the dryer on.
2. Put the items you want to dry into the dryer.
3. Select a cycle.
4. Change the cycle settings (temperature and/or dry level) as appropriate to the items.
5. Select cycle options as needed.
6. Press START/PAUSE.

### To change the cycle during the operation

1. Press START/PAUSE to stop operation temporarily.
2. Select a different cycle.
3. Press START/PAUSE again to start the new cycle.



This product is a smart dryer that supports the Samsung Smart Home service. The amount of time the EZ setup function (for connecting the dryer to your network) can take to complete the network connection varies, depending on your network conditions.

## **Samsung Smart Home**

### **Installation**

Visit the Google Play Store, Galaxy Apps, or Apple App Store and search for “Samsung Smart Home”. Download and install the Samsung Smart Home app provided by Samsung Electronics to your smart device.

### **Registering a Samsung account**

To use the Samsung Smart Home app, you must first sign in to your Samsung account. If you don't have a Samsung account, select Register in the app, and then follow the onscreen instructions to create an account.

### **Getting started**

Using Samsung Smart Home, you can control your dryer from your smart device remotely. For improved performance, the content and design of the app is subject to change without notice.

1. Launch the Samsung Smart Home App on your smartphone.
2. If 'Dryer' is not listed, tap Add Device > Select other device > Dryer on the app screen.
3. Press and hold Smart Control on your dryer's control panel for more than 5 seconds until the 'AP' message appears on the display.
4. When the device registration is complete, turn on the Smart Control function on your dryer and you can monitor (gas models) or control (electric models) your dryer remotely.

- For gas models, the Dryer app only serves as a monitoring device. You cannot use any of the controls available on the app.

## **Special features**

### **Child Lock**

To prevent children or infants from accidentally starting the dryer or setting any of the dryer's functions, Child Lock locks all buttons except for the POWER button. Note that each dryer operates independently and has its own Child Lock function.

To activate the Child Lock

- Press and hold Dry Level and Temp. (or Time+ and Air Dry for the Delicate Dryer) simultaneously for 3 seconds. Then, press START/PAUSE to activate. The door locks and the Child Lock indicator turns on.

To deactivate Child Lock temporarily

- You can deactivate Child Lock temporarily for 1 minute. To do this, press and hold Dry Level and Temp. (or Time+ and Air Dry for the Delicate Dryer) simultaneously for 3 seconds. The door is unlocked for 1 minute and the Child Lock indicator blinks.

To cancel Child Lock

- Press and hold Dry Level and Temp. (or Time+ and Air Dry for the Delicate Dryer) for 3 seconds to deactivate, and then press and hold the buttons again for 3 seconds to release Child Lock. The door unlocks and the Child Lock indicator turns off.

### **Smart Care**

The Smart Care function helps you diagnose and troubleshoot your dryer if it has a problem. To enable this function, you must first download the Samsung Smart Dryer app from the Play Store or the Apple Store, and then install it on a mobile device that has a built-in camera. The Smart Care function has been optimized for Galaxy and iPhone series devices. (It is not supported by some models.) As the dryer operates, it runs a self-diagnosis function in the background. If it senses a problem, it displays an information code on the display which you can scan using the app's Smart Care function. The Smart Care function will then display detailed information about the code.

1. Press and hold Wrinkle Prevent (or Smart Care for the Delicate Dryer) on the dryer for 3 seconds to enter the Smart Care mode.
2. Run the Samsung Smart Dryer app on your mobile device, and then tap Smart Care.
3. Hold the mobile device so that the mobile device and the dryer's status bar face each other. The app will recognize the information code automatically.
4. When the information code is recognized correctly, the app provides detailed information about the symptom and recommends further action.

### **Sound**

Mute or unmute the sound (button beeps, indicator beeps and chimes, etc.)

Delicate Dryer

- To mute the dryer's alarm sound or beeps, press and hold Air Dry and Smart Care for 3 seconds. To unmute, press and hold the same buttons for 3 seconds again.

#### Tumble Dryer

- To mute the dryer's alarm sound or beeps, press and hold Anti Static for 3 seconds. To unmute, press and hold the same button again for 3 seconds.

#### **Drum Light (Tumble Dryer only)**

The drum light turns on when the door is opened and turns off after 2 minutes. To manually turn the drum light on or off, press and hold Time for 3 seconds.

## **Maintenance**

Keep this your FlexDry™ dryer clean to prevent decreased performance and to lengthen its life.

### **General cleaning and maintenance instructions**

#### **Main panel**

- Clean with a soft, damp cloth. Do not use abrasive substances.
- Do not spray liquid cleaning agents directly on the display of the dryer.
- Some laundry pre-treatment soil and stain removers may damage the main panel.
- When using liquid cleaning agents, apply them to the cleaning cloth. Do not apply them directly to the dryer. Wipe up any spills or overspray immediately.

#### **Exterior**


- Clean with a soft, damp cloth. Do not use abrasive substances.
- Protect the surface from sharp objects.
- Do not place heavy or sharp objects or a detergent container on the dryer. They can scratch or damage the top cover of the dryer.
- The dryer has a high-gloss finish on its entire surface. Be careful not to scratch or damage the surface.

#### **Exhaust system**


- Check and clean the exhaust system on a yearly or regular basis to maintain optimum performance.
- The external exhaust hood must be cleaned more frequently to ensure proper air flow.

## Vent sensor

The dryer features a vent sensor that detects and notifies you when it is time to clean


the ductwork. The  indicator lets you know the status of the duct.

Level	Indicator	Status	Action
0	Off	The ductwork is not clogged.	-
1	On	<ul style="list-style-type: none"><li>The duct or lint filter is clogged.</li><li>High pressure being applied to the duct because the duct is too long or bent.</li></ul>	<ul style="list-style-type: none"><li>Check the lint filter or duct and clean if necessary.</li><li>Check the duct connections and shorten or straighten the duct if necessary.</li></ul>
2	Blinking	<ul style="list-style-type: none"><li>The duct or lint filter is severely clogged.</li><li>The pressure applied to the duct is very high because the duct is too long or bent.</li></ul>	<ul style="list-style-type: none"><li>Check and clean the lint filter or duct and make sure they are not clogged.</li><li>Check the duct connections and shorten or straighten the duct work.</li></ul>

If the dryer is in the Level 2 state, the  indicator blinks for 3 hours after the completion of the current cycle. If you press POWER or open the door, the dryer powers off immediately.


## Delicate Dryer

### Flexible rack

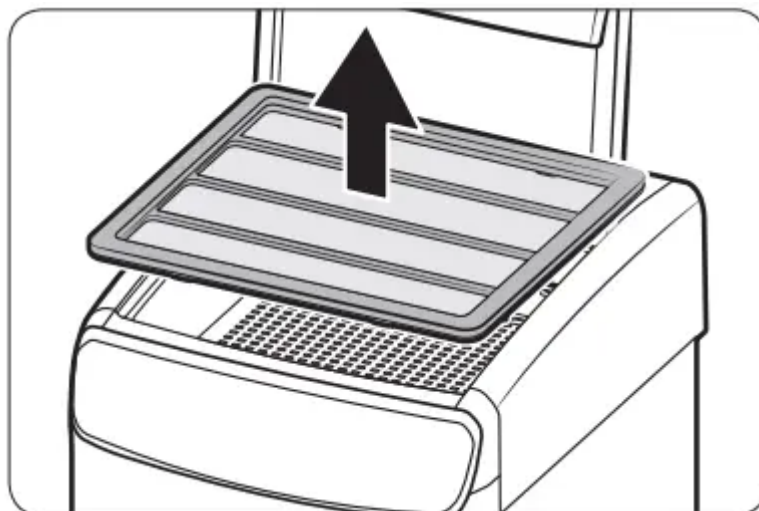


- If you use the flexible rack, make sure to clean the rack after every use so that it is readily available for future use.
- Clean the rack with neutral cleaning agents and running water.

## Upper recesses

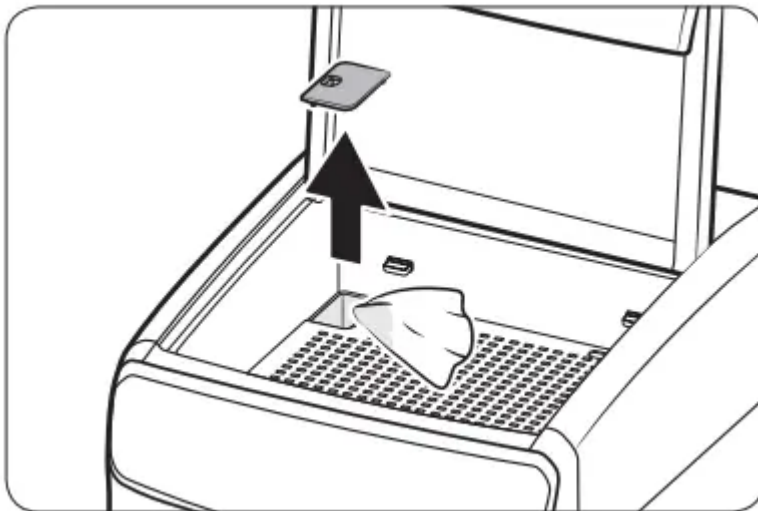

- Clean the left and right rear recesses of the Delicate Dryer after every use.
- Locate the recesses in the rear corners of the Delicate Dryer, and then remove the recess covers on both sides.
- The Delicate Dryer may have collected water while it is operating. After every use or while the Delicate Dryer is operating, remove the covers of the rear recesses, and then clean the recesses using a soft dry cloth.
- By design, the surface of the Delicate Dryer is slanted to facilitate the collection of water.

## Dryer-sheet case

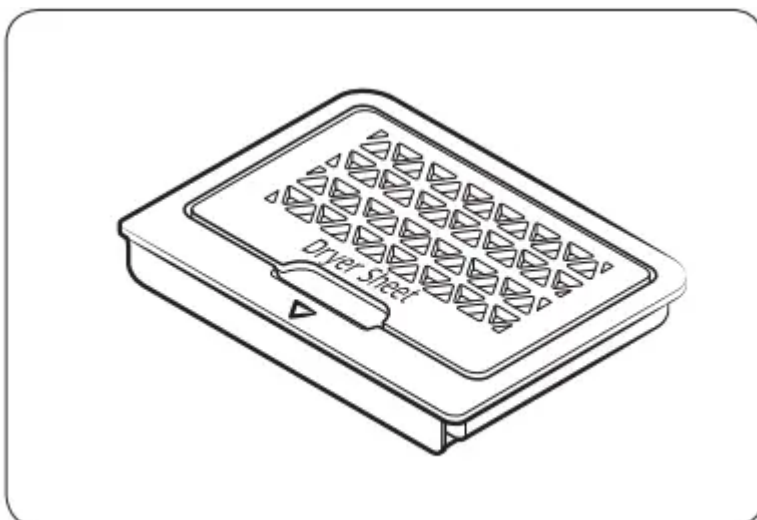

- Clean the Dryer-sheet case with neutral cleaning agents and running water.

## Tumble Dryer

### **Stainless steel drum**

- Clean the drum after every use.
- To clean the stainless steel drum, use a damp cloth with a mild, non-abrasive cleaner suitable for easily marred surfaces. Remove cleaner residue and dry with a clean cloth.

### **Drying rack**

- If you used the lower drying rack, make sure to clean the rack after every use so that it will be readily available for future use.
- Clean the drying rack with neutral cleaning agents and running water.

## **Troubleshooting**

### **Checkpoints**

<b>Symptom</b>	<b>Action</b>
<b>Does not run.</b>	<ul style="list-style-type: none"> <li>• Make sure the door is latched shut.</li> <li>• Make sure the power cord is plugged into a live electrical outlet.</li> <li>• Check your home's circuit breakers or fuses.</li> <li>• Press <b>START/PAUSE</b> again if the door was opened during a cycle.</li> <li>• Clean the lint filter.</li> <li>• If you are using the Delicate Dryer but it does not operate properly, you can turn the Tumble Dryer on and see if an information code appears.</li> </ul>
<b>Does not heat.</b>	<ul style="list-style-type: none"> <li>• Check your home's circuit breakers or fuses.</li> <li>• Some cycles do not require heat. Check the selected cycle again.</li> <li>• For a gas dryer, make sure the gas supply is on.</li> <li>• Clean the lint filter and exhaust duct.</li> <li>• The dryer may have moved into the cool-down phase of the cycle.</li> </ul>
<b>Does not dry.</b>	<ul style="list-style-type: none"> <li>• Check all of the above, plus...</li> <li>• Make sure the exhaust hood outside your home can open and close freely.</li> <li>• Check the exhaust system for lint buildup. Ducting should be inspected and cleaned annually.</li> <li>• Use a 4" rigid metal exhaust duct.</li> <li>• Do not overload. 1 wash load = 1 dryer load.</li> <li>• Dry heavy items and light weight items separately.</li> <li>• Large, bulky items, such as blankets or comforters, may require repositioning to ensure even drying.</li> <li>• The load may be too small to tumble properly. Add a few towels and restart the dryer.</li> <li>• The load may be too large to tumble properly. Remove some items and restart the dryer.</li> <li>• Clean the lint filter.</li> </ul>



<p><b>Is noisy.</b></p>	<ul style="list-style-type: none"> <li>• Check the load for objects such as coins, loose buttons, nails, etc. Remove promptly.</li> <li>• It is normal to hear the dryer gas valve or heating element cycle on and off during the drying cycle.</li> <li>• Make sure the dryer is leveled properly as outlined in the installation instructions.</li> <li>• It is normal for the dryer to hum due to the high velocity of air moving through the dryer drum, fan, or exhaust system.</li> </ul>
<p><b>Dries unevenly.</b></p>	<ul style="list-style-type: none"> <li>• Seams, pockets, and other similarly heavy areas may not be completely dry when the rest of the load has reached the selected dryness level. This is normal. You can choose a higher dryness level or a cycle that involves a higher dryness level.</li> <li>• If one heavy item is dried with a light weight load, such as one towel with sheets, it is possible that the heavy item will not be completely dry when the rest of the load has reached the selected dryness level.</li> <li>• For the best drying results, dry heavy items and light weight items separately.</li> </ul>
<p><b>Has odors.</b></p>	<ul style="list-style-type: none"> <li>• Household odors from paint, varnish, strong cleaners, etc. may enter the dryer with the surrounding room air. This is normal as the dryer draws the air from the room, heats it, pulls it through the drum, and exhausts it outside.</li> <li>• When these odors linger in the air, completely ventilate the room before using the dryer.</li> </ul>
<p><b>Lint on clothes.</b></p>	<ul style="list-style-type: none"> <li>• Make sure the lint filter is cleaned before every load. For clothes that naturally build up lint, clean the filter during the cycle.</li> <li>• Some fabrics are lint producers (for example, a fuzzy white cotton towel) and they must be dried separately from clothes that are lint trappers (for example, a pair of black linen pants).</li> <li>• Divide larger loads into smaller loads for drying.</li> <li>• Check pockets thoroughly before drying, then dry clothes.</li> <li>• Remove lint inside the drum before drying a load.</li> </ul>



<p><b>Items still wrinkled after Wrinkle Prevent (Wrinkle Away, Wrinkle Release).</b></p>	<ul style="list-style-type: none"> <li>• Small loads of 1 to 4 items work best.</li> <li>• Load fewer items. Load similar-type items.</li> <li>• Take out the items immediately after drying is complete.</li> </ul>
<p><b>Water drips from the nozzle when the Steam cycles starts.</b></p>	<ul style="list-style-type: none"> <li>• This is steam condensation. The dripping water will stop after a short time.</li> </ul>
<p><b>Sprayed water is not visible during Steam cycles.</b></p>	<ul style="list-style-type: none"> <li>• Sprayed water is difficult to see when the door is closed.</li> </ul>
<p><b>Extended time.</b></p>	<ul style="list-style-type: none"> <li>• Sensor Dry automatically senses the moisture in the load and shuts the dryer off when the selected dryness level is reached.</li> </ul> <p>The drying time can change according to the type and amount of laundry. See the cycle chart for reference.</p>

**Samsung Smart Home**



Symptom	Action
<b>I could not find “Samsung Smart Home” in the app market.</b>	<ul style="list-style-type: none"> <li>• The Samsung Smart Home app is available for smartphones that run Android 4.0 (ICS) or higher, or iOS 8.0 or higher.</li> </ul>
<b>The Samsung Smart Home app fails to operate.</b>	<ul style="list-style-type: none"> <li>• The Samsung Smart Home app is available for applicable models only.</li> <li>• The old Samsung Smart Dryer app cannot connect with Samsung Smart Home models.</li> </ul>
<b>The Samsung Smart Home app is installed but is not connected to my dryer.</b>	<ul style="list-style-type: none"> <li>• You must log into your Samsung account to use the app.</li> <li>• Use the Samsung Smart Home app to connect and register the dryer with your home network access point (AP).</li> <li>• Make sure that your router is operating normally.</li> </ul>
<b>Could not log into the app.</b>	<ul style="list-style-type: none"> <li>• You must log into your Samsung account to use the app.</li> <li>• If you don't have a Samsung account, follow the app's onscreen instructions to create one.</li> </ul>
<b>An error message appears when I try to register my dryer.</b>	<ul style="list-style-type: none"> <li>• The connection may fail due to the distance from your access point (AP) or electrical interference from the surrounding environment. Wait a moment and try again.</li> </ul>
<b>The Samsung Smart Home app is successfully connected to my dryer but does not run.</b>	<ul style="list-style-type: none"> <li>• Exit and restart the Samsung Smart Home app or unplug your router and then reconnect it.</li> </ul>

### Information codes

If the dryer fails to operate, you may see an information code on the control panel. To determine what you should do, check the list of codes in the table below, and then try the suggested actions.







Code		Action
Delicate Dryer	Tumble Dryer	
<b>1 dC</b>	<b>dC</b>	<p>Operating the dryer with the door open.</p> <ul style="list-style-type: none"> <li>• Make sure the door is properly closed.</li> <li>• Make sure laundry is not caught in the door.</li> </ul>
<b>1 FC</b>	<b>FC</b>	<p>Invalid power source frequency.</p> <ul style="list-style-type: none"> <li>• Try restarting the cycle.</li> <li>• If this information code remains, contact a Samsung service center.</li> </ul>
<b>1 AC</b>	<b>AC</b>	<p>Electronic control problem [Invalid Communication (SUB PBA &lt;-&gt; MAIN PBA)].</p> <ul style="list-style-type: none"> <li>• Contact a Samsung service center.</li> </ul>
<b>1 HC</b>	<b>HC</b>	<p>High temperature heating check.</p> <ul style="list-style-type: none"> <li>• Clean the lint filter.</li> <li>• If this information code remains, contact a Samsung service center.</li> </ul>
<b>-</b>	<b>9C1</b>	<p>The electronic control needs to be checked.</p> <ul style="list-style-type: none"> <li>• Check if power is supplied properly.</li> <li>• If the information code remains, contact a Samsung service center.</li> </ul>
<b>1 tC</b>	<b>tC</b>	<p>The Thermistor1 resistance is very low or high.</p> <ul style="list-style-type: none"> <li>• Check for a clogged lint screen .</li> <li>• Check if the vent system is restricted.</li> <li>• If this information code remains, contact a Samsung service center.</li> </ul>

<b>1tC5</b>	<b>tC5</b>	<p>The Thermistor2 resistance is very low or high.</p> <ul style="list-style-type: none"> <li>• Check for a clogged lint screen.</li> <li>• Check if the vent system is restricted.</li> <li>• If this information code remains, contact a Samsung service center.</li> </ul>
-	<b>dF</b>	<p>Incorrect door switch.</p> <ul style="list-style-type: none"> <li>• Contact a Samsung service center.</li> </ul>
1 AC7	-	<p>Electronic Control Problem [Invalid Communication (Delicate Dryer MAIN &lt;-&gt; Tumble MAIN PBA)].</p>

## Specifications

### Fabric care chart




#### Wash cycle

	Normal
	Permanent press / Wrinkle resistant / Wrinkle control
	Gentle / Delicates
	Hand wash



#### Water temperature

...	Hot
..	Warm
.	Cold




#### Bleach

	Any bleach (when needed)
	Only non-chlorine (color-safe) bleach (when needed)
	Tumble dry






### Normal

	Permanent press / Wrinkle resistant / Wrinkle control
	Gentle / Delicates


### Special instructions

	Line dry / Hang to dry
	Drip dry
	Dry flat







### Heat setting

	High
	Medium
	Low
	Any heat
	No heat / Air






### Iron dry or steam temperatures

	High
	Medium
	Low


#### Warning symbols for laundering

	Do not wash
	Do not wring
	Do not bleach
	Do not tumble dry
	No steam (added to iron)
	Do not iron

#### Dry-clean

	Dry-clean
	Do not dry-clean
	Line dry / Hang to dry
	Drip dry
	Dry flat

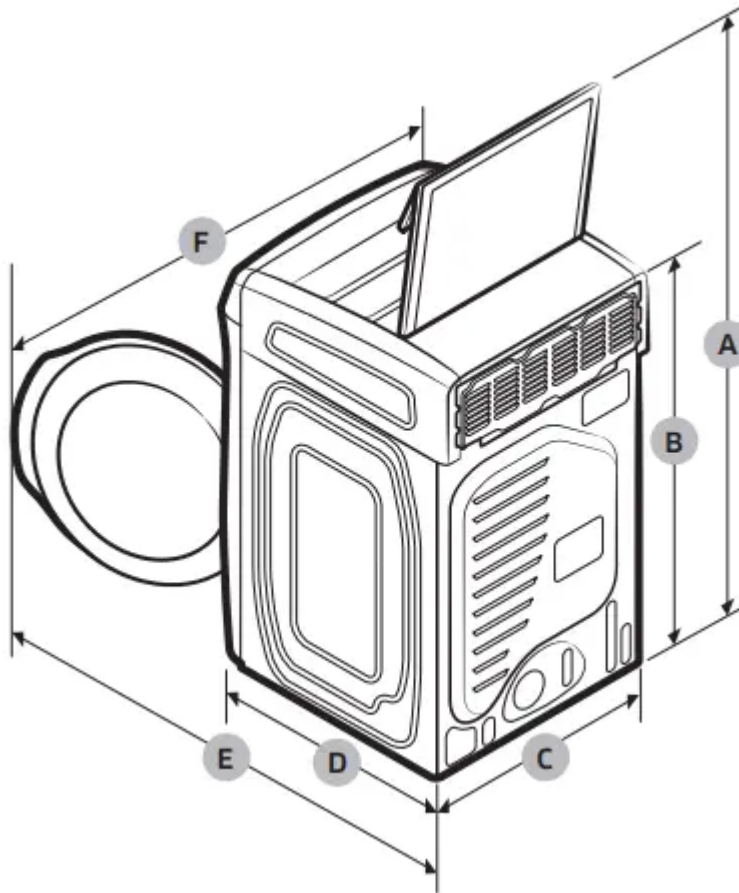


#### Specification sheet







Type		Front loading dryer	
		DV*55M9600**	
Dimensions	A. Height-top door opened	Product-inches (cm)	61 (155.0)
		Required for Installation-inches	63.5
	B. Height-top door closed	Product-inches (cm)	46.9 (119.2)
		Required for Installation-inches	-
	C. Width	Product-inches (cm)	27 (68.6)
		Required for Installation-inches	29
	D. Depth	Product-inches (cm)	32.5 (82.5)
		Required for Installation-inches	34.5
	E. Depth with door open 90°	Product-inches (cm)	53.7 (136.5)
		Required for Installation-inches	55.7
	F. Width with door open 120°	Product-inches (cm)	36.4 (92.4)
		Required for Installation-inches	38.4
Water pressure-psl (kPa)		20-116 (137-800)	
Weight	lb (kg)	167.5 (76)	
Heater rating	Electric (W)	Upper : 600 W / Lower : 5300 W	
	Gas (BTU/hr)	Upper : 600 W / Lower : 22000 BTU/hr (eq. 6447 W)	
Annual energy consumption	Electric (kWh/year)	607 kWh/year	
	Gas (kWh/year)	685 kWh/year	

### Cycle chart

For best results, follow the load size recommendations for each dry cycle.

-  Large load: Fill the drum to about  $\frac{3}{4}$  full. Do not add items over this level as they need to tumble freely.
-  Medium load : Fill the drum to about  $\frac{1}{2}$  full.
-  Small load : Fill the drum with 3-5 items, not more than  $\frac{1}{4}$  full.

Cycle	Recommended items	Load size	Dry Level
NORMAL	Cottons, work clothes, linens, mixed loads		Normal Dry (Adjustable)
HEAVY DUTY	Heavy Fabrics such as jeans, corduroys, heavy work clothes		Normal Dry (Adjustable)
BEDDING	Bulky items such as blankets, sheets, comforters, pillows		Normal Dry (Adjustable)
PERM PRESS	Shirts, synthetic fabrics, knits, wrinkle-free cottons, permanent press		Normal Dry (Adjustable)
DELICATES	Underwear, blouses, lingerie		Normal Dry (Adjustable)
ACTIVE WEAR	Water-repellent wear, performance clothes, sports wear (Maximum: 4 lbs)		Normal Dry (Not adjustable)
TIME DRY	Any load		-
AIR FLUFF	Foam, rubber, plastic		-
REFRESH	Shirts, trousers, comforters, pillows		-
WRINKLE AWAY	Shirts, trouser, blouses		-
STEAM SANITIZE	Bedding, curtains, children's clothing		Very Dry (Not adjustable)

### Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.