

INSTRUCTIONS ELECTRIC OIL FILLED RADIATOR

1. GENERAL FEATURES

 
Remove the appliance from the packaging, turn upside down and rest on the polystyrene.

Check that neither the appliance nor the power cable has been damaged in any way during transportation. Do not operate the appliance if damaged.




2. FITTING THE FEET

Remove the feet and the castors (if provided) from the polystyrene packing.


Fit the castors to the spindles on the feet and push firmly until they click into position (fig. 1).

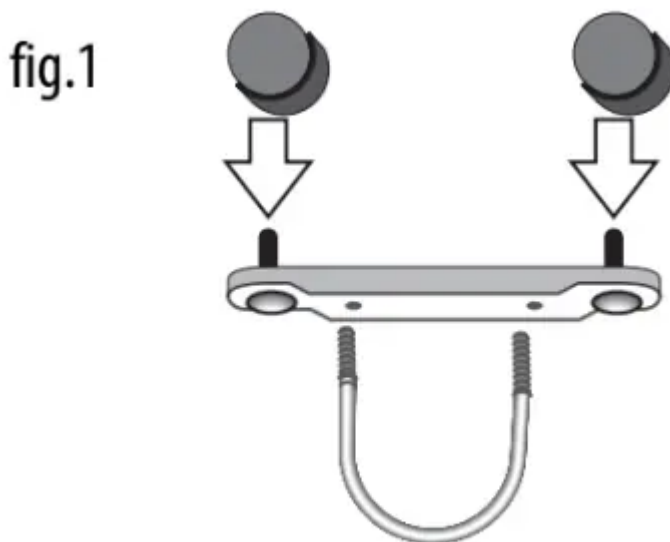


   Pull each castor to check that it is fitted correctly. In certain models, the castors are already mounted on the feet. Using the threaded u-bolt and wing nuts, fit the feet to the bottom of the radiator between the last two elements as shown in figures 2, 3 and 4. Depending on the type of feet supplied, type **A** or **B**, mount the feet as shown in figure 5 or 6.

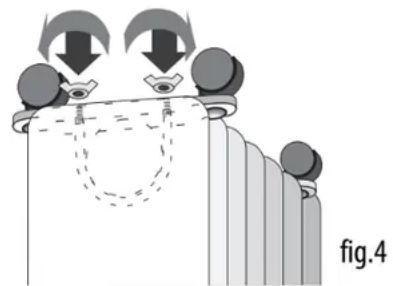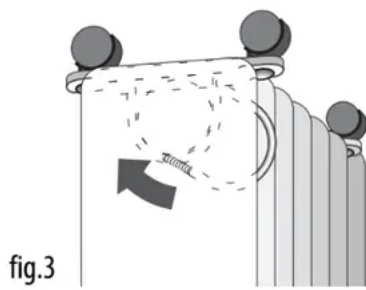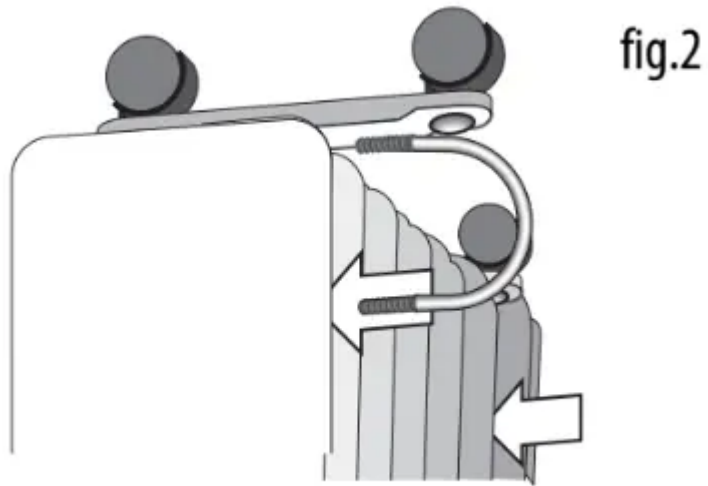

  Mount the foot without castors by inserting the two guides (C fig. 7) into the holes on the bottom of the control box (fig. 7). Fit the tooth into the slot provided and lock the foot with the eye screw (fig. 8).

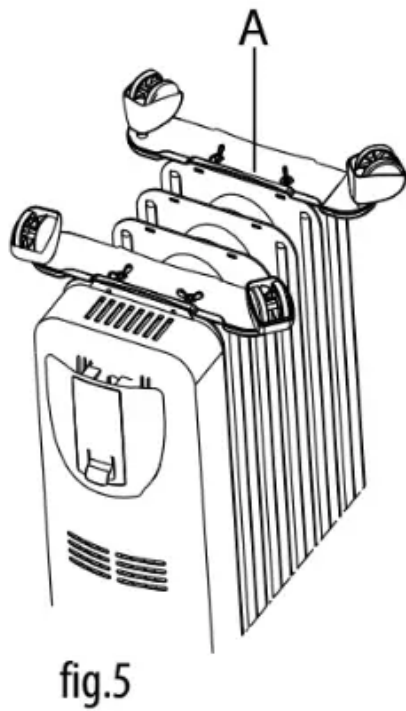

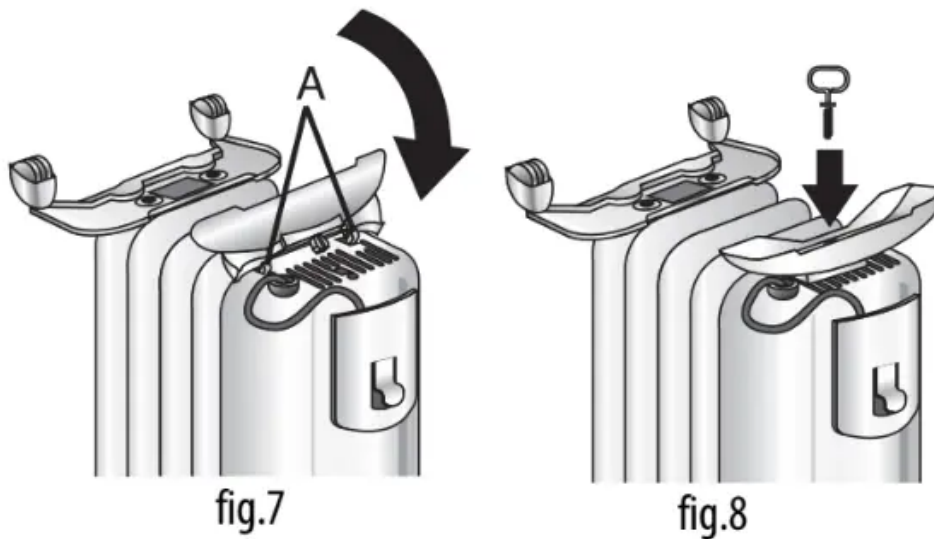

After fitting, turn the radiator back into the vertical operating position.

3. ELECTRICAL CONNECTION

- Before plugging the radiator into the mains, check that the voltage of your mains electricity supply corresponds to the value V indicated on the appliance and that the socket and power line are appropriately dimensioned.
- CONNECT THE RADIATOR TO EFFICIENTLY EARTHED SOCKETS ONLY
- THIS APPLIANCE COMPLIES WITH DIRECTIVE 2004/108/EEC ON RADIO INTERFERENCE SUPPRESSION.

4. INSTRUCTIONS FOR USE

Switching on

Plug into the mains socket. Turn the thermostat to maximum. Switch the radiator on using the switch/switches following the procedures given in points a) - b).

a) Models with single switch (1 power level):

- button in position «I» = Total power on (indicator light on);
- button in position «0» = (indicator light off)

b) Models with double switch (3 power levels)

- button in position «I» = minimum power (indicator light on);
- button in position «II» = intermediate power (indicator light on);

- both buttons in position «I» «II» = maximum power (indicator lights on)

To turn appliance off, switch off both switches or remove plug from wall socket.


Adjusting the thermostat

When the room has reached the required temperature, turn the thermostat slowly anticlockwise until the indicator light goes out (or until you hear a "click") and no further. The set temperature will then be regulated automatically and kept constant by the thermostat.

Frost protection function

With the thermostat in position * and the switches pressed, the appliance maintains the room at a temperature of about 5°C, preventing freezing with minimum energy consumption.

Models with 24-hour timer Using the timer

If you wish to use the timer, position the switch in the middle position  (Fig. 9).

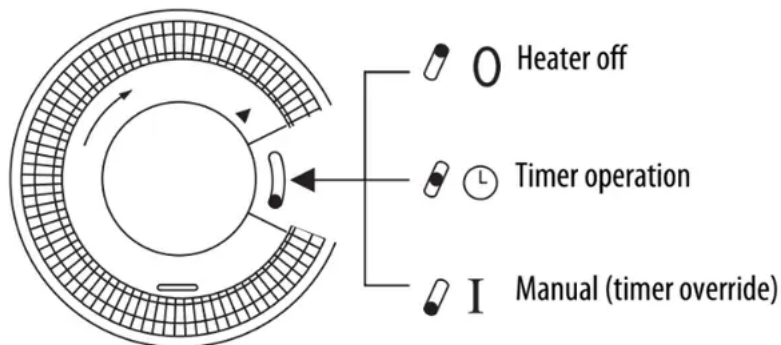 


fig.9

Setting the correct time

Check the time on your watch. If for example it is 4.00 pm. (16.00), turn the dial in a clockwise direction until the number 16 is lined up with the triangular pointer (fig.10).

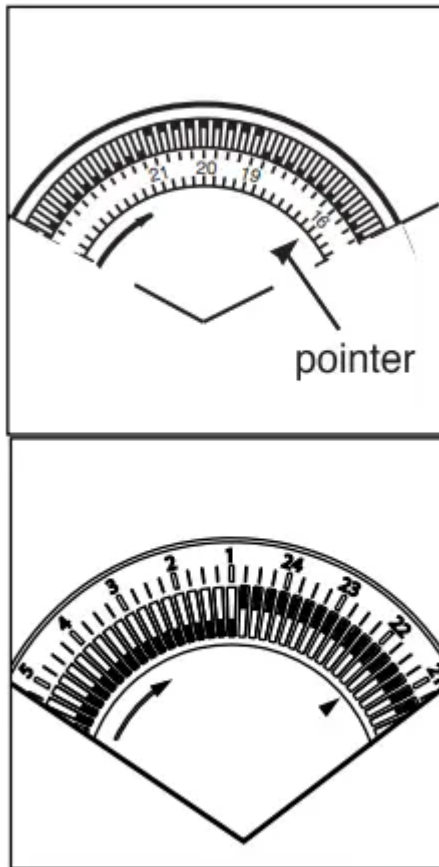 


fig.10

N.B.: Never turn the dial in an anti-clockwise direction!

The timer is in effect an electric clock and works only if the plug is connected to the power supply.

Whenever the plug is disconnected or there is a power failure, the clock must be re-set.

To program the timer

- 1) Set the operating times by pushing in the notches on the dial corresponding to the period required (each notch represents 15 mins. fig.11)

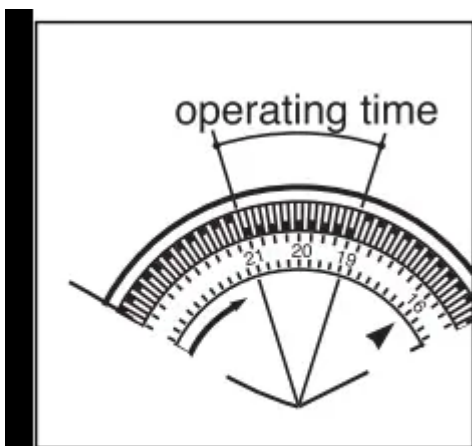 



fig.11




2) Make sure that the timer indicates the correct time (see instructions on setting the correct time).

3) Turn the radiator on and set it to the heat setting and temperature level on the thermostat as required.

Once programmed in this way, the appliance will repeat the pre-established program every day, if the selector is in the  position.

Timer override

If you wish to override the timer settings, push the timer switch to position **1** (fig.9) manual (timer override). To return to timed operation push the switch back to the middle position  (fig.9).

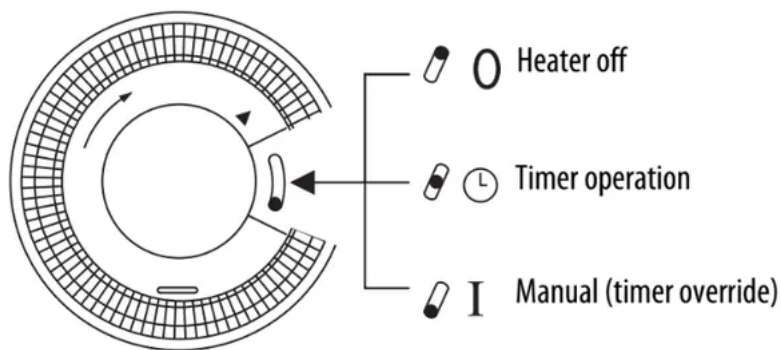 



fig.9

NOTE: if the timer switch is at the **0** position (fig.9), the heater is off and will not operate).

TURBO HEATING

Some models are fitted with a heating fan which heats the room more quickly.

To turn this function on, push the button into the  position.

Important: a safety device cuts in and switches off the appliance if it overheats due to an accumulation of dust on the air intake and output grills. To restart it, unplug from the mains and leave the appliance to cool down. Clean the air intake and output grills with a vacuum cleaner, then replug into the mains and turn on again.

MODELS WITH 'Tilt-switch'

Some models are fitted with a tilt-switch turns the appliance off if it should fall over. To restart the appliance, simply place it upright again.

5. MAINTENANCE

Before carrying out any operation on the radiator, unplug from the electric mains and wait for it to cool.

The oil-filled electric radiator requires no particular maintenance. It is sufficient to remove the dust with a soft, dry cloth. Never use abrasive powders or solvents. If necessary remove concentrations of dirt using a vacuum cleaner.

6. IMPORTANT



WARNING: In order to avoid overheating, never under any circumstances cover the appliances during operation, as this would lead to dangerous overheating.

CAUTION: In order to avoid inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

The appliance is fitted with a **safety device** which will switch off it in case of accidental overheating. To reset, contact an authorised service centre.

ATTENTION: in order to avoid any danger caused by an accidental resetting of the safety system, this appliance must not be powered through an external timer.

- Never use the radiator near a bath, shower, basin or swimming pool.
- Never use the radiator to dry damp garments. Never rest the cable on hot elements.
- Use the radiator in the vertical position only.
- If the electric cable has been damaged, it must be replaced by the manufacturer or the technical service centre or by a qualified person so as to avoid all risks.
- When you start the radiator for the first time, leave it operating at maximum power for at least two hours. During this operation, ventilate the room well to eliminate the "new" smell emanating from the appliance.
- It is normal for the appliance to emit a squeaking noise when turned on for the first time.
- The appliance is not intended for use by young children or infirm person without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- The appliance must never be placed immediately under a fixed mains socket.
- This radiator is filled with a precise quantity of oil and repairs which require it to be opened must be carried out exclusively by the manufacturer or an authorised service

centre. In the case of oil leaks, contact the manufacturer or the authorised service centre.

- When scrapping the appliance, respect legislation on the disposal of oil.
- Do not use the appliance in rooms with a base area of less than 4 m².

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.