

GETTING TO KNOW YOUR DIGITAL ADVANTAGE™ IRON



1. Spray nozzle
2. Water-fill opening
3. Digital display
4. Power/temperature setting button
5. Burst of steam button
6. Spray mist button
7. Power indicator light
8. Heel rest
9. Water tank
10. Variable steam dial

Product may vary slightly from what is illustrated.

HOW TO USE

This appliance is intended for household use only

GETTING STARTED


- Remove any labels, stickers or tags attached to the body or soleplate of the iron.
- Important: For warranty verification, do not remove the line cord sticker.
- Please go to www.prodprotect.com/applica to register your warranty.
- Use ordinary tap water for ironing. Do not use water processed through a home softening system.
- For optimum performance, let the iron stand for 90 seconds before beginning to iron.
- Always stand the iron on its heel rest when powered on but not in use.

FILLING WATER TANK

1. Tilt the iron and using a clean measuring cup, pour water into water-fill opening until the water reaches the MAX mark on the water tank. Refill as needed.

Note: If you need to add water while ironing, unplug the iron and follow above steps.

SELECTING A TEMPERATURE SETTING

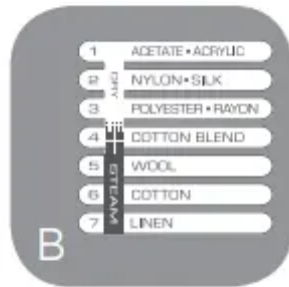


1. Plug in the iron. The power indicator light turns on and a beep sounds; Temperature setting 1 (ACRYL) appears in the digital display. (A)
2. To select a temperature setting, press the temperature setting button below the digital display until you reach your desired setting from 1 to 7.
 - **Note:** See the fabric guide on the iron and read garment's label to help you determine which temperature setting to use. (B)
 - **Tip:** If unsure of a garment's fiber, test a small area (on an inside seam or hem) before ironing.
3. The digital display will show the setting number and fabric type; these will flash on the display until the set temperature is reached.
4. When your set temperature is reached, the iron will beep once and the word "READY" will appear in the display. The temperature setting, number and "READY" will be displayed as you iron. (C)
5. To change temperature settings while ironing, just push the temperature button. When a lower setting is selected, fabric type will flash until the iron temperature has lowered to

the correct level for that setting. The iron will beep once and "READY" will appear in the bottom of the display window.

IRONING WITH STEAM





1. For steam ironing, be sure the water tank is filled to MAX.
2. Turn the variable steam dial to the appropriate steam setting for your fabric. (D)
 - **Note:** See the fabric guide on the iron (B) and read garment's label to help you determine which steam setting to use.
3. For optimum performance when using steam, stand iron on its heel rest until the selected temperature setting is reached.
4. When finished ironing, turn the variable steam dial to the steam off  setting.

BURST OF STEAM


HORIZONTAL

Tip: Use to remove stubborn creases.

1. With the water tank filled to the MAX mark, set temperature setting and variable steam to the appropriate settings for your fabric. See fabric guide on the iron and read garment's label to help you determine fabric type.
2. For best performance, press the burst of steam  button at 5-second intervals.
3. When finished ironing, turn the variable steam dial to the steam off  setting, stand the iron on its heel, and unplug the iron.

VERTICAL

Tip: Use for removing wrinkles from hanging clothes and drapes.


1. With the water tank filled to the MAX mark, set temperature setting and variable steam to the appropriate settings for your fabric. See fabric guide on the iron and read garment's label to help you determine fabric type.
2. Hang the garment to be steamed on a clothes hanger. (Curtains or drapes can be steamed once they are hung.)
3. Hold the iron close to, but not touching, the fabric.
4. Pull the fabric tight in your free hand and pump the burst of steam  button as you move the iron over the fabric.
5. When finished ironing, turn the variable steam dial to the steam off setting, stand the iron on its heel, and unplug the iron.

DRY IRONING

- To iron without steam, set the variable steam dial to steam off. 

USING SPRAY MIST

Tip: For fabrics other than silk, use to dampen tough wrinkles at any setting.

1. Be sure the iron is filled with water.
2. On first use, pump the spray  button several times.

10-MINUTE AUTO SHUTOFF

The automatic shutoff feature in your iron works as follows:

- Once the iron reaches appropriate temperature, it will turn off after 10 minutes of inactivity. Before turning off, the iron will beep once and "AUTO OFF" will flash in the digital display.
- Once turned off, the digital display will go dark, but the words "AUTO OFF" will continue to show in the display.
- As soon as you pick up the iron, it will beep once and start heating again to the set temperature setting. Wait for iron to reheat completely before resuming operation.
- To turn the iron off manually, press the power / temperature setting button for 2 seconds; this can be done from any temperature setting.

EMPTYING WATER TANK (OPTIONAL)

Note: It is not necessary to empty the water after each use.

1. Unplug the iron and let it cool.
2. To empty the water, hold the iron over a sink with the tip pointing down. Water will empty out the water-fill opening.

CARE AND CLEANING



This product contains no user serviceable parts. Refer service to qualified service personnel.

CLEANING


1. Make sure iron is unplugged and has cooled completely. Wipe the soleplate and outer surfaces with a soft cloth dampened with water and mild household detergent. Never use abrasives, heavy-duty cleansers, vinegar or scouring pads that may scratch or discolor the iron.
2. After cleaning, steam iron over an old cloth to remove any residue from the steam vents.

AUTO CLEAN[®] SYSTEM

To keep the steam vents free of any buildup, follow these instructions when the word "CLEAN" appears in the digital display:

1. Fill the water tank well below the MAX line. Plug in the iron.
2. Press the temperature setting button to 6 and stand the iron on its heel rest. Allow it to heat about 3 minutes.
3. Unplug the iron and hold over a sink with the soleplate facing down.
4. Move and hold the variable steam dial in the CLEAN  position. Be careful, as hot water and steam will come out of the steam vents.
5. Continue to hold the variable steam dial to CLEAN until all the water has emptied. If necessary, rock iron side-to-side and front-to-back.
6. When finished, move the variable steam dial to steam off , stand the iron on its heel rest and plug it in. Heat for about 2 minutes to dry out any remaining water.

STORING

1. Unplug the iron and let it cool completely.
2. Check that the variable steam dial is set to steam off. 

3. Store iron on its heel rest. Storing iron on its soleplate can cause leaks or damage.

NEED HELP?

For service, repair or any questions regarding your appliance, call the appropriate 800 number on cover of this pamphlet. Please DO NOT return the product to the place of purchase. Also, please DO NOT mail product back to manufacturer, nor bring it to a service center. You may also want to consult the website listed on the cover of this pamphlet.

What does it cover?

- Any defect in material or workmanship provided; however, Spectrum Brands' liability will not exceed the purchase price of product.

For how long?

- Two years from the date of original purchase with proof of such purchase.

What will we do to help you?

- Provide you with a reasonably similar replacement product that is either new or factory refurbished.
- How do you get service?
- Save your receipt as proof of date of sale.
- Visit the online service website at www.prodprotect.com/applica, or call toll-free 1-800-231-9786, for general warranty service.
- If you need parts or accessories, please call 1-800-738-0245.

What does your warranty not cover?

- Damage from commercial use
- Damage from misuse, abuse or neglect
- Products that have been modified in any way
- Products used or serviced outside the country of purchase
- Glass parts and other accessory items that are packed with the unit
- Shipping and handling costs associated with the replacement of the unit
- Consequential or incidental damages (Please note, however, that some states do not allow the exclusion or limitation of consequential or incidental damages, so this limitation may not apply to you.)

How does state law relate to this warranty?

- This warranty gives you specific legal rights. You may also have other rights that vary from state to state or province to province.

IMPORTANT SAFETY INSTRUCTIONS

When using your iron, basic safety precautions should always be followed, including the following:

- READ ALL INSTRUCTIONS BEFORE USING.
- Use iron only for its intended use.
- To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
- The iron should always be turned to the minimum (min) setting before plugging or unplugging from outlet. Never yank cord to disconnect from the outlet; instead grasp plug and pull to disconnect.
- Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- Always disconnect iron from electrical outlet when filling with water or emptying, and when not in use.
- Do not operate iron with a damaged cord, or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron; take it to a qualified service person for examination and repair, or call the appropriate toll-free number. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
- Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down or use the surge of steam – there may be hot water in the reservoir. Avoid rapid movement of iron to minimize hot water spillage.
- The iron must not be left unattended while it is connected to the supply mains.
- The plug must be removed from the socket outlet before the water reservoir is filled with water.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.

SPECIAL INSTRUCTIONS

- To avoid circuit overload, do not operate another high wattage appliance on the same circuit.

- If an extension cord is absolutely necessary, a 15-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)