


PRODUCT DESCRIPTION

COOKING SURFACE LAYOUT

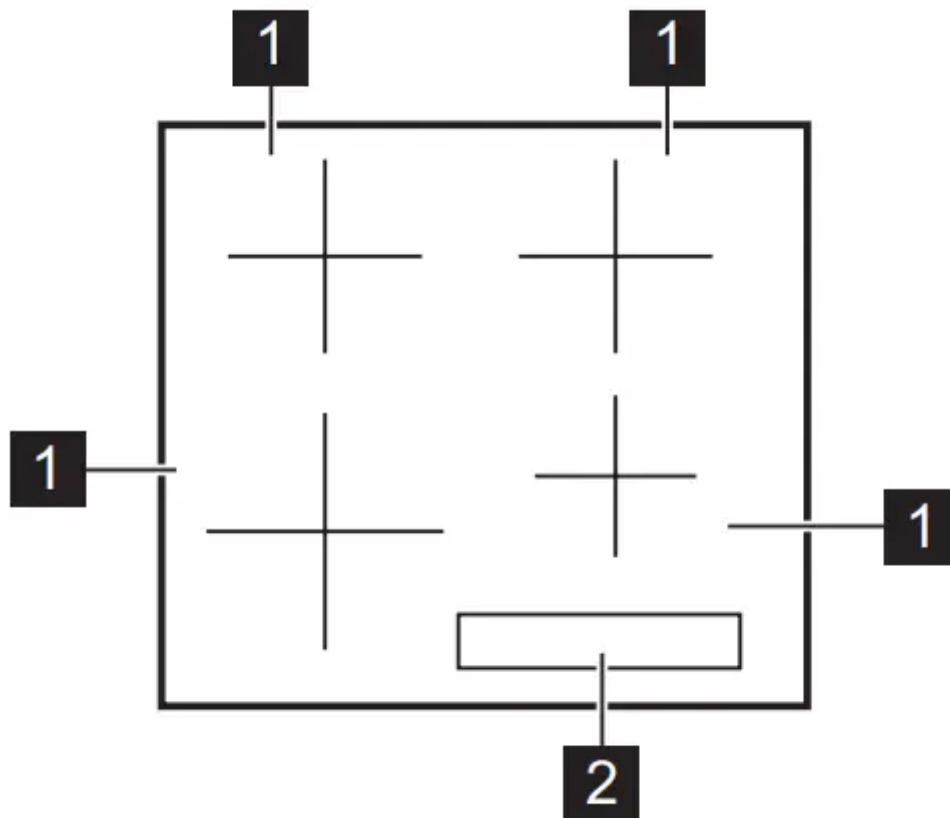


1 Induction cooking zone

2 Control panel





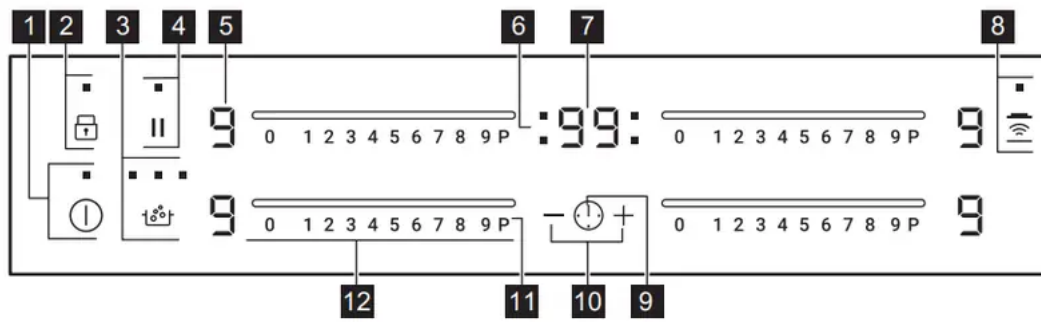


 
For detailed information on the sizes of the cooking zones refer to "Technical data".

CONTROL PANEL LAYOUT














Use the sensor fields to operate the appliance. The displays, indicators and sounds tell which functions operate

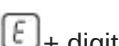


	Sensor field	Function	Comment
1		ON / OFF	To activate and deactivate the hob.
2		Lock / Child Safety Device	To lock / unlock the control panel.
3		BoilAssist	To activate and deactivate the function. The indicators above the symbol show the progress of the function.
4	II	Pause	To activate and deactivate the function.
5	-	Heat setting display	To show the heat setting.
6	-	Timer indicators of cooking zones	To show for which zone you set the time.
7	-	Timer display	To show the time in minutes.
8		Hob²Hood	To activate and deactivate the manual mode of the function.
9		-	To select the cooking zone.
10			To increase or decrease the time.
11	P	PowerBoost	To activate the function.
12	-	Control bar	To set a heat setting.

HEAT SETTING DISPLAYS

Display	Description
	The cooking zone is deactivated.
	The cooking zone operates.
	Pause operates.
	BoilAssist operates.
	Automatic Heat Up operates.
	PowerBoost operates.
	There is a malfunction.

Display	Description
	OptiHeat Control (3 step Residual heat indicator): continue cooking / keep warm / residual heat.
	Lock / Child Safety Device operates.
	Incorrect or too small cookware or no cookware on the cooking zone.
	Automatic Switch Off operates.

OPTIHEAT CONTROL (3 STEP RESIDUAL HEAT INDICATOR)

WARNING!  risk of burns from residual heat.

The indicators show the level of the residual heat for the cooking zones you are currently using. The indicators may also come on for the neighbouring cooking zones even if you are not using them. The induction cooking zones produce the heat necessary for the cooking process directly in the bottom of the cookware. The glass ceramic is heated by the heat of the cookware.



DAILY USE

ACTIVATING AND DEACTIVATING


Touch  for 1 second to activate or deactivate the hob.

AUTOMATIC SWITCH OFF

The function deactivates the hob automatically if:


- all cooking zones are deactivated,
- you do not set the heat setting after you activate the hob,
- you spill something or put something on the control panel for more than 10 seconds (a pan, a cloth, etc.). An acoustic signal sounds and the hob deactivates. Remove the object or clean the control panel.
- the hob gets too hot (e.g. when a saucepan boils dry). Let the cooking zone cool down before you use the hob again.
- you use incorrect cookware. The symbol  comes on and the cooking zone deactivates automatically after 2 minutes.
- you do not deactivate a cooking zone or change the heat setting. After some time  comes on and the hob deactivates.

The relation between the heat setting and the time after which the hob deactivates:

Heat setting	The hob deactivates after
 , 1 - 2	6 hours
3 - 4	5 hours
5	4 hours
6 - 9	1.5 hour

THE HEAT SETTING

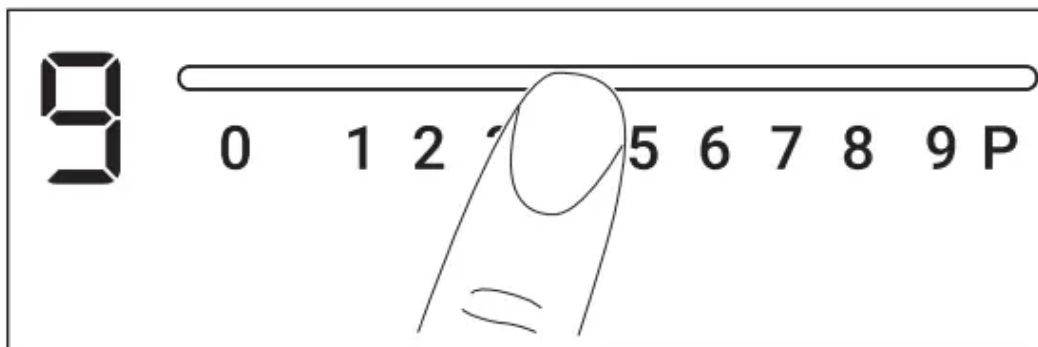


To set or change the heat setting: Touch the control bar at the correct heat setting or move your finger along the control bar until you reach the correct heat setting.


 



BOILASSIST

The function automatically adjusts the temperature of water so that it does not boil over once it reaches the boiling point.



If there is any residual heat  /  /  on the cooking zone you want to use, an acoustic signal is emitted and the function does not start.

1. Touch  to activate the hob.
2. Touch  to activate the function.


A blinking  appears for cooking zones on which you can presently use the function.


3. Touch the control bar of any available cooking zone for which you want to start the function (between the heat setting 1-9).

The function starts.

If you do not choose any cooking zone within 5 seconds the function does not activate.



Once the function starts the indicators above the  symbol come on one after another until the water reaches the boiling point.

To deactivate the function touch  (the function deactivates and the heat setting goes down to 0) or touch the control bar and adjust the heat setting manually.





The Pause function and lifting of the pot deactivate BoilAssist.

AUTOMATIC HEAT UP

Activate this function to get a desired heat setting in a shorter time. When it is on, the zone operates on the highest setting in the beginning and then continues to cook at the desired heating setting.



To activate the function the cooking zone must be cold.

To activate the function for a cooking zone: touch **P** ( comes on). Immediately touch a desired heat setting. After 3 seconds  comes on.

To deactivate the function: change the heat setting.

POWERBOOST

This function makes more power available to the induction cooking zones. The function can be activated for the induction cooking zone only for a limited period of time. After this time the induction cooking zone automatically sets back to the highest heat setting.

To activate the function for a cooking zone: touch **P**.  comes on.


To deactivate the function: change the heat setting.



TIMER


Count Down Timer

You can use this function to set how long the cooking zone should operate for a single cooking session.



First set the heat setting for the cooking zone then set the function.

To set the cooking zone: touch  again and again until the indicator of a necessary cooking zone comes on.

To activate the function or change the time: touch  or  of the timer to set the time (00 - 99 minutes). When the indicator of the cooking zone starts to flash slowly the time counts down.

To see the remaining time: set the cooking zone with . The indicator of the cooking zone starts to flash quickly. The display shows the remaining time.

To deactivate the function: set the cooking zone


with  and touch . The remaining time counts back to 00. The indicator of the cooking zone goes out.






When the time comes to an end, the sound operates and 00 flashes. The cooking zone deactivates.

To stop the sound: touch .

Minute Minder

You can use this function as a **Minute Minder** when the hob is activated and the cooking zones do not operate. The heat setting display shows .

To activate the function: touch . Touch  or  of the timer to set the time. When the time comes to an end, the sound operates and 00 flashes.

To stop the sound: touch .



The function has no effect on the operation of the cooking zones.


PAUSE

This function sets all cooking zones that operate to the lowest heat setting.

When the function operates, all other symbols on the control panels are locked.

The function does not stop the timer functions.

Touch **II** to activate the function.

 comes on. The heat setting is lowered to 1.

To deactivate the function, touch **II**. The previous heat setting comes on.

LOCK

You can lock the control panel while cooking zones operate. It prevents an accidental change of the heat setting.

Set the heat setting first.

To activate the function: touch  .  comes on for 4 seconds. The Timer stays on.





To deactivate the function: touch  . The previous heat setting comes on.







When you deactivate the hob, you also deactivate this function.



CHILD SAFETY DEVICE

This function prevents an accidental operation of the hob.

To activate the function: activate the hob with  . Do not set any heat setting. Touch  for 4 seconds.  comes on. Deactivate the hob with  .


To deactivate the function: activate the hob with  . Do not set any heat setting. Touch  for 4 seconds.  comes on. Deactivate the hob with  .

To override the function for only one cooking time: activate the hob with  .  comes on.

Touch  for 4 seconds. **Set the heat setting in 10 seconds.** You can operate the hob. When you deactivate the hob with  the function operates again.

POWER MANAGEMENT

- Cooking zones are grouped according to the location and number of the phases in the hob. See the illustration.
- Each phase has a maximum electricity loading of 3700 W.
- The function divides the power between cooking zones connected to the same phase.
- The function activates when the total electricity loading of the cooking zones connected to a single phase exceeds 3700 W.
- The function decreases the power to the other cooking zones connected to the same phase.
- The heat setting display of the reduced zones alternates between the chosen heat setting and the reduced heat setting. After some time the heat setting display of the reduced zones stays on the reduced heat setting.

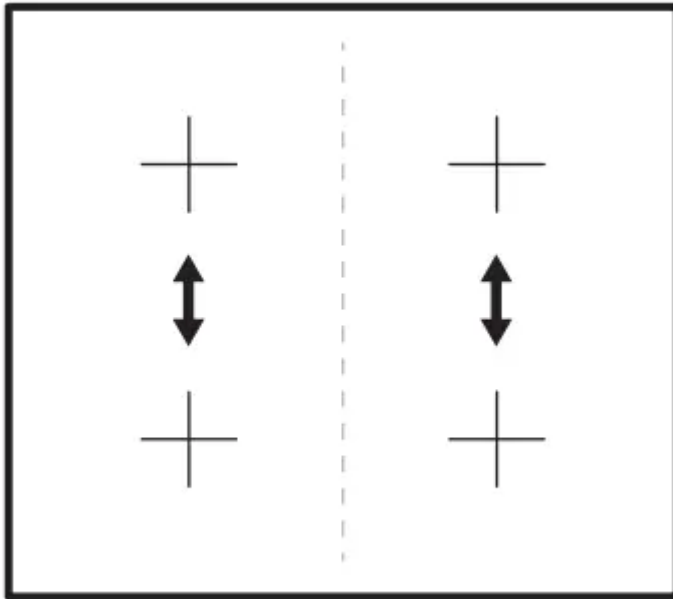

CARE AND CLEANING

GENERAL INFORMATION

- Clean the hob after each use.
- Always use cookware with a clean base.
- Scratches or dark stains on the surface have no effect on how the hob operates.
- Use a special cleaner suitable for the surface of the hob.
- Use a special scraper for the glass.

CLEANING THE HOB

- **Remove immediately:** melted plastic, plastic foil, sugar and food with sugar, otherwise, the dirt can cause damage to the hob. Take care to avoid burns. Use a special hob scraper on the glass surface at an acute angle and move the blade on the surface.

- **Remove when the hob is sufficiently cool:**

limescale rings, water rings, fat stains, shiny metallic discoloration. Clean the hob with a moist cloth and a non-abrasive detergent. After cleaning, wipe the hob dry with a soft cloth.





- **Remove shiny metallic discoloration:** use a solution of water with vinegar and clean the glass surface with a cloth.


TROUBLESHOOTING

WHAT TO DO IF...

Problem	Possible cause	Remedy
You cannot activate or operate the hob.	The hob is not connected to an electrical supply or it is connected incorrectly.	Check if the hob is correctly connected to the electrical supply. Refer to the connection diagram.
	The fuse is blown.	Make sure that the fuse is the cause of the malfunction. If the fuse is blown again and again, contact a qualified electrician.
	You do not set the heat setting for 10 seconds.	Activate the hob again and set the heat setting in less than 10 seconds.
	You touched 2 or more sensor fields at the same time.	Touch only one sensor field.
	Pause operates.	Refer to "Daily use".
	There is water or fat stains on the control panel.	Clean the control panel.

<p>An acoustic signal sounds and the hob deactivates.</p> <p>An acoustic signal sounds when the hob is deactivated.</p>	<p>You put something on one or more sensor fields.</p>	<p>Remove the object from the sensor fields.</p>
<p>The hob deactivates.</p>	<p>You put something on the sensor field .</p>	<p>Remove the object from the sensor field.</p>
<p>Residual heat indicator does not come on.</p>	<p>The zone is not hot because it operated only for a short time or the sensor is damaged.</p>	<p>If the zone operated sufficiently long to be hot, speak to an Authorised Service Centre.</p>
<p>Hob2Hood does not work.</p>	<p>You covered the control panel.</p>	<p>Remove the object from the control panel.</p>
	<p>You use a very tall pot which blocks the signal.</p>	<p>Use a smaller pot, change the cooking zone or operate the hood manually.</p>
<p>Automatic Heat Up does not operate.</p>	<p>The zone is hot.</p>	<p>Let the zone become sufficiently cool.</p>
	<p>The highest heat setting is set.</p>	<p>The highest heat setting has the same power as the function.</p>
<p>The heat setting changes between two levels.</p>	<p>Power management operates.</p>	<p>Refer to "Daily use".</p>
<p>The sensor fields become hot.</p>	<p>The cookware is too large or you put it too near to the controls.</p>	<p>Put large cookware on the rear zones, if possible.</p>

<p> comes on.</p>	<p>Child Safety Device or Lock operates.</p>	<p>Refer to "Daily use".</p>
<p> comes on.</p>	<p>There is no cookware on the zone.</p>	<p>Put cookware on the zone.</p>
	<p>The cookware does not cover the cross / square.</p>	<p>Cover the cross / square fully.</p>
	<p>The cookware is unsuitable.</p>	<p>Use suitable cookware. Refer to "Hints and tips".</p>
	<p>The diameter of the bottom of the cookware is too small for the zone.</p>	<p>Use cookware with correct dimensions. Refer to "Technical data".</p>
<p> and  appear alternately.</p>	<p>The power is too low due to unsuitable cookware or an empty pot.</p>	<p>Use the appropriate type of cookware. Refer to "Hints and Tips" and "Technical Data".</p> <p>Do not activate any zone with an empty pot on it.</p>

<p>F and 2 appear alternately.</p>	<p>The pot is empty or contains some liquid other than water, e.g. oil.</p>	<p>Avoid using the function with liquids other than water.</p>
<p>F and 3 appear alternately.</p>	<p>There is too much or too little water in the pot.</p> <p>You boiled some food other than water and potatoes. The boiling point was moved in time and BoilAssist could not work properly.</p>	<p>Refer to "Hints and Tips". Only boil water and potatoes with the use of BoilAssist.</p>
<p>You hear a beep sound, the indicators above  blink and BoilAssist does not start.</p>	<p>None of the cooking zones is ready to be used with BoilAssist. There is some residual heat on the cooking zones you want to choose or they are still in use.</p>	<p>Finish your previous cooking activities and choose a free cooking zone without any residual heat.</p>
<p>E and a number come on.</p>	<p>There is an error in the hob.</p>	<p>Deactivate the hob and activate it again after 30 seconds.</p> <p>If E comes on again, disconnect the hob from the electrical supply. After 30 seconds, connect the hob again. If the problem continues, speak to an Authorised Service Centre.</p>
<p>You can hear a constant beep noise.</p>	<p>The electrical connection is incorrect.</p>	<p>Disconnect the hob from the electrical supply. Ask a</p>

		qualified electrician to check the installation.
--	--	--

IF YOU CANNOT FIND A SOLUTION...

If you cannot find a solution to the problem yourself, contact your dealer or an Authorised Service Centre. Give the data from the rating plate. Give also three digit letter code for the glass ceramic (it is in the corner of the glass surface) and an error message that comes on. Make sure, you operated the hob correctly. If not the servicing by a service technician or dealer will not be free of charge, also during the warranty period. The instructions about the Service Centre and conditions of guarantee are in the guarantee booklet.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.