


GOTRAX

WG1

CHILDREN'S ELECTRONIC TOY SCOOTER

USER MANUAL

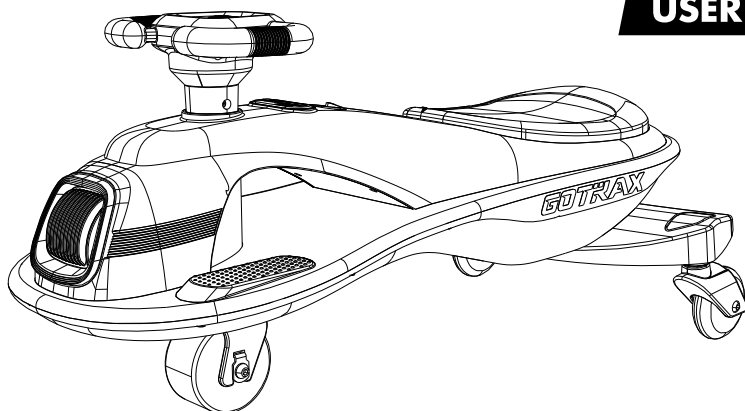

WARNING:

Must be assembled by an adult.

- Suitable for 3+ Years
- Maximum user weight: 132 lbs

OWNERS MANUAL

with Assembly Instructions

Read and understand this entire manual before using!

Please keep this manual for future reference as it contains important information. Before first time use, charge the battery for at least 4-6 hours, but no more than 10 hours.

On the purchase of your new Ride-On.

This ride-on car will provide your child with many miles of riding of enjoyment. To help assure you and your rider a safe ride we ask you to please read this manual carefully, and keep it for future reference.

Follow the recommendations in this manual, they are designed to improve the safety and operation of your ride-on car and its rider.

Specification

Model	WG1
Battery	12V4.5AH
Charger	12V 0.8A
input	100-240V 50/60Hz
Motor	12V - Brushless motor
FCC ID	2AWFV-WG1

- Suitable age: 3+ Years
- Charge time: 6-7 hours
- Load capacity: 132 lbs
- Size of car: 31.1*13.58*8.85 in
- Maximum speed: 2.5 mph

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help. the power switch and disconnect the battery connection.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment".

Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement.



WARNING:



- **CHOKING HAZARD!** Not suitable for children under 36 months.
- Must be assembled by an adult.
- To reduce the risk of injury, adult supervision is required.
- Never use in roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than 1 rider.
- Power supply or battery charger used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
- Use only battery(ies) and charger specified by the manufacturer.
- The battery on the vehicle is not replaceable.
- This toy should be used with caution since skill is required to avoid falls or collisions causing injury to the user or third parties.
- Protective equipment should be worn.
- Always wear shoes, always sit on the seat.
- Not to be used in traffic.
- This toy is unsuitable for children under 36 months due to its maximum speed; Maximum user weight is 60 kg.
- This toy has no brake.
- Always wear protective equipment such as helmet, gloves, elbow and knee pads, also long sleeved shirts and long trousers help protect skin.

Rules for Safe Riding

- Keep Children within Safe Riding Areas.
- Use the toy only on flat surfaces. Such as inside your house, garden or playground.
- Never use in the dark. A child could encounter unexpected obstacles and have an accident. Operate the vehicle only in the daytime or a well-lit area.
- It is prohibited to change the circuit or add other electric parts
- Inspect wires and connections of the vehicle periodically.
- Do not let any child touch the wheels or be near them when the car is moving.
- All circuit connections in the toy must be connected properly. Any wrong circuit connections could cause possible dangerous malfunctions, short circuit, sudden equipment failure and other possible failures


- 1** Vehicle body
x1




- 2** Seat
x1




- 3** Rear wheel
x1

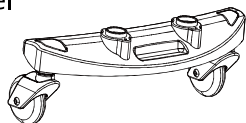


- 4** Front wheel
x1



- 5** Steering wheel
x1




- 6** M5x35 machine screw
x1



- 7** M5 lock nut
x1



- 8** #4x20 screw
x6





- 9** Charger
x1



- 10** Assembling tool:
Screwdriver*1




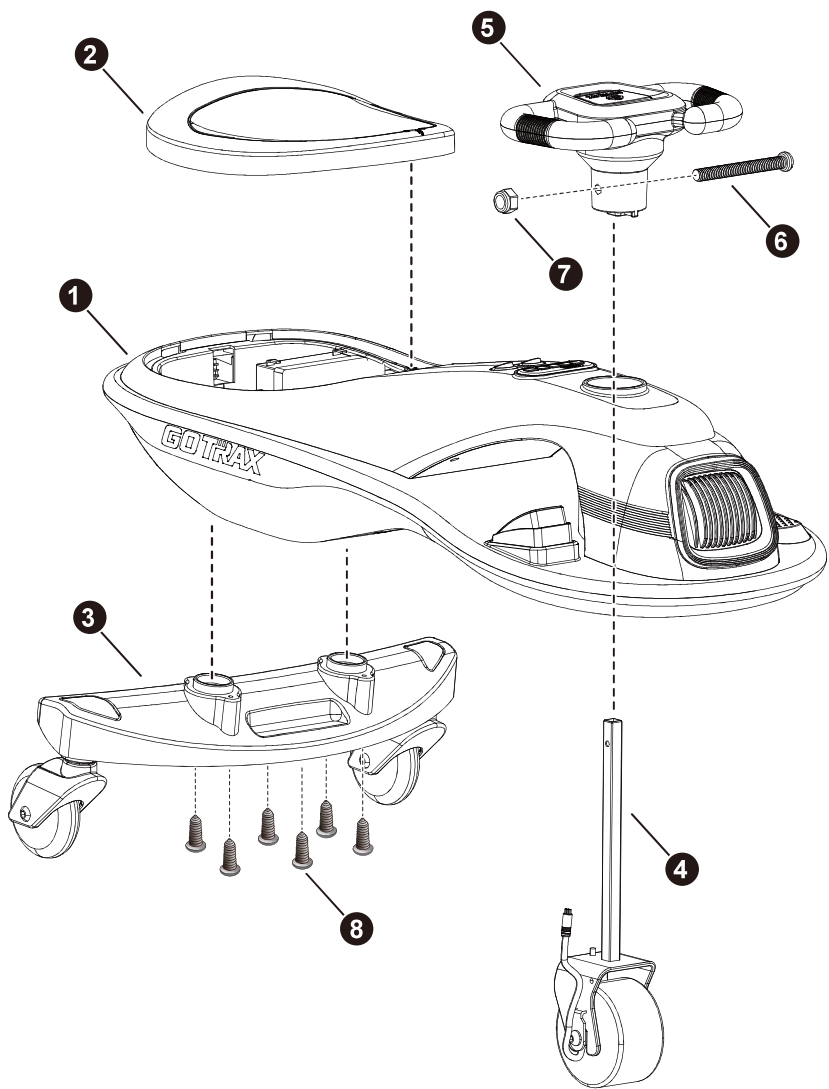

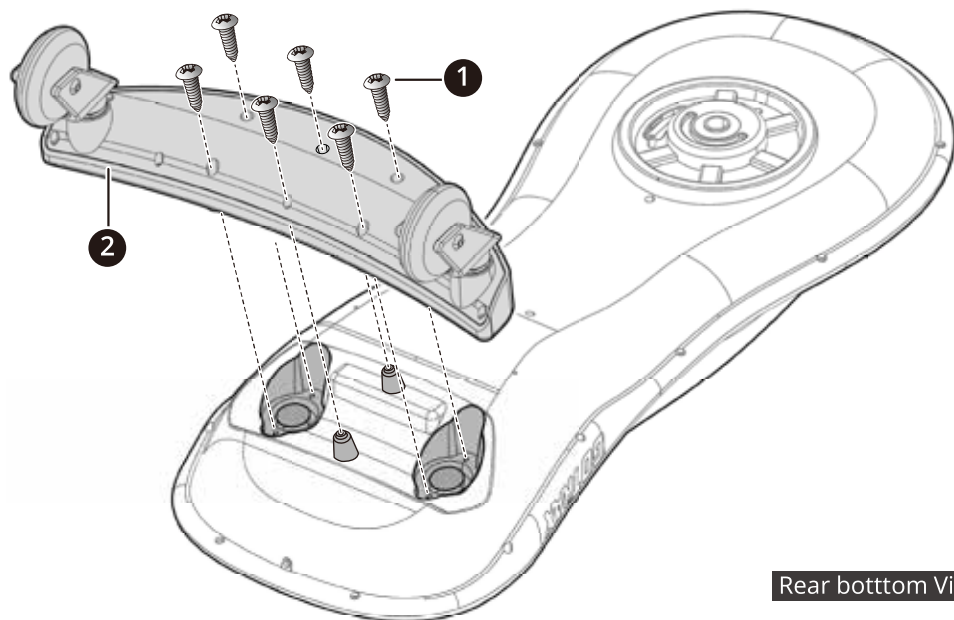


Rear bottom View

1. Turn the vehicle body upside up. Fit the rear wheel assembly to the vehicle body.
2. Insert six #4x20 screws and tighten with a screwdriver.

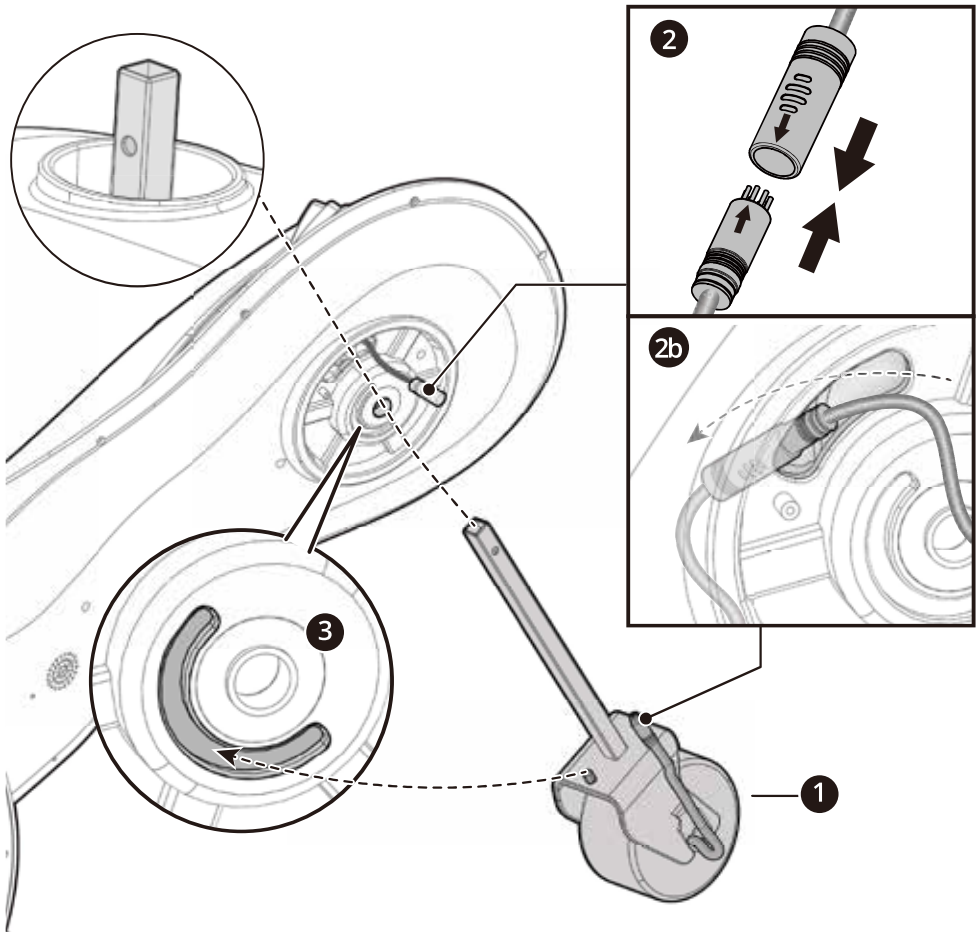


1. Turn the vehicle body upright. Lift up the vehicle head, insert the tube on the front wheel into the hole on the front side of the body.
2. Make sure the arrows on both connectors are on the same side and aligned, and then plug the connectors tightly. **If the arrows are not aligned, the product will lose power and be damaged.** Then hide the plugged connectors into the hole in the body as fig 2b.
3. Continue pushing the front wheel so that the stopper on the front wheel fit into the stop grooves on the body, ensure the tube on the front wheel out through the hole in the dash.

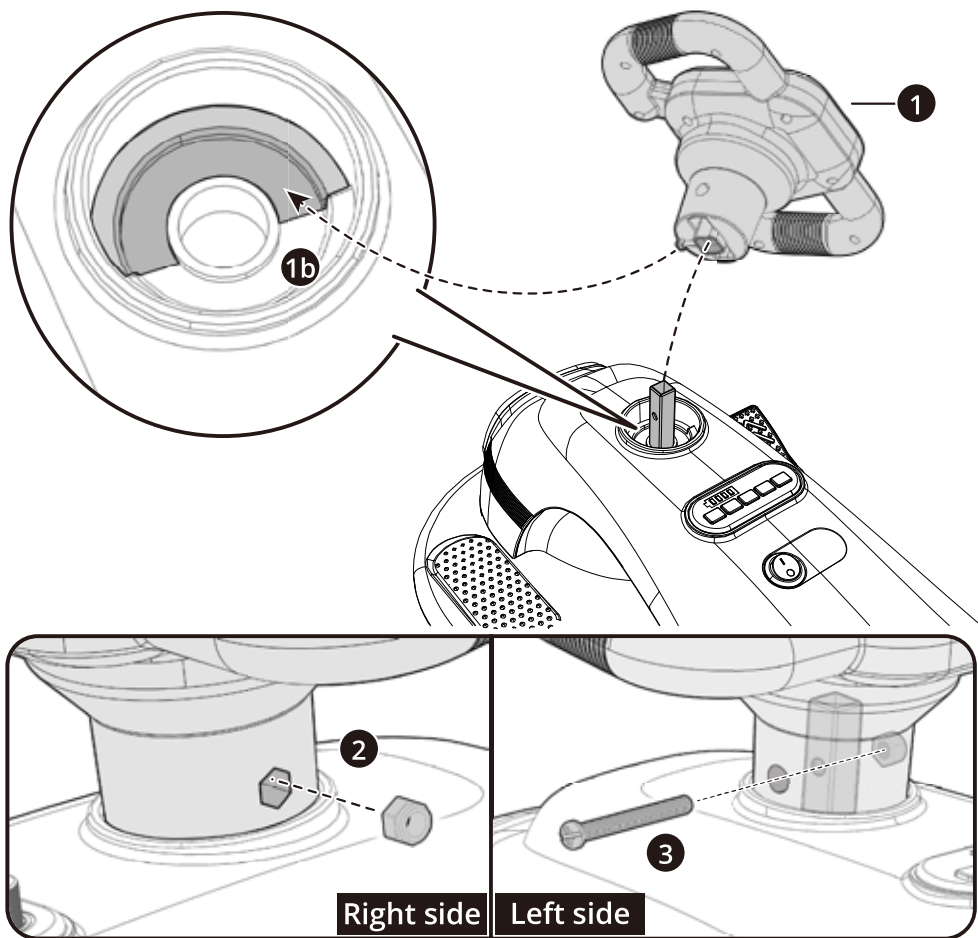


1. Fit the steering wheel to the end of the steering column. Make sure the stopper on the steering wheel fit into the stop grooves on the body.
2. Insert the M5 lock nut into the slot at right side of the steering wheel.

Line up the holes in the steering wheel with the holes in the steering column, insert the M5x35 machine screw and tighten with a screwdriver.

- 3.

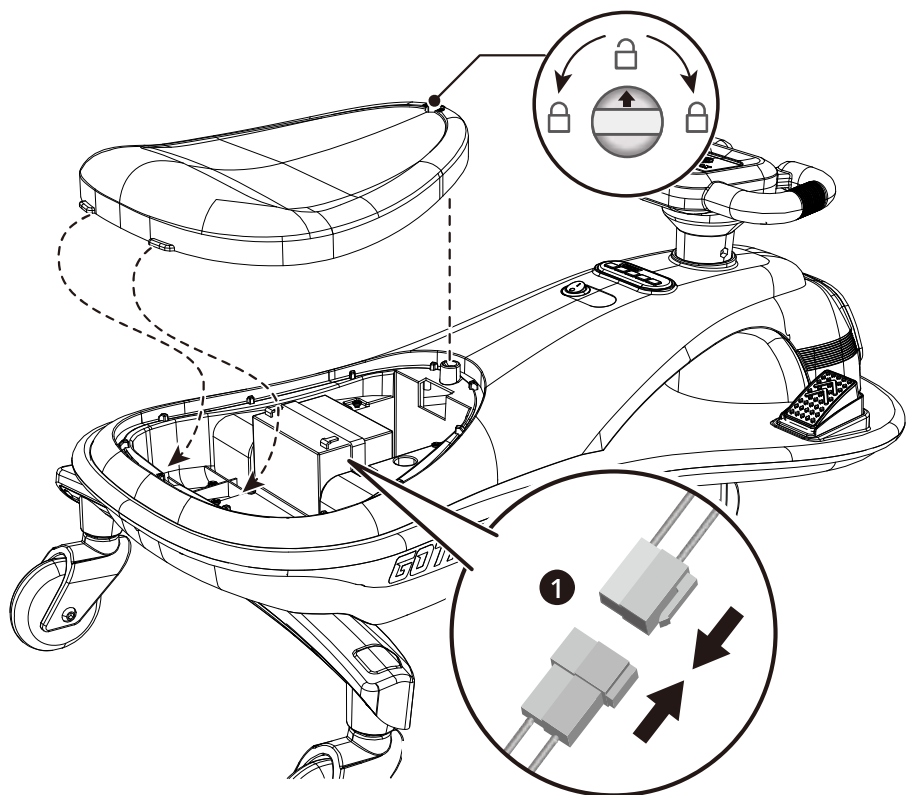

1. Plug the red connector on the vehicle body into the red connector on the battery.
2. Fit the seat cushion to the body. Using a slotted screwdriver or coin to turn the both seat locks to the lock position.

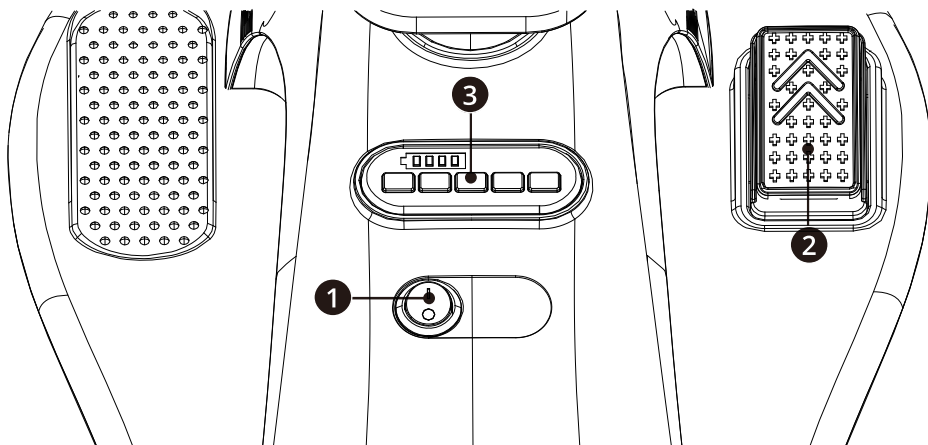


1. Power switch: Turn the product on and off.

2. Accelerator pedal:

- To move the product, press the pedal down.
- To brake or slow down, release pressure from the pedal.

3. Player:

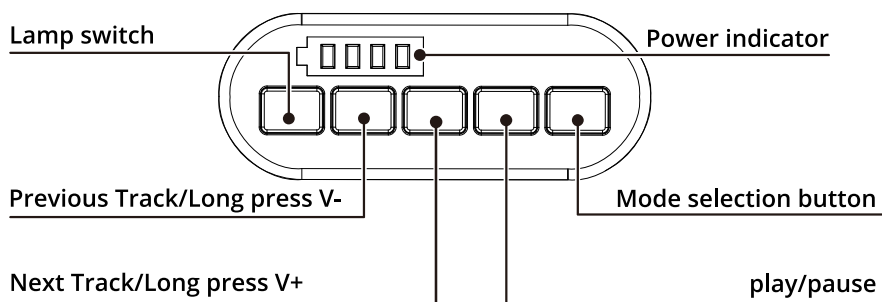

Wireless connection mode allows you to connect your phone via Bluetooth to play music from your phone.

Power indicator: There are four indicator lights showing the battery status. The green light means the battery is fully charged, the orange light means the battery is at 50%, and the red light means the battery is low and needs to be charged.



WARNING!


ONLY AN ADULT CAN CHARGE AND RECHARGE THE BATTERY!



WARNING!

This product with **Charging Protection**: when charging, all functions will be cut off! Only an adult can charge and recharge the battery!

- The POWER SWITCH must be turned in OFF position when charging.
- Before the first use, you should charge the battery for 4-6 hours. Do not recharge the battery for more than 10 hours to avoid overheating the charger.
- When the vehicle begins to run slowly, recharge the battery.
- After each use or once a month minimum recharge time as 6 to 7 hours, less than 10 hours at most.
- Use the only rechargeable battery and charger supplied with your vehicle. NEVER substitute the battery or the charger with another brand. Using another battery or charger may cause a fire or explosion.
- Do not use the battery or charger for any other product.

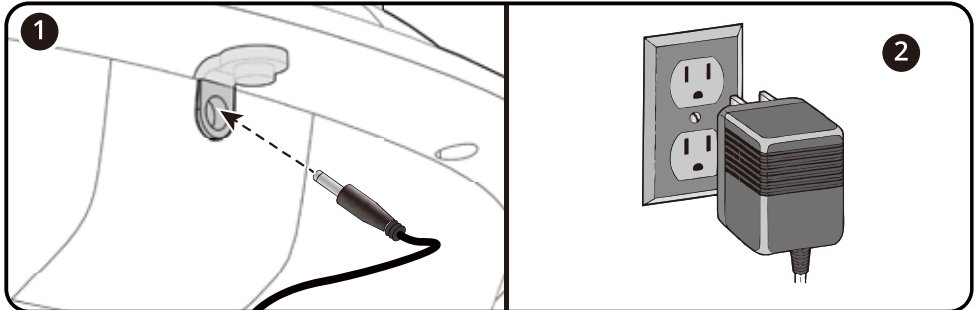

The input socket is located at the rear of the body.

1. Open the charging cover. Plug the charger port into the input socket.
2. Plug the charger plug into a wall outlet. The battery will begin charging.

Problem	Possible Cause	Solution
Vehicle does not run	Battery low on power	Recharge battery.
	Thermal fuse has tripped	Reset fuse, see <Fuse>
	Battery connector or wires are loose	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor contact your distributor please.
	Battery is dead	Replace battery, contact your distributor please.
	Electrical system is damaged	Contact your distributor please.
	Motor is damaged	Contact your distributor please.
Vehicle does not run very long	Battery is under charged	Check that the battery connectors are firmly plugged into each other when recharging
	Battery is old	Replace battery, contact your distributor please.
Vehicle runs sluggishly	Battery low on power	Recharge battery, contact your distributor please.
	Battery is old	Replace battery, contact your distributor please.
	Vehicle is overload	Reduce weight on vehicle.
	Vehicle is being used in harsh conditions	Avoid using vehicle in harsh conditions , see <Safety>.
Vehicle needs a push to go forward	Poor contact of wires or Connectors	Check that the battery connectors are firmly plugged into each other. If wires are loose around the motor, contact your distributor please.
	“Dead Spot” on motor	A dead spot means the electric power is not being delivered to the terminal connection and the vehicle needs repair.Contact your distributor please.
Loud grinding or clicking noises coming from motor	Motor damaged	Contact your distributor please.
Battery will not recharge	Battery connector or adapter connector is loose	Check that the battery connectors are firmly plugged into each other.
	Charger not plugged in	Check that the battery charger is plugged into a working wall outlet.
	Charger is not working	Contact your distributor please.
Charger feels warm when recharging	This is normal and not a cause for concern	

Completely read through this manual and the troubleshooting guide table before calling. If you still need help resolving the problem Contact your distributor please.

- It is parents' responsibility to check main parts of the toy before using, must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.
- Make sure the plastic parts of the vehicle are not cracked or broken.
- Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle Raider is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the motor, electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage the moving parts, motors or the electric system.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

The battery features a thermal fuse with a reset fuse that will automatically trip and cut all power to the vehicle if the motor, electric system or battery is overloaded. The fuse will reset and power will be restored after the unit is turned OFF for 20 seconds and then turned ON again. If the thermal fuse trips repeatedly during normal use, the vehicle may need repair. Contact your distributor please.

To avoid losing power, follow these guidelines:

- Do not overload the vehicle.
- Do not tow anything behind the vehicle.
- Do not drive up steep slopes.
- Do not drive into fixed objects, which may cause the wheels to spin, causing the motor to overheat.
- Do not drive in very hot weather, components may overheat.
- Do not allow water or other liquids to come in contact with the battery or other electric components.
- Do not tamper with the electric system. Doing so may create a short, causing the fuse to trip.

Our products are suitable for ASTM F963; GB6675; EN71 and EN62115 standard.

Disposal Of Battery



- Your sealed lead-acid battery must be recycled or disposed of in an environmentally sound manner.
- Do not dispose of your lead-acid battery in a fire. The battery may explode or leak.
- Do not dispose of a lead-acid battery in your regular, household trash. The incineration, land filling or mixing of sealed lead-acid batteries with household trash is prohibited by law.

Please contact our customer service team if you are experiencing problems or need more detailed information.

US team after-sales email: **amazon@gotrax.com**

CA team after-sales email: **canadasupport@gotrax.com**



(US)W W W .G O T R A X .C O M

(CA)WWW.GOTRAXCANADA.COM

#RideGOTRAX





(US) GOLABS, INC

GOTRAX.com
2201 Luna Rd.
Carrollton, TX 75006

(CA) Tao Motor Canada Inc.

170 Bartor Road, Unit 1 North York,
Ontario M9M 2W6,
Canada.