



Farnav Nbase GNSS USER GUIDE



Survey & Construction | Feb 2026

Far Range, Affordable

Table of Content

Preface	1
Copyright	1
Copyright	1
Trademarks	1
Safety Warnings	1
FCC Statement	1
CE Interference Statement	2
Brazil	3
Conformity to Japanese regulations	3
1 Introduction	4
1.1 Safety Information	4
1.2 Regulations and Safety	4
1.3 Technical Support	5
1.4 Disclaimer	5
1.5 Your Comments	5
2 Getting Started with Nbase	6
2.1 About the Receiver	6
2.2 Parts of the Receiver	6
2.2.1 Front Panel	6
2.2.2 Lower housing and ports	8
2.3 Batteries and Power	9
2.3.1 Internal Batteries	9
2.3.2 Charging the Battery	9
2.3.3 Battery Safe	9
2.4 Inserting Battery and SIM Card	10
2.4.1 Inserting battery	10
2.4.2 Inserting SIM card	11
2.5 Product Basic Supply Accessories	12
2.6 Connecting to a Controller	13
2.6.1 Connecting via Wi-Fi with eField Software	13
2.6.2 Connecting via Bluetooth with eField Software	13
2.7 Downloading Logged Data	14
2.7.1 FTP Download	14
3 Front Panel Operation	17
3.1 Main Operation Menus	17
3.2 Configure the Working Mode	19
4 Equipment Setup and Operation	23
4.1 Post-processing Base Station Setup	23
4.2 Real-Time Base Station	24
4.2.1 Real-Time Base Station Setup	25
4.2.2 Ultra Base	25

4.3 Real-Time Rover Station	27
4.3.1 Real-Time Rover Station Setup	27
4.3.2 Ultra Rover	28
5 Configuring Through a Web Browser	29
5.1 Status Menu	30
5.1.1 Position Submenu	31
5.1.2 Activity Submenu	31
5.1.3 Google Map Submenu	32
5.2 Satellites Menu	32
5.2.1 Tracking Table Submenu	33
5.2.2 Tracking Info. Table Submenu	33
5.2.3 Tracking Skyplot Submenu	34
5.2.4 Satellite Activation Submenu	34
5.2.5 Tracking Enable Submenu	35
5.3 Receiver Configuration Menu	35
5.3.1 Description	36
5.3.2 Antenna Configuration Submenu	36
5.3.3 Reference Station Settings Submenu	37
5.3.4 Receiver Reset Submenu	38
5.3.5 Languages Submenu	39
5.3.6 User Management Submenu	39
5.3.7 HCPPP Settings	39
5.4 Data Recording Menu	39
5.4.1 Log Settings Submenu	40
5.4.2 FTP Push Settings Submenu	42
5.4.3 FTP Push Log Submenu	42
5.5 IO Settings Menu	43
5.5.1 IO Settings Submenu	43
5.6 Network Setting Menu	49
5.6.1 Description Submenu	50
5.6.2 Mobile Network Setting Submenu	50
5.6.3 Email Alarm Submenu	51
5.6.4 HTTP Submenu	51
5.6.5 HTTPS Submenu	52
5.6.6 FTP Service Submenu	52
5.7 Module Setting Menu	52
5.7.1 Description Submenu	53
5.7.2 WiFi Submenu	53
5.7.3 Bluetooth Settings Submenu	53
5.7.4 Radio Settings Submenu	54
5.7.5 IMU Settings Submenu	54
5.8 Firmware Menu	54

- 5.8.1 Firmware Info Submenu 55
- 5.8.2 Hardware Version Submenu 55
- 5.8.3 Config File Submenu 55
- 5.8.4 System Log Download Submenu 56
- 5.8.5 User Log Submenu 56
- 5.8.6 Firmware Update Submenu 56
- 5.8.7 GNSS Board Upgrade Submenu 57
- 5.8.8 GNSS Registration Submenu 58

Preface

Copyright

Copyright

© Farnav | EFIX Geomatics Co., Ltd. All rights reserved. The Farnav is trademark of EFIX Geomatics Co., Ltd. All other trademarks are the property of their respective owners. Revision February 2026.

Trademarks

All product and brand names mentioned in this publication are trademarks of their respective holders.

Safety Warnings

The Global Navigation Satellite System (GNSS) comprises several distinct satellite constellations, each of which is under the jurisdiction of a specific government entity. These entities bear the sole responsibility for ensuring the accuracy of their respective systems and for maintaining the integrity of their satellite networks.

Do not rely solely on the device for critical navigation decisions. The GNSS signals may be affected by atmospheric conditions, satellite availability, signal blockage, etc.

Be aware of the limitations of GNSS accuracy. It provides positioning information with a certain level of accuracy, but errors (including manual error) and deviations can occur.

Avoid prolonged exposure to strong magnetic fields, as they may interfere with the operation of the device and affect its accuracy.

Do not dismantle or modify the device. Any unauthorized modification may result in malfunction or damage and void the warranty.

Follow all instructions provided in the user manual for proper handling, charging, and maintenance.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to

provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance 60cm between the radiator and your body: Use only the supplied antenna.

CE Interference Statement

Declaration of Conformity: Hereby, EFIX Geomatics Co., LTD. declares that this F6 is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. A copy of the Declaration of conformity can be found at EFIX Geomatics Co., LTD.



Brazil

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados. Para maiores informações, consulte o site da ANATEL-www.anatel.gov.br.

Conformity to Japanese regulations

Japanese Radio Law and Japanese Telecommunications Business Law Compliance.

- This device is granted pursuant to the Japanese Radio Law and the Japanese Telecommunications Business Law.
- This device should not be modified (otherwise the granted designation number will become invalid).

1 Introduction

The Nbase GNSS receiver removes barriers to portability without sacrificing performance. Featuring full GNSS technology, it offers best-in-class GNSS signal tracking even in a harsh environment, enabling GNSS surveying beyond usual constraints. The Nbase GNSS incorporates the latest innovations such as an inertial module (IMU) providing automatic pole-tilt compensation in a very compact design.

1.1 Safety Information

Warnings and Cautions

An absence of specific alerts does not mean that there are no safety risks involved.

A Warning or Caution information is intended to minimize the risk of personal injury and/or damage to the equipment.



WARNING - A Warning alerts you to a potential misused or wrong setting of the equipment.



CAUTION - A Caution alerts you to a possible risk of serious injury to your person and/or damage to the equipment.

1.2 Regulations and Safety

The receivers contain a built-in wireless modem for signal communication through Bluetooth wireless technology or through external communication datalink. Regulations regarding the use of the wireless modem vary greatly from country to country. In some countries, the unit can be used without obtaining an end-user license. However, in some countries, the administrative permissions are required. For license information, consult your local dealer. Bluetooth operates in license-free bands.

Before operating a Nbase GNSS receiver, determine if authorization or a license to operate the unit is required in your country. It is the responsibility of the end-user to obtain an operator's permit or license for the receiver for the location or country of use.

Use and Care

This receiver is designed to withstand the rough environment that typically occurs in the field. However, the receiver is high-precision electronic equipment and should be treated with reasonable care.



CAUTION - Operating or storing the receiver outside the specified temperature range will cause irreversible damage.

1.3 Technical Support

If you have a problem and cannot find the information you need in this manual or EFIX website (www.efix-geo.com), contact your local EFIX dealer from which you purchased the receiver(s).

If you need to contact EFIX technical support, please contact us by email (support@efix-geo.com).

1.4 Disclaimer

Before using the receiver, please make sure that you have read and understood this User Guide, as well as the safety information. EFIX holds no responsibility for the wrong operation by users and for the losses incurred by the wrong understanding about this User Guide. However, EFIX reserves the rights to update and optimize the contents in this guide regularly. Please contact your local EFIX dealer for new information.

1.5 Your Comments

Your feedback about this user guide will help us to improve it in future revision. Please email your comments to support@efix-geo.com.

2 Getting Started with Nbase

2.1 About the Receiver

The Nbase GNSS receiver is a professional GNSS base station. The working performance is close to GNSS receiver with external radio, but user no need to carry heavy external battery, external radio, and radio antenna. 5W internal radio ensures that the end user can reach 8km work range. It supports the radio interference checking technology, judge the radio signal real time, make sure user can select the most suitable channel to use.

The LCD panel enables user to check satellite-tracking status, internal battery status, Wi-Fi status, working mode, data logging status and basic receiver information. Bluetooth and Wi-Fi technology provides cable-free communication between the receiver and controller.

The receiver can be used as the part of an RTK GNSS system with eField software.


To configure the receiver for performing a wide variety of functions, you can use the web interface by connecting the receiver with PC or smartphone through Wi-Fi.

2.2 Parts of the Receiver

The operating controls are all located on the front panel. Battery compartment and SIM card slot are on the bottom. Serial port is located on the bottom of the unit. The radio antenna port is located on the top of the unit.


2.2.1 Front Panel

The following figure shows a front view of the receiver.

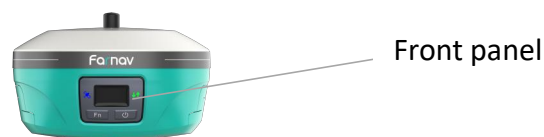


The front panel contains two indicator LEDs and 2 buttons.

Correction LED

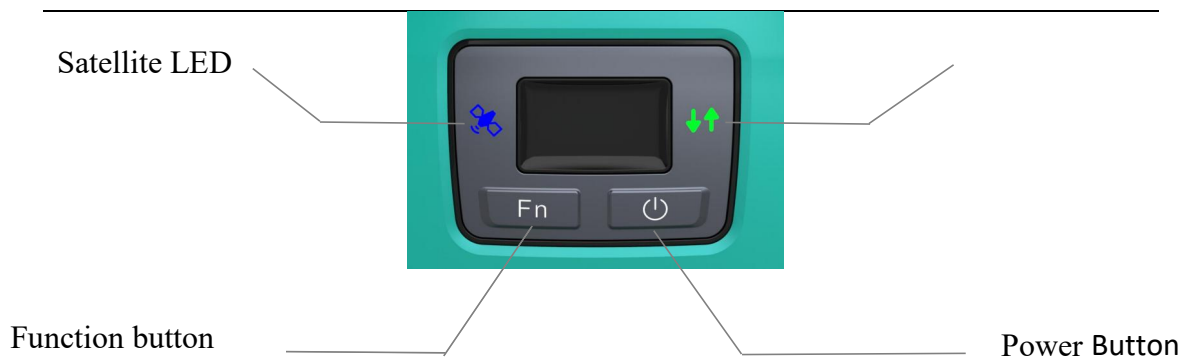


Name	Description
Correction LED (Orange/Green)	Indicates whether the receiver is transmitting differential data. The green LED flashes once per second when As a Base station: successfully transmitting differential data. As a Rover station: successfully receiving differential data from Base station.
Satellite LED (Blue)	Shows the number of satellites that the receiver has tracked. When the receiver is searching satellites, the blue LED flashes once every 5 seconds. When the receiver has tracked N satellites, the blue LED will flash N times every 5 seconds.
Fn button	Move to next line of the menus or options. Move to next character of the value that you want to make change. Cancel the change you make on a function.
Power button	Works as a Power button Press and hold this button for 3 seconds to turn on or turn off the receiver. Works as a Confirm button Hold Fn button and press this button for 5 times continuously to reset the mainboard.

2.2.2 Lower housing and ports

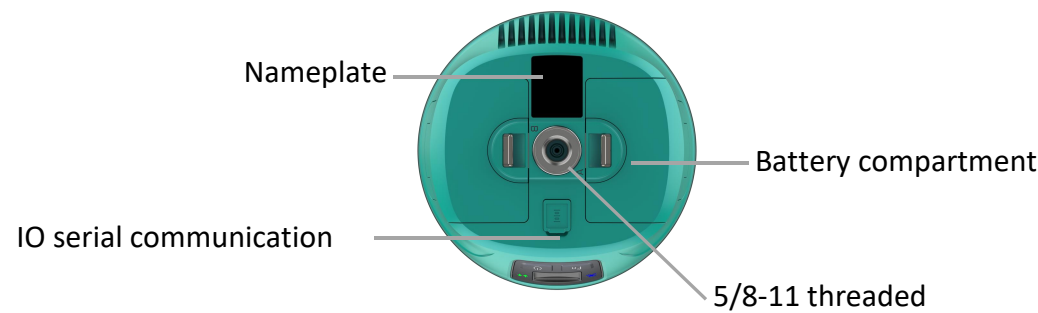

The lower housing contains one SIM card slot, two battery compartments, one communication and power port, one 5/8-11 threaded insert, and one nameplate.

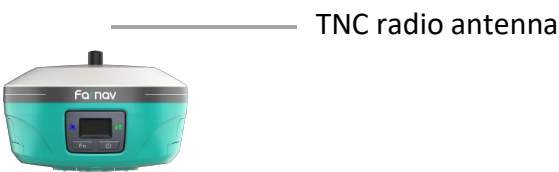

Port	Name	Description
	IO port	• This port is a 7-pin LEMO connector that supports RS-232 communications. • Users can use a 7-pin cable to transmit differential data to an external radio.
	Radio antenna connector	• Connect a radio antenna to internal radio of the receiver. And this connector is not used if you are using an external radio.



2.3 Batteries and Power

2.3.1 Internal Batteries

The receiver has two rechargeable Lithium-ion batteries, which can be removed for charging.



2.3.2 Charging the Battery

The rechargeable Lithium-ion battery is supplied partially charged. Charge the battery completely before using it for the first time. To charge the battery, first remove the battery from the receiver, and then place it in the battery charger which is connected to AC power.



WARNING – Charge and use the rechargeable Lithium-ion battery only in strict accordance with the instructions. Charging or using the battery in unauthorized equipment can cause an explosion or fire and can result in personal injury and/or equipment damage.

To prevent injury or damage:

- Do not charge or use the battery if it appears to be damaged or leaking.
- Charge the Lithium-ion battery only in a EFIX product that is specified to charge it. Be sure to follow all instructions that are provided with the battery charger.
- Discontinue charging a battery that gives off extreme heat or a burning odor.
- Use the battery only in EFIX equipment that is specified to use it.
- Use the battery only for its intended use and according to the instructions in the product documentation.

2.3.3 Battery Safe



WARNING – Do not damage the rechargeable Lithium-ion battery. A

damaged battery can cause an explosion or fire and can result in personal injury and/or property damage.

To prevent injury or damage:

- Do not use or charge the battery if it appears to be damaged. Signs of damage include, but are not limited to discoloration, warping, and leaking battery fluid.
- Do not expose the battery to fire, high temperature, or direct sunlight.
- Do not immerse the battery in water.
- Do not use or store the battery inside a vehicle under hot weather condition.
- Do not drop or puncture the battery.
- Do not open the battery or short-circuit its contacts.



WARNING – Avoid contact with the rechargeable Lithium-ion battery if it appears to be leaking. Battery fluid is corrosive and contact with it can result in personal injury and/or property damage.


To prevent injury or damage:

- If the battery leaks, avoid with the battery fluid.
- If battery fluid gets into your eyes, immediately rinses your eyes with clean water and seek medical attention. Please do not rub your eyes!
- If battery fluid gets onto your skin or clothing, immediately use clean water to wash off the battery fluid.

2.4 Inserting Battery and SIM Card

2.4.1 Inserting battery

- (a) Push down the spring-loaded button on the battery cover to open the cover.
- (b) Put the battery into the Nbase slot, lock the battery as the picture shows like below.

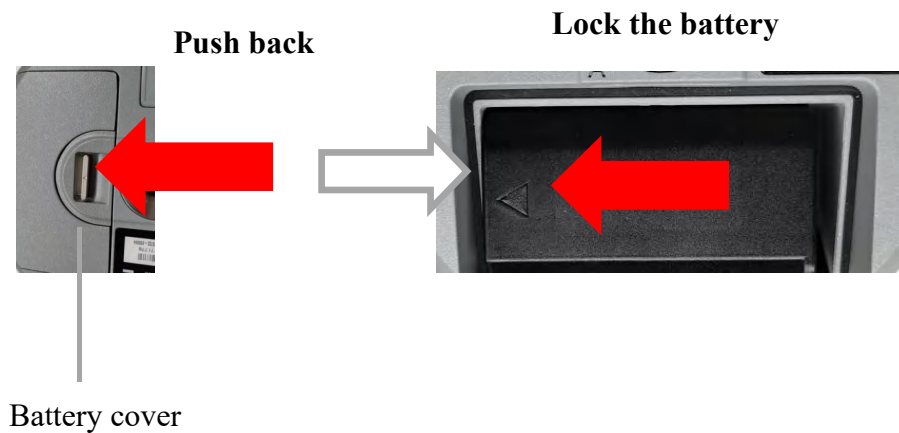

- (c) Close the battery cover to prevent water immersion.
- (d) To remove the battery, unlock the battery from the slot first.

2.4.2 Inserting SIM card

- (a) Push down the spring-loaded button on the battery cover to open the cover.
- (b) Insert the SIM card with the contacts facing downward, as indicated by the SIM card icon on the battery slot.




- (c) Close the battery cover to prevent water immersion.
- (d) To eject the SIM card, slightly push it in to trigger the spring-loaded release mechanism

Insert the SIM card with the contacts facing upward, as indicated by the SIM card icon next to the SIM card slot.

To eject the SIM card, slightly push it in to trigger the spring-loaded release mechanism.

Tip – The SIM card is provided by your cellular network service provider.

2.5 Product Basic Supply Accessories


Item	Picture
Nbase GNSS Receiver	
UHF Bar Antenna (410-470 MHz)	
Lithium Battery	
H.I. Tape	
Extension pole	
C300 Pedestal charger	
C300 Power Adapter with Cord	
Tribrach adaptor	
Tribrach with optical plummet	
Auxiliary H.I. Tool	
Transport Hard Case	

2.6 Connecting to a Controller


2.6.1 Connecting via Wi-Fi with eField Software

Turn on the controller → run eField → tap **Connect**.

In the *Connect* screen, select **EFIX** for the *Brand* field, **Nbase** for *Model* field, **WIFI** for *Contact type* field.

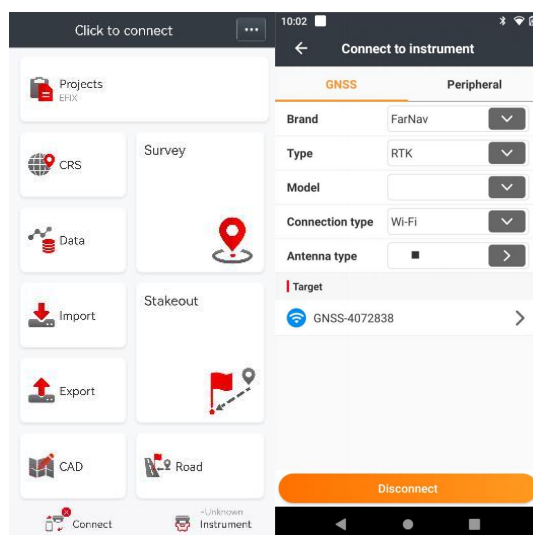

Tap the WiFi icon to select the hot spot → Switch on the WiFi module by the top switch → select the target device in the list.

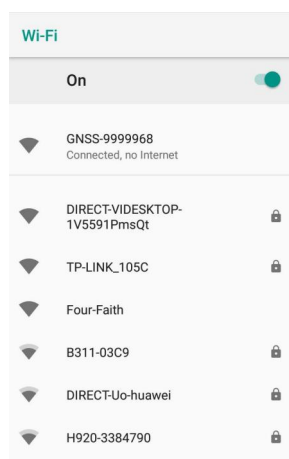


Tap the **Connect** button to build the connection.

2.6.2 Connecting via Bluetooth with eField Software

Turn on the controller → run eField → tap **Connect**.

In the *Connect* screen, select **EFIX** for the *Brand* field, **Nbase** for *Model* field, **Bluetooth** for *Contact type* field.

Tap the **Search** icon and turn on the **Bluetooth** function to search Bluetooth device around → select(pair) the target device in the list → Tap back button → select the target device in the target list.

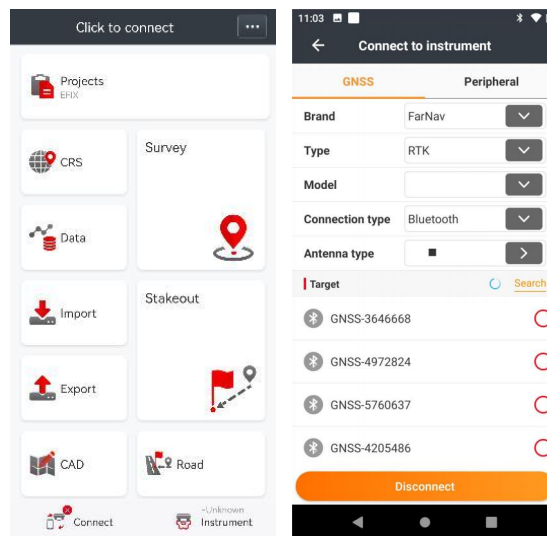

Tap the **Connect** button to build the connection.


2.7 Downloading Logged Data

Data logging involves the collection of GNSS measurement data over a period at a static point or points, and subsequent post-processing of the information to accurately compute baseline information. Data logging using receivers requires access to suitable GNSS post-processing software such as the eOffice Software.


2.7.1 FTP Download

The procedures of downloading logged data through FTP are as follows:


- (1) Switch on the receiver, search its Wi-Fi in the computer and connect.
- (2) After the successful connection, open the file manager in the computer and input “ftp://192.168.1.1” in the address box.

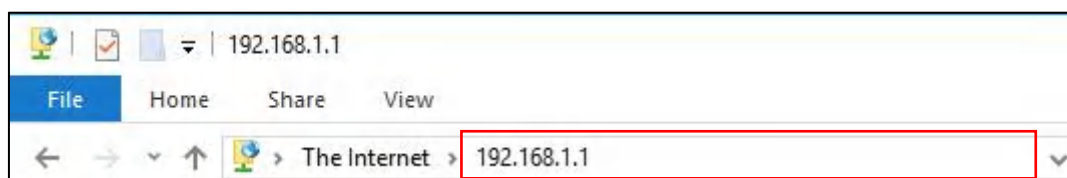

(3) Input user name and password, the default user name and password are “ftp”.

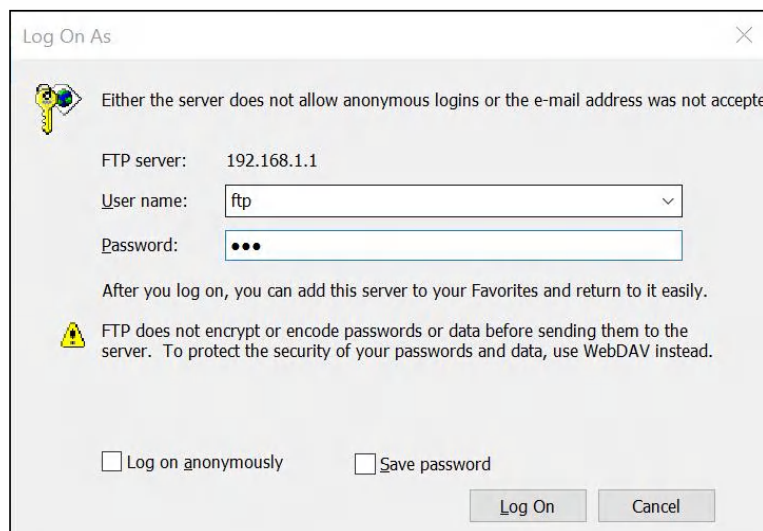

(4) Double click the folder “repo_receiver SN” (take 3225804 as example), you will see folders. The “push_log” folder is used to save the log files, and the "record_1" folders are used for store static data.

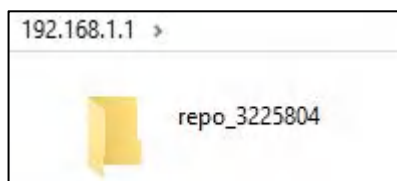


(5) Double click the folder that you have configured to store the static data, you will see the folder(s) created by the Nbase system automatically and named by the date which is decide by GPS time when you start to log data.



(6) Select the destination folder and double click it, two folders named as different data format (ECN and rinex) will be displayed.



(7) Select the data format that you configured to save the static data, you will find the static raw data.



Notes: For ecn files, the name of the file is represented as XXXXXXDDDNN, where XXXXXX is the SN of the receiver, DDD is day of year, and NN is the recording session.



WARNING – The static data will be saved in the first logging session, the “record_1” folder, by default. Old files will be deleted if the storage space is full. If you configure not to auto delete old files when the memory is low, the receiver will stop data logging.

3 Front Panel Operation

The front panel contains one LCD screen, two indicator LEDs, and two buttons. The operating controls are all located on the front panel.

3.1 Main Operation Menus

The top-level menu of the front panel includes 6 parts: Status, mode, static and info. Status shows satellites, receiver solution and the power percentage. Mode is the important part which illustrate the work mode and users can select the mode according to their needs. Static is used to set static mode. Info is the basic information of firmware such as SN, PN, etc.

The details of main operation are as follows and they are concluded two tables. The first table includes 5 parts: Info, SV, Power, Data and Set and the second table displays details of Data.

Top-level Menu	Second-level Menu	Description
Status	Satellites	Indicate the total number of satellites that have been tracked and the number of satellites tracked of each constellation, where G represents GPS, R represents GLONASS, C represents BeiDou, S represents SBAS, and E represents Galileo.
	Power	Indicates the remaining power of the battery inserted in the left (B) and right (A) battery compartment.
	WIFI ON/OFF	Press Enter to turn on or turn off WIFI
	Network status	displays the if a SIM card inserts the RTK
	Back	Press Enter to back to last page

Mode	Ultra Base Base External UHF Base Internal UHF Base APIS Base External UHF & APIS Rover APIS Rover UHF Rover NTRIP Back		• Press Enter button to enter the configuration screen of the selected working mode. • More operation information, see 3.2 Configure the Working Mode.
Static	Set on/off		Press Enter button to switch static measurement on or off.
	Recording		Display the time of recording
	Advanced	Sample	Press Enter to change sample interval (1s, 2s, 5s, 10s, 15s, 30s, 1m)
		Elev Mask degree	Press Enter button to change the mask degree from 0 degree to 90 degrees.
		Duration	• Press Enter button to enter Duration Time Setting screen. • In the Duration Time Setting screen, press Fn button to move to the character of the duration time value user want to make change, and then press Enter button to change from 0 to 9. After the change has been done, user can press Fn button to move to OK field, and then Press Enter button to save the change and back to the second-level menu; or press Fn button to move to Cancel field and press Enter button to cancel the change and back to the second-level menu.
		Measurement phase Center	Press Enter button and switch height between oblique, vertical, phase center.
		Antenna Height	Press Enter button and input the measured antenna height.

		Back	Press Enter button to back to the last menu.
	OK		Press Enter to complete settings.
	Back		Press Enter button to back to the top-level menu.
Info	SN PN Register Sleep Time Version IMEI Language Back		Describe the main information of this machine. SN displays the Serial Number of the receiver. PN displays the Part Number of the receiver. Register displays the expiry date of registration code. Press Enter to select sleep time including 5s, 10s, 30s, 1min, 30min. Version displays the firmware version. IMEI is International Mobile Equipment Identity which is used to identify the RTK. Press Enter to change languages. Press back to go back to the previous menu.

3.2 Configure the Working Mode

7 working modes are provided for quickly setting up an RTK base station or rover station. Users can configure each working mode through the front panel as follows:

Top-level Menu	Second-level Menu	Description
Ultra Base	/	Reserved for the Ultra Base mode.
Base External UHF	Mode Base External UHF	The title of this configuration screen.
	Format	Press Enter to select correction format (RTD, CMR, RTCMv2.3, RTCMv3 and RTCMv3.2).
	OK	Press Enter button to save the settings and back to the top-level menu, and then this working mode can take effect.
	Cancel	Press Enter button to cancel the settings and back to the second-level menu.
Base Internal UHF	Mode Base External UHF	The title of this configuration screen.

	Protocol	Press Enter to select current protocol (EFIX, Transparent, TT450s, Satel 3AS, EcoLink)
	Channel	Press Enter to change the channel
	Baud	Press Enter to select Baud (4800, 9600 and 19200)
	Power	Press Enter button to change the transmitting power (1w,2w,5w).
	Format	Press Enter to select correction format (RTD, CMR, RTCMv2.3, RTCMv3 and RTCMv3.2).
	OK	Press Enter button to save the settings and back to the top-level menu, and then this working mode can take effect.
	Cancel	Press Enter button to cancel the settings and back to the second-level menu.
Base APIS	Mode Base APIS	The title of this configuration screen.
	Format	Press Enter to select correction format (RTD, CMR, RTCMv2.3, RTCMv3 and RTCMv3.2).
	IP	Press Enter to enter third-level menu to select IP or press Customized IP to customize your own IP
	Port	Press Enter button to change the port from 9901 to 9920.
	OK	Press Enter button to save the settings and back to the top-level menu, and then this working mode can take effect.
	Cancel	Press Enter button to cancel the settings and back to the second-level menu.
Base External UHF & APIS	Mode Base External UHF & APIS	The title of this configuration screen.
	Way External UHF+APIS	Display the way of base station

		combination.
	Format	Press Enter to select correction format (RTD, CMR, RTCMv2.3, RTCMv3 and RTCMv3.2).
	IP	Press Enter to enter third-level menu to select IP or press Customized IP to customize your own IP
	Port	Press Enter button to change the port from 9901 to 9920.
	OK	Press Enter button to save the settings and back to the top-level menu, and then this working mode can take effect.
	Cancel	Press Enter button to cancel the settings and back to the second-level menu.
Rover APIS	Mode Rover APIS	The title of this configuration screen.
	Base ID	Press Enter to enter third-level menu to change Base ID
	IP	Press Enter to enter third-level menu to select IP or press Customized IP to customize your own IP
	Port	Press Enter button to change the port from 9901 to 9920.
	OK	Press Enter button to save the settings and back to the top-level menu, and then this working mode can take effect.
	Cancel	Press Enter button to cancel the settings and back to the second-level menu.
Rover UHF	Mode Rover UHF	The title of this configuration screen.
	Protocol	Press Enter to select current protocol (EFIX, Transparent, TT450s, Satel 3AS, EcoLink)
	Channel	Press Enter to change the channel
	Baud	Press Enter to select Baud (4800,


		9600 and 19200)
	OK	Press Enter button to save the settings and back to the top-level menu, and then this working mode can take effect.
	Cancel	Press Enter button to cancel the settings and back to the second-level menu.
Rover NTRIP	Mode Rover NTRIP	The title of this configuration screen.
	Status	Indicates the login status.
	OK	Press Enter button to save the settings and back to the top-level menu, and then this working mode can take effect.
	Cancel	Press Enter button to cancel the settings and back to the second-level menu.
Back		Press Enter button to back to the top-level menu.

4 Equipment Setup and Operation

4.1 Post-processing Base Station Setup

For good performance, the following base station setup guidelines are recommended:

Components:

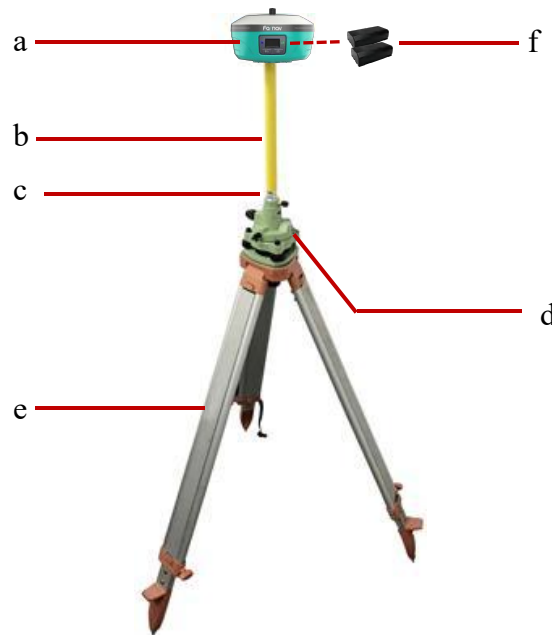

No.	Name
a	Nbase GNSS receiver
b	Extension pole (30 cm)
c	Tribrach adaptor
d	Tribrach w/ Opti
e	Aluminum tripod
f	Lithium battery

Steps:

- (1) Put tripod in the target position, center and level it roughly.
- (2) Place and lock the tribrach in the tripod.
- (3) Insert the batteries into the receiver.
- (4) Screw the receiver onto the extension pole, and connect it to Tribrach w/Opti.
- (5) Center and level the receiver more precisely.

- (6) Connect the receiver to external battery by using external power cable if necessary.
- (7) Connect the receiver to external storage disk by using USB cable if necessary.
- (8) Turn on the receiver by pressing the power button for 3s.
- (9) Measure the antenna height by using H.I. tape and auxiliary H.I. tool.
- (10) Press the function button to select Data to start recording static raw.


If work with a data controller:

- (1) Switch on the data controller and connect it to the receiver.
- (2) Use software to configure the receiver as static mode.

4.2 Real-Time Base Station

For good rover operation, the following base station setup guidelines are recommended:

Components:

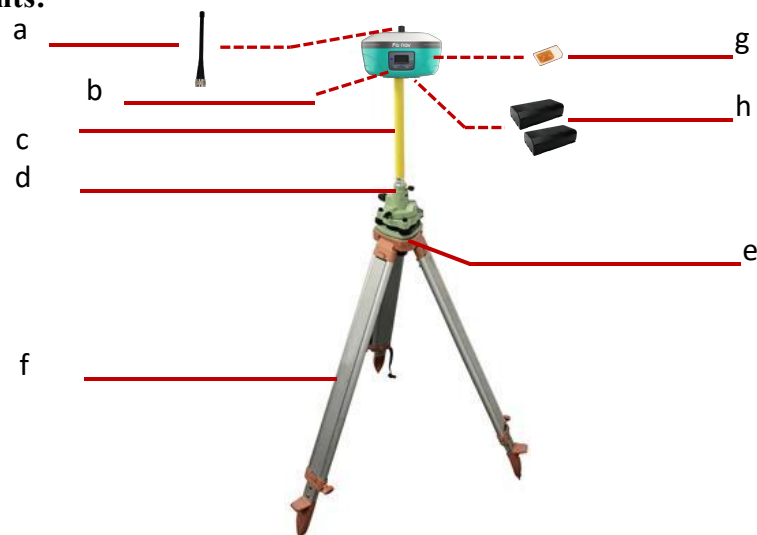

No.	Name
a	UHF whip antenna
b	Nbase GNSS receiver
c	Extension pole (30 cm)
d	Tribrach adaptor
e	Tribrach w/ Opti
f	Aluminum tripod
g	Nino SIM card (12 mm x 9 mm)
h	Lithium battery

4.2.1 Real-Time Base Station Setup

Steps:

- (1) Put tripod in the target position, center and level it roughly.
- (2) Place and lock the tribrach in the tripod.
- (3) Insert the batteries into the receiver.

If work as a cellular base station, the SIM card need to be inserted before the batteries.

- (4) Screw the receiver onto the tribrach.
- (5) Center and level the receiver more precisely.

If work as a UHF base station, the UHF whip antenna need to be connected to the receiver.

- (6) Connect the receiver to external battery by using external power cable if necessary.
- (7) Connect the receiver to external storage disk by using USB cable if necessary.
- (8) Turn on the receiver by pressing the power button for 3 s.
- (9) Measure the antenna height by using H.I. tape and auxiliary H.I. tool.
- (10) Switch on the data controller and connect it to the receiver.
- (11) Use software to configure the receiver as cellular base or UHF base mode.

4.2.2 Ultra Base

Steps:

- (1) Connect to the receiver, locate GNSS Base in the Configure interface, and select **Ultra Base**:




- (2) We can choose whether to start from a **known position**. Click the **Start** option to initialize Ultra Base.

(3) Upon the successful completion of the configuration, the operating mode of the base station can be queried and verified in the **Instrument Info** option provides access to comprehensive device details.

4.3 Real-Time Rover Station

For good performance, the following rover station setup guidelines are recommended:

Components:

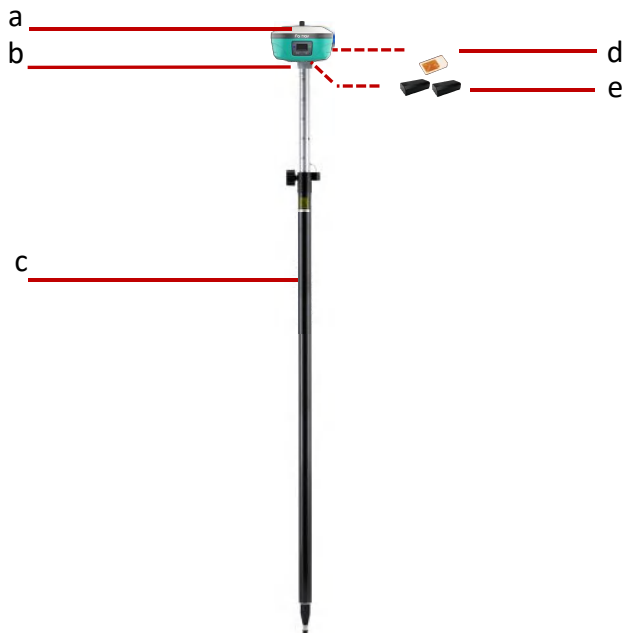

No.	Name
a	whip antenna
b	Nbase GNSS receiver
c	2M range pole w/bag
d	Micro SIM card (12 mm x 15 mm)
e	Lithium battery

4.3.1 Real-Time Rover Station Setup

Steps:

- (1) Insert the batteries into the receiver.

If work as a cellular rover station, the SIM card need to be inserted before the batteries.

- (2) Screw the receiver onto the pole.


If work as a UHF rover station, the UHF whip antenna need to be connected to the receiver.

- (3) Turn on the receiver by pressing the power button for 3 s.
- (4) Switch on the data controller and connect it to the receiver.
- (5) Use software to configure the receiver as cellular rover or UHF rover mode.
- (6) Center and level the receiver more precisely.


(7) Use software to start survey.

4.3.2 Ultra Rover

(1) Locate the GNSS Rover option in the Configure interface. In Ultra Rover, we can receive the base station signal either by selecting the Nearby Base Station or entering the Ultra Base serial number (SN).

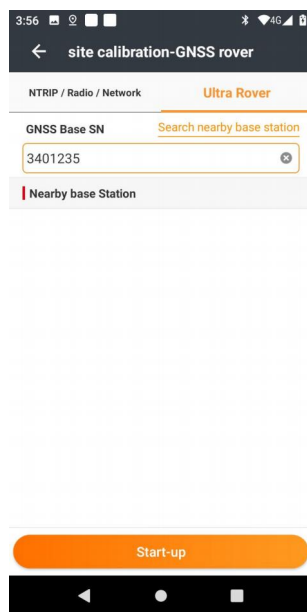

(2) After completing the Ultra Rover configuration, the **Instrument Info** option provides access to comprehensive device details, through which the active data link can be verified and confirmed.

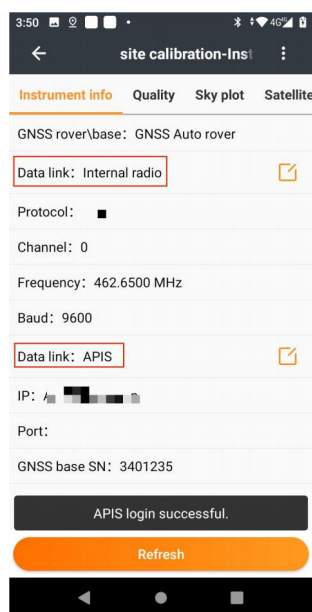


5 Configuring Through a Web Browser

Supported browsers:

- Google Chrome
- Microsoft Internet Explorer version 10, or higher

To connect to the receiver through a web browser:

1. Turn on the Wi-Fi of the receiver.
2. Search the wireless network named as GNSS-XXXXXXX (the SN of your receiver) on your computer, and then establish the connection.
3. After the successful connection between your computer and the receiver, enter the IP address (192.168.1.1) of the receiver into the address bar of the web browser on your computer:

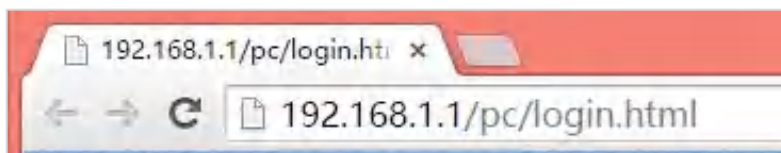

4. The web browser prompts you to enter a login account and password:




The default login account for the receiver is:

- Login Account: admin
- Password: password

Note – Tick **remember me** option, and then the browser will remember the Login Account and Password you entered.

5. Once you log in, the web page appears as follows:

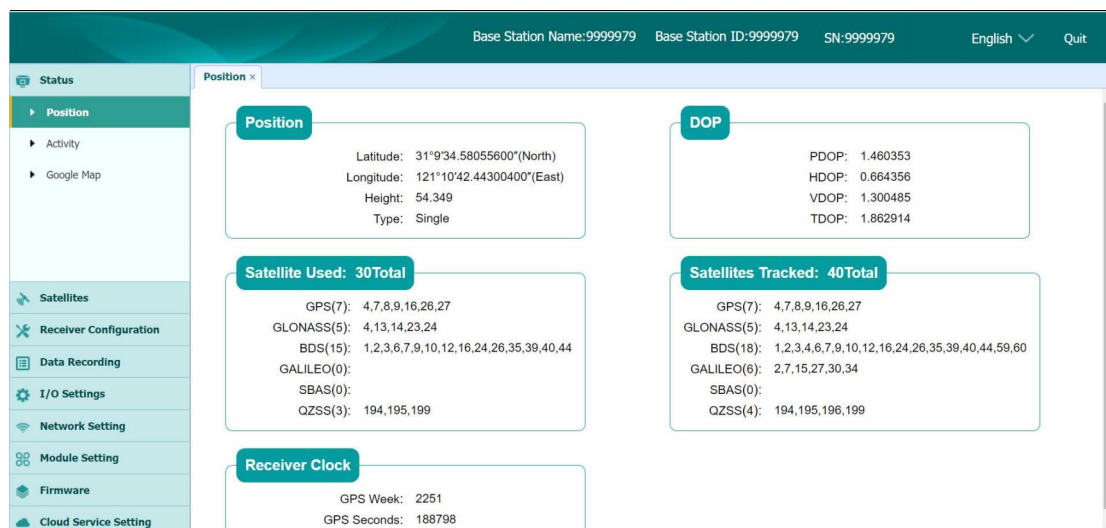


This web page shows the configuration menus on the left of the browser window, and the setting on the right. Each configuration menu contains the related Submenus to configure the receiver and monitor receiver performance.

This chapter describes each configuration menu.

To view the web page in another language, select the corresponding language name from the dropdown list on the upper right corner of the web page.

Currently, these languages are available:

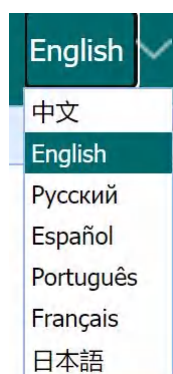


5.1 Status Menu

This menu provides a quick link to review the receiver's position information, satellites tracked, runtime, current data log status, current outputs, available memory, and more.


5.1.1 Position Submenu

This page shows the relevant position information about the receiver's position solution which including the position, DOP values, satellites used and tracked, and the receiver clock information.

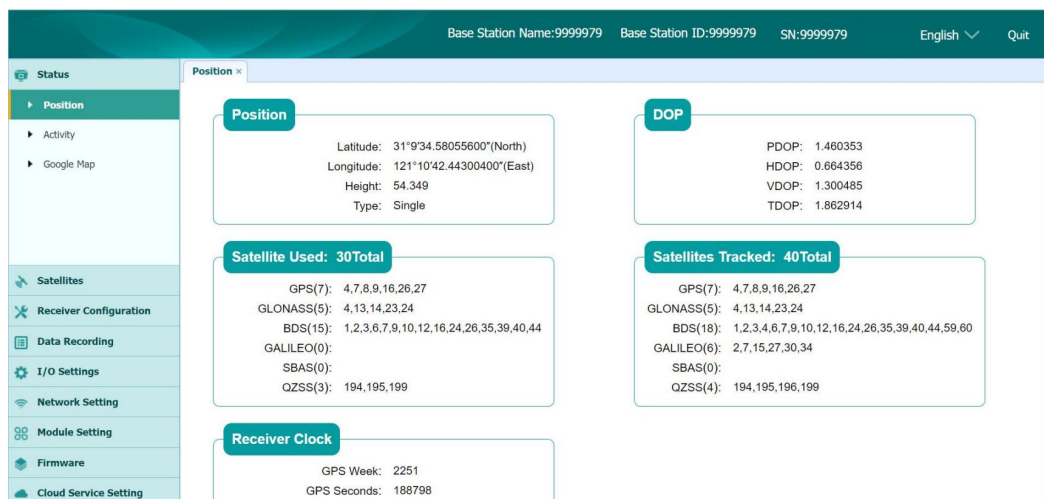


5.1.2 Activity Submenu

Lists several important items to help you understand how the receiver is being used and its current operating condition. Items include the identities of currently tracked satellites, internal and external storage usage rate, how long the receiver has been operational, state of the internal battery, power source state. With this information, it is easy to tell exactly what functions the receiver is performing:

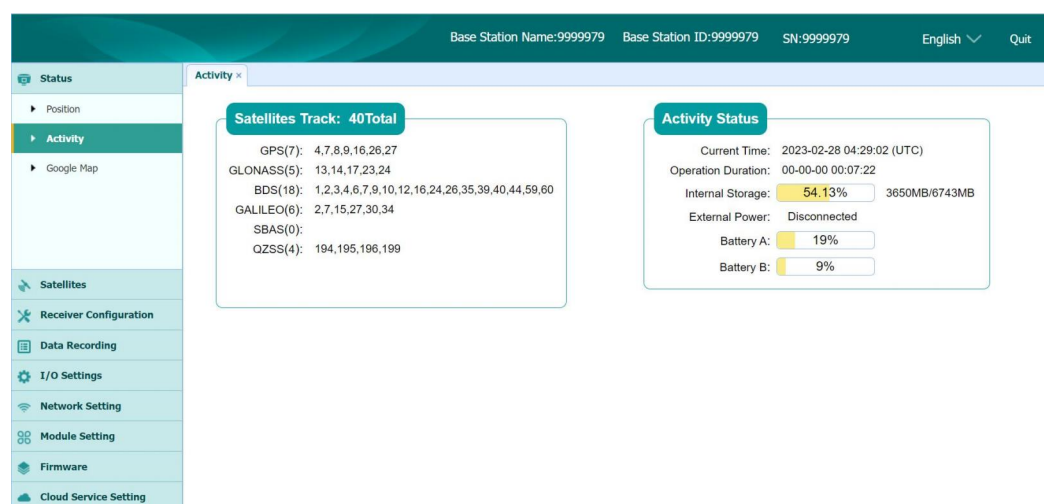


5.1.3 Google Map Submenu

Tap this submenu to show the location of the receiver on Google map.

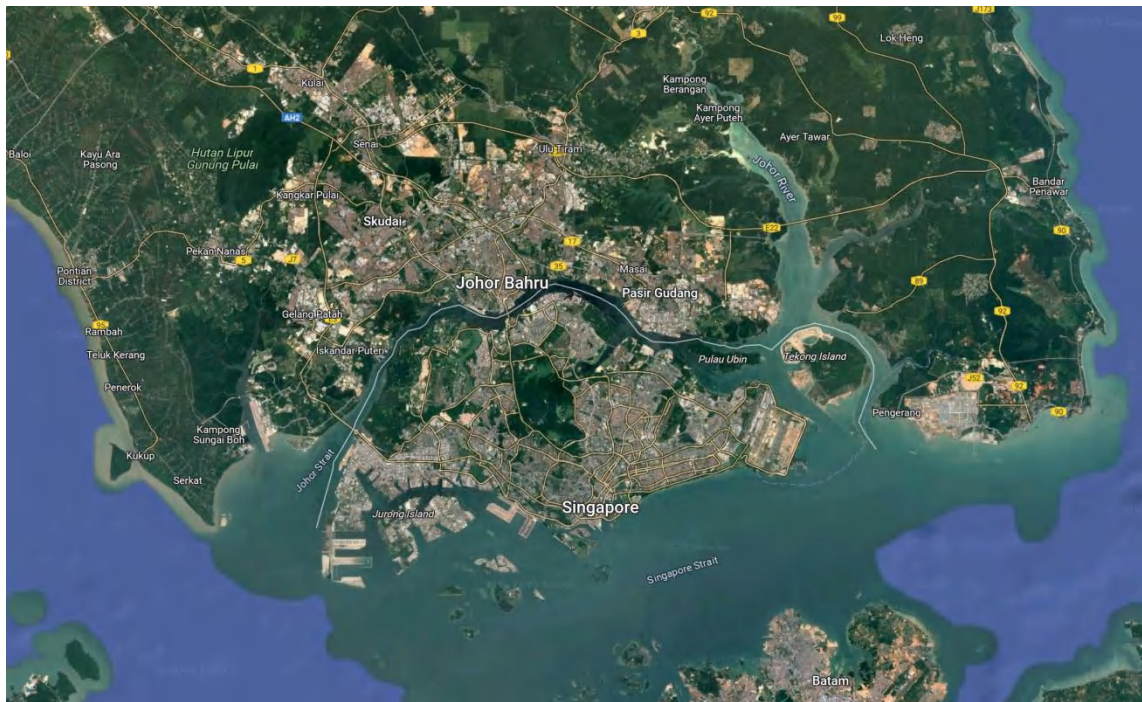

5.2 Satellites Menu

Use the Satellites menu to view satellite tracking details and enable/disable GPS, GLONASS, BDS and Galileo constellations. These menus include tabular and graphical displays to provide all required information on satellite tracking status.

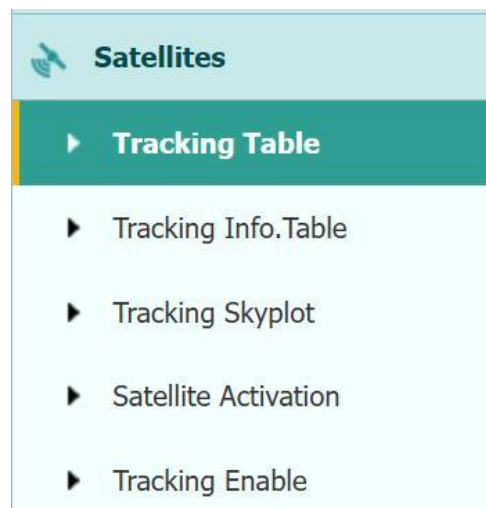


5.2.1 Tracking Table Submenu

Provides the status of satellites tracked in general, such as the satellite ID, satellite type, attitude angle, azimuth angle, L1 SNR, L2 SNR, L5 SNR B1C SNR, B2A SNR, B2B SNR and enable/disable status of each one.

Tracking Table ×										
All ☒ GPS ☐ GLONASS ☐ BDS ☐ GALILEO ☐ SBAS ☐ QZSS ☐										
SV	Type	Elevation An	Azimuth Ang	L1 SNR	L2 SNR	L5 SNR	B1C SNR	B2A SNR	B2B SNR	Enabled
1	GPS	18	50	36.160	39.930	28.580	0.000	0.000	0.000	Yes
3	GPS	43	54	44.180	43.300	35.890	0.000	0.000	0.000	Yes
6	GPS	46	272	44.140	45.240	37.340	0.000	0.000	0.000	Yes
14	GPS	59	189	46.220	48.630	40.500	0.000	0.000	0.000	Yes
17	GPS	63	6	46.710	46.270	0.000	0.000	0.000	0.000	Yes
19	GPS	48	325	45.020	40.950	0.000	0.000	0.000	0.000	Yes
22	GPS	73	229	47.090	43.450	0.000	0.000	0.000	0.000	Yes
1	GLONASS	29	80	37.980	0.000	0.000	0.000	0.000	0.000	Yes
2	GLONASS	19	133	40.980	42.460	0.000	0.000	0.000	0.000	Yes
14	GLONASS	41	208	49.570	49.670	0.000	0.000	0.000	0.000	Yes
15	GLONASS	48	290	45.140	50.590	0.000	0.000	0.000	0.000	Yes
17	GLONASS	42	315	42.520	48.190	0.000	0.000	0.000	0.000	Yes
18	GLONASS	12	273	36.910	42.310	0.000	0.000	0.000	0.000	Yes


5.2.2 Tracking Info. Table Submenu

The following figure is an example of satellite track diagram page. Users can determine the satellite types and the corresponding SNR of L-band carriers to be displayed in any combination.

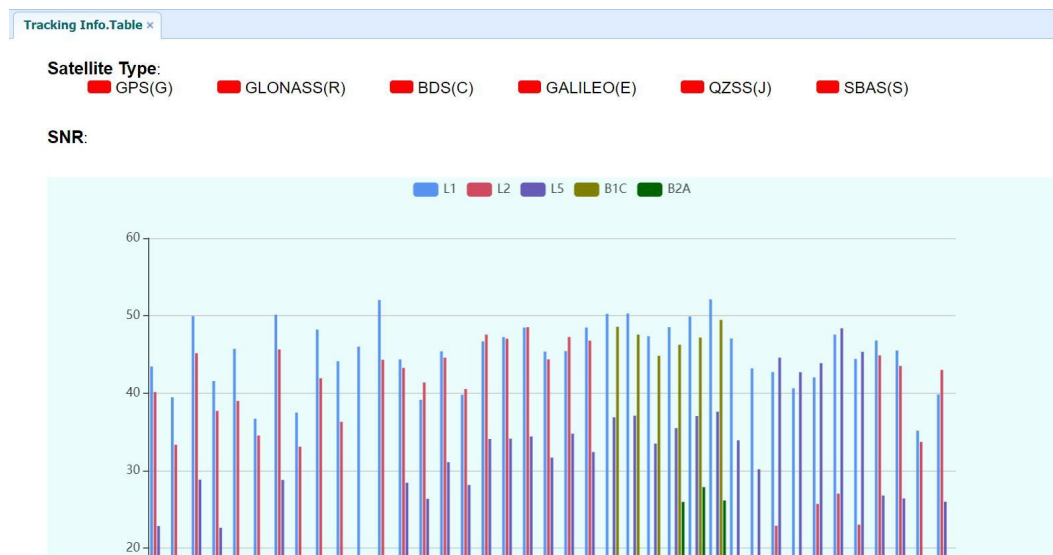

5.2.3 Tracking Skyplot Submenu

The following figure is an example of Skyplot page.

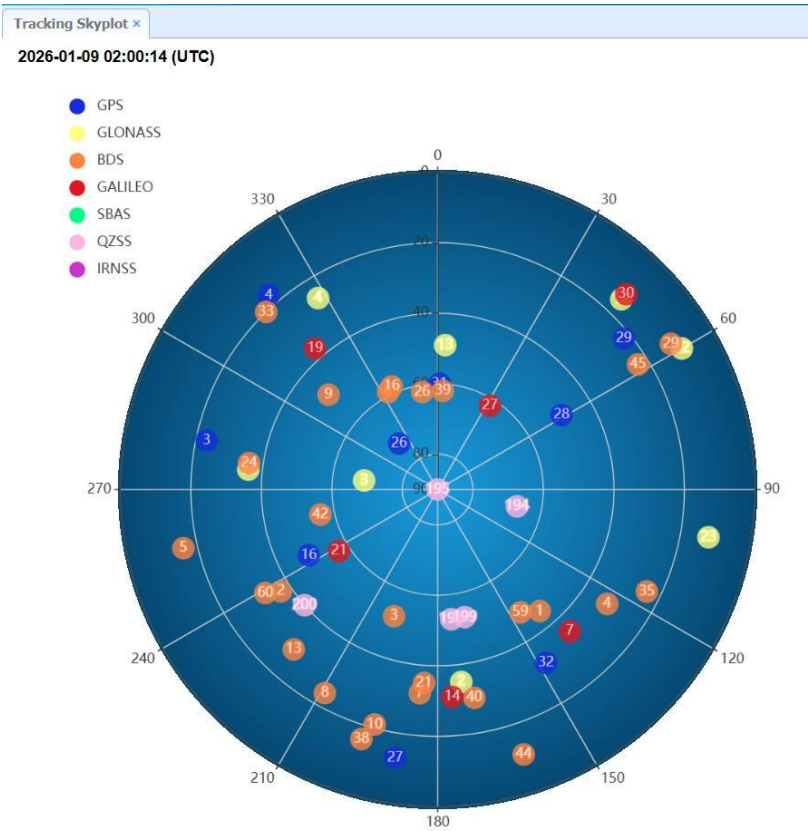

5.2.4 Satellite Activation Submenu

Use this menu to enable or disable satellites.

Satellite Activation x

GPS GLONASS BDS GALILEO QZSS SBAS

Enable All Disable All

Satellite Id	Enable	Satellite Id	Enable
1	☒	2	☒
3	☒	4	☒
5	☒	6	☒
7	☒	8	☒
9	☒	10	☒
11	☒	12	☒
13	☒	14	☒
15	☒	16	☒
17	☒	18	☒
19	☒	20	☒



5.2.5 Tracking Enable Submenu

Use this menu to enable or disable satellite tracks.

Tracking Enable ✕

Type	Signal	Enable
GPS	L1-CA	☒
GPS	L2	☒
GPS	L2-CS	☒
GPS	L2-P	☒
GPS	L5	☒
SBAS	L1-C/A	☐
GLONASS	R1	☒
GLONASS	R2	☒
GALILEO	E1	☒
GALILEO	E5-A	☒
GALILEO	E5-B	☒
BDS	B1	☒
BDS	B2	☒
BDS	B3	☒
BDS	B1-B1C	☐
BDS	B2-B2A	☐
BDS	B2-B2B	☐
Qzss	Q1	☒
Qzss	Q2	☒
Qzss	Q5	☒

✓ Save

5.3 Receiver Configuration Menu

Use this menu to configure settings such as the antenna type and height, elevation mask and PDOP setting, the reference station coordinates, receiver resetting and web interface language:


Receiver Configuration

▶ **Description**

▶ Antenna Configuration

▶ Reference Station Settings

▶ Receiver Reset

▶ Language

▶ User Management

▶ HCPPP Settings

5.3.1 Description

This submenu shows the receiver information and reference station information, including antenna related information, elevation mask angle, reference station work mode and position, etc.

Description ×

Receiver Info

Antenna Type: 
Antenna SN: 9999979
Measure Way: Antenna Phase Center
Antenna Height: 2.0000(Meter)
Elevation Mask: 20
PDOP Mask: 6

Reference Station Info

Reference Station Mode: Auto Base
Base Station Name: 9999979
Base Station ID: 9999979
Reference Latitude: 31°9'34.58056396"(North)
Reference Longitude: 121°10'42.44301380"(East)
Reference Height: 56.3493

5.3.2 Antenna Configuration Submenu

Use this screen to configure all the items related to the GNSS antenna. You must enter the correct values for all antenna-related fields, because the choices you make affect the accuracy for logged data and broadcast correction data significantly:

Antenna Configuration ×

Antenna Configuration

Measure Way: Antenna Phase Center

Antenna manufacturer:

Antenna Type: 

Antenna SN: 9999979

Antenna Height: 2.0000 (Meter)

Elevation Mask: 20

PDOP Mask: 6

Save

5.3.3 Reference Station Settings Submenu

Use this screen to configure settings such as the station coordinates and the broadcast station identifiers. You must enter accurate information in these fields, as this data affects the accuracy of logged data files and broadcast correction data significantly:

For **Reference Station Mode**:

There are three modes available:

- Auto Rover:** The receiver will serve as a rover after this mode is enabled, and then receive correction data through the working mode set last time.

Reference Station Settings x

Reference Station Mode: Auto Rover

Save

Sample for Average

Positioning Constraint: ☒ Single Solution Coordinates ☐ Fixed Solution Coordinates

Sampling Amount: 300 0%

Start Stop

- Auto Base:** The receiver will serve as a base after this mode is enabled, and then broadcast correction data based on coordinate inputted by user or obtained through autonomous positioning automatically.

Reference Station Settings x

Reference Station Mode: Auto Base

Base Station Name: 9999979

Base Station ID: 9999979

Reference Latitude: 31 9 34.56741544 N S

Reference Longitude: 121 10 42.55470651 E W

Reference Height: 43.9078

Save

Sample for Average

Positioning Constraint: ☒ Single Solution Coordinates ☐ Fixed Solution Coordinates

Sampling Amount: 300 0%

Start Stop

Coordinates transfer threshold value(Meter): 0

Save

Base list

ID	Height	Latitude				Longitude			
1	48.3103	31	9	34.43319440	☐ S ☒ N	121	10	42.17376186	☒ E ☐ W
2	49.3361	31	9	34.55002521	☐ S ☒ N	121	10	42.13239995	☒ E ☐ W
3	49.3360	31	9	34.55002800	☐ S ☒ N	121	10	42.13239600	☒ E ☐ W
4	48.2355	31	9	34.47460041	☐ S ☒ N	121	10	42.55106857	☒ E ☐ W
5	50.1774	31	9	34.55730445	☐ S ☒ N	121	10	42.52258581	☒ E ☐ W
6	64.9244	31	9	34.38561861	☐ S ☒ N	121	10	42.44022501	☒ E ☐ W
7	56.3493	31	9	34.58056396	☐ S ☒ N	121	10	42.44301380	☒ E ☐ W
8	43.9078	31	9	34.56741544	☐ S ☒ N	121	10	42.55470651	☒ E ☐ W

- Manual Base:** The receiver will serve neither as a base nor a rover after this mode is enabled. Users need to configure the receiver manually.

Reference Station Mode:

Base Station Name:

Base Station ID:

Reference Latitude: ° ' '' ☒ N ☐ S

Reference Longitude: ° ' '' ☒ E ☐ W

Reference Height:

Sample for Average

Positioning Constraint: ☒ Single Solution Coordinates ☐ Fixed Solution Coordinates

Sampling Amount:

For Reference Latitude and Reference Longitude:

There are mainly three methods to enter the reference coordinates and shown as follows:

- Acquire Current Position:** Click this button to acquire current position obtained through autonomous positioning automatically.
- Manual Input:** Manually input the coordinate of a control point.
- From CORS:** After the receiver logging in CORS, the software can record the coordinate of current position based on fix solution.

For Sample for Average:

Users can determine the positioning limit and sampling amount. The positioning limit falls into two types:

- Single Solution Coordinates:** Collect the coordinates of receiver obtained through autonomous positioning.
- Fixed Solution Coordinates:** Only collect coordinates of receiver with a fixed solution.

After the configuration of positioning limit and sampling amount, click to carry out sampling and averaging → the progress bar will show the progress → the result will be served as the coordinate of current position.

If users need to save the changes, please tap button.

5.3.4 Receiver Reset Submenu

Use this screen to completely or partially reset the receiver:

Receiver Reset x

Reboot Receiver:

Return to Factory Defaults:

Clear Satellite Data:

Turn Off Receiver:

Confirm

Confirm

Confirm

Confirm

5.3.5 Languages Submenu

Use this screen to select the web interface language:

Language x



English

中文

Nederland

English

Русский

Türkçe

Español

Confirm

5.3.6 User Management Submenu

User Management x

User Management

Add

Save

Delete

Modify Anti-theft password

ID	User Name	Password
1	admin	*****
2	admin1	*****
3	admin2	*****

5.3.7 HCPPP Settings

Reserved menu.

HCPPP Settings x


HCPPP Range: 5min

Save

5.4 Data Recording Menu

Use the Data Logging menu to set up the receiver to log static GNSS data and to view the logging settings. You can configure settings such as observable rate, recording rate,

continuous logging limit, and whether to auto delete old files when memory is low. This menu also provides the controls for the FTP push feature:

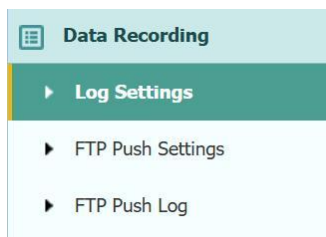

5.4.1 Log Settings Submenu

Here shows the data logging status, including internal and external storage usage and data logging status of each session. Also, users can configure the data logging settings for each session, including recording name, store location, storage limit, store formats, start time, etc.

Log Settings >

Store Info

	Position	Total Storage	Storage Available
1	Internal Storage	6750MB	6576MB
2	External Storage	0MB	0MB

Attention: Total assigned storage size should be less than 6GB. It will stop recording when the storage is full.

Record Info

Recording Numbr

File Name

Activated

Log Status

Setting Parameter

Switch

Clear Data

1

record1

Yes

Recording

Modify

Detail

ON

OFF

Clear

Clear All

To edit the settings of each session, click the **Modify** button to the right of the required session, and then the *Recording Edit* screen appears:

Recording Edit

Auto Record: ☐ Yes ☒ No

Sample Interval: 5s

Elevation Mask: 10 (°)

Duration Time: 1440 (Minute)

Site Name: 3225804

Antenna Height: 0.0000

Measure Way: Antenna Phase Ce

Storage Format: f

RINEX Version: OFF

Advanced

Save

Back

Click advanced to see more settings.

Start Date: ☐ Yes ☒ No

Apply Time: ☐ Yes ☒ No

Integral Point Store: ☐ Yes ☒ No

Circulating Memory: ☒ Yes ☐ No
the data overwritten first file after storage space is full

Repeat Observations: ☒ Yes ☐ No
Turn on to record a single observation. Turn off to record repeated observations.

Store Location: Internal Storage

Assigned Storage: 6000 (MB)

Observer:

Observe Agency:

FTP Push: ☒ Close
☐ 1:ftp server 1
☐ 2:ftp server 2
☐ 3:ftp server 3

☒ Save ☒ Back

In this screen, you can configure all the data logging parameters, and determine whether the recording files will be affected by the FTP Push. The parameters are mainly as follows:

- **Auto Record:** on or off.
- **Sample Interval:** Select the observable rate from the dropdown list.
- **Elevation Mask:** Enter the elevation mask.
- **Duration Time:** Set the duration of data logging.
- **Site Name:** Enter the name of the site.
- **Antenna Height:** the measured height value.
- **Measure way:** Antenna Phase Center, Vertical Height, Slant Height
- **Storage Format:** Select the format of the data store.
- **RINEX Version:** OFF, 3.02, 2.11
- **Start Date:** Select **Yes** or **No** option to determine whether to auto record start date.
- **Apply Time:** Select **Yes** or **No** option to determine whether to auto record apply time.
- **Integral Point Store:** Select **Yes** or **No** option to determine whether to allow receiver to save data every hour.
- **Circulating Memory:** Select **Yes** or **No** option to determine whether to auto delete old files if the storage space is full.
- **Repeat Observations:** Select **Yes** or **No** option to determine whether to turn on to record a single observation.
- **Store Location:** Internal Storage, External Storage.
- **Assigned Storage:** The assigned memory size of current thread(for example, Record 1) is 10000MB
- **Observer:** Enter the name of observer.
- **Observer Agency:** Enter the name of observer agency.
- **FTP Push:** Decide whether to push the stored files to the FTP server of your choice.

Tap ☒ Save button to save the settings and back to the *Log Settings* screen. Also, users can click ☒ Back to abandon the changed settings and back to *Log Settings* screen.

Note – To modify data logging parameters, make sure the data logging session is switched off.

To switch on or off **ANY** data logging session, tap the **ON** or **OFF** button on the right of the required session.

To delete the recorded files of **ANY** data logging session, tap the **Clear** button on the right of the required session.

To delete the recorded files of **ALL** data logging sessions, tap the **Clear ALL Accounts** button.

5.4.2 FTP Push Settings Submenu

Use this screen to configure the receiver to push stored files to the FTP server of your choice. Only files that are configured to use FTP push are transmitted.

Record Info				
Server ID	Server IP	Remote Directory	Server Description	Modify
1	192.168.3.72	/repo/first	ftp server 1	Modify
2	192.168.3.72	/repo/second	ftp server 2	Modify
3	192.168.3.72	/repo/third	ftp server 3	Modify

Tap **Modify** button on the right of the required FTP server and the *FTP Push Settings* screen appears:

FTP Push Settings

Server IP:

Port:

Remote Directory:

Local directory:

Server Description:

User Name:


Password:

Save
Back

5.4.3 FTP Push Log Submenu

Shows the related information about the recorded filed that be pushed. And users can

tap **Clear Ftp Send Log** button in the upper right corner to clear the log of FTP Push operations.

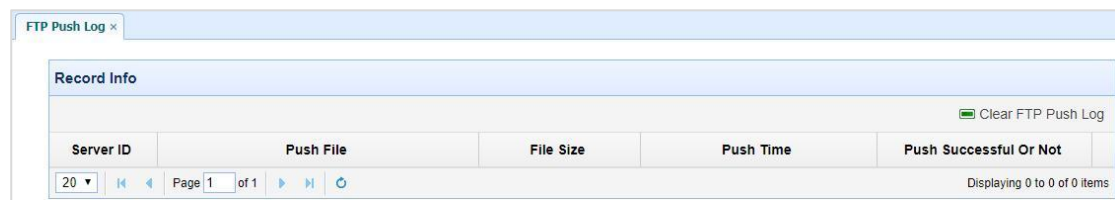

5.5 IO Settings Menu



Use the IO Settings menu to set up all receiver outputs and inputs. The receiver can output CMR, RTCM, Raw data, Ephemeris data, GPGLGA, GPGLSV, on TCP/IP, UDP, serial port, or Bluetooth ports.

5.5.1 IO Settings Submenu

The following figure shows an example of the screen that appears when you select this submenu. (Serial port setting is reserved menu)


I/O Settings					
Type	Description	Output	Connection Status	Modify	
1	RTK Client	cors.elf-geo.com:2102	Connecting	Connect	Disconnect
2	TCP/UDP_Client1/NTRIP Server	192.168.3.18:9900	Unconnected	Connect	Disconnect
3	TCP/UDP_Client2/NTRIP Server	192.168.3.18:9901	Unconnected	Connect	Disconnect
4	TCP/UDP_Client3/NTRIP Server	192.168.3.18:9902	Unconnected	Connect	Disconnect
5	TCP/UDP_Client4/NTRIP Server	192.168.3.18:9903	Unconnected	Connect	Disconnect
6	TCP/UDP_Client5/NTRIP Server	192.168.3.18:9904	Unconnected	Connect	Disconnect
7	TCP/UDP_Client6/NTRIP Server	192.168.3.18:9905	Unconnected	Connect	Disconnect
8	TCP Server/NTRIP Caster1	9901	GPGLGA 10Hz	Connect	Disconnect
9	TCP Server/NTRIP Caster2	9902	---	Closed	Connect
10	TCP Server/NTRIP Caster3	9903	---	Closed	Connect
11	TCP Server/NTRIP Caster4	9904	---	Closed	Connect
12	Serial Port	115200	---	Settings	
13	Bluetooth	GNSS-9999802	GPGLGA 5s	Settings	
14	Radio	461.0500MHz	---	Settings	

In this submenu, users can configure 6 types of input and output settings.

1. RTK Client

After configuring the settings of RTK client, users can log on CORS or APIS. Tap the **Connect** button to the right → the *IO Settings* screen will appear → choose one of the connection protocols among the NTRIP, APIS_BASE, APIS_ROVER and TCP → configure the related parameters → click **Confirm** to log on CORS or APIS.

- Connection Protocol: NTRIP

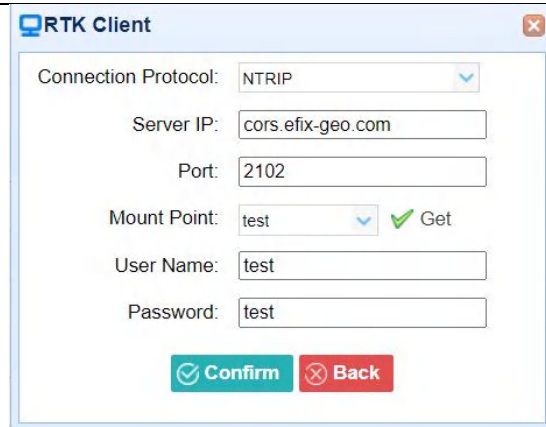


The screenshot shows the 'RTK Client' window with the following settings:

- Connection Protocol: NTRIP
- Server IP: cors.efix-geo.com
- Port: 2102
- Mount Point: test (with a green checkmark and 'Get' button)
- User Name: test
- Password: test

At the bottom, there are two buttons: 'Confirm' (green) and 'Back' (red).

- Connection Protocol: APIS_BASE

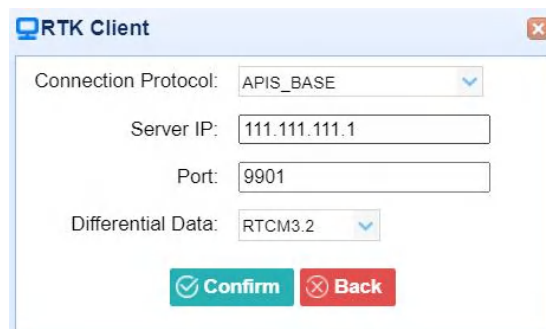


The screenshot shows the 'RTK Client' window with the following settings:

- Connection Protocol: APIS_BASE
- Server IP: 111.111.111.1
- Port: 9901
- Differential Data: RTCM3.2

At the bottom, there are two buttons: 'Confirm' (green) and 'Back' (red).

- Connection Protocol: APIS_ROVER

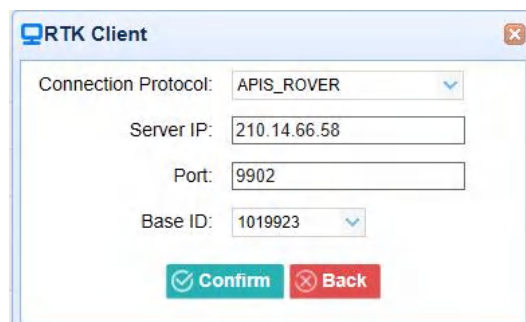


The screenshot shows the 'RTK Client' window with the following settings:

- Connection Protocol: APIS_ROVER
- Server IP: 210.14.66.58
- Port: 9902
- Base ID: 1019923

At the bottom, there are two buttons: 'Confirm' (green) and 'Back' (red).

- Connection Protocol: TCP

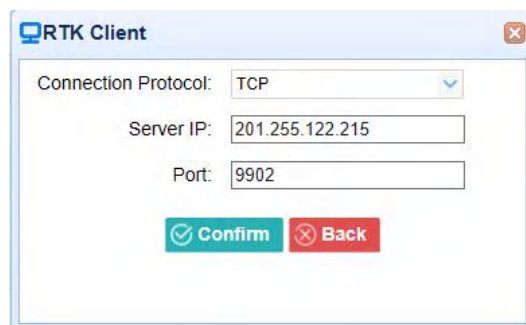

The screenshot shows the 'RTK Client' window with the following settings:


- Connection Protocol: TCP
- Server IP: 201.255.122.215
- Port: 9902

At the bottom, there are two buttons: 'Confirm' (green) and 'Back' (red).

2. TCP/UDP_Client/NTRIP Server


Tap the **Connect** button on the right of required TCP/UDP Client → the *IO Settings* screen will appear → select the connection protocol from TCP, UDP, NTRIP1.0 and NTRIP2.0 → enter the IP and Port of the target server → configure messages that you want to output to the target server → click **Confirm** to save and complete the connection.

➤ Connection Protocol: TCP

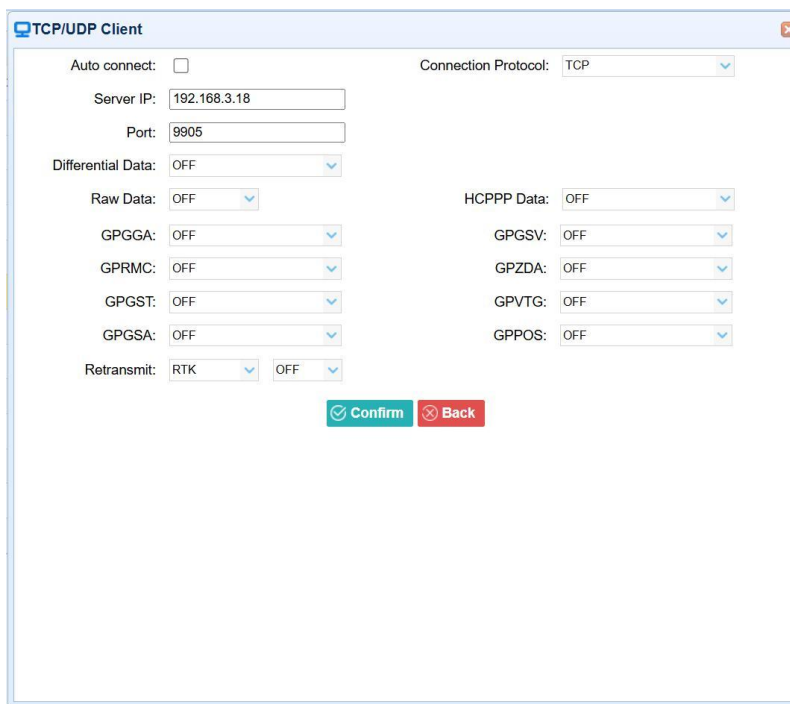


The screenshot shows the 'TCP/UDP Client' settings window. The 'Connection Protocol' is set to 'TCP'. The 'Server IP' is '192.168.3.18' and the 'Port' is '9905'. The 'Auto connect' checkbox is unchecked. The 'Differential Data' is set to 'OFF'. The 'Raw Data' is set to 'OFF'. The 'HCPPP Data' is set to 'OFF'. The 'GPGLA', 'GPRMC', 'GPGST', 'GPGSA', 'Retransmit', 'GPGLV', 'GPZDA', 'GPVTG', and 'GPPOS' are all set to 'OFF'. The 'Retransmit' dropdown is set to 'RTK' and the 'OFF' checkbox is checked. At the bottom, there are 'Confirm' and 'Back' buttons.

➤ Connection Protocol: UDP

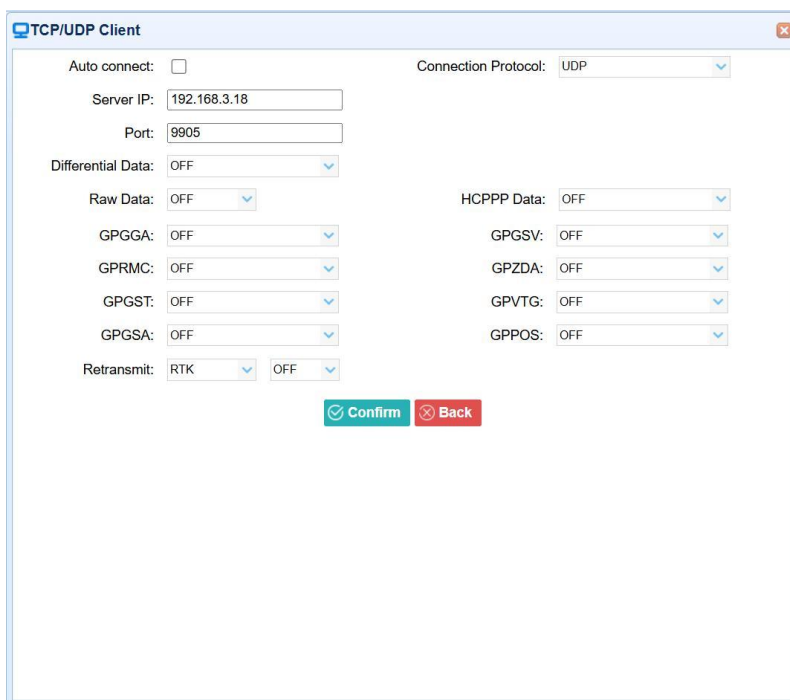


The screenshot shows the 'TCP/UDP Client' settings window. The 'Connection Protocol' is set to 'UDP'. The 'Server IP' is '192.168.3.18' and the 'Port' is '9905'. The 'Auto connect' checkbox is unchecked. The 'Differential Data' is set to 'OFF'. The 'Raw Data' is set to 'OFF'. The 'HCPPP Data' is set to 'OFF'. The 'GPGLA', 'GPRMC', 'GPGST', 'GPGSA', 'Retransmit', 'GPGLV', 'GPZDA', 'GPVTG', and 'GPPOS' are all set to 'OFF'. The 'Retransmit' dropdown is set to 'RTK' and the 'OFF' checkbox is checked. At the bottom, there are 'Confirm' and 'Back' buttons.

➤ Connection Protocol: NTRIP1.0

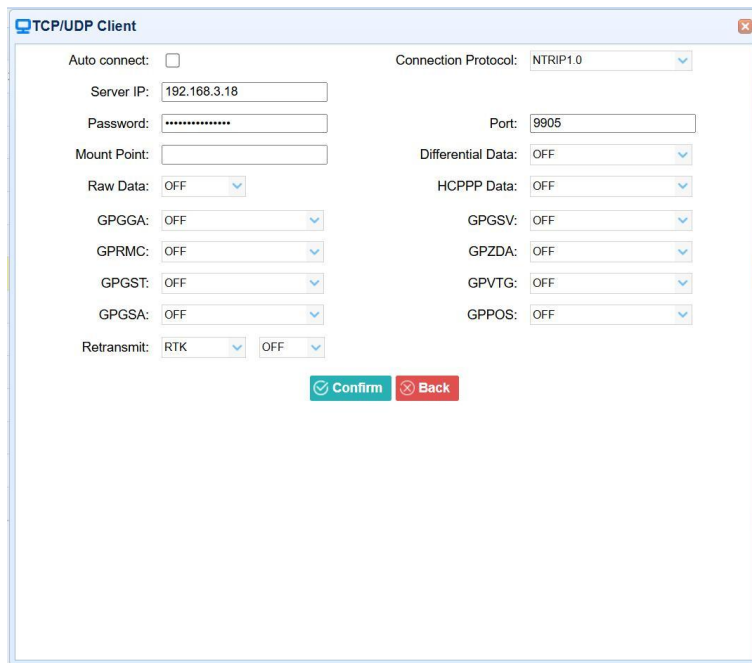

The screenshot shows the 'TCP/UDP Client' configuration window. The 'Connection Protocol' is set to 'NTRIP1.0'. The 'Auto connect' checkbox is unchecked. The 'Server IP' is '192.168.3.18', 'Password' is masked with dots, and 'Mount Point' is empty. The 'Port' is '9905'. On the left, 'Raw Data' is 'OFF', and 'GPGGA', 'GPRMC', 'GPGST', 'GPGSA', and 'Retransmit' (set to 'RTK') are all 'OFF'. On the right, 'Differential Data', 'HCPPP Data', 'GPGSV', 'GPZDA', 'GPVTG', and 'GPPOS' are all 'OFF'. 'Confirm' and 'Back' buttons are at the bottom.

➤ Connection Protocol: NTRIP2.0

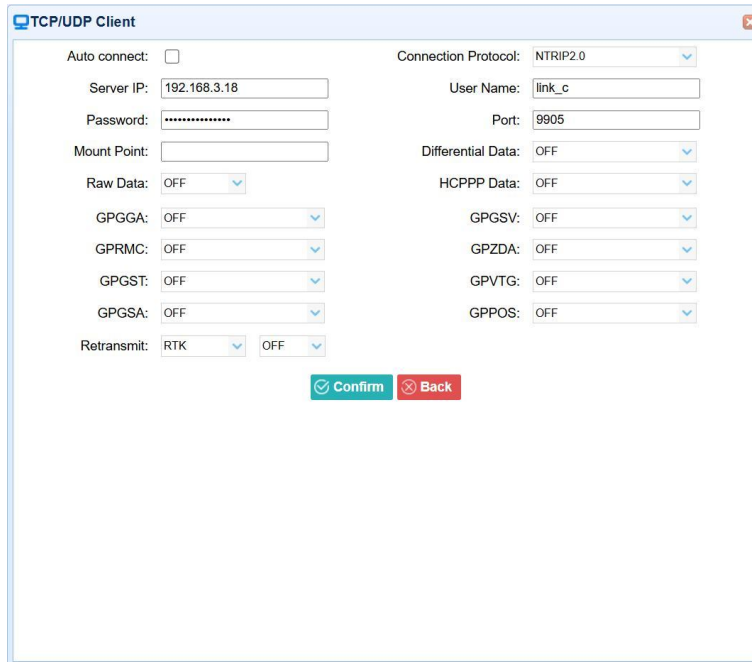


The screenshot shows the 'TCP/UDP Client' configuration window. The 'Connection Protocol' is set to 'NTRIP2.0'. The 'Auto connect' checkbox is unchecked. The 'Server IP' is '192.168.3.18', 'Password' is masked with dots, and 'Mount Point' is empty. The 'Port' is '9905'. On the left, 'Raw Data' is 'OFF', and 'GPGGA', 'GPRMC', 'GPGST', 'GPGSA', and 'Retransmit' (set to 'RTK') are all 'OFF'. On the right, 'Differential Data', 'HCPPP Data', 'GPGSV', 'GPZDA', 'GPVTG', and 'GPPOS' are all 'OFF'. The 'User Name' field is set to 'link_c'. 'Confirm' and 'Back' buttons are at the bottom.

3. TCP Server/NTRIP Caster

Tap the **Connect** button to the right of required TCP Server/NTRIP Caster → the **IO Settings** screen will appear → select one of the connection protocols between NTRIP and TCP → configure the other related parameters → click  to save the settings and open the server.

➤ Connection Protocol: TCP

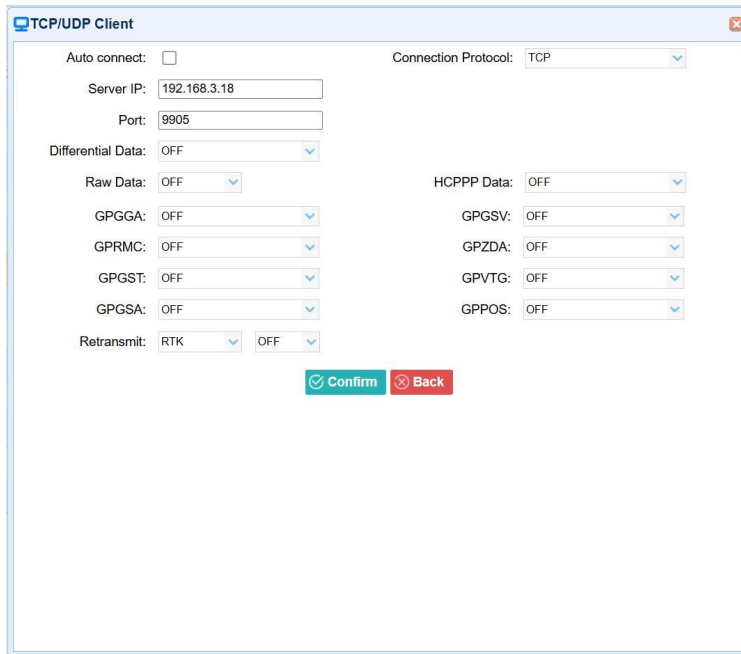

TCP/UDP Client

Auto connect: ☐ Connection Protocol: TCP

Server IP: 192.168.3.18

Port: 9905

Differential Data: OFF

Raw Data: OFF

HCPPP Data: OFF

GPGGA: OFF

GPGSV: OFF

GPRMC: OFF

GPZDA: OFF

GPGST: OFF

GPVTG: OFF


GPGSA: OFF

GPPOS: OFF

Retransmit: RTK OFF

➤ Connection Protocol: NTRIP

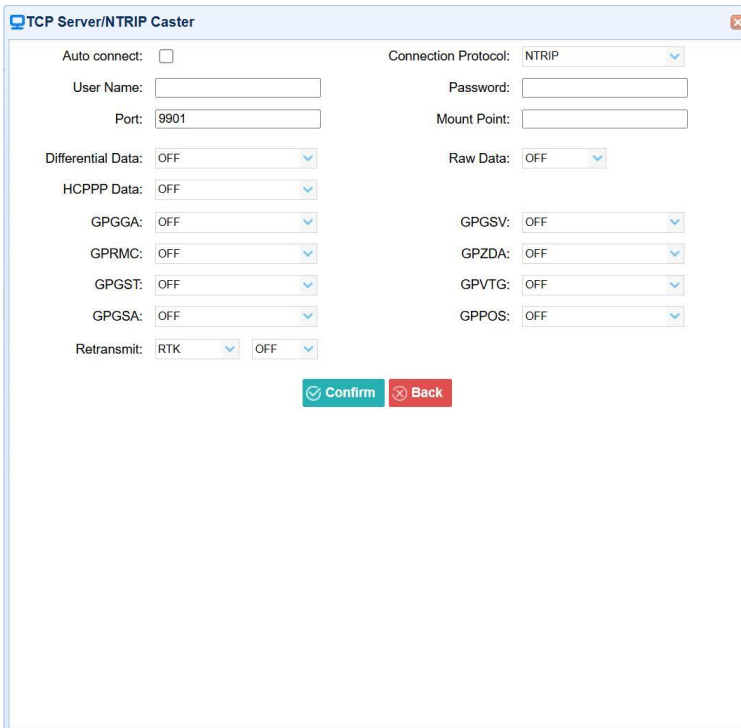

TCP Server/NTRIP Caster

Auto connect: ☐ Connection Protocol: NTRIP

User Name:

Password:

Port: 9901

Mount Point:

Differential Data: OFF

Raw Data: OFF

HCPPP Data: OFF

GPGGA: OFF

GPGSV: OFF

GPRMC: OFF

GPZDA: OFF

GPGST: OFF

GPVTG: OFF

GPGSA: OFF


GPPOS: OFF

Retransmit: RTK OFF

4. Serial Port

Tap the **Settings** button on the right of Serial Port → the *Serial Port Setup* screen will appear → select Baud Rate used to transmit data → configure the messages that you want to output through the serial port → click  to save the settings and start to transmit.

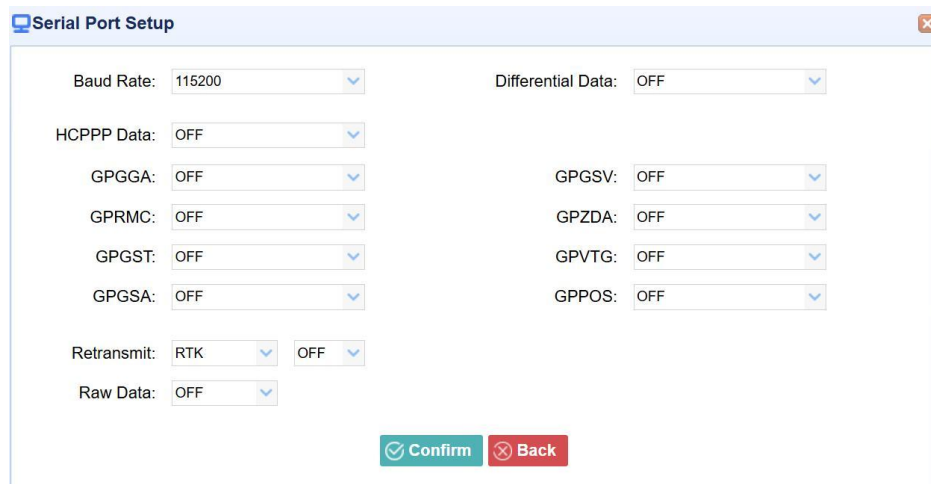


The **Serial Port Setup** screen contains the following settings:

- Baud Rate: 115200
- Differential Data: OFF
- HCPPP Data: OFF
- GP GGA: OFF
- GP GSV: OFF
- GP RMC: OFF
- GP ZDA: OFF
- GP GST: OFF
- GP VTG: OFF
- GP GSA: OFF
- GP POS: OFF
- Retransmit: RTK, OFF
- Raw Data: OFF

Buttons:  

5. Bluetooth

Tap the **Settings** button to the right of Bluetooth → the *Bluetooth Set* screen will appear → configure the messages that you want to transmit through Bluetooth → click  to save the settings and start to transmit.

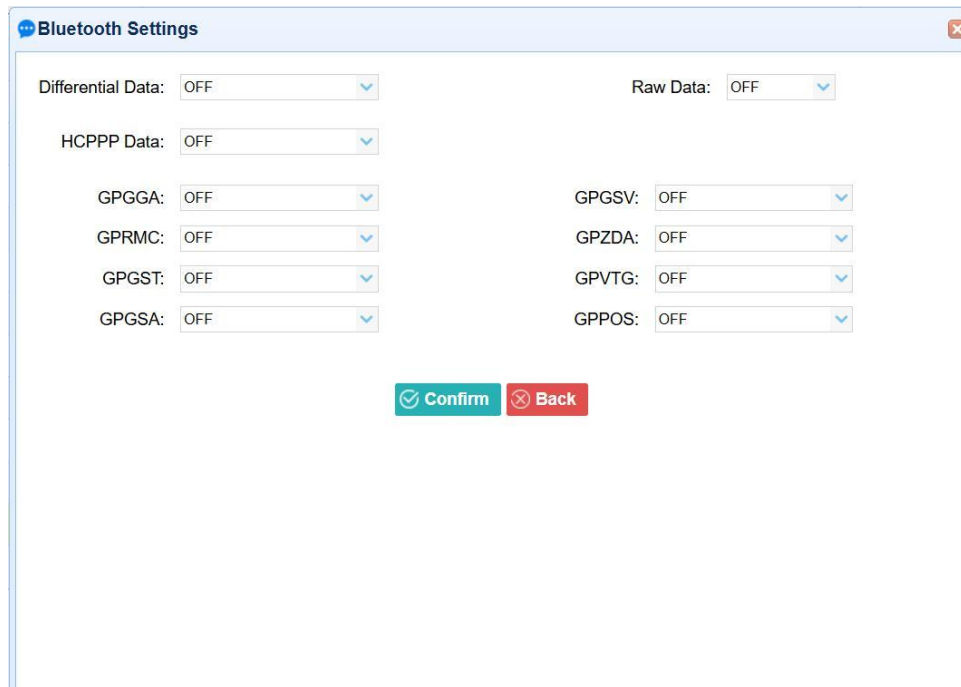

The **Bluetooth Settings** screen contains the following settings:


- Differential Data: OFF
- Raw Data: OFF
- HCPPP Data: OFF
- GP GGA: OFF
- GP GSV: OFF
- GP RMC: OFF
- GP ZDA: OFF
- GP GST: OFF
- GP VTG: OFF
- GP GSA: OFF
- GP POS: OFF

Buttons:  

6. Radio


Tap the **Settings** button to the right of Radio → the *Radio Settings* screen will appear → select the format of differential data that you want to transmit through radio from the dropdown list

➤ click  to save the settings and start to transmit.

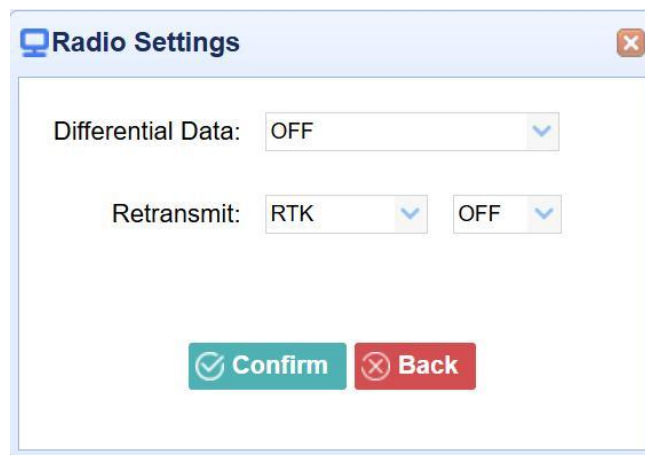

5.6 Network Setting Menu

Use this menu to view network information, configure the receiver's mobile network, set email alert for specific situation, configure HTTP or HTTPS port, and the username and password of internal FTP site:

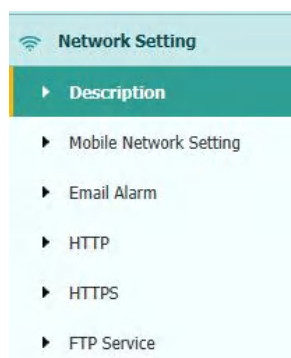

5.6.1 Description Submenu

Use this submenu to check the information of network setting.

Description x

Network Info

Power Status: ON
Network Mode: 2G/3G/4G Auto
Connection Protocol: CHINA MOBILE
Signal Strength: -71(dBm)
SIM Status: SIM Card Ok
Dialing Status: Offline
IMEI: 861529049455435
PhoneNumber: 1440033974571

5.6.2 Mobile Network Setting Submenu

Use this submenu to configure GPRS model, network module and modify dialing status.

Mobile Network Setting x

Network Settings

GPRS Model Status: ON

ON OFF

Auto Start: ☒ Yes ☐ No

☐ 2G Only
☐ 3G Only
☐ 4G Only
☒ 2G/3G/4G Auto

Network Mode:

SIM Type: E-SIM

Switch

Dialing Status: Offline

Dial Break

Auto Connect: ☐ Yes ☒ No

APN: 3gnet
Dialing String: *99#
User Name: card
Password: ****

Save

5.6.3 Email Alarm Submenu

Use this submenu to choose which situation of receiver will be alerted and input the email address.

Email Alarm ×

TO

Email Address 1:

Email Address 2:

Email Address 3:

Save

From

Account:

Password:

Server Address:

Save

Email Alert

☐ Receiver is powered on

☐ External power is off

☐ Battery level is low

☐ Ftp push is failed

☐ Reciever(license) will be expired in 7 days.

Save

5.6.4 HTTP Submenu

Use this submenu to configure HTTP port.

HTTP ×

HTTP Port:

80

Save

5.6.5 HTTPS Submenu

Use this submenu to configure HTTPS port.

HTTPS x

HTTPS

Enable HTTPS: ☒ Yes ☐ No

HTTPS Port:

Save

5.6.6 FTP Service Submenu

Use this submenu to configure the user name and password of internal FTP site.

FTP Service x

FTP Service

User Name:

Password:

Save

5.7 Module Setting Menu

Use this menu to check module information, configure WiFi, bluetooth, radio related settings.

Module Setting
Description
WiFi
Bluetooth Settings
Radio Settings
IMU Setting

5.7.1 Description Submenu

Use this submenu to check the information of WiFi module, bluetooth module and radio module.

Description ×

Wi-Fi Information

Power Status: ON
Wifi Mode: Access Point
MAC: 82:00:10:06:a1:1d
Access Point Details
SSID: GNSS-9999979

Radio Information

Radio Type: Integrated TR Radio
Radio Power: 5W
OTA Baud Rate: 9600
Radio Frequency: 419.050000MHz
Radio Protocol: TT450S
Radio Frequency Channel: Full Range
Frequency Range: 410MHz---470MHz

5.7.2 WiFi Submenu

Use this submenu to turn on/off WiFi function and modify password.

WiFi ×

WiFi

Power Status: ON OFF
Auto Start: ☒ Yes ☐ No
Internet: ☒ Yes ☐ No
Wifi Mode: Access Point
SSID: GNSS-9999979
Start

5.7.3 Bluetooth Settings Submenu

Use this submenu to turn on/off bluetooth function and modify PIN number.

Bluetooth Settings ×

Bluetooth Settings

Local Name: GNSS-9999979
MAC Address: 81:00:10:06:A1:1D
PIN: 1234
Save

5.7.4 Radio Settings Submenu

Use this submenu to turn on/off radio function and configure radio parameters.

Note:

Instruments of different batches support different radio station protocols.

PN: A10522980909070005 supports EFIX\ Transparent\ TT450\ Satel\ **EcoLink**.

Radio Settings ×

Radio Settings

Radio Status: ON ☒ ON ☐ OFF

Auto Start: ☒ Yes ☐ No

Radio Protocol: EcoLink

Radio Frequency: 1 460.200000 (410MHz---470MHz)

FEC: ☐

5.7.5 IMU Settings Submenu

Use this submenu to turn on/off IMU function.

IMU Setting ×

IMU Setting

IMU Status: ☒ ON ☐ OFF

Antenna Height: 1.800

IMU Init Status: IMU init fail, please shake the center bar

Lat: 31°9'34.53735557"(North)

Lon: 121°10'42.54153519"(East)

Alt: 44.921

Vertical dip: 0°25'40.75447652"

direction of dip: 325°34'2.36099476"

5.8 Firmware Menu

Use this menu to check the current firmware information, download the system log, update the receiver firmware, download, or update the configuration file and register the receiver, and more:




5.8.1 Firmware Info Submenu

Use this submenu to check the current firmware information. The following figure shows an example of the firmware information.




5.8.2 Hardware Version Submenu

Use this submenu to check the hardware information, including main board version and core board version:

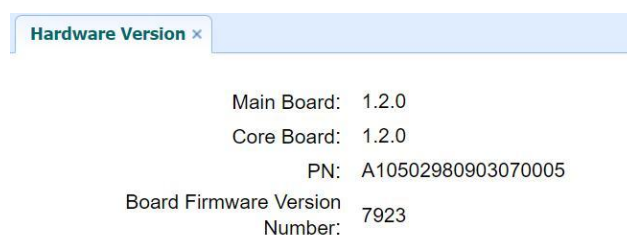

5.8.3 Config File Submenu


Use this submenu to update Configuration File.

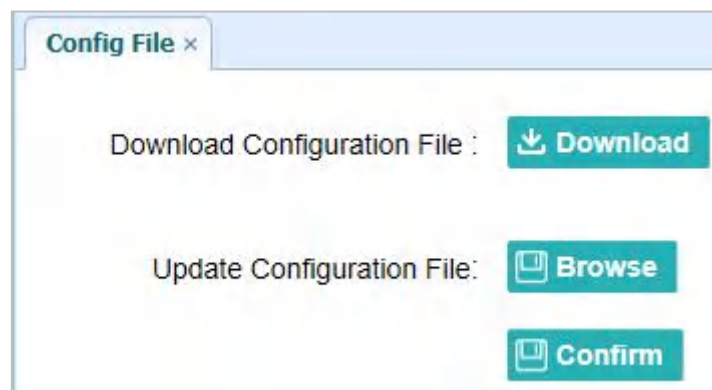

The screenshot shows a web interface titled "Config File x". It contains two main sections. The first section is labeled "Download Configuration File :" and has a green button with a download icon and the text "Download". The second section is labeled "Update Configuration File:" and has two green buttons: one with a folder icon and the text "Browse", and another with a document icon and the text "Confirm".

5.8.4 System Log Download Submenu


Use this submenu to download the system log of the receiver.

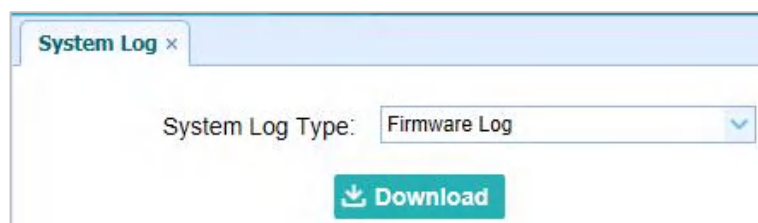

The screenshot shows a web interface titled "System Log x". It features a label "System Log Type:" followed by a dropdown menu currently set to "Firmware Log". Below the dropdown is a green button with a download icon and the text "Download".

5.8.5 User Log Submenu


Use this submenu to download the user log. Tap **Download** to download current user log; Tick items that you want to see on the user log and tap confirm button to confirm selected user log.

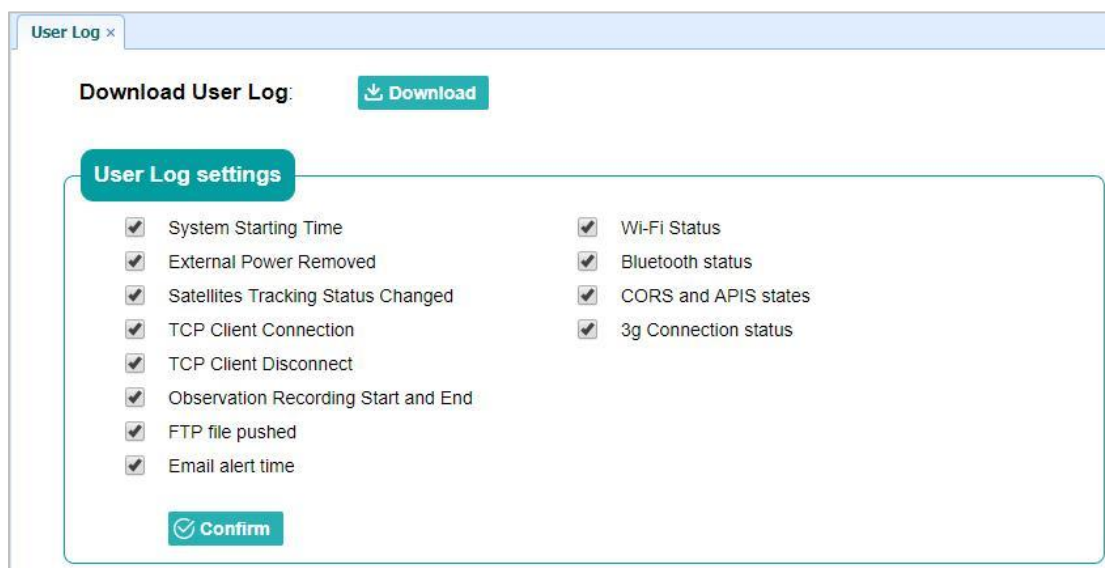

The screenshot shows a web interface titled "User Log x". At the top, there is a section labeled "Download User Log:" with a green button containing a download icon and the text "Download". Below this is a section titled "User Log settings" enclosed in a rounded rectangle. Inside this section, there are two columns of checkboxes, all of which are checked. The left column includes: "System Starting Time", "External Power Removed", "Satellites Tracking Status Changed", "TCP Client Connection", "TCP Client Disconnect", "Observation Recording Start and End", "FTP file pushed", and "Email alert time". The right column includes: "Wi-Fi Status", "Bluetooth status", "CORS and APIS states", and "3g Connection status". At the bottom of the "User Log settings" section is a green button with a checkmark icon and the text "Confirm".

5.8.6 Firmware Update Submenu

Use this submenu to load new firmware to the receiver across the network. Tap the **Browse** button to locate the upgrade file → tap **Confirm** button to confirm the selected upgrading file and start upgrading.

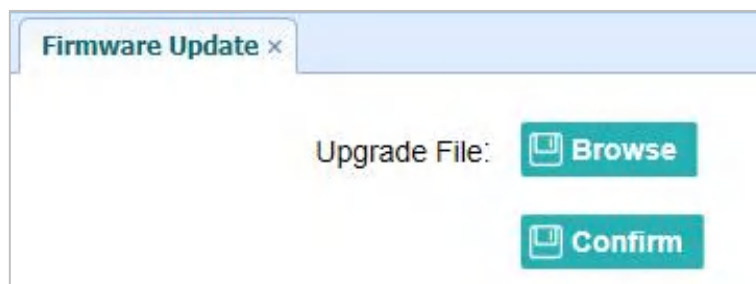


Notes

- It may take about 3 or 4 minutes to complete the firmware upgrading. Do not touch the power button or unplug the power until the upgrading process finishes, or damage will be caused to the receiver.
- The receiver will restart after the firmware upgrading is done, so users need to reconnect the receiver with your computer via Wi-Fi, and then log-in the receiver through a web browser to continue the configuration.

5.8.7 GNSS Board Upgrade Submenu

Use this submenu to upgrade GNSS Board. Use this submenu to load new board to the receiver across the network. Tap the **Browse** button to locate the upgrade file → tap **Confirm** button to confirm the selected upgrading file and start upgrading.

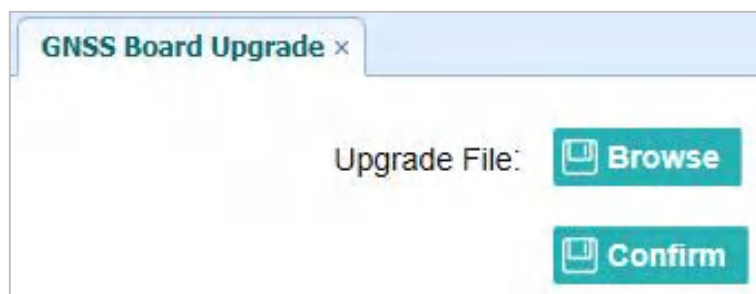

5.8.8 GNSS Registration Submenu

Use this submenu to register the receiver. Paste or enter the registration code to the *Registration Code* field → tap **Registration** button to complete the registration.

GNSS Registration ×

Serial Number:

9999979

Registration Limit:

2023-4-30

Registration Code:

a8vBWATwjM6


Registration



Farnav

Room 301, 3rd Floor, Building 2,577 Songying,Road Qingpu District, Shanghai,
China

Email: sales@efix-geo.com | support@efix-geo.com

Website: www.efix-geo.com

Far Range, Affordable