




Instruction Manual

Multi-Function Wireless Charging Station

Model: DS2268

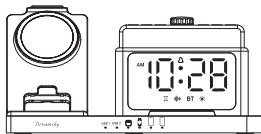


⚠ For normal operation, please use the original power adapter included with the product.

Thank you for purchasing DreamSky Wireless Charging Alarm Clock. To ensure the best product performance, please read this user manual in detail and retain it for future reference.

Questions? Contact Customer Service Center at info@dreamsky4u.com


Product Overview



1. Phone Wireless Charging Pad
2. Phone Wireless Charging Pad
3. Watch Wireless Charging Pad
4. Charging Indicator
5. Earbuds Wireless Charging Pad
6. Speaker
7. USB-C Output
8. DC Input
9. USB-A Output
10. Battery Compartment

1

Button Overview



1. **DISPLAY DIMMER**: press repeatedly to change the display brightness
2. **LIGHT DIMMER**: press repeatedly to change the light brightness press and hold to turn off the light
3. **12/24H**: press to change the time format
4. **LIGHT COLOR**: press repeatedly to change the light color press and hold to turn off the light
5. **TIME SET**: press to enter time setting mode
6. **ALARM SET**: press to enter alarm setting mode
7. **🔊+**: press to increase the volume of Bluetooth or sleep sounds
8. **🔊-**: press to decrease the volume of Bluetooth or sleep sounds
9. **BT**: press to turn Bluetooth on/off press and hold to disconnect Bluetooth
10. **🔊**: press to turn on the sleep sound rotate to play the previous or next track press and hold to turn off the sleep sound
11. **X**: when Bluetooth, light or sleep sound is on, press to turn on the timer

2

press repeatedly to set the timer duration
press and hold to turn off the timer

12. **ALARM ON/OFF**: press to enable/disable the alarm
13. **🔊**: when alarm goes off,
 - press to activate snooze
 - press and hold to stop the alarm when Bluetooth or sleep sound is on,
 - press to play or pause audio
 - rotate to play the previous or next track

Screen Overview



1. Time
2. AM/PM
3. Alarm
4. Snooze
5. Alarm Sound
6. Alarm Volume
7. Timer
8. Sleep Sound
9. Bluetooth
10. Light

Get Started

1. Insert 2 x AAA alkaline batteries (not supplied) into the battery compartment.
2. Plug the included power adapter into a working socket.

3

Adapter Specification

Input: 100-240VAC 50/60Hz 1.2A Max

Output: 12VDC 4000mA

Note:

- 1) The clock is powered by adapter only and batteries only work for storing the clock setting during power outage. With battery power alone, time will not display.
- 2) **For normal operation, please use the original power adapter included with the product.**

Wireless & USB Charging



Place your compatible device on the wireless charging area. Make sure the device is properly aligned with the charging area. The corresponding charging indicator will light up during wireless or USB charging.



Notes:

- Remove phone case thicker than 5mm while charging.
- Make sure your device supports wireless charging.
- Do not place metal objects or magnetic cards on the charging area.

4

- Do not use the USB ports to charge high-power devices, such as hair dryers.

Set Time Format

Press the **12/24H** button to switch the time display between 12-hour format (AM/PM) and 24-hour format (00:00-23:59).

Set Time

Tip: Connecting Bluetooth to your phone will synchronize time automatically (See the Bluetooth section for details).
Setting order: Hour, Minute.

1. Press the **TIME SET** button to enter time setting mode. The hour digits will flash.
2. Rotate the button to set the hour.
3. Press the button. The minute digits will flash.
4. Rotate the button to set the minute.
5. Press the button to save and exit.

Set Display Brightness

1. In timekeeping mode, press the **DISPLAY DIMMER** button repeatedly to adjust the display brightness level (OFF-L05).

5

Set Alarm

Setting order: Alarm Hour, Alarm Minute, Alarm Sound, Alarm Volume.

1. Press the **ALARM SET** button to enter alarm setting mode. The hour digits will flash.
2. Rotate the button to set the hour.
3. Press the button. The minute digits will flash.
4. Rotate the button to set the minute.
5. Press the button. The alarm sound code digits will flash.
6. Rotate the button to select the alarm sound (S01-S10).
7. Press the button. The alarm volume digits will flash.
8. Rotate the button to set the alarm volume (V01-V16).
9. Press the button to save and exit.

** After setting the alarm, the alarm function is automatically enabled and the alarm icon will appear on the display.*

6

Snooze



When the alarm goes off, press the button to activate snooze mode. The snooze icon **Zz** will flash, and the alarm will go off again in 9 minutes.

Stop Alarm

When the alarm goes off or is in snooze mode, there are 2 ways to stop it for the day.

1. Press and hold the button for 2 seconds.
2. Press any button except .

** If no operation is performed, the alarm will automatically turn off after 30 minutes.*

Enable/Disable Alarm



Press the **ALARM ON/OFF** button to enable or disable the alarm. If disabled, the alarm icon will disappear from the display.

Light



1. Press the **LIGHT DIMMER** or **LIGHT COLOR** button to turn on the light.



2. Press the **LIGHT COLOR** button repeatedly to select the desired light color (C01-C10).

** C01-C08: fixed-color lighting
C09-C10: RGB lighting*



3. Press the **LIGHT DIMMER** button repeatedly to adjust the light brightness (L01-L05).



4. Press and hold the **LIGHT DIMMER** or **LIGHT COLOR** button to turn off the light.

7

Bluetooth

Tip: After connecting your phone via Bluetooth, the clock time will synchronize automatically. Some phones may display a prompt asking for access to message. Please allow access so the time can sync.



1. Press the **BT** button to turn on Bluetooth. The Bluetooth icon **BT** will flash on the display, indicating that it is in pairing mode.



2. Turn on Bluetooth on your phone and select "DS2268" from the Bluetooth list to initiate pairing.

** If pairing is successful, a voice prompt saying "connected" will be played, and the Bluetooth icon **BT** will remain steady.*



3. Press the button to play or pause audio.



4. Rotate the button to play the previous or next track.



5. Press the **BT** button to turn off Bluetooth.

Adjust the Audio Volume

- 1) Press or to adjust the volume.
- 2) Turn your phone's volume up or down.

Disconnect Bluetooth

When Bluetooth is connected, press and hold the **BT** button for 2 seconds to disconnect Bluetooth. A voice prompt "disconnected" will be played and the Bluetooth icon will flash on the display.

8

Set Sleep Sounds



1. Press the button to turn on the sleep sound.



2. Rotate the button to switch to the previous or next sound.



3. Press the button to play or pause the sleep sound.



4. Press or to adjust the volume.



5. Press and hold the button for 2 seconds to turn off the sleep sound.

** There are 26 sounds with the order as below*

S01. Brown Noise	S02. Pink Noise	S03. Blue Noise
S04. White Noise	S05. Soft Fan	S06. Household Fan
S07. Industrial Fan	S08. Loud Fan	S09. Rain
S10. Rain with Thunder	S11. Stream in the Cave	S12. Brook
S13. River	S14. Gentle Sea Wave	S15. Strong Sea Wave
S16. Little Sea Wave	S17. Bird	S18. Bonfire
S19. Train	S20. Tik-Tok	S21. Alpha Wave Music
S22. Heartbeat	S23. Summer Night	S24. Lullaby 1
S25. Lullaby 2	S26. Lullaby 3	

9

Set Countdown Timer



1. When the light, sleep sound or Bluetooth is on, press the button to enter timer setting mode.



2. Rotate the button to set the countdown time (10-480 minutes optional).



Or press the button repeatedly to set the countdown time.
** In timekeeping mode, press the button once to check the remaining countdown time.*



Turn off the Timer
Press and hold the button for 2 seconds to turn off the timer. The current light, sleep sound or Bluetooth will also be turned off.

Troubleshooting

1. Alarm doesn't go off at the set time?

- Check whether the alarm is set to AM or PM.
- Check whether the alarm is enabled (icon is displayed on the screen).

2. Display doesn't light up?

- Press the **DISPLAY DIMMER** button to increase the display brightness, in case the display is too dim to see.
- Check whether the power connection is loose.
- Try a different working outlet.

3. The clock time does not sync with my phone after Bluetooth pairing?

- Find Bluetooth device DS2268 on your phone and proceed to

10

forget this device. Then scan and re-pair with DS2268. If a pop-up window asks for access to your phone messages, please select Allow to access. (see the Bluetooth section for details).

** If the issue persists, please unplug the device and try the above steps again.*

4. Wireless charger not working?

- Check whether the power adapter is the original adapter (input: 100-240VAC output: 12VDC 4000mA).
- Make sure your device supports wireless charging.
- Reposition your device on the charging pad to align it properly (the charging indicator lights up).
- Remove all metal objects (such as magnetic rings, PopSockets, keys, bank cards) from the charging pad and your device.
- Remove your device's case and try again.

Our Warranty

30-Day Money-Back Guarantee for Any Reason

Within 30 days from the date of purchase, you may return your undamaged product to Amazon for a full refund for any reason.

12-Month Replacement for Quality-Related Issues

Within 12 months from the date of purchase, we provide a replacement for quality-related issues.

Kind Reminder

Please be sure to use the product according to the instructions.

Lifetime Customer Support

If you have any concerns, questions, or need assistance while using this product, please contact us by email at:

info@dreamsky4u.com

11

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

12

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

13