




## User manual

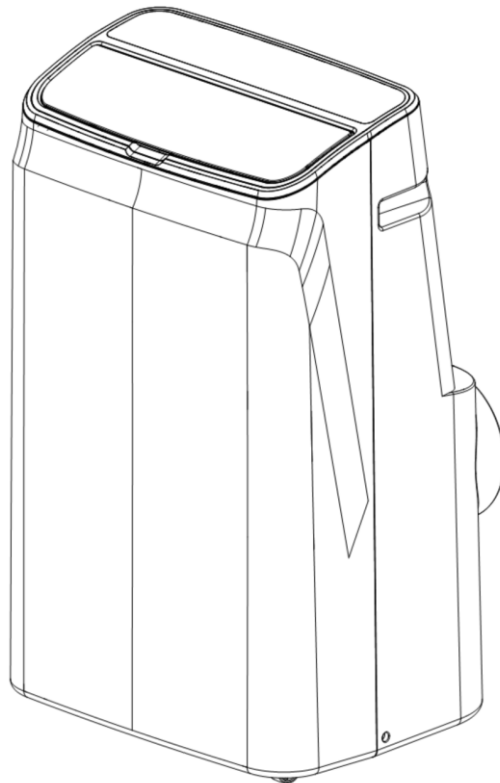

**P18CW**

**PORTABLE AIR CONDITIONER WITH WI-FI SMART APP**

Thank you for choosing electriQ.

Please read this user manual before using this innovative Air Conditioner and keep it safe for future reference.

Visit our page, [www.electriQ.co.uk](http://www.electriQ.co.uk), for our entire range of Intelligent Electricals.

# Welcome to electriQ

We hope you're happy with your new purchase.

We'd love to see how you're getting on.

If you share any snaps on your socials,  
make sure you tag us and use our hashtag.



**@electriQUK**  
**#electriQUK**

## We're here to help

Got a question or need help?

Get in touch with our friendly customer service team.



**0330 390 3061**

**support@electriQ.co.uk**

**Mon - Fri | 9am to 5pm**

**Unit 2A, Trident Business Park, Neptune Way,  
Leeds Road, Huddersfield, HD2 1UA**

# CONTENTS

|                                  |    |
|----------------------------------|----|
| SAFETY INSTRUCTIONS              | 4  |
| FEATURES                         | 6  |
| PARTS                            | 7  |
| INSTALLATION                     | 8  |
| OPERATION                        | 10 |
| REMOTE CONTROL                   | 13 |
| WI-FI SMART CONTROL              | 14 |
| CLEANING AND MAINTENANCE         | 22 |
| EMPTYING THE INTERNAL WATER TANK | 23 |
| TROUBLESHOOTING                  | 24 |
| ERROR CODES                      | 25 |
| TECHNICAL SPECIFICATION          | 25 |
| SUPPORT                          | 27 |

## SAFETY INSTRUCTIONS



### Important!

- Carefully read the instructions before operating the unit.
- This appliance is for indoor use only.
- Rating: This unit must only be connected to a 220-240 V / 50 Hz earthed outlet. The fuse rating can be found on the plug itself.
- Installation must be in accordance with the applicable regulations of the country where the unit is used.
- If you have any doubt about the suitability of your electrical supply, have it checked and, if necessary, modified by a qualified electrician.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities. It is also not intended for use by those with a lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do not leave children unsupervised with this appliance.
- You must follow the venting and set-up instructions; Incorrect operation can result in damage to the unit, which is not covered under your warranty.
- This air conditioner has been tested and is safe to use. However, as with any electrical appliance, use it with care.
- Do not obstruct any of the ventilation openings.
- The airflow should never be restricted, for example, by venting the unit into a condenser box or reducing the hose diameter, as this can damage the unit.
- Disconnect the power from the appliance before dismantling, assembling or cleaning.
- An authorised service representative should perform any service other than regular cleaning or filter replacement. Failure to comply could result in a voided warranty.
- Avoid touching any moving parts of the appliance.
- Never insert fingers, pencils or any other objects through the guard.
- **WARNING:** Do not pierce or burn any part of the unit.
- Do not clean the unit by spraying it or immersing it in water.
- Never connect the unit to an electrical outlet using an extension cord. If an outlet is not available, one should be installed by a qualified electrician.
- Never operate this appliance if the cord or plug is damaged. Ensure the power cord is not stretched or exposed to sharp objects/edges.
- A damaged supply cord should be replaced by the manufacturer or a qualified electrician to avoid a hazard.
- Do not use the appliance for any purpose other than its intended use.
- **The air conditioner unit must always be stored and transported upright; otherwise, irreparable damage may be caused to the compressor. If there is doubt, we suggest waiting at least 24 hours before starting the unit.**
- Avoid restarting the air conditioning unit unless 3 minutes have passed since being turned off. This prevents damage to the compressor.

- Never use the mains plug as a switch to start and turn off the air conditioning unit. Use the provided POWER button located on the control panel.
- Always place the unit on a dry, stable, flat surface.
- The appliance should not be installed in the laundry or wet rooms.
- The appliance must be placed in a room without sources of ignition (for example, open flames, an operating gas appliance or an operating electric heater).
- R290 refrigerant gas complies with European environmental directives.
- R290 has a low GWP (Global Warming Potential) of 3.
- The air conditioners contain the following quantity of refrigerant gas:

|       |      |
|-------|------|
| P18CW | 300g |
|-------|------|

- Do not install or store in an unventilated space with an area smaller than shown in the table below per system. Smaller room sizes may be suitable if other safety measures are implemented and a risk assessment is conducted

|       |                      |
|-------|----------------------|
| P18CW | 14.40 m <sup>2</sup> |
|-------|----------------------|

- The room must be designed to prevent the stagnation of possible refrigerant leaks, as there could be a fire or explosion hazard if the refrigerant comes into contact with electric heaters, stoves, or other sources of ignition.
- **WARNING:** The appliance must be stored in a room without continuously operating ignition sources, for example, open flames, an operating gas appliance or electric heaters.
- Only store and use the unit whilst upright; do not lay it down or tip it.
- Do not place the unit near any ovens or other heat sources. This may be dangerous, but it will lead to the unit working harder and using more energy.
- Do not place the unit in direct sunlight; this can affect its appearance and cause it to work harder and be less energy efficient.
- Refrigerant gas may be odourless.
- Do not use the product and contact the retailer for advice if damage has occurred to the unit, which may have compromised the refrigerant system.
- Any repairs or maintenance must only be conducted by a suitably qualified engineer. Before opening and servicing the unit, the authorised engineer must possess a copy of the manufacturer's service manual and follow the safety information it contains to minimise all hazards.
- The refrigerant system should not be perforated or punctured.
- At the end of the unit's lifetime, always dispose in line with local regulations.
- Ensure all storage conditions in the manual are followed.
- **WARNING:** Do not use means to accelerate the defrosting process or to clean the unit.

|                                                                                   |                                                                                                                                                             |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>WARNING:</b> This appliance contains flammable refrigerant. If this leaks and comes into contact with an external ignition source, there is a fire risk. |
|  | <b>CAUTION:</b> The operation manual should be read thoroughly.                                                                                             |
|  | <b>CAUTION:</b> Any service personnel working on the unit should read the service manual prior.                                                             |
|  | <b>CAUTION:</b> Information on operation and servicing is in the manual.                                                                                    |


## ENERGY SAVING AND UNIT SAFETY PROTECTION TIPS

- Do not cover or restrict the airflow from the outlet or inlet grilles.
- For maximum performance, the minimum distance from a wall or object should be 50cm.
- Keep the filters clean. Under normal conditions, filters should only need cleaning once every three weeks (approximately). Since the filters remove airborne particles, more frequent cleaning may be necessary, depending on the air quality.
- For the initial start-up, set the fan speed to maximum and the thermostat to 5 degrees lower than the current temperature. Afterwards, set the fan switch to low and set the thermostat to your desired setting.
- To protect the unit, we recommend not using the cooling function when the ambient temperature exceeds 35 °C. The unit's performance may be affected at lower temperatures than this. If a scorching day is predicted, running the unit overnight in the desired room is recommended.


## FEATURES

- 3 in 1 cooling, fan, and dehumidifier.
- 3-speed fan: Balancing quiet operation with performance.
- Smart logic for improved energy efficiency.
- Washable Dust Filter
- 24 Hours Start/Stop Timer
- Digital Thermostat: Set the temperature between 16°C and 31°C.
- Wi-Fi app control.
- Remote Control.
- Castors and Handle for Enhanced Portability.

## PART LIST

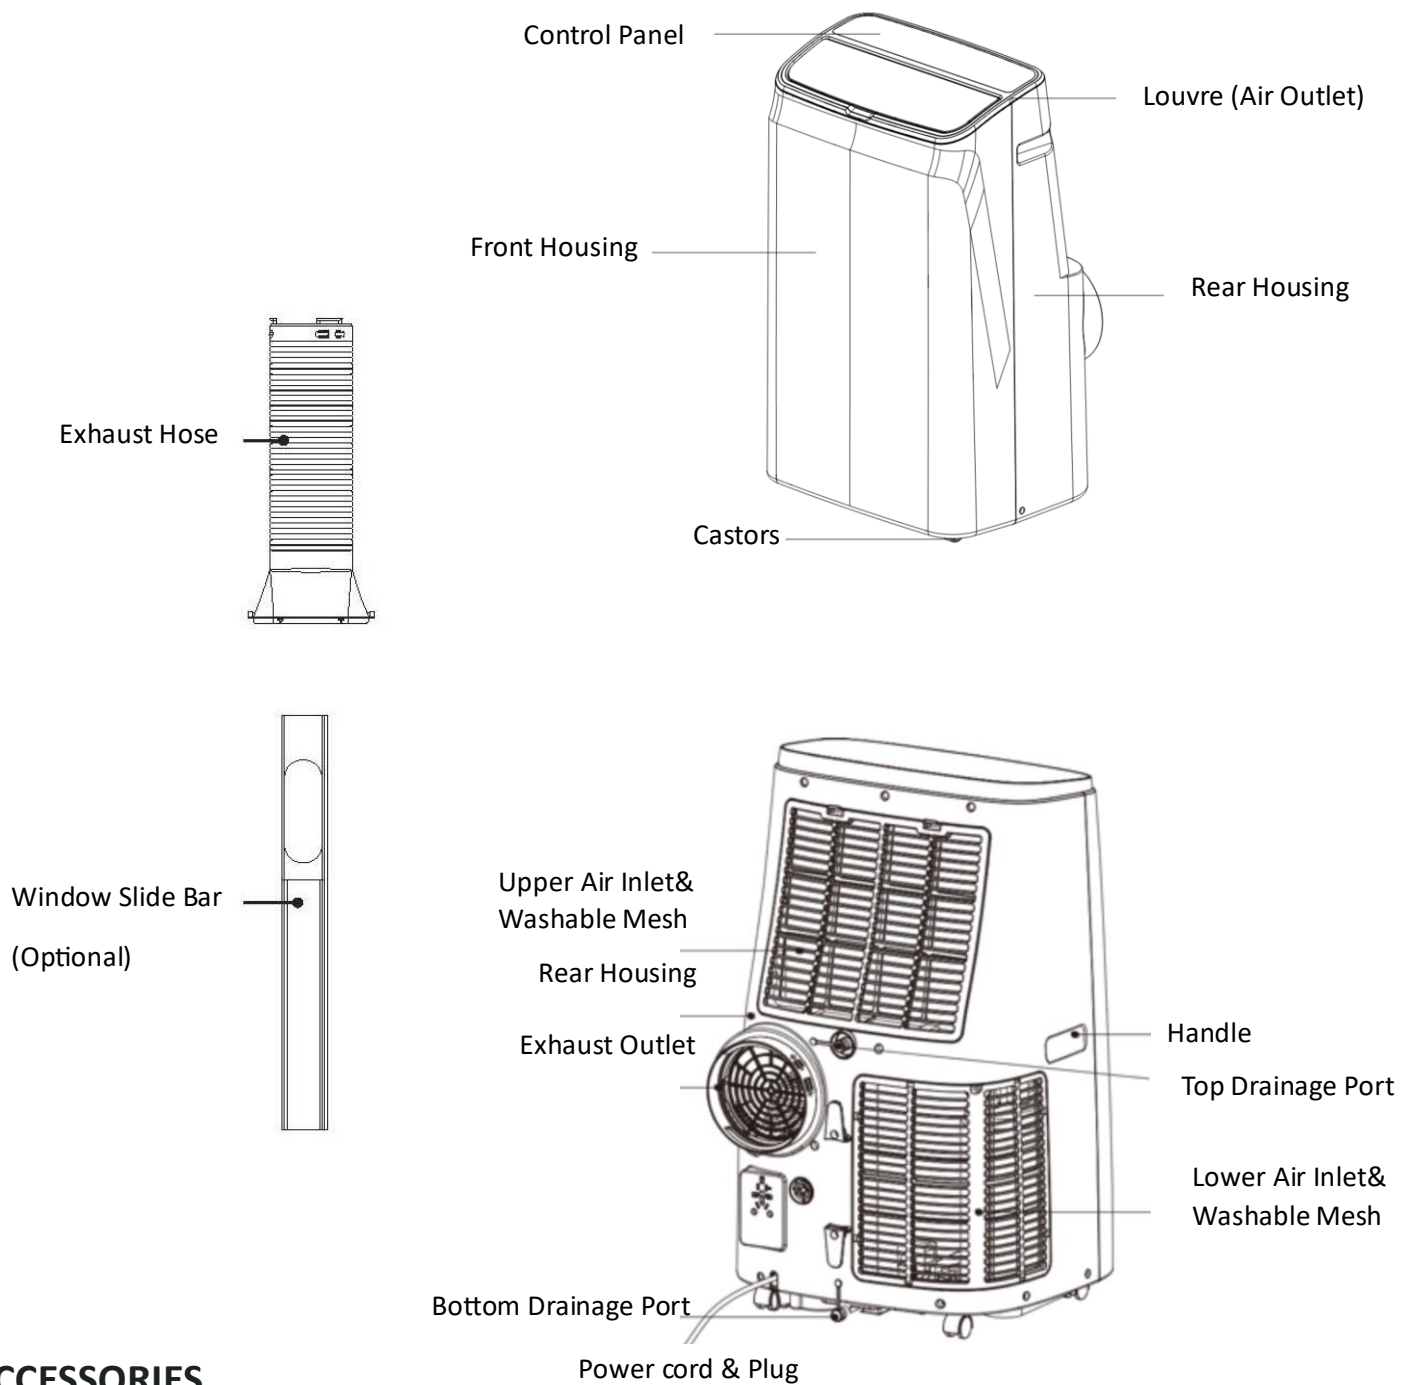

## ACCESSORIES

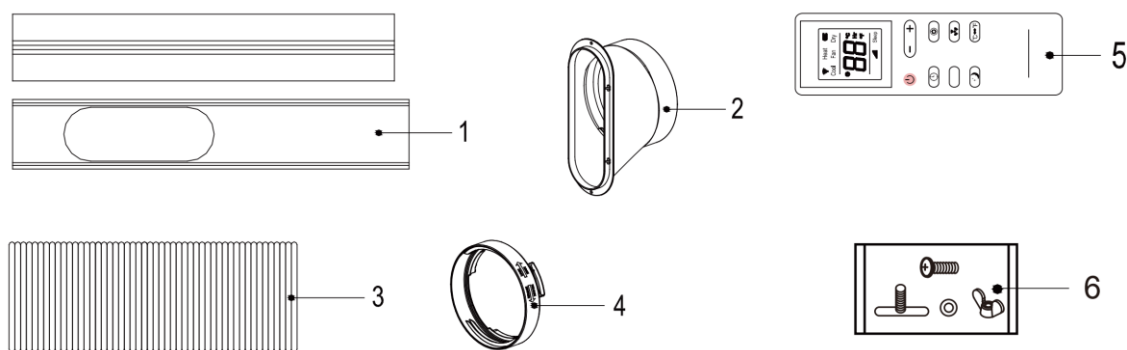

1. Window Slide Bar (Optional) 2. Fishtail- hose ending 3. Hot Air Exhaust Hose  
4. Ducting Adapter 5. Remote Control 6. Slide bar screw set (Optional)


## INSTALLATION

**WARNING:** Before using this unit, please keep it upright for at least 3-4 hours.

This unit can easily be moved from one room to another.


While moving the unit, please keep it upright and place it on an even surface.

**IMPORTANT:** The exhaust hose only needs to be fitted in cooling mode.


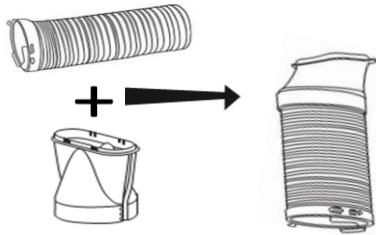


1. Extend the end of the hose, twist the fishtail connector firmly into place.

2. Attach the Hose to the Exhaust adaptor in the same way by extending the end of the hose and twisting until firmly in place

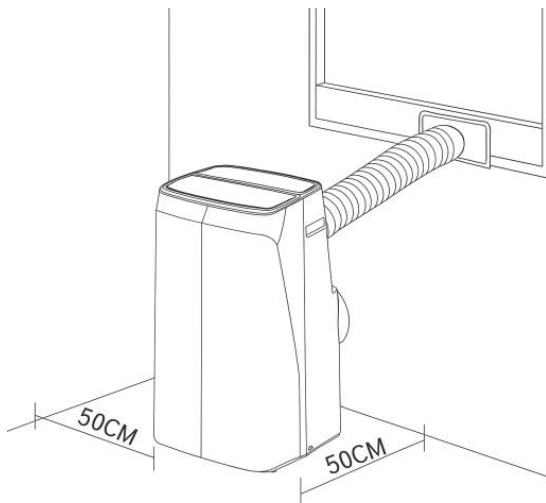


3. Make sure the unit is upright, and there are no obstructions to the air inlets and outlet grilles, with at least 50cm of space to the sides and rear of the unit.

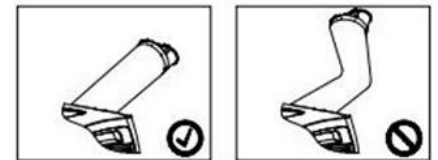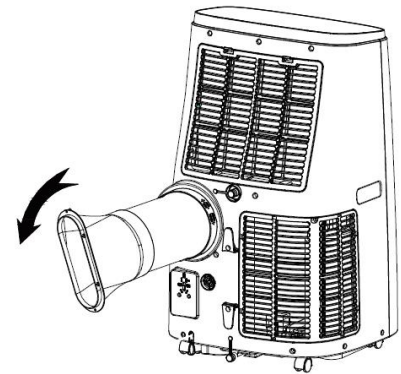

## IMPORTANT SAFEGUARDS


The length of the soft hose extends from approximately 35 cm to 200 cm. If the hose is extended above this length, the unit may malfunction, which can invalidate the warranty. The outlet vent must be well-ventilated and unobstructed, or the unit will overheat. Keep the hose as straight and short as possible and avoid bending the air hose by more than 30 degrees to maintain the unit's performance. Excessive bends in the hose may prevent the unit from expelling hot air, leading to internal damage and invalidating the warranty.

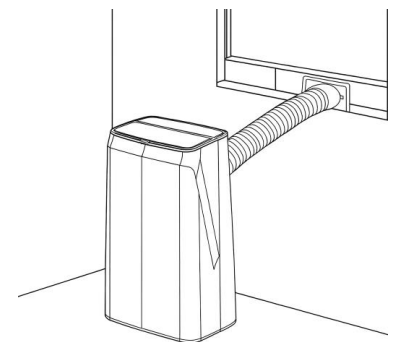

## INSTALLATION OF WINDOW KIT (OPTIONAL)

The window kit (slide bar and fishtail adaptor) is suitable for use with sliding windows and doors. For other window types, use the fishtail adaptor alone and reduce cooling loss by closing curtains or using a window seal or blockers such as AC-AIRLOCK.

1. Slide the rear section of the slide bar onto the front section, lining up the plate so it runs within the groove. Extend the bar to the required length and use the supplied wing nut to secure it.

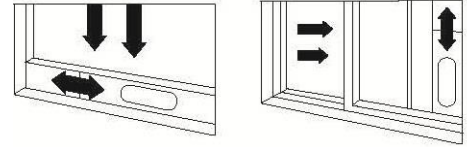

2. Push the screw thread of the plate through the hole in the rear of the front slide bar section.




3. Partially open the window and place the extended slide bar in position before closing the window onto it.
4. Fix the fishtail adaptor into the opening on the slide bar.

### NOTES:

- The window kit is only designed to be installed with sliding or sash windows or doors. The window kit is not designed to be used with any other style of windows.
- The fishtail adaptor can be used without the slide bar with most windows/doors.
- When using the air conditioner, ensure that the opening around the fishtail adaptor is as small as possible to ensure the unit's efficiency is not reduced.
- The best form of installation is through a wall duct. By adequately venting, you expel hot air from your room while efficiently cooling it.
- Your air conditioner should be used without the vent hose in dry mode. When using dry mode, ensure an external water tank is used, monitored, and regularly emptied to prevent overflow.

OPERATION

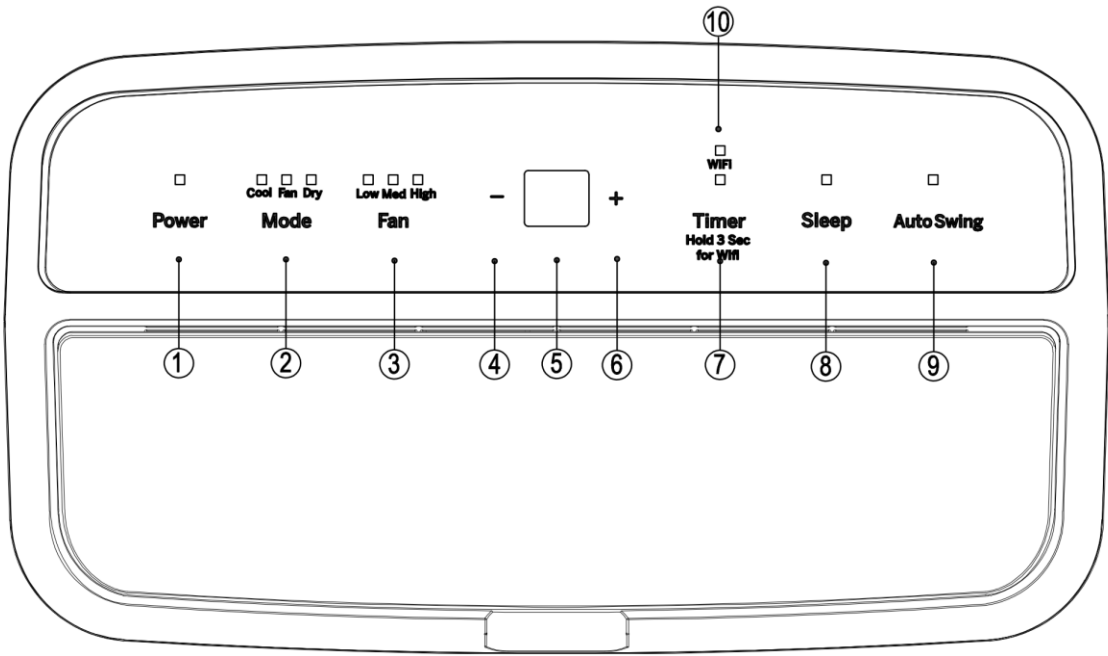

- 1) Power Button 2) Mode Button 3) Fan Button  
4) - Button 5) LED Display 6) + Button  
7) Timer Button 8) Sleep Button 9) Swing Button 10) Wi-Fi LED


|        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|--------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| POWER  | Press the POWER button to turn the unit ON or OFF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| MODE   | <p>Press the MODE button to cycle through the 3 modes; the indicator for the selected mode will illuminate.</p> <p><b>COOL:</b> The room is cooled by cold air expelled through the front air outlet, while hot air is expelled through the vent hose. The desired room temperature can be set between 16 and 31 degrees using the + and – buttons, and the fan speed can be changed using the FAN button. The unit will reach 1 degree over the target temperature. The compressor will turn off when the unit detects that it is 1 degree out of the target temperature. The unit will restart the compressor.</p> <p><b>FAN:</b> Fan speed can be adjusted by pressing the FAN button. Low, Medium, High. Fan speed adjustment is not available in DRY and SLEEP mode</p> <p><b>DRY (DEHUMIDIFY):</b> Should be operated without the vent hose, but with continuous drainage to remove moisture from the air. The display will show dH while in dry mode. The fan speed is set to low and is not adjustable. We advise continuous drainage to be set up in DRY mode.</p> |
| +<br>- | Used to adjust the temperature in COOL mode and to set the duration of the TIMER. The buttons are not used in FAN or DRY modes.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |



| FAN       | <p>Press the SPEED button to change between the fan speeds. The display and LEDs will indicate the currently selected fan speed. The fan speed cannot be altered in SMART COOL and DRY modes.</p> <table><tr><th>Fan Speed</th><th>Display</th><th>LEDs Illuminated</th></tr><tr><td>Low</td><td>F1</td><td>Low</td></tr><tr><td>Medium</td><td>F2</td><td>Medium</td></tr><tr><td>High</td><td>F3</td><td>High</td></tr></table>                                                                                                                                                                                                                                                                                                                                         | Fan Speed        | Display | LEDs Illuminated | Low | F1 | Low | Medium | F2 | Medium | High | F3 | High |
|-----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------|---------|------------------|-----|----|-----|--------|----|--------|------|----|------|
| Fan Speed | Display                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | LEDs Illuminated |         |                  |     |    |     |        |    |        |      |    |      |
| Low       | F1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Low              |         |                  |     |    |     |        |    |        |      |    |      |
| Medium    | F2                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | Medium           |         |                  |     |    |     |        |    |        |      |    |      |
| High      | F3                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | High             |         |                  |     |    |     |        |    |        |      |    |      |
| SLEEP     | <p>Press to enter sleep mode. The sleep indicator will be illuminated, and all other indicators will be turned off. In sleep mode, the appliance works at low fan speed. Press SLEEP again to exit sleep mode.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |                  |         |                  |     |    |     |        |    |        |      |    |      |
| TIMER     | <p>The timer functions cannot be combined or repeated.</p> <p><b>POWER ON TIMER</b></p> <p>With the appliance in standby, press the TIMER button to set the power-on timer. Use the + and - buttons to adjust the timer's duration (1 to 24 hours). The Timer indicator will turn on, and the unit will start after the selected number of hours.</p> <p><b>POWER OFF TIMER</b></p> <p>With the appliance running and set to the desired settings, press the TIMER button to set the power-off timer. Use the + and - buttons to adjust the timer's duration (1 to 24 hours). The timer indicator will illuminate, and the unit will stop after a selected number of hours.</p> <p><b>Keep TIMER button pressed for 3 seconds to activate Wi-Fi pairing function.</b></p> |                  |         |                  |     |    |     |        |    |        |      |    |      |
| SWING     | <p>Press this button to enable the swing function. The louvres will slowly move back and forth. If the swing is pressed again, the louvres will stop in their current position.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |                  |         |                  |     |    |     |        |    |        |      |    |      |

**Memory Function:** The appliance automatically retains its previous settings in the event of a power interruption.

# REMOTE CONTROL

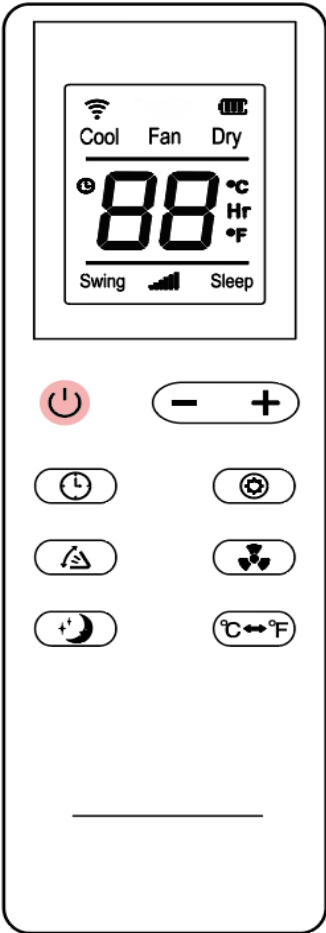

|      |                                                                                                                        |
|------|------------------------------------------------------------------------------------------------------------------------|
|      | <b>POWER:</b> Press to turn the unit on or off.                                                                        |
| <br> | Press to increase or decrease the desired temperature or set the timer duration.                                       |
|      | <b>MODE:</b> Repeatedly press to select your desired mode.                                                             |
|      | <b>FAN SPEED:</b> Repeatedly press to select your desired fan speed: Low, Medium, High.                                |
|      | <b>TIMER:</b> Press to set the timer.                                                                                  |
|      | <b>SWING:</b> Press to activate swing mode. Press again, and it will stop in position.                                 |
|      | <b>SLEEP:</b> Press to enter sleep, press again to exit sleep. Unit will work in power saving mode on lower fan speed. |
|      | Switches the temperature display between Celsius and Fahrenheit.                                                       |

## REPLACING THE BATTERIES

Remove the battery cover, insert two AAA batteries following the correct polarity, then reattach the battery cover securely. Do not use the remote if the battery cover does not securely attach.



## MULTI PROTECTIVE FUNCTIONS

### FROST PROTECTION

In COOL or DRY modes, if the exhaust temperature is too low, the machine will automatically stop until the temperature rises.

### OVERFLOW PROTECTION

When the water in the internal water tank exceeds the warning level, the machine will stop operating and sound an alarm with the LCD showing "FL". To resume operation, empty the internal water tank. After emptying the water, the machine will automatically return to its original state.

### AUTO-DEFROST

The machine has an automatic defrosting function. If the internal coils' temperature drops too low during operation, the unit will enter auto defrost.

### AUTOMATIC THERMAL PROTECTION

To protect the machine's service life, it features automatic thermal protection. If the temperature within the unit is outside of the specified range, the compressor and the lower motor will stop operation. After the machine's temperature returns to normal, the appliance will automatically resume regular operation.


### COMPRESSOR PROTECTION

There is a 3-minute delay in starting the protection function to prevent damage to the compressor.

## FILTER CLEANING

To clean the mesh filters on a portable air conditioner, begin by switching off and unplugging the unit. Access both the evaporator-side and condenser-side filters—typically located behind separate rear panels as in diagram attached.

Open each panel and carefully remove the mesh filters. Rinse them under lukewarm water to remove dust and debris; use a soft brush and mild detergent if needed. Ensure both filters are completely dry before reinstalling to prevent moisture buildup. Cleaning both filters every two weeks during active use helps maintain airflow, cooling efficiency, and prolongs the unit's lifespan.

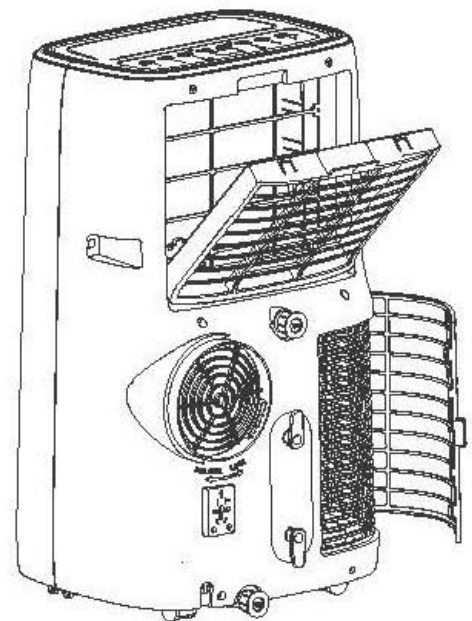

# Wi-Fi SMART CONTROL

## BEFORE YOU START

- Ensure your router provides a standard 2.4Ghz connection.
- If your router is dual-band, ensure that both networks have different network names (SSID). Your router / Internet service provider can provide advice specific to your router.
- Place the air conditioner as close as possible to the router during setup.
- Once the app has been installed on your phone, turn off the data connection, and ensure your phone is connected to your router via Wi-Fi and the Bluetooth on your phone is turn on.

## DOWNLOAD THE APP TO YOUR PHONE

Download the "TUYA SMART" app from your chosen app store, using the QR codes below, or by searching for the app in your chosen store.



Android



IOS

## CONNECTION METHODS AVAILABLE FOR SETUP

Before starting the setup, with the air conditioner plugged in, but turned off, press and hold the **TIMER** button for 3 seconds (until you hear a beep) to enter the Wi-Fi connection mode. The Wi-Fi light on the air conditioner will flash to show it is ready to connect.


When connecting the Air Conditioner to your Wi-Fi network there are two ways your network details can be uploaded to the appliance:

**Bluetooth method:** If you have turned on Bluetooth and GPS on your phone, the app will detect the Air Conditioner and guide you through the simple setup process.


**AP connection method:** Uses a direct local Wi-Fi connection between your phone and the air conditioner, allowing the app to upload the network details. This is ideal when you do not have a Bluetooth enabled device or encounter problems following the Bluetooth setup.

## REGISTER THE APP


1. Press on the Sign Up button at the bottom of the screen.

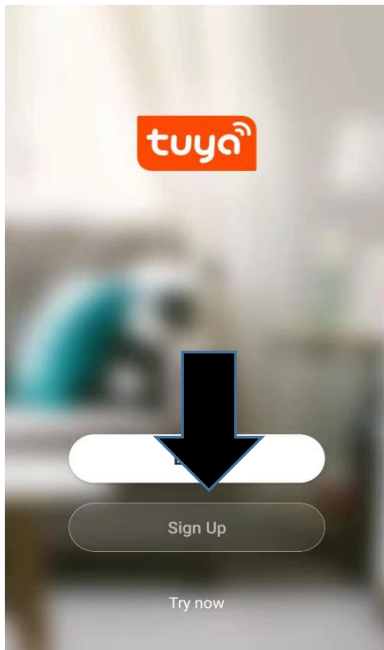

2. Read the Privacy policy and press the Agree Button.

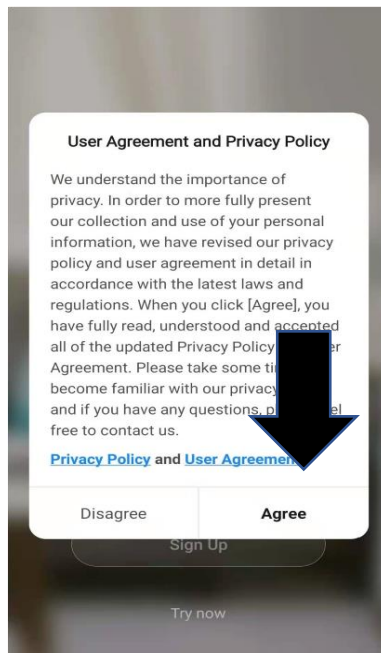

3. Enter your email address or phone number and press continue to register.

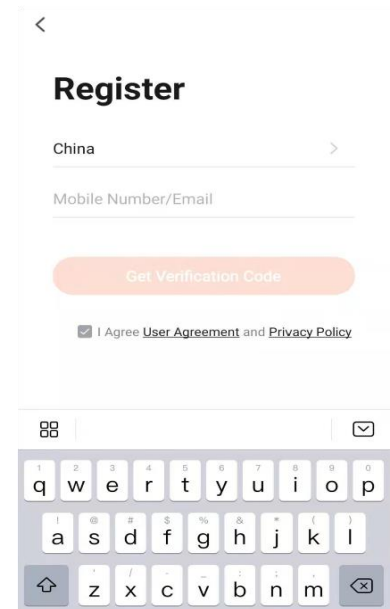


4. A verification code will be sent by the method selected in step 3. Enter the code into the app.



### Verification Code

Verification code has been sent to: Resend(57s)

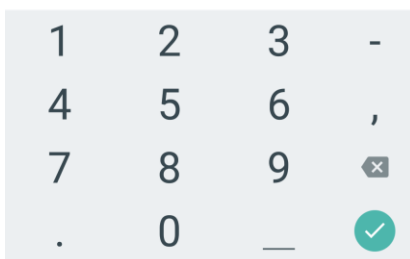


5. Type in the password you would like to create. This needs to be 6-20 characters, with letters and numbers.




### Set Password

Password must contain 6-20 letters and numbers

Done

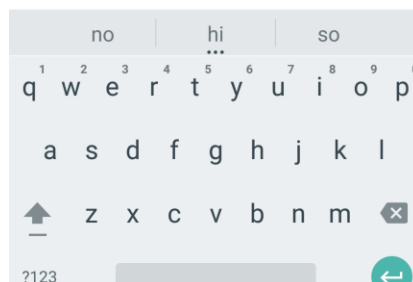



6. The app is now registered. It will automatically log you in following registration.

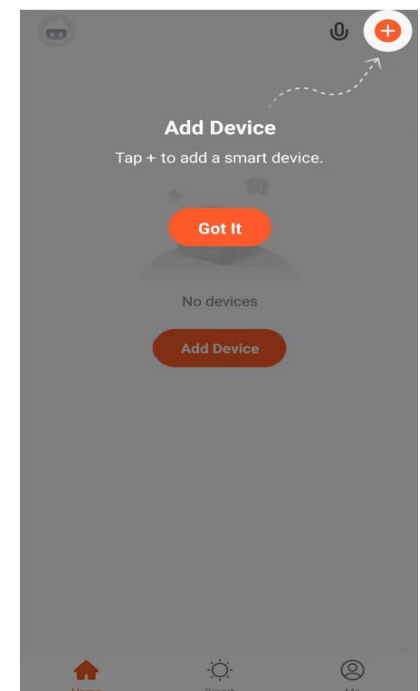

## SETTING UP YOUR HOME WITHIN THE APP

TUYA is designed to work with a large number of compatible smart devices within your home and multiple devices within different houses. As such, during setup, the app requires that different areas be created and named to make it easier to manage all your devices. When devices are added, they are assigned to one of the rooms you have created.


### CREATING ROOMS
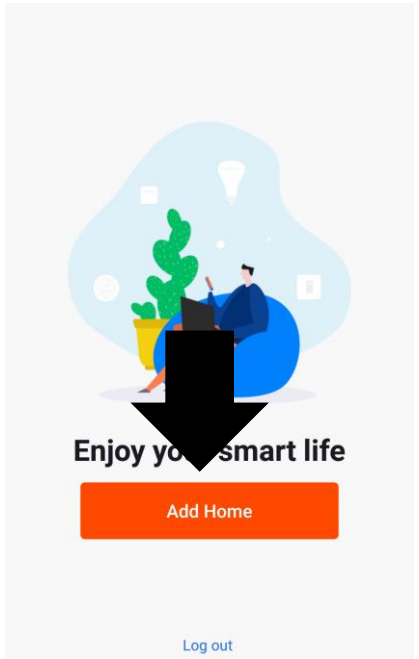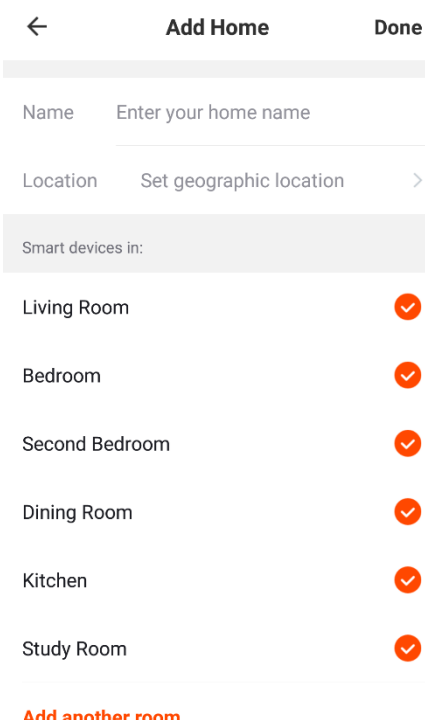
|                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|----------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1. Press on the ADD HOME button.</p>  | <p>2. Type in a name for your home</p> <p>3. Press on the location button to select the location of your home. (See SETTING YOUR LOCATION below)</p> <p>4. New rooms can be added by pressing the ADD ANOTHER ROOM option at the bottom. (See ADD ANOTHER ROOM below)</p> <p>5. Untick any rooms that are not required on the app.</p> <p>6. Press DONE in the top right corner.</p>  |
|----------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### SETTING YOUR LOCATION


Use your finger to move the orange HOME symbol.

When the symbol is in the approximate location of your home, press the confirm button in the top right corner.

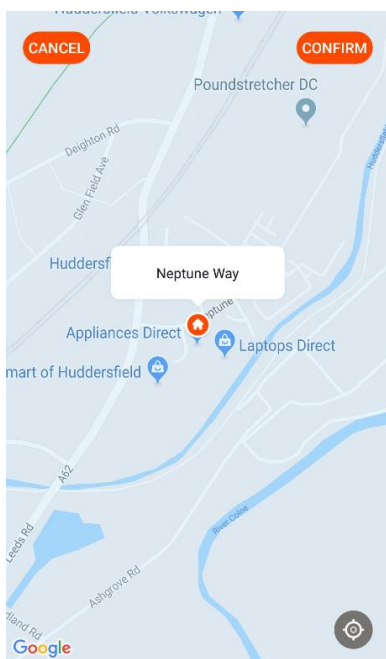

### ADD ANOTHER ROOM


Type in the name of the room, and press Done in the top right corner

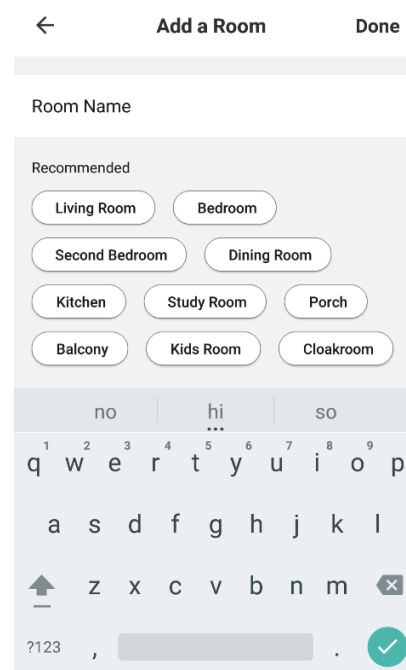


## CONNECTING USING EZ (QUICK CONNECTION) MODE

Before initiating the connection, make sure the unit is in standby mode and that the Wi-Fi light is flashing twice per second. If not, follow the instructions for changing the connection mode. Also, ensure your phone is connected to the Wi-Fi network. (We advise turning mobile data off during setup)


1. Open the app and press “+” to add device

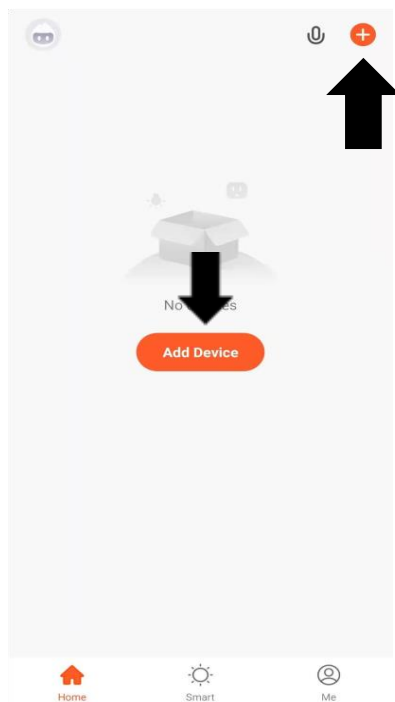


2. Select the type of device as “Air Conditioner (Wi-Fi)” within the Large Home Appliance tab.

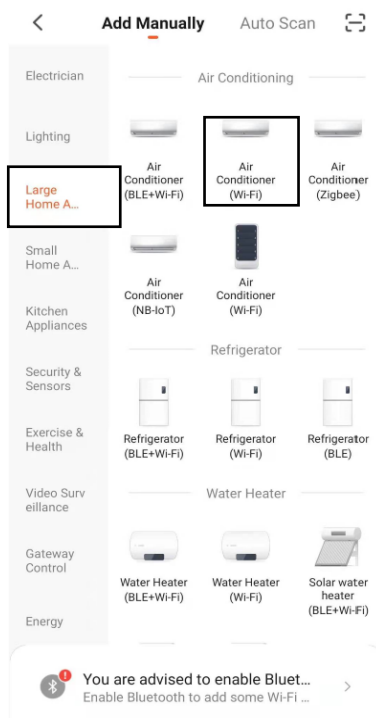


3. Ensure the Wi-Fi light on the air conditioner is flashing twice per second then press on the orange button at the bottom of the screen to confirm

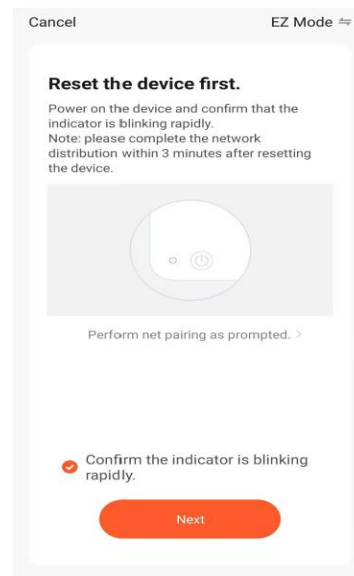

4. Select your network, enter your Wi-Fi password and press Next.

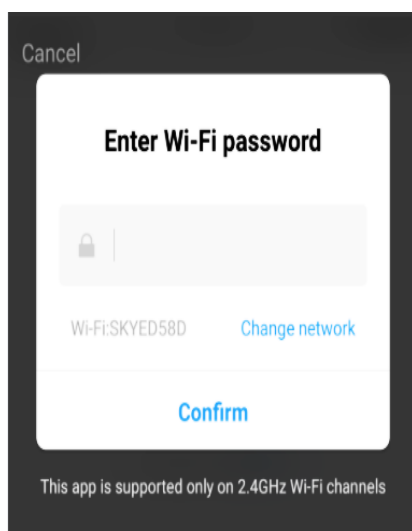


5. This will then transfer the settings to the air conditioner. Wait for this to complete. If this fails, retry. If still unsuccessful, please review the troubleshooting section for further help.

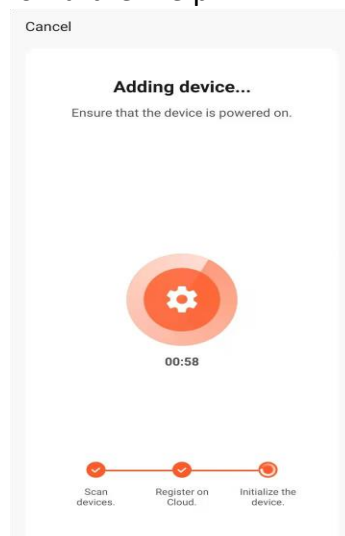


## CONNECTING USING AP MODE (ALTERNATIVE METHOD)

Before initiating the connection, make sure the unit is in standby mode and that the Wi-Fi light is flashing once per second. If not, follow the instructions to change the Wi-Fi connection mode. Ensure your phone is connected to the Wi-Fi network. (We advise turning mobile data off during setup)


1. Open the app and press “+” to add device

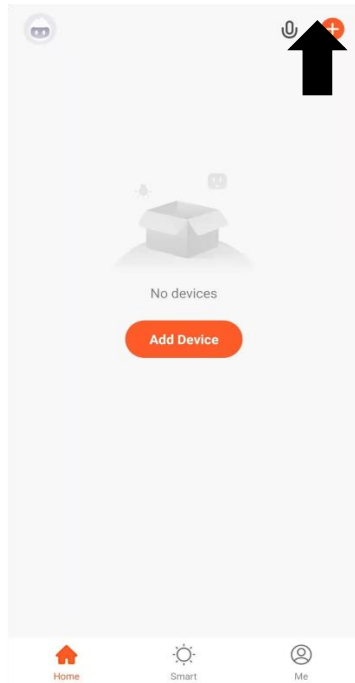


2. Select the type of device as “Air Conditioner (Wi-Fi)” within the Large Home Appliance tab.

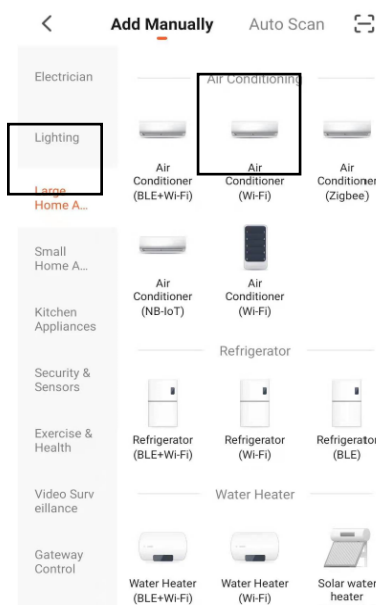


3. Select your network, enter your Wi-Fi password and press Next.

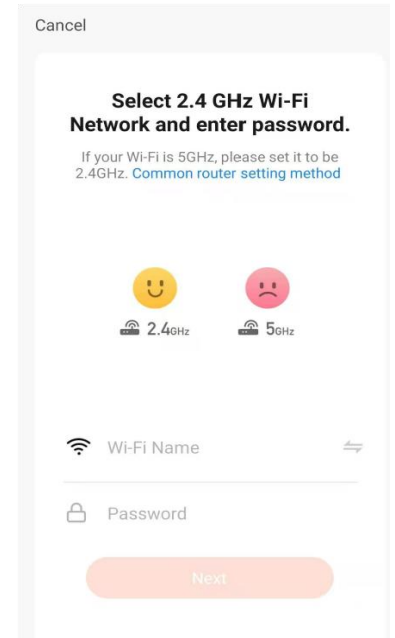


4. Ensure the Wi-Fi light on the air conditioner is slowly flashing (once per three seconds), then select AP Mode in the top right corner before pressing on the orange button at the bottom of the screen to confirm

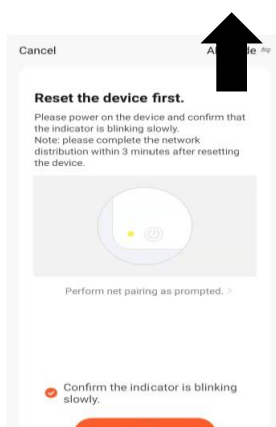

5. Go to network settings in your phone and connect to the “SmartLife xxx” connection. then press on the orange button at the bottom of the screen to confirm

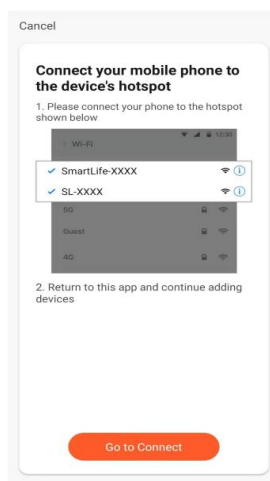

6. Go to network settings in your phone and connect to the “SmartLife xxx” connection. There is no password to enter. Then return back to the app to complete setup.

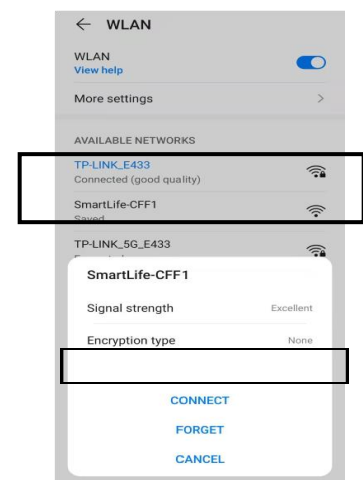


This will then transfer the settings to the air conditioner.

Once the connection process has completed, go back to the network settings on your phone to ensure your phone has reconnected to your Wi-Fi router.

## CONTROLLING YOUR DEVICE THROUGH THE APP


### THE HOME SCREEN

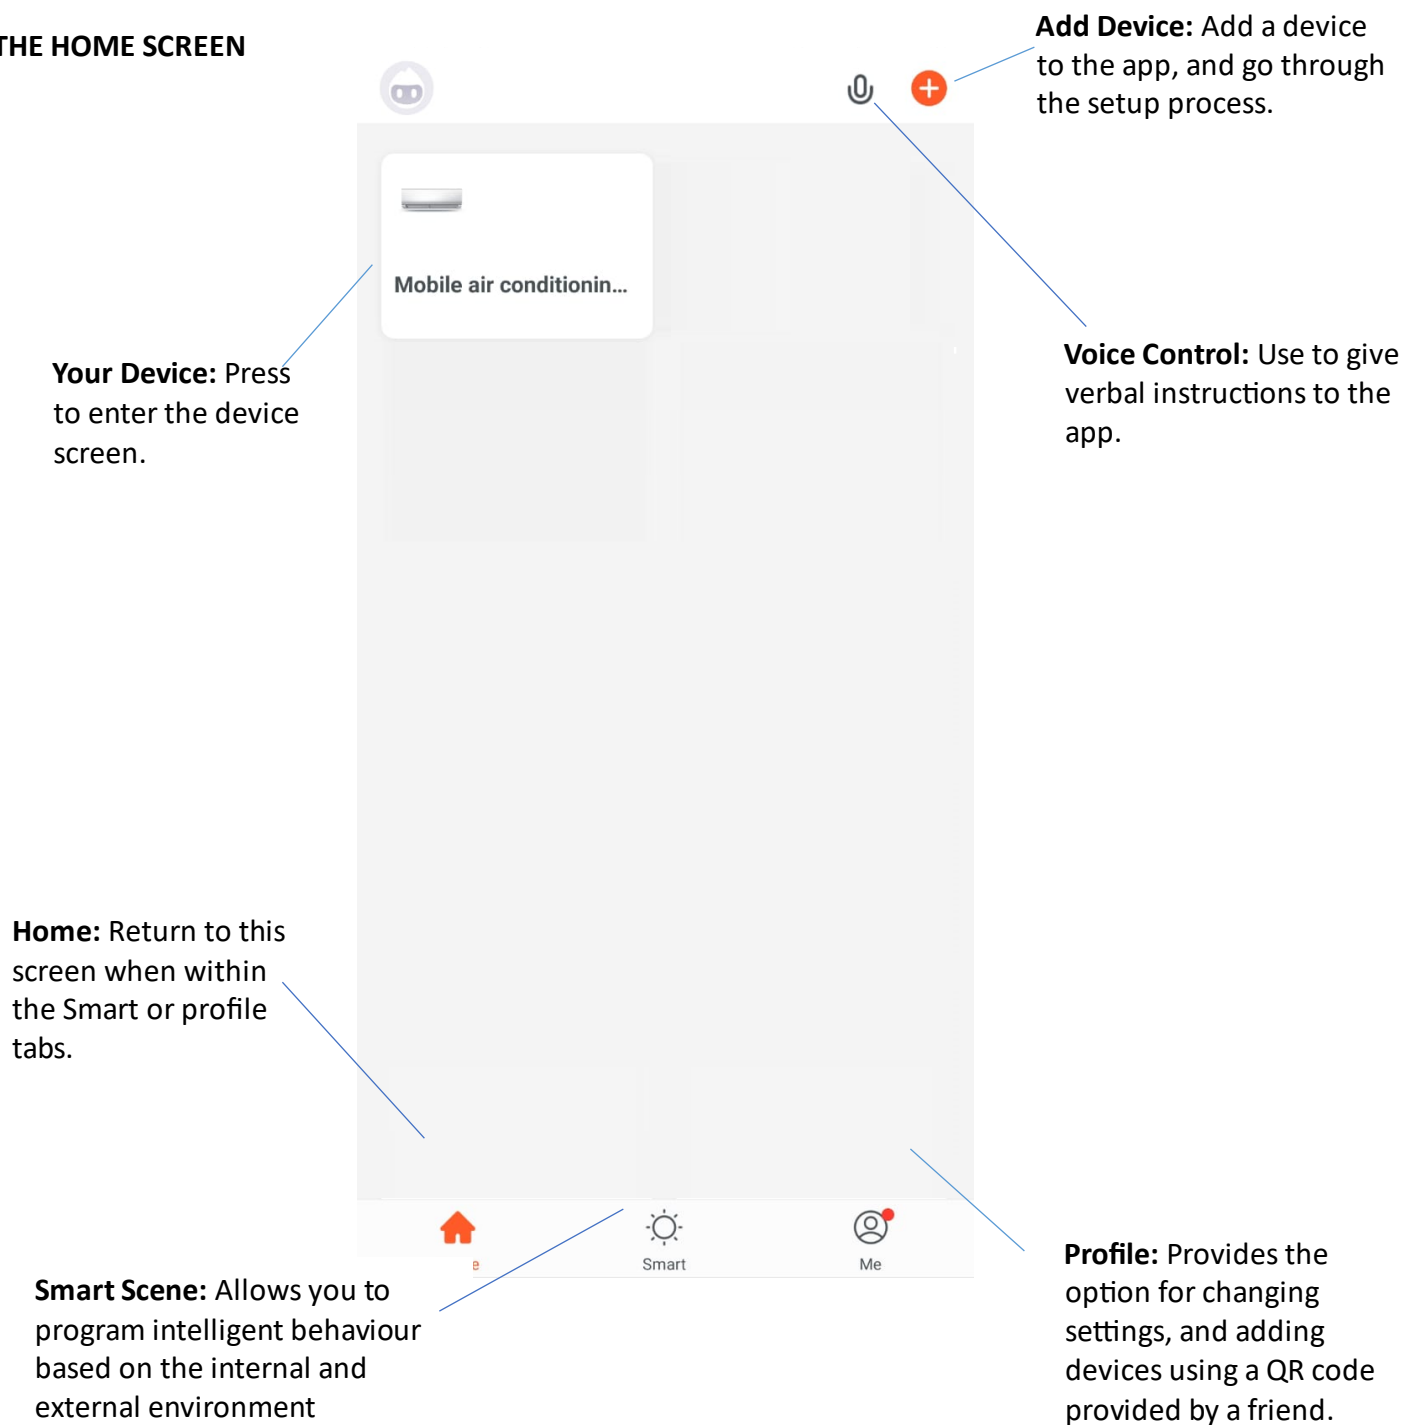

Each device has its own entry on the home screen, allowing the user to quickly turn the unit on or off or enter the device screen to make other changes.

## DEVICE SCREEN

The device screen is the main control screen for the air conditioner, providing access to the controls for adjusting functions and settings.

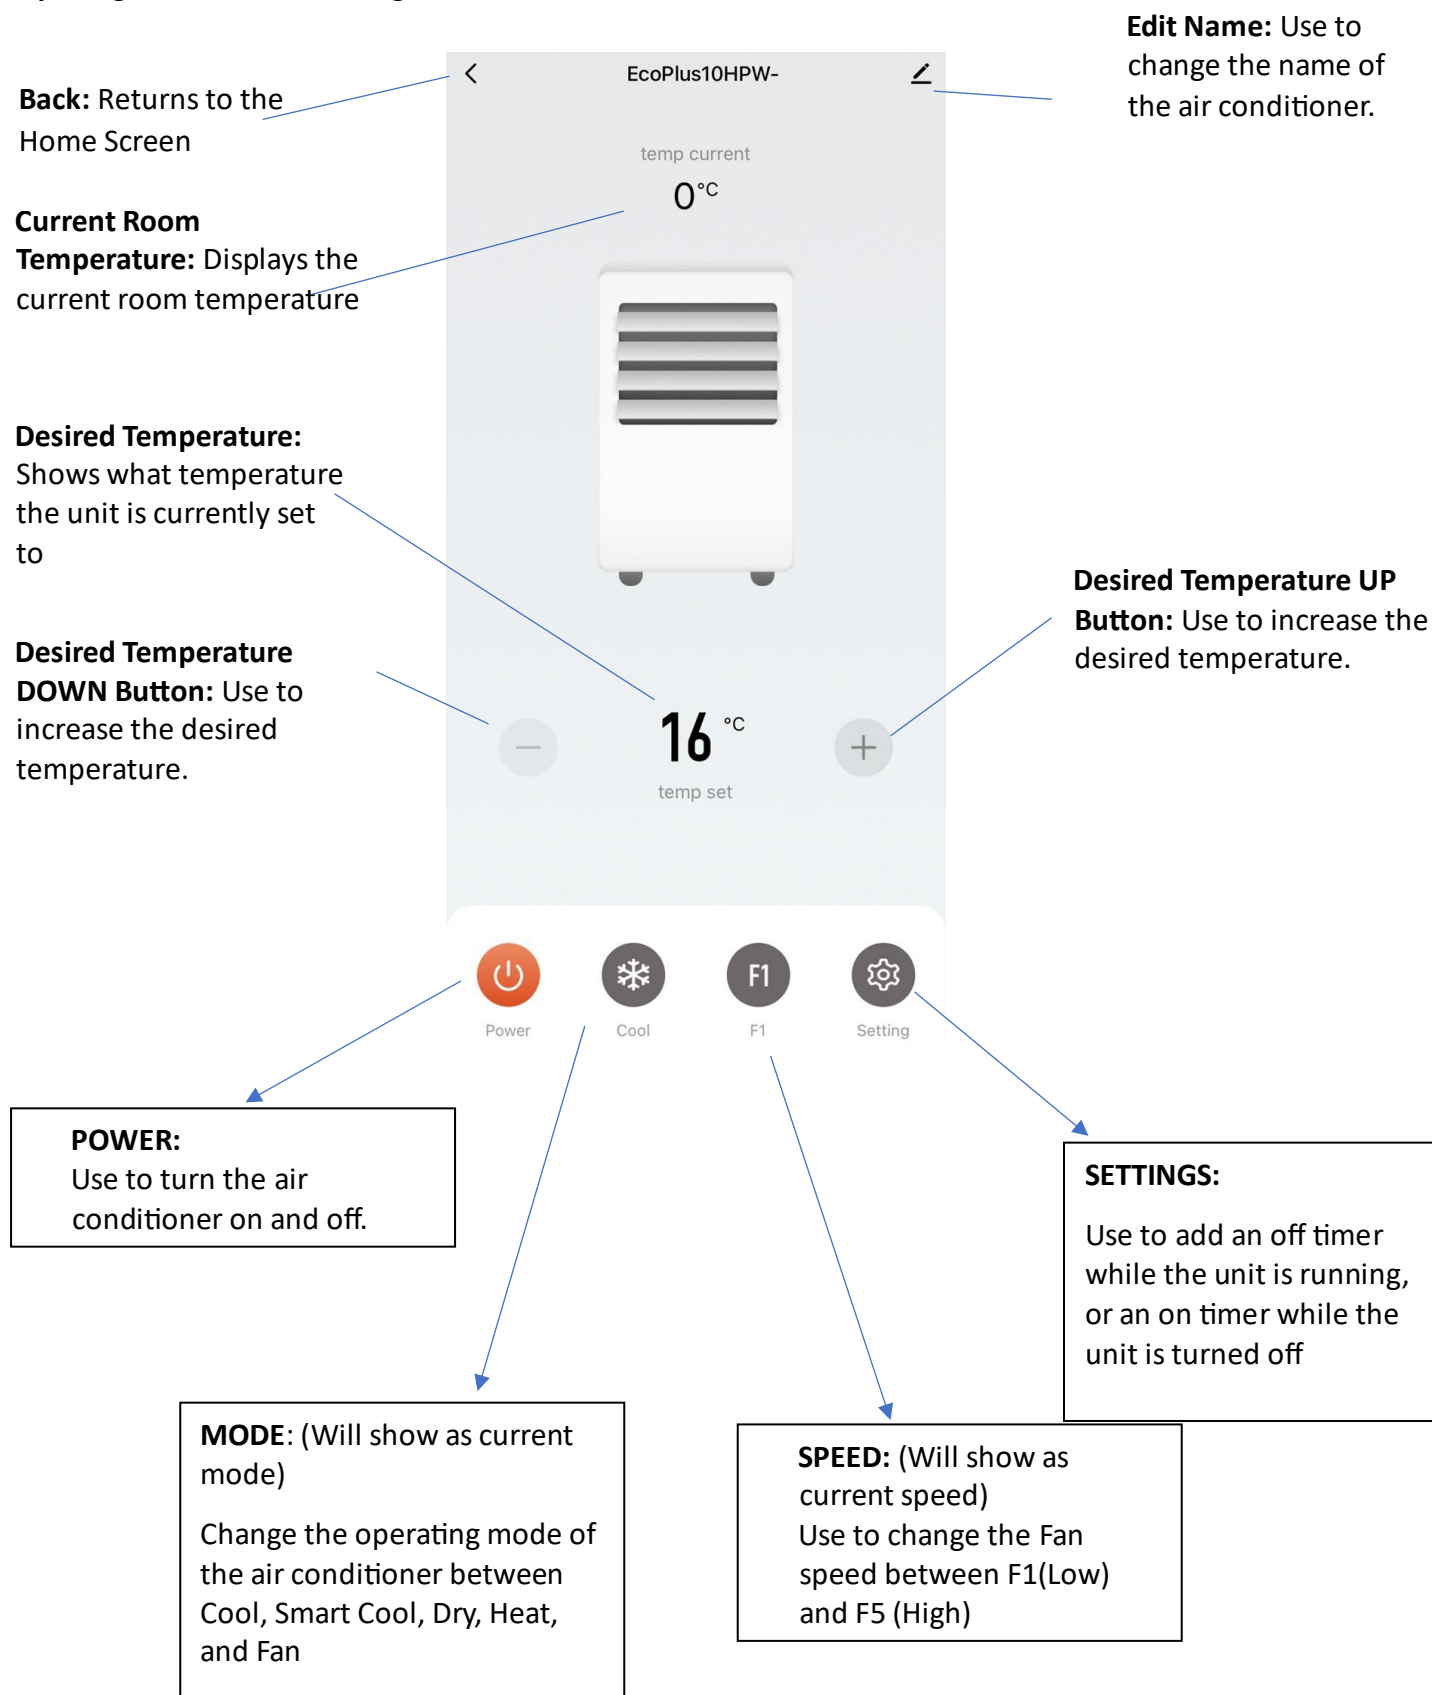

Due to ongoing app development, the layout and available features may change.







## SMART SCENES

Smart Scenes is a powerful tool that lets you customise the air conditioner's operation based on both room conditions and external factors. This gives the user the option of specifying much more intelligent actions. These are split into two categories: Scene and Automation.

### SCENE

Scene allows for a one-touch button to be added to the Home screen. The button can be used to change multiple settings at once and adjust all settings within the unit. A number of scenes can be set up, allowing the user to switch between preset configurations.


Below is an example of how to set up a scene:
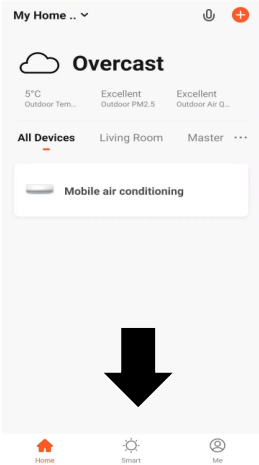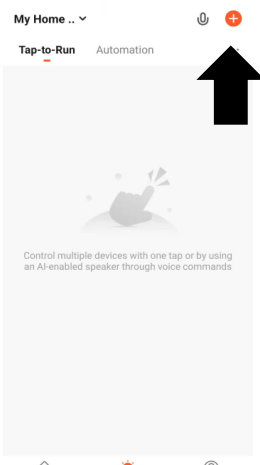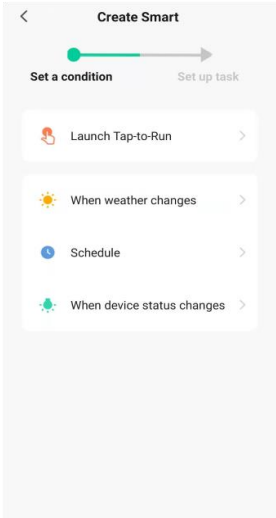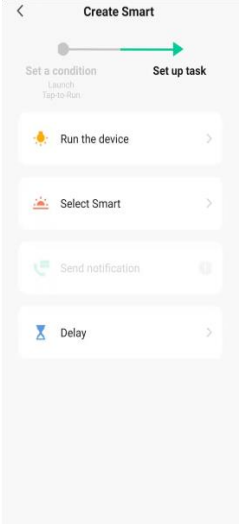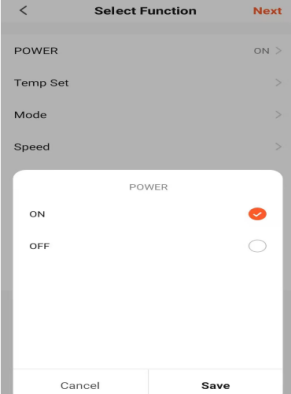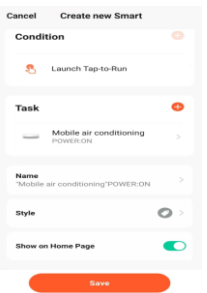
|                                                                                                                                                                                                                                  |                                                                                                                                                                                                                                |                                                                                                                                                                                                                                                |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1. Press on the Smart Scene tab at the bottom of the Home screen</p>                                                                        | <p>2. Press on the Plus in the top right corner to add a smart scene.</p>                                                                    | <p>3. Select the type of Scene to create.</p>                                                                                                              |
|                                                                                                                                               | <p>4. Select Tap To Run, followed by the device you want to control.</p>                                                                    | <p>5. Choose the function, set the value for the function, and then press the back button in the top right corner, to return to the previous screen.</p>  |
| <p>6. Once all the functions required have been added, press the Next button in the top right corner to finalise and save your new Scene</p>  | <p>7. Once you have named your scene, save it, and the button will be available to activate the scene with one touch within the app.</p>  |                                                                                                                                                                                                                                                |


## AUTOMATION

Automation allows an automatic action to be set up for the device. Time, indoor temperature and humidity, weather conditions, and other factors can trigger this.


1. Press on the Smart Scene tab at the bottom of the Home screen

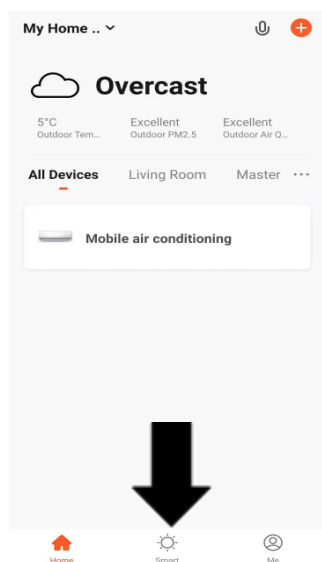


2. Press on the Plus in the top right corner to add a smart scene.

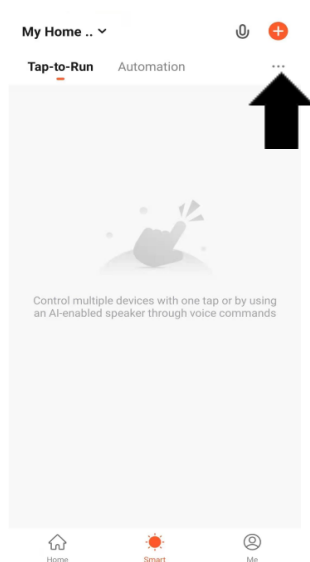


3. Select the type of automation required, such as on schedule for setting up a timed operation.

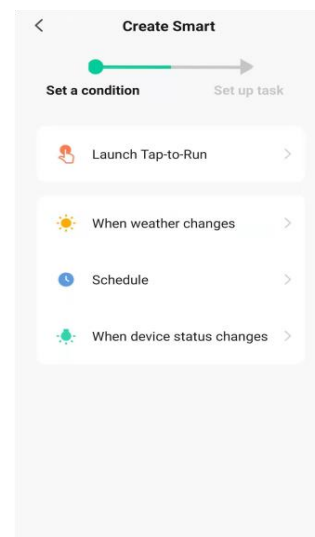

4. Select the condition when the automation should start. A number of triggers can be combined.

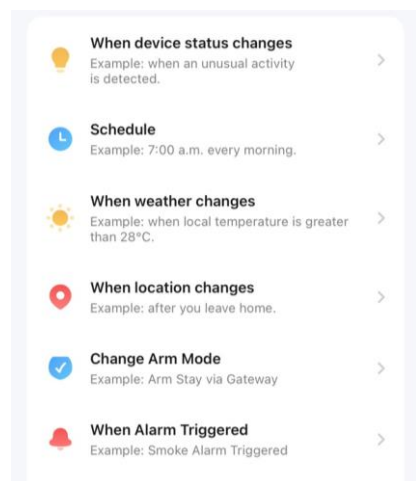


5. Chose the function, set the value for the function, and then press the back button in the top right corner, to return to the previous screen.

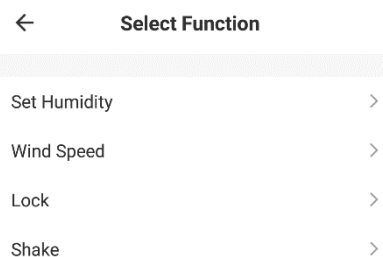

6. Once all the functions required have been added, press the Save button to finalise and save your automated action. The automation can be turned on and off as required.

## PROFILE TAB

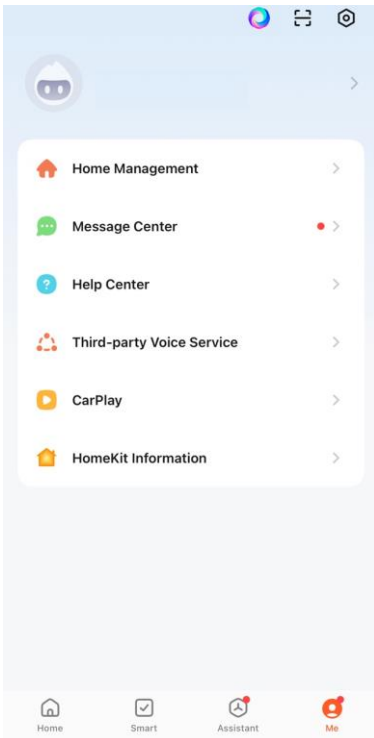

The profile tab gives you the option to edit your details and use the unit's added features.

### CHANGING THE NAME OF YOUR DEVICE

On any device screen, further device settings can be accessed by pressing the three dots in the top right-hand corner. The top option in this allows you to change the device name to something relevant to the product's use, such as “Living Room Air Conditioner”. In the menu, you can also set up a pattern lock or change your password.

### MESSAGE CENTRE

Shows alerts generated by the App.

### THIRD PARTY VOICE SERVICE

This allows the unit to be integrated with your favourite home automation hardware, such as Google Home and the Amazon Echo.

## CONNECTION TROUBLESHOOTING

1. Check whether the device is powered on and is in the correct Wi-Fi connection mode
2. Ensure the Wi-Fi password has been entered into the app correctly (Case sensitive)
3. Check that the phone is connected to the Wi-Fi you are connecting the device to.
4. Ensure the network you are connecting to is 2.4Ghz (5Ghz Wi-Fi networks are not supported), and that there is a strong Wi-Fi signal to the item.
5. If your router is dual-band, ensure that the 2.4Ghz network has a different network name (SSID). Further advice on changing router settings will be available from your Internet service provider / Router manufacturer.
6. Check the settings on the router. Encryption should be WPA2-PSK, and the authorisation type should be set to AES

## CLEANING AND MAINTENANCE


**PLEASE SHUT OFF THE UNIT AND UNPLUG FROM THE MAINS BEFORE CLEANING OR PERFORMING ANY MAINTENANCE**

### CLEAN THE SURFACE

Clean the machine's surface with a wet, soft cloth. Do not use chemicals such as benzene, alcohol, or gasoline, as acidic, corrosive, or alkaline substances may cause damage to the surface and/or the internal workings of the machine.

### AIR FILTER CLEANING

If the filter screen is clogged with dust, the air conditioner's effectiveness is reduced. The filter screen should be cleaned every 2 weeks or as often as needed in your environment.

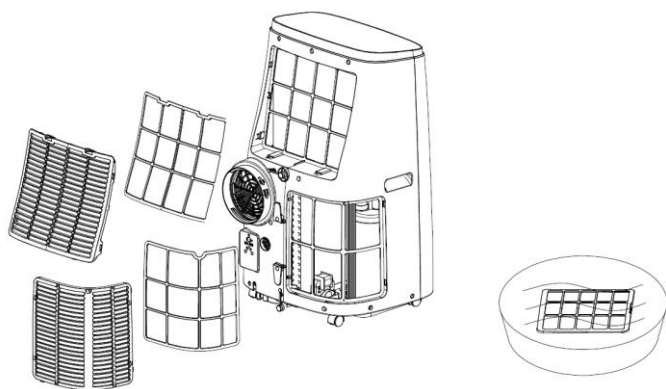

### CLEAN THE UPPER FILTER SCREEN FRAME

Remove the top of the evaporator filter screen from the appliance. The evaporator filter screen can be cleaned in warm water with neutral detergent (around 40°C or 104°F). The filter screen must be rinsed clean and thoroughly dried before reinstallation.

### CLEAN THE LOWER FILTER SCREEN FRAME

Hold the handle of the lower filter screen and gently pull to unclip the clips and remove the screen. Clean this filter screen in the same way as the upper filter screen.

## EMPTYING THE INTERNAL WATER TANK

When the internal water tank is full, the unit will stop working and display FL. There are 2 options for draining the internal water tank:


### 1) MANUAL DRAINAGE:

The unit should be manually drained after END-OF-SEASON maintenance before any prolonged storage.

Turn off the unit and unplug. Avoid abrupt movements of the model, as this may cause water in the internal tank to spill out.


Place a tray in a drainage area under the lower drain port. Remove the rubber stopper from the drain port - water will drain from the internal tank. Once the tank is empty, place the rubber stopper back in position.

### 2) CONTINUOUS DRAINAGE:

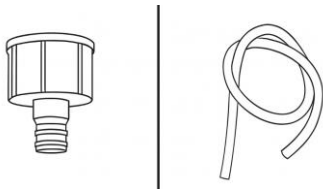

Remove the rubber stopper from the upper drain port. Connect a drainage hose (10 mm internal diameter) to the drain port using the provided adapter. You can plumb this hose into your current plumbing system, lead it outside, use gravity fall, or use an external water pump.

**NOTE:** This model features self-evaporation, reducing the need to empty the water tank in cooling mode. If the unit is vented correctly, most of the water is reused to cool the condenser coils, and any excess is evaporated. Please do not use continuous drainage if you intend to use the self-evaporating facility.

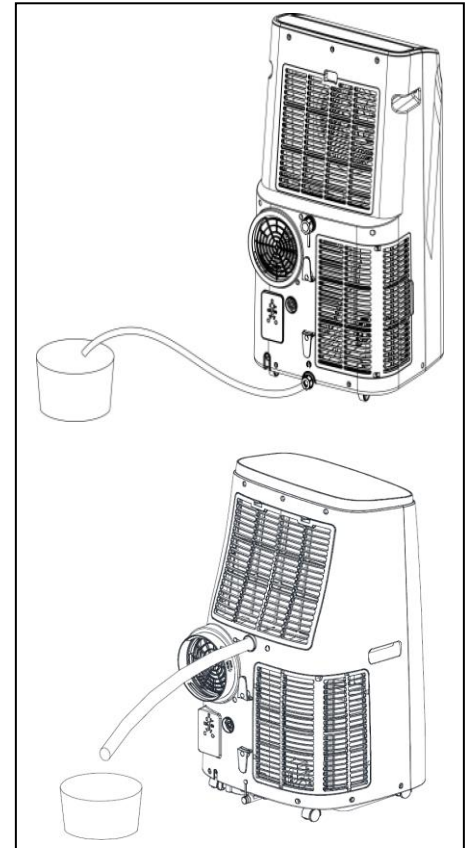

## END-OF-SEASON MAINTENANCE

1. Remove the rubber stoppers from the drainage holes and empty the internal tank. You can also drain the water by leaning the unit backwards.
2. Run the unit in fan mode, with a low fan speed, with the rubber stopper still removed and a container under the lower drain port.
3. Keep the unit in this mode for half a day - until the conduit is dry. Doing this helps to keep the inside of the unit dry and prevents mould from developing.
4. Turn off the unit and disconnect the plug.
5. Replace the rubber stopper.
6. Coil the cable, bind it together, and put it into the cable storage compartment.
7. Separate the vent hose and store it safely.
8. Cover the unit and keep it in a dry place.
9. Take the batteries out of the remote control and store or dispose of them safely.
10. Keep all accessories with the unit ready for next season.

## TROUBLESHOOTING

Do not repair or disassemble the air conditioning. Unqualified repair will invalidate the warranty and may lead to failure, causing injuries and property damage. Only use it as directed in this user manual and only perform operations advised here.

| Problems                                                             | Reasons                                                                                                                  | Solutions                                                                                                                       |
|----------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| The air conditioner does not work or unit turns on but stops quickly | Power not connected; loose plug; socket switched off                                                                     | Please turn it on after connecting it to a power outlet. Check mains outlet, ensure plug is fully inserted and outlet has power |
|                                                                      | Overheat protection triggered; airflow blocked                                                                           | Ensure 50 cm clearance around unit; clean both filters; check exhaust hose                                                      |
|                                                                      | The display shows "FULL".                                                                                                | Discharge the water inside internal tank.                                                                                       |
|                                                                      | The ambient temperature is too low or too high.                                                                          | Only use the machine within a temperature range of 7-35 °C                                                                      |
|                                                                      | In cooling mode, the room temperature is lower than the desired temperature.                                             | Change the target temperature.                                                                                                  |
|                                                                      | In dry mode, the ambient temperature is low.                                                                             | The ambient temperature must be above 17 °C                                                                                     |
| The cooling effect is not good.                                      | There is direct sunlight.                                                                                                | Use curtains to reduce direct sunlight.                                                                                         |
|                                                                      | Doors or windows are open; there are a lot of people; or in cooling mode, there are other sources of heat (e.g. fridges) | Close doors and windows; increase air conditioning power                                                                        |
|                                                                      | The filter screen is dirty.                                                                                              | Remove both mesh filters, rinse with lukewarm water, dry fully, reinstall                                                       |
|                                                                      | The air inlet or outlet is blocked.                                                                                      | Clear obstructions: make sure venting is correct as described in this user manual, and the hose is not bent                     |
|                                                                      | Exhaust hose kinked or blocked                                                                                           | Straighten hose, remove obstructions                                                                                            |
| Blowing Warm Air.                                                    | Exhaust hose not fitted correctly; hose not inserted correctly into fishtail, windows slider or window seal.             | Refit hose, ensure flat end snaps into window sealing adapters.                                                                 |
| Loud Noise.                                                          | The air conditioning is not placed on a flat surface.                                                                    | Put the air conditioner on a flat, hard surface (to reduce noise).                                                              |
| The compressor does not work.                                        | Overheat protection starts.                                                                                              | Wait 3 minutes for the temperature to drop, then restart the machine.                                                           |
| Water leaking.                                                       | Drain plugs may not be inserted properly; container overflow during drainage                                             | Reinsert plugs securely; use larger container; avoid tilting unit excessively                                                   |
| Bad smell from air outlet.                                           | Dirty filters; moisture inside unit                                                                                      | Clean filters; run unit in fan mode to dry internal components                                                                  |
| Exhaust hose gets very hot                                           | Hose too long or coiled; poor ventilation                                                                                | Keep hose between 280–1500 mm; avoid bends                                                                                      |
| Wi-Fi indicator not lighting                                         | WI-FI not activated                                                                                                      | Hold TIMER for 3 seconds to enable Wi-Fi                                                                                        |
| The remote control does not work.                                    | The distance between the machine and the remote control is too far.                                                      | Bring the remote control closer to the air conditioner and ensure it faces the receiver directly.                               |
|                                                                      | The remote control is not aligned with or too far from receiver.                                                         |                                                                                                                                 |
|                                                                      | Batteries are low or discharged.                                                                                         | Replace batteries.                                                                                                              |
| Others                                                               | No refrigerant or there is minimal refrigerant.                                                                          | Refer to the Service Centre (check leakage, welding, vacuum pump, charge refrigerant according to nameplate)                    |
|                                                                      | Anti-freezing protection                                                                                                 | Waiting for defrosting.<br>The function will recover automatically. No user input is needed.                                    |
|                                                                      | High-pressure protection.                                                                                                | Once the internal gas pressure drops, it will function normally. No user input is needed.                                       |

If problems not listed in the table occur or recommended solutions do not work, please get in touch with the service centre.

1. Has the unit been standing upright for at least 2 hours?
2. Is the unit plugged into the mains?
3. Is the fuse OK?
4. Switch the unit off and wait three minutes to see if the issue is resolved. Restart the unit.
5. Check if the water tank is full.

#### ERROR CODES

| CODE /<br>DISPLAY STATUS | CAUSE                                                                                 | SOLUTION                                                                                                                                                                                                                                              |
|--------------------------|---------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| E1                       | Room temperature sensor error                                                         | Check to ensure filters are clean, the vent hose is not restricted, and the room temperature is within the operational range. Failing this contact a qualified service technician to check the room temperature sensor/ evaporator sensor and wiring. |
| E2                       | Evaporator pipe coil temperature sensor error                                         |                                                                                                                                                                                                                                                       |
| FL                       | Water Tank Full                                                                       | Empty the water tank.                                                                                                                                                                                                                                 |
| DH                       | Unit is in dry mode.                                                                  | No fault, this is the indication of the mode.                                                                                                                                                                                                         |
| MODE LIGHT FLASHING      | This is normal – it shows which mode is operating, but the compressor is not running. | The unit will start operation when the protection period has finished (approx. 3 minutes)                                                                                                                                                             |

#### TECHNICAL DATA

|                                                                                                                                                                                                                                                                                                                                   |                      |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|
| Model                                                                                                                                                                                                                                                                                                                             | P18CW                |
| Cooling capacity:                                                                                                                                                                                                                                                                                                                 | 5270w                |
| Rated Input:                                                                                                                                                                                                                                                                                                                      | 2026w                |
| Input Current:                                                                                                                                                                                                                                                                                                                    | 8.9A                 |
| Fan:                                                                                                                                                                                                                                                                                                                              | 3-speed motor        |
| Airflow:                                                                                                                                                                                                                                                                                                                          | 550m <sup>3</sup> /h |
| EER Rate:                                                                                                                                                                                                                                                                                                                         | 2.6 / A              |
| Refrigerant:                                                                                                                                                                                                                                                                                                                      | R290/300g            |
| Sound Power Level:                                                                                                                                                                                                                                                                                                                | 65dB(A)              |
| Sound Pressure Level                                                                                                                                                                                                                                                                                                              | 55-59dB(A)           |
| Thermostat:                                                                                                                                                                                                                                                                                                                       | 16-31°C              |
| Maximum Allowable Pressure of suction/ exhaust side:                                                                                                                                                                                                                                                                              | 0.8/3.5Mpa           |
| Maximum Allowable Pressure                                                                                                                                                                                                                                                                                                        | 3.5MPa               |
| Power Supply:                                                                                                                                                                                                                                                                                                                     | AC 220-240V/50 Hz    |
| Net Weight:                                                                                                                                                                                                                                                                                                                       | 35Kg                 |
| Dimension(L*D*H):                                                                                                                                                                                                                                                                                                                 | 394*470*770 mm       |
| <p>The unit must be vented outside when in air-cooling mode. For the purposes of EU regulation EN12102, this is a local air conditioner that produces less than 65dB(A) sound energy.</p> <div style="text-align: center;"> <br/> R 290 </div> |                      |

## PRODUCT FICHE

| Description                                              | Symbol                         | Value        | Unit                  |
|----------------------------------------------------------|--------------------------------|--------------|-----------------------|
|                                                          |                                | <b>P18CW</b> |                       |
| Rated capacity for cooling                               | $P_{\text{rated for cooling}}$ | 5.27         | kW                    |
| Rated power input for cooling                            | $P_{\text{EER}}$               | 2.026        | kW                    |
| Rated Energy efficiency ratio                            | $\text{EER}_d$                 | 2.6          | -                     |
| Power consumption in thermostat-off mode                 | $P_{\text{TO}}$                | NA           | W                     |
| Power consumption in standby mode                        | $P_{\text{SB}}$                | 1            | W                     |
| Power consumption in standby mode with Wi-Fi on          | $P_{\text{SB}}$                | 2            | W                     |
| Electricity consumption of single/double duct appliances | $\text{SD: } Q_{\text{SD}}$    | 2.026        | SD: kWh/h             |
| Sound power level                                        | $L_{\text{WA}}$                | 65           | dB(A)                 |
| Global Warming Potential                                 | GWP                            | 3            | kgCO <sub>2</sub> eq. |

### PSTI STATEMENT OF COMPLIANCE

Description: Air Conditioner

Model Number: P18CW

Manufacturer: electriQ, 2A Trident Business Park, Leeds Road, Huddersfield, HD2 1UA

PSTI Contact: [TiSecurity@buyitdirect.co.uk](mailto:TiSecurity@buyitdirect.co.uk)

We have prepared this statement of compliance and can confirm that this product is compliant with the deemed compliance conditions in Schedule 2 of The Product Security and Telecommunications Infrastructure (Security Requirements for Relevant Connectable Products) Regulations 2023.

Duration of security updates: 31/01/2031. This date is correct at the time of printing, but we may be extended. Please visit [www.electriQ.co.uk](http://www.electriQ.co.uk) for the latest information and details of our PSTI compliance.

Richard Leach

Compliance and Quality Manager, Buy It Direct, Huddersfield



19<sup>th</sup> December 2025

## EU DECLARATION OF CONFORMITY

Hereby, electriQ declares that these air conditioners are in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet addresses:

<https://www.electriq.co.uk/files/DOC/EU/P18CW.pdf>

## UK DECLARATION OF CONFORMITY

Hereby, electriQ declares that these air conditioners are in compliance with Radio Equipment Regulations 2017. The full text of the UK declaration of conformity is available at the following internet addresses:

<https://www.electriq.co.uk/files/DOC/UK/P18CW.pdf>

## electriQ UK SUPPORT

[www.electriQ.co.uk/support](http://www.electriQ.co.uk/support)

Please review the troubleshooting section for your convenience before calling the service line.

Call the number below if the unit fails to operate or complete the online form.

0330 390 3061

Office hours: 9 AM - 5 PM, Monday to Friday

[www.electriQ.co.uk](http://www.electriQ.co.uk)

**Unit 2A, Trident Business Park,  
Neptune Way, Leeds Road, Huddersfield, HD2 1UA.**



Disposal: Do not dispose this product as unsorted municipal waste. Collection of such waste must be handled separately, as it requires special treatment. Recycling facilities are now available to all customers, where you can deposit your old electrical products. Customers will be able to take any old electrical equipment to participating civic amenity sites run by their local councils. Please remember that this equipment will be further handled during the recycling process, so please be considerate when depositing your equipment. Please get in touch with the local council for details of your local household waste recycling centres.

**electriQ**

V20260112VS-2