


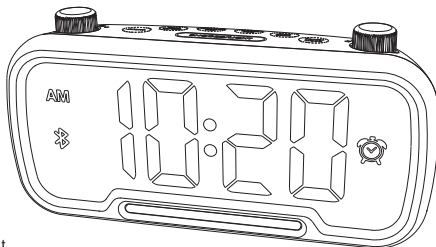

FM&BLUETOOTH Clock Radio

CREATE YOUR PERFECT SLEEP ENVIRONMENT



FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help
- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

CR1025

Email: support@yelow.net <https://www.yelow.net>



Bluetooth Referenced Qualified Design ID(s): 79808

Made in China

Version 1.0

Specifications


Product Size:	6.61 x 3.31 x 2.32 inches
Product Weight:	0.47 lbs
Material:	ABS + Fabric
Control Method:	Touch Buttons + Knobs
FM Radio Frequency:	87.5-108.00 MHz
Bluetooth:	Bluetooth 5.0
Power Cord:	USB - DC 5V Power Charging Cable (Cable Model: 5521)

Power Supply

Adapter Input:	AC 100-240V
Adapter Output:	DC 5V/2A
Power Input:	DC 5V
Type-C Port Input/Output:	DC 5V/1A
USB Port Charge Output:	DC 5V/1A
Backup Battery:	1*CR2032 (Included)


Installation Notes

1

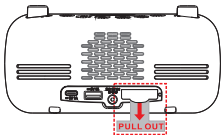

To ensure that the clock retains its time and alarm settings during a power outage, please pull out the battery insulator on the back of the alarm clock in advance to activate the battery backup function.

2



To start using the clock, connect the adapter and the cord to the clock, then plug it into a 100-240V AC wall outlet.

NOTE: The adapter is required to keep the clock working.

Time Setting

01



Time
12/24h

Enter the time setting mode, touch the **Time** button, the hour digit starts flashing, turn the knob to adjust the digital display of the hour.

02



Time
12/24h

Touch the **Time** button again, the minute digit starts flashing, turn the knob to adjust the digital display of the minute.

03



Time
12/24h

Finally touch the **Time** button again, the time setting is finished.

NOTE: When setting the time or alarm clock, the left and right knob functions are the same.

DST Setting

01



Dimmer
DST

To enter DST mode, touch and hold the **DST** button for 2 seconds, the time will advance by one hour and the **DST** icon will be displayed.

02



Dimmer
DST

To exit DST mode, touch and hold the **DST** button again for 2 seconds, the time will be adjusted back by one hour and the **DST** icon will be turned off.

Alarm Setting

01



Alarm

To enter the alarm setting mode, touch and hold the **Alarm** button for 2 seconds, the hour digit starts flashing, turn the knob to adjust the hour.

02



Alarm

Touch the **Alarm** button again, the minute digit starts flashing, turn the knob to adjust the minute.

03



Alarm

Touch the **Alarm** button again, then turn the knob to adjust the alarm to ring as a bell or play the last radio channel listened to.

04



Alarm

Touch the **Alarm** button again, then turn the knob to adjust the volume of the alarm.

05



Alarm

Finally touch the **Alarm** button again, the alarm setting is finished.

NOTE: If no next action is taken after 15 seconds of touching the alarm clock button, the alarm clock will exit the settings and return to the main time display screen.

Cancel the Alarm



Alarm

To cancel the alarm, touch the **Alarm** button, the alarm icon will turn off indicating that the alarm has been canceled.

(If you want turn on the alarm again, you can touch the Alarm button again, the alarm icon will light up, indicating that the alarm has been turned on.)

SNOOZE Mode

SNOOZE/LIGHT




When the alarm goes off, touch the **SNOOZE** button, the alarm will stop temporarily and ring again after 9 minutes.

NOTE:

1. After the alarm goes off, all buttons and knobs function are the same as SNOOZE, except for the Alarm button which turns off the alarm directly.
2. If there is no operation after the alarm goes off, the alarm will sound for 60 minutes and then stop automatically.

Night Light

SNOOZE/LIGHT



Touch the **LIGHT** button when there is no alarm clock ringing, the night light will turn on, and touch again to turn off.

Dimmer Setting



To set the display brightness, touch the **Dimmer** button, then touch the Dimmer button again in succession or turn the knob (either side) to adjust the display brightness. (There are a total of 5 brightness levels)

NOTE:


1. When playing radio or Bluetooth music, only by touching Dimmer button continuously or rotating the right knob can adjust the display brightness (the left knob controls the machine volume).
2. When adjusting to the lowest brightness, a low brightness icon will appear to indicate that it is currently the lowest brightness level, and the icon will disappear after 20s of display (after you touch any other button, the icon will be displayed again).

Change 12/24 Hour Time Display Format



To switch the time display format of 12/24 hours, press and hold the **12/24h** button for about 2 seconds. In the 12-hour time format, the AM/PM icon will be displayed.

Charging Other Devices



This alarm clock has two ports, USB and Type-C, which are compatible with charging two mobile devices at the same time (charging cable not included), with a maximum charging current of 1A.

Note: Type-C port also supports input, so you can also use the regular Type-C cable as a power cable.

Bluetooth Setting

01



Power
Mode

Repeatedly touch the **Power Mode** button to select to enter the Bluetooth mode, and the Bluetooth icon will start flashing, indicating that it is in Bluetooth ready pairing status.

02



Find the Bluetooth of **"CR1025"** name on the phone, select connect, Bluetooth stop flashing, keep on, and hear the sound from the machine to indicate successful connection. (If you want to switch the connected device, touch the Pair button to re-pair)

03



Turn the right knob to select the song, twist to the left to select the previous music, twist to the right to select the next music.

04



Turn the left knob to adjust the volume level, the maximum volume is 16 levels (116dB).

NOTE:

1. When connecting Bluetooth to play music, if you feel that the 16-level volume is still too low, it may be that the phone volume is too low, you can turn up the phone volume to achieve the effect of increasing the volume of the machine.
2. When setting the alarm clock in radio or Bluetooth mode, the sound may be delayed in the step of setting the alarm volume, which is a delay in receiving program instructions and is normal.

FM Radio Setting

01

Power
Mode



Repeatedly touch the **Power Mode** button to select to enter the radio mode, the radio icon lights up to indicate that it has been set successfully.

02

Play
Scan



Touch the **Scan** button to open the automatic station search function, the machine will automatically store the frequencies with signals (up to 20 channels).

03

Preset
Pair



Turn the right knob to manually select the channel, when switching to the preferred channel, touch the preset button to manually store the channel.

04



Turn the left knob to adjust the volume level, the highest volume level is 16 levels (116dB).

Package Lists

1x Alarm Clock Radio
1x Power Cable
1x User Manual

1x USB Power Adapter
1x CR2032 Coin Battery