



User Manual

E1000 Pro



HANDHELD

LABEL PRINTER

Please read this user manual carefully before using this product, and store it for future reference.


Contents

- 01.Contents Checklist
- 02.Specification
- 03.Parts Description
- 04.Turning on the Power
- 05.Installation for Label Tape
- 06.Common Functions
- 07.Cleaning Guide for Label Maker
- 08.Replacing the Cutter Holder
- 09.Troubleshooting
- 10.Additional Troubleshooting
- 11.Product Warranty Description


01. Contents Checklist



Label Maker*1




Label Tape



USB Cable*1



User Manual *1



Replacement Cutter
Holder * 1

Note:


The quantity of included label tape is subject to the actual delivery.

02. Specification

E1000 Pro	
Tape Width and maximum number of print lines	3.5/6mm: 1 Line 9mm: 3 Lines 12mm: 4 Lines
Max Print Width	9mm on 12mm tape
Print Technology	Thermal Transfer
Print Resolution	203DPI
Print Speed	20mm/s
Cutting Method	Manual cutting
Automatically turns off after	5 minutes
Automatic memory function	✓
Ribbon tightening function	✓
Consumables identification function	Manual selection

Power supply	USB Cable or 6 AAA batteries
Item Size	213mm*116.5mm*61.5mm/8.4*4.6*2.5inches
Style	Normal, Bold, Italic
Width	Normal, $\times 2$, $\times 1/2$
Frame	✓
Label Length	The label length for each label depends on the label content, which is up to 800mm
Margin	Full: Equal margins on both sides are 25mm Half: Equal margins on both sides are 12mm Narrow: Equal margins on both sides are 4mm
Mirror Mode	✓
Available Memory	15 labels. Up to 80 characters per label
Switching upper case/Lower case	Press Caps button to switch to upper case or lower case
Shortcut Keys	①Shift+Print key=Multiple Copies[1-9] ②Shift+Number(0-9)=Access to special characters


03. Parts Description

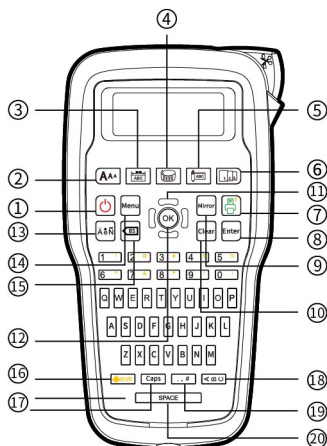

- | | | |
|-------------------------------|-------------------|------------------------|
| ① Power Key | ⑧ Enter Key | ⑯ Shift Key |
| ② Font Size | ⑨ Mirror Mode Key | ⑰ Caps Key |
| ③ Faceplate Key | ⑩ Delete all Key | ⑱ Font orientation Key |
| ④ Cable Wrap Key | ⑪ Cursor Key | ⑲ Space Key |
| ⑤ Cable Flag Key | ⑫ OK Key | |
| ⑥ Multiple Labels Editing Key | ⑬ Accents Key | |
| ⑦ Print Key | ⑭ Menu Key | |
| | ⑮ Backspace Key | |


04. Turning on the Power

Method I: Power via the USB Type-C port (with a 5V = 2A power adapter)

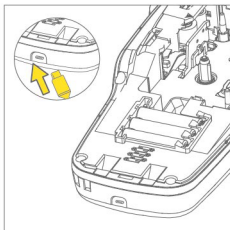


Method II: Power on with AAA alkaline batteries

Open the back cover

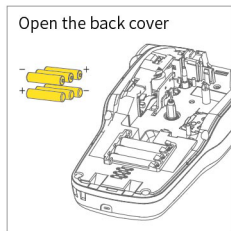


05. Installation for Label Tape



1. Take out the label tape and remove the blue card.

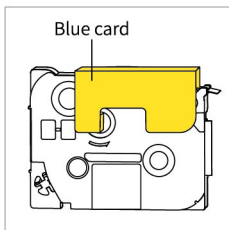


2. Make sure the end of tape passes through both tape guide ① and ②, then extend the end of the tape by about 1.18 inch (3cm) from tape guide ②.

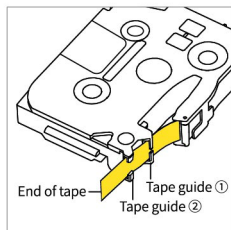

3. Turn the toothed wheel in the direction of the arrow on the label tape until tight to avoid damage.

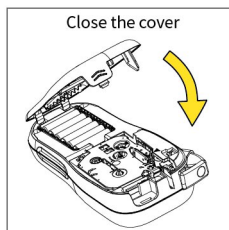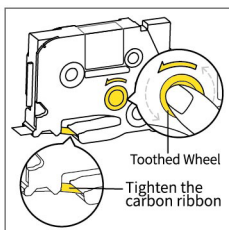

4. Install the label tape correctly as indicated, and make sure that the extended tape comes out through the tape exit slot of label maker.

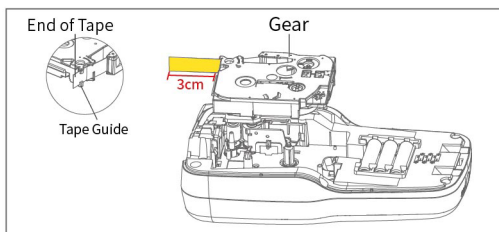


Note:


We recommend installing label tape after the label maker power on.

06. Common Functions

6.1 Language



6.2 Select Label Width

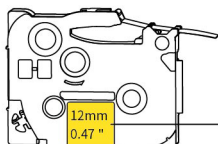

Differentiate width using the material usage indicator

(1) When using the label maker for the first time, install the label tape and select the label width. Use the navigation keys to select the label width

12mm / 9mm / 6mm / 3.5mm



(2) Whenever you replace the label tape during use, you need to re-select the label width



12mm / 9mm / 6mm / 3.5mm




6.3 Text format


(1) Font Size




(2) Font Style




(3) Width



(4) Punctuation



(5) Frame



(6) Switching Upper Case/Lower Case


Press **Caps** key to switch to upper case or lower case.

(7) Setting Margins




Margin function sets equal margins on both sides of the text


[Full]



[Half]



[Narrow]



Note:

- ① After setting [Half] and [Narrow], the display shows the label length from the printed dots (:) to the end of the label
- ② In order to save label tape, set the margin to [Narrow]

(8) Entering multiple lines of text

a. 12mm wide label tape: Support print 4 lines of text. After entering the 4th line of text, do not press the [Enter] key, otherwise the error message "Please reduce the number of lines!" will be displayed.

1 TEXT1 → [Enter] 2 TEXT1 → [Enter] 3 TEXT1 → 4 TEXT1


TEXT1
TEXT1
TEXT1
TEXT1

b. 9mm wide label tape: 3 lines of text can be printed. After entering the 3rd line of text, do not press the [Enter] key, otherwise the error message "Please reduce the number of lines!" will be displayed.


c. 3.5mm,6mm wide label tape: 1 line of text can be printed,after entering the first line of text, do not press the [Enter] key, otherwise the error message "Please reduce the number of lines!" will be displayed.

6.4 Clearing

- (1) Press  [BS (backspace) key] to delete the letters one by one
- (2) To delete all text and format:



To delete all text only:



6.5 Label printing function

- (1) Printing single copies


- ① If you need only 1 copy of the label, press [print key]
- ② To prevent damage to the tape, do not touch the cutter lever while the screen displays "Printing....." or "Feeding....."
- ③ To cut off the label, push the tape cutter lever on the upper-right corner of the printer
- ④ Peel the printed label from the backing and apply the label

- (2) Printing multiple copies

Use the navigation keys to select the number of copies




The number of copies can also be specified by pressing a number key



Note:

Up to 9 copies of each label can be printed at a time

6.6 Multi-copy editing function

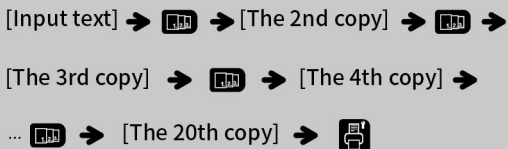


Note:


Multi-copy editing: Use this function to continuously edit up to 20 different labels

Review/Modify the Text

① Browse up and modify

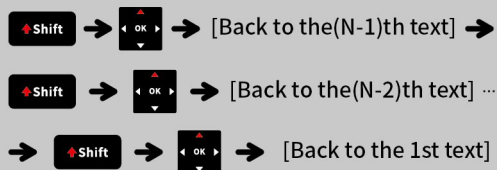


② Browse down and modify

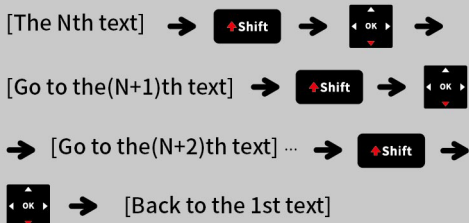


6.7 Selection of Cutting Method

Turn on Cutting (If print the label with "narrow margin" or "half margin", or print several labels, it is recommended to turn on "Cutting" to manually cut the label one by one, and no need to cut by scissor.)



Turn off Cutting(Manually cut the whole label after printing, then cut the label by scissor when needed)



Note:

Please do not press the cutter button before a reminder to cut, otherwise it will prompt "Cutter Error!" and the printing work will be terminated.

6.8 Set mirror mode


- a. Mirror mode must be turned off when using laminated label tapes
- b. Mirror mode must be turned on when using cloth label tapes and non-laminated label tapes




6.9 Saving label Files

Save up to 9 label files and recall them later for printing, allowing editing and overwriting of stored label files.

a. Save

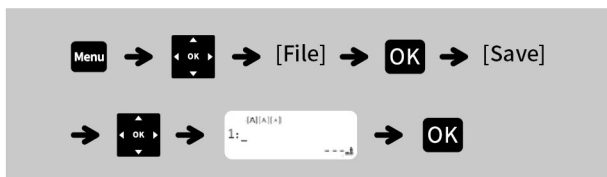

b. Open

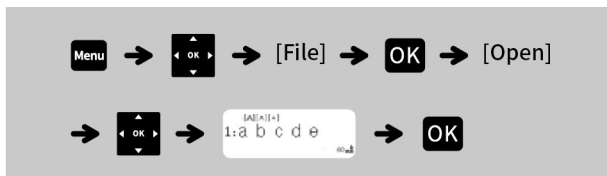


Note:

If you try to store a label file when there is already a label file stored to that number, a message "Cover?" will appear. Press [OK] to replace the previous label file with the new one. Press [Backspace key] to cancel.

6.10 Other printing types

(1) Cable Wrap

You can create a label that can be wrapped around a cable or wire. The input text line is rotated 90° counter clockwise and printed on a label whose length is automatically determined by setting the cable diameter.

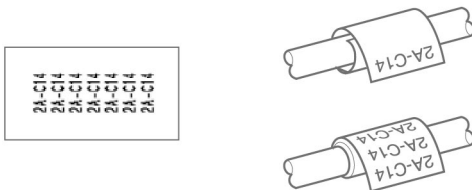

[Enter Text] →  → [Cable Wrap] →

 → 

Note:

Only Flexible ID label tape can be used to print cable wrap labels

(2) Cable Flag

With this function, a label can be wrapped around a cable or wire with its ends stuck together to form a flag. The input text lines are printed at the both ends of a label. You can select the cable diameter. The label length is automatically adjusted according to the text length.





Note:

Only Flexible ID label tape can be used to print flag labels to label cable and wires. Use the cable flag function when the diameter of the object is less than 3mm.

(3) Faceplate

Labels printed with this function can be used to identify various components or panels.




6.11 Barcode

You can print barcodes on labels with this function

Item	Description
Protocol	CODABAR, CODE39, ITF25, CODE128, EAN-13, EAN-8, UPC-A, UPC-E
Width	Small
	Large
Bottom Text	OFF
	ON
Check Code	OFF
	ON(only applied to CODE39,ITF25 and CODEBAR)

(1) BarCode Set

When you need to print a barcode on a label for the first time, you can choose a barcode set to do it.

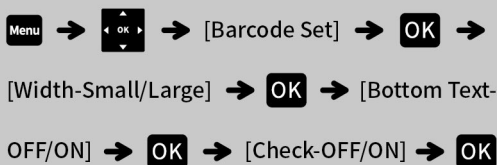


Note:

“Check” only appears on the LCD after selecting CODE39,ITF25 or CODABAR.

(2) Barcode Input

When you need to reprint another label with the last barcode you can enter text directly by barcode input



6.12 Entering accented characters

Press an alphabetic character, then press [Accented Character Key] [accented character key], the accent options of that alphabetic character are displayed




Note:

To cancel the current operation, press [BS (Backspace) key]

07. Cleaning Guide for Label Maker

Use a cotton swab dipped in a small amount of alcohol, and wipe the print head gently.

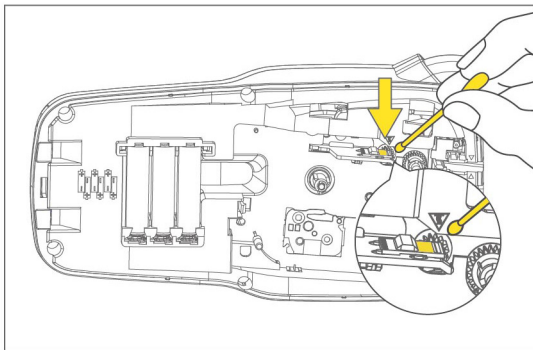


Note:

- ① The print head needs to be cleaned when printing is not clear.
- ② Make sure the power is turned off and the power cord is unplugged before cleaning the print head.
- ③ Wait until the alcohol evaporates and the print head is dry, then turn on the label maker to print and check the resulting print.
- ④ Do not scratch the print head with a hard object, otherwise the print head will be damaged and the printing effect may be compromised.

08. Replacing the Cutter Holder

If the label tape cannot be cut neatly after continuous use, please replace the cutter holder as shown in the following diagram.

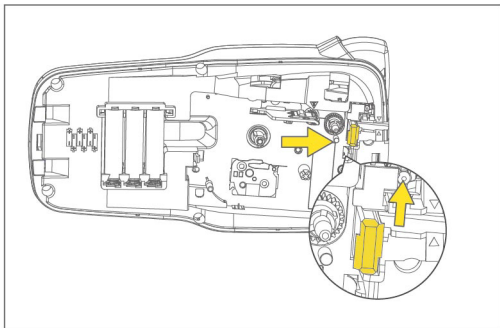

09. Troubleshooting

Message	Cause	Solution
Low Battery!	The batteries are weak	If using AAA alkaline batteries: replace them with new ones
Invalid!	An invalid number was entered as the label length, cable diameter or faceplate length.	Correct entry
Text Limit!	The number of entered characters exceeds the label length	Reduce the text or select [Auto] as the label length
No Data!	① An attempt was made to print a label file when no data was stored in the memory. ② [Print key], [Enter key], [OK key], [Preview] was pressed when no text was entered.	Press [BS(Backspace)Key] to return to the edit page and enter text
Line Limit!	① 12mm: An attempt was made to enter a 4th line by pressing [Enter key] ; ② 9mm: An attempt was made to enter a 3th line by pressing [Enter key] ; ③ 6mm: An attempt was made to enter a 1th line by pressing [Enter key] ;	Reduce lines
Text Full!	The maximum number of characters (80 characters for regular text) was already entered. Reduce numbers of characters to a maximum of 80.	Reduce entry (reduce bytes please!)
Cutter Error!	The cutter lever was used during the printing process	Press [Print Key] and DO NOT TOUCH the cutter lever while printing

No Cassette!	There is no cassette in the label maker	① Input a cassette ② Cover the back of the device.
--------------	---	---

10. Additional Troubleshooting

Problems	Solutions
The display stays blank after turning on the device	① Check that the batteries are correctly inserted. ② If the batteries are weak, replace them. ③ If using the USB cable, make sure the cord is connected correctly and power is turned on.
When the label is printed out, the margin (space) is too large on both sides of the text	See “Setting Margin” in this user manual and select [Half] or [Narrow] to have smaller margins for labels.
The printer does not print, or the printed characters are not formed correctly	① Check that the tape cassette has been inserted correctly. ② If the tape cassette is empty, replace it. ③ Check that the cassette cover is fully closed.
A blank horizontal line appears through the printed label	There may be some dust on the printer head. Remove the tape cassette and use a dry cotton swab to gently wipe the printer head with an up-and-down motion. Or insert a print head cleaning cassette to clean the printer head more easily.
The printer has “frozen up” (i.e. nothing happens when a key is pressed, even though the printer is on)	① Replace batteries may be weak. ② Restart the printer by pressing the Power key. ③ If the two solutions above do not work, return to your seller.
The power turns off when trying to print	① The batteries may be weak. Replace them. ② Check that the batteries are correctly inserted.

The tape does not feed correctly or the tape gets stuck inside the machine	①Check that the end of the tape feeds under the tape guides. ②The cutter lever has been used while printing.DD NOT TOUCH the cutter lever during printing.
--	---

11. Product Warranty Description

Triplett offers warranty to the original purchaser of its products. We guarantee that our products will be free from defects in workmanship and materials for one (1) year from the purchase date.

This warranty does not cover:

- Products purchased from unauthorized distributors.
- Items that have been repaired or altered by unauthorized individuals.
- Damage from misuse, abuse, misapplication, negligence, or accidents.
- Products with altered, defaced, or removed serial numbers.
- Accessories, including batteries.

For product support, registration, FAQs, or to request calibration or repair services, visit www.triplett.com/support.

Stay Updated

For the most recent version of this user manual, visit www.triplett.com and search for “E1000PRO”. You can also find the latest specifications, FAQs, and product datasheets on our website.

