

**IMPORTANT FOR FUTURE REFERENCE**

Please complete this information and retain this manual for the life of the equipment:

Model #: _____


Serial #: _____

Date Purchased: _____

INSTALLATION & OPERATION MANUAL

Gas Oyster Bar

OB-2-2-27-G OB-3-2-40-G OB-4-2-54-G

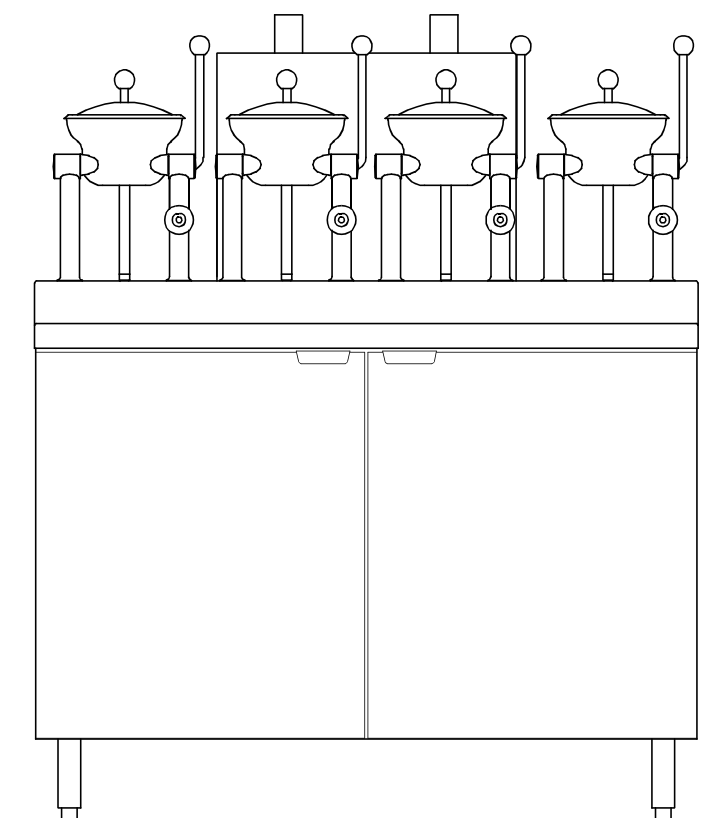**WARNING**

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing this equipment.

CROWN FOOD SERVICE EQUIPMENT

A Middleby Company

70 Oakdale Road, Downsview (Toronto) Ontario, Canada, M3N 1V9

Telephone: 919-762-1000

www.crownsteamgroup.com

Printed in Canada



IMPORTANT NOTES FOR INSTALLATION AND OPERATION



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



FOR YOUR SAFETY: Do not store or use gasoline or other flammable vapours or liquids in the vicinity of this or any other appliance.

PURCHASER: Instructions to be followed in the event that the operator of this appliance smells gas must be posted in a prominent location. This information shall be obtained by consulting the local gas supplier.

Do not attempt to operate this unit in the event of a power failure.

Keep the appliance area free and clear from combustibles.

Do not obstruct the flow of combustion and ventilation air.

Adequate clearances must be maintained for servicing and proper operation.



WARNING: Improper installation, operation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing, operating or servicing this equipment.



NOTICE: Contact the factory, the factory representative or local service company to perform maintenance and repairs.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

TABLE OF CONTENTS

DESCRIPTION	PAGE
1.0 Installation Instructions	4
2.0 Service Connections	7
3.0 Operation Instructions	11
4.0 Operation Instructions for CSD1 Equipped Units	14
5.0 Periodic Maintenance	17
6.0 Adjustments	21
7.0 Troubleshooting	23
8.0 Kettle Functioning Mode	25
9.0 Kettle Operation Instruction	25
10.0 Cleaning Procedures	26
11.0 Preventive Maintenance	26

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

GENERAL

Direct steam jacketed kettle(s) are pressure vessels of a double wall stainless steel construction forming a steam chamber (jacket) enveloping the lower kettle bowl surface. Mounted on a modular cabinet base housing a gas boiler designed to ASME Code and approved as a steam heating boiler restricted to operation at pressure not to exceed 15 psi. The gas boiler may be in a 27 inch, 48 inch or 54 inch cabinet base rated at 140,000 or 200,000 BTU, 48 inch or 54 inch cabinet base rated at 200,000, 250,000 or 300,000 BTU, operational on Natural or Propane Gas. Boilers provided with optional electronic ignition and CSD1 controls. All models are suffixed with either -1 or -2 to indicate the capacity of the kettle in quarts.

1.0 INSTALLATION INSTRUCTIONS

UNPACKING

Immediately after unpacking, check for possible shipping damage. If the appliance is found to be damaged, save the packaging material and contact the carrier within 15 days of delivery.

Before installing, verify that the gas (natural or propane), the elevation from sea level and the electrical supply agree with the specification on the data plate. NOTE: If this appliance is being installed above 2000 feet altitude, contact your authorized service office to assure that the proper orifice size for your elevation has been installed.

LOCATION

The installation location must be kept free and clear of combustibles. Do not obstruct the flow of combustion and ventilation air. Clearance from combustible construction must be a minimum of 3 inches from the sides and 6 inches from the back. The appliance should be installed on a noncombustible floor. Provide adequate clearances for cleaning, maintenance, service and proper operation.

Sufficient air should be allowed to enter the room to compensate for the amount of air removed by any ventilating system and for combustion of the gas burners. Do not obstruct the air flow into and around the appliance. Do not obstruct the flow of flue gases from the flue duct located at the rear and above the cabinet. Position the appliance in its final location. Check that there are sufficient clearances to service the controls, for door swings, etc., and to make the required supply and drain connections.

Allow enough space between any other piece of equipment or a wall for service access. Service on the cabinet base may require access to the left and/or right side panels.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

LEVELLING AND ANCHORING THE CABINET

1. Place appliance in the installation position.
2. Place a carpenter's level on top of the appliance and turn the adjustable feet to level side-to-side and front-to-back.
3. Mark hole locations on the floor through the anchoring holes provided in the rear flanged adjustable feet.
4. Remove appliance from installation position and drill holes in locations marked on the floor. Insert proper anchoring devices (not supplied).
5. Place appliance back in the installation position.
6. Place carpenter's level on top appliance and re-level side-to-side and front-to-back.
7. Bolt and anchor appliance securely to the floor.
8. Seal bolts and flanged feet with Silastic or equivalent compound.

INSTALLATION CODES AND STANDARDS

The boiler must be installed in accordance with:

Gas installation to conform to local codes, or in absence of local codes, with the National Fuel Gas Code - ANSI Z223.1/NFPA 54. In Canada installation to be in accordance with CSA B149.1 Natural Gas and Propane Installation Code.

1. The appliance and its individual shut off valve must be disconnected from the gas supply piping system during any pressure testing of that system at pressures in excess of ½ psig (3.5 kPa).
2. The appliance must be isolated from the gas supply piping system by closing its individual manual shut off valve during any pressure testing of the gas supply piping system at test pressures equal to or less than ½ psig (3.5 kPa).

Electrical grounding must be provided in accordance with local codes, or in the absence of local codes, with the National Electrical Code ANSI/NFPA 70. In Canada, installation must be in accordance with the Canadian Electrical Code CSA C22.2.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

INSTALLATION CODES AND STANDARDS (Continued)

WIRING DIAGRAM FOR APPLIANCE IS LOCATED INSIDE CABINET DOOR.

EXHAUST FANS AND CANOPIES:

Canopies are set over ranges, ovens, kettles, etc., for ventilation purposes. It is recommended that a canopy extend 6 inches past the appliance and be located 6 feet 6 inches from the floor. Filters should be installed at an angle of 45 degrees or more with the horizontal. This position prevents dripping of grease and facilitates collecting the run-off grease in a drip pan, usually installed with the filter. A strong exhaust fan tends to create a vacuum in the room and may interfere with burner performance or may extinguish pilot flames. Makeup air openings approximately equal to the fan area will relieve such vacuum. In case of unsatisfactory performance on an appliance, check with the exhaust fan in the "OFF" position.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER, MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

2.0 SERVICE CONNECTIONS

⚡ – Unless otherwise specified, Field Wire Electrical Connection to be 120 Volts, 60 Hertz single phase with grounding.

💧 – GAS CONNECTION: 3/4" IPS supply line required.


💧 – DRAIN: 2" IPS piped to open floor drain. No Solid Connection.

💧 – COLD WATER: 3/8" O.D. tubing at 25–50 PSI (170–345 kPa)

MODEL	GAS SUPPLY			
OB	BTU/HR.	kW/HR.	SUPPLY PIPE PRESSURE (W.C.)	
	140,000	41.0	Natural 7"–14" (178–356mm)	Propane 11"–14" (279–356mm)
	200,000	58.6		
	250,000	73.3		
	300,000	87.9		

DIMENSIONS

MODEL	UNITS	A	B	C	D	E	F	G	H	J	K	L	M	N
OB 2-1-27-G	inches	27	59.75	17.88	39.25	5.75	8.75	8	4	14	19.25	1.5	4	3.5
	mm	686												
OB 4-1-48-G	inches	48	1518	454	997	146	222	203	102	355	489	38	102	89
	mm	1219												

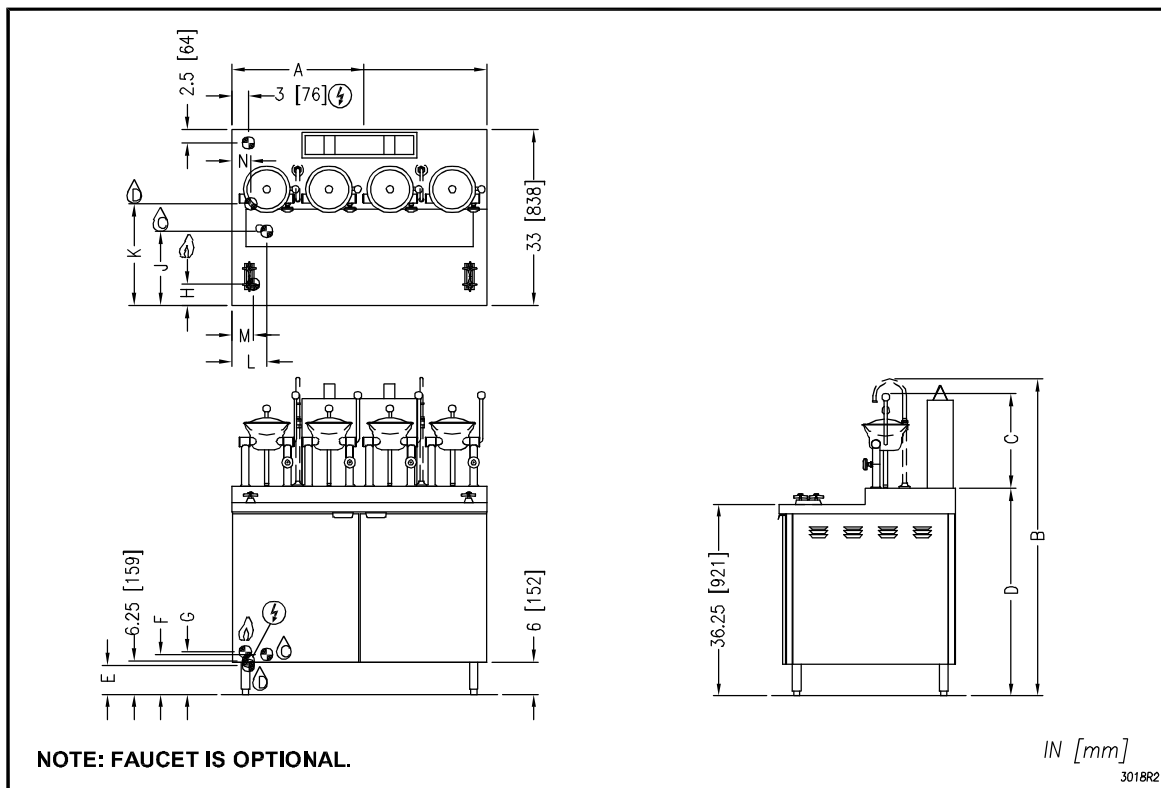

As continued product improvement is a policy of Crown, specifications are subject to change without notice.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER, MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

2.0 SERVICE CONNECTIONS (Continued)

⚡ – Unless otherwise specified, Field Wire Electrical Connection to be 120 Volts, 60 Hertz single phase with grounding.

⚙ – GAS CONNECTION: 3/4"IPS supply line required.


⚙ – DRAIN: 2"IPS piped to open floor drain. No Solid Connection.

⚙ – COLD WATER: 3/8" O.D. tubing at 25–50 PSI(170–345 kPa)

MODEL	GAS SUPPLY			
	BTU/HR.	kW/HR.	SUPPLY PIPE PRESSURE (W.C.)	
OB	140,000	41.0	Natural 7"–14" (178–356mm)	Propane 11"–14" (279–356mm)
	200,000	58.6		
	250,000	73.3		
	300,000	87.9		

DIMENSIONS

MODEL	UNITS	A	B	C	D	E	F	G	H	J	K	L	M	N
OB 2-2-27-G	inches mm	27 686	59.75 1518	17.88 454	39.25 997	5.75 146	8.75 222	8 203	4 102	14 355	19.25 489	1.5 38	4 102	3.5 89
OB 4-2-54-G	inches mm	54 1372												

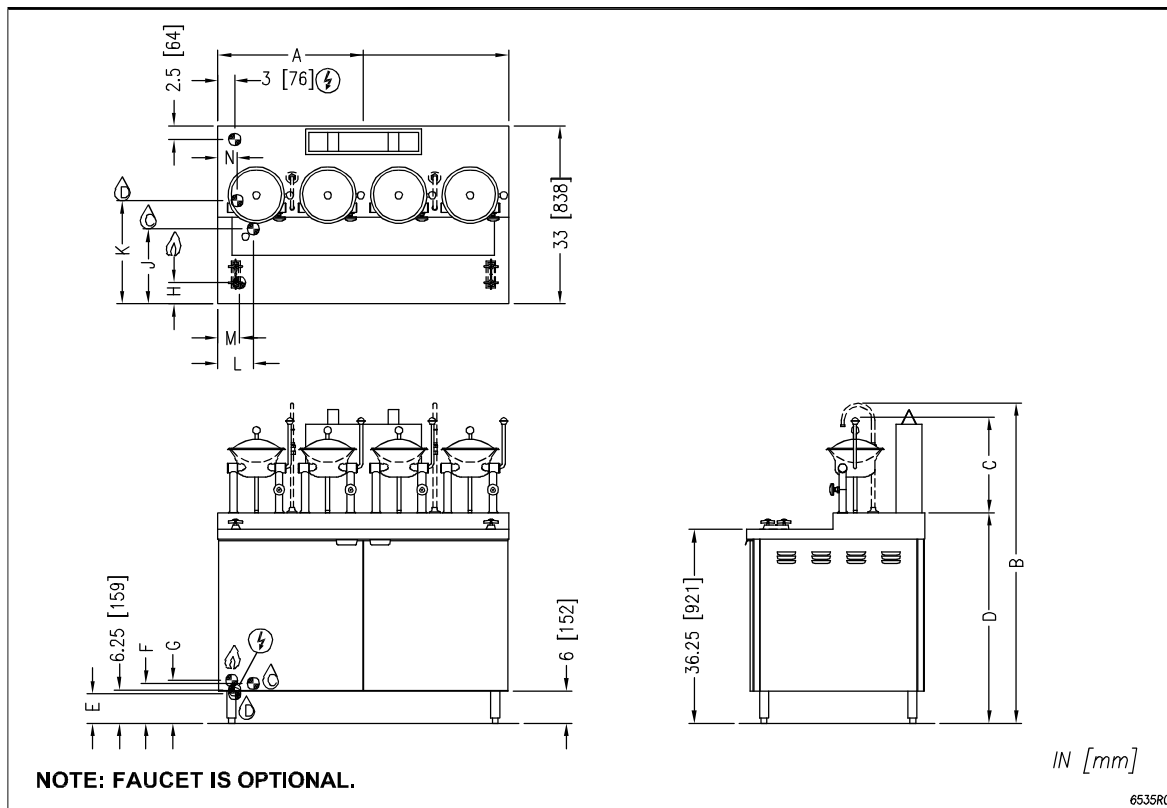

As continued product improvement is a policy of Crown, specifications are subject to change without notice.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

2.0 SERVICE CONNECTIONS (Continued)

PLUMBING CONNECTIONS

	WARNING: Plumbing connections must comply with applicable sanitary, safety, and plumbing codes.
---	--

WATER SUPPLY CONNECTION

The incoming cold water supply connection, at the rear of the appliance cabinet, requires 3/8" tubing and water pressure of 25-50 psi. A manual shut-off valve must be provided convenient to the appliance; this valve should be open when the boiler is in operation.

	CAUTION: Failure or malfunction of this appliance due to poor water quality is not covered under warranty. Water quality is the major factor affecting the performance of your appliance. If you are unsure of water quality, consult a local water treatment specialist and have the water analysed. Water which fails to meet these standards should be treated by installation of water conditioner. Total dissolved solids: Less than 60 PPM Total alkalinity: Less than 60 PPM Silica: Less than 60 PPM Chlorine: Less than pH Factor: 7.0 - 8.5
---	---

DRAIN CONNECTION

The appliance drain (2" IPS) should be piped to a floor drain near the appliance. There should be no solid drain connection; an "open gap" between the appliance and the floor drain is required.

GAS CONNECTION

1. The data plate on the cabinet door of the appliance indicates the type of gas your unit is equipped to burn. DO NOT connect to any other gas type.

Keep the appliance area free and clear from combustible substances. Do not obstruct the flow of combustion and ventilation air.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

GAS CONNECTION (Continued)

2. A 3/4" NPT line is provided at the rear for the connection. Each boiler is equipped with an internal pressure regulator which is set at 3.5" W.C. manifold pressure for natural gas or 10.5" W.C. for LP gas. Use the 1/8" pipe tap on the burner manifold for checking pressure.

An adequate gas supply is necessary. Undersized or low pressure lines will restrict the volume of gas required for satisfactory performance. A steady supply pressure, between 7" W.C. and 14" W.C. for natural gas and 11" W.C. and 14" W.C. for propane gas is recommended. With all units operating simultaneously, the manifold pressure on all units should not show any appreciable drop. Fluctuations of more than 25% on natural gas, and 10% on propane gas, will create pilot problems and affect burner operating characteristics.

Contact your gas company for correct supply line sizes.

Purge the supply line to clean out any dust, dirt, or foreign matter before connecting the line to the unit.



CAUTION: The pipe thread compound used when installing pipes must be a type that is resistant to the action of liquified petroleum or propane gases.

Codes require that a gas shut-off valve be installed in the gas line prior to the steamer. Make sure the pipes are clean and free of obstructions, dirt, and piping compound.



WARNING: Prior to start-up, check all joints in the gas supply line for leaks. Use soap and water solution. Do not use an open flame.

Do not connect the appliance to the electrical supply until after the gas connection has been made.

ELECTRICAL CONNECTIONS

120 VAC-60 Hz - Single Phase

Make electrical connection to terminal block provided in the rear of the appliance. A separate 15A supply is required for each appliance.

Refer to the electrical diagram located inside cabinet on door.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

3.0 OPERATION INSTRUCTIONS

	WARNING: Do not force the gas control knob. Use only your hand to turn the gas control knob. Never use any tool. If the gas control knob will not operate by hand the gas control should be replaced by a qualified service technician.
---	--

	WARNING: Do not disassemble the gas control; it contains no replaceable components. Attempted disassembly or repair may damage the gas control.
---	--

	WARNING: In the event of main burner ignition failure, a 5 minute purge period must be observed prior to re-establishing ignition source.
---	--

For CSD-1 equipped boilers, see section 4.0 Operation Instructions for CSD-1 Equipped Boiler.

BOILER CONTROLS (Inside Cabinet)

- | | | |
|-------------------------|---|---|
| Main Power Switch | - | ON fills the boiler tank and turns the boiler controls on. You should allow 20 minutes to fill the tank and generate steam. |
| | - | OFF shuts off the boiler controls and opens the automatic blowdown valve, emptying the boiler tank and releasing water and steam to the drain. This should be done at least once daily to remove sediment, lime or scale. |
| Pilot Light | - | Indicates main power is ON. |
| Boiler Pressure Gauge | - | Should read 9 - 11 psi during operation, 0 psi during shutdown. |
| Water Level Sight Glass | - | Observe level of water in the boiler and water quality. Murkiness in the water indicates inadequate water quality; the owner must supply proper water to the boiler. See page 4 Water Quality Statement. |

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

BOILER CONTROLS (Inside Cabinet) - Continued

- | | | |
|---------------------|---|---|
| Water Level Control | - | While ON, briefly open the water level control once each week to remove any sediment that might accumulate. |
| Safety Valve | - | This valve will release (pop off) if the boiler has too much pressure. Once a week, this valve should be tripped during operation to make sure it functions properly. |

1. START UP - BOILER OPERATION WITH STANDING PILOT IGNITION

Open manual gas shut off supply valve and if the appliance has a manual blowdown valve, close it. Open cabinet door and turn ON power switch located on left side. Green pilot light will come on, water will begin to enter boiler and required water level will be reached in about three minutes. Observe water gauge glass to verify.

The dial on the combination gas control valve has three positions (ON-PILOT-OFF) for manual gas control of main burners and pilot. Turn DIAL to PILOT. Depress dial and light pilot burner located on centre main burner of boiler. Maintain dial in depressed position for about 30 seconds and release. Observe that the pilot burner flame stays on. If at any time the flame should become extinguished, a 5 minute period of complete shut off of gas supply is required before relighting.

Turn dial to ON and burners should ignite. Steam generation will now commence and be completed in approximately 15 minutes. Steam generation should reach approximately 11 psi as indicated on the pressure gauge on the boiler.

2. START UP - BOILER OPERATION WITH ELECTRONIC IGNITION

Open manual gas supply valve.

Open cabinet door and turn main power switch ON. Green pilot light will come on, water will begin to enter boiler and required water level will be reached in about 3 minutes. Observe water gauge sight glass to verify.

The dial on the gas combination control valve has 2 positions (ON and OFF).

ON - [Rotated counterclockwise] permits gas to flow to the pilot and main burner.

OFF - [Rotated clockwise] prevents gas flow to pilot and main burner.

NOTE: Units are shipped with the control in the ON position.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

2. START UP - BOILER OPERATION WITH ELECTRONIC IGNITION (Continued)

With the gas control valve, power switch and water supply all ON, water begins entering the boiler and gas flows to the pilot: Spark will begin in 2 to 3 seconds. If the pilot fails to light in 90 seconds, the control will provide 100% lockout. If this occurs: Wait 5 minutes, then turn power switch off for one minute before turning power switch back on.

Once the pilot is lit and the required water level has been reached, the main burners will ignite. Burner will cycle to meet the steam pressure required. Steam pressure should reach approximately 11 psi as indicated on the pressure gauge on the boiler.

DAILY SHUT DOWN

Turn power switch off.

Open blowdown valve if so equipped.

COMPLETE BOILER SHUT DOWN

If boiler is not intended to be operated for a lengthy period of time, shut off all power, gas and water supplies to the appliance. Open blowdown valve if so equipped.

4.0 OPERATION INSTRUCTIONS FOR CSD1 EQUIPPED UNITS

Initial Start-Up Procedure

1. Open the manual gas shut-off supply valve.
2. Close the manual blowdown valve, if so equipped.
3. Light the pilot burner.

The dial on the combination gas valve has three positions (ON-OFF-PILOT) for manual gas control of main burners and pilot burner. Turn the dial to PILOT. Depress the dial and light the pilot burner on the centre burner of boiler. Maintain the dial in depressed position for about 30 seconds and release. Observe that the pilot flame stays ON. Turn dial to "ON".

4. Open cabinet door and turn "ON" the power switch. The green pilot light will come "ON". Water will begin to enter the boiler. When enough water has entered the boiler the (amber) "STAND BY" pilot light will come on.
5. Press the "RESET" switch to begin boiler operation. The "STAND BY" pilot light will go off and the boiler will begin operation.

If at anytime the flame should become extinguished, a five (5) minute purging is required before relighting is attempted.

Daily Startup Procedure

1. Close the manual blowdown valve, if so equipped.
2. Examine that the pilot burner flame is burning. If the pilot burner is out, a five (5) minute period of complete gas supply shut off is required before relighting. Follow initial start up instructions above.
3. Open cabinet door and turn "ON" the power switch. The green pilot light will come "ON". Water will begin to enter the boiler. When enough water has entered the boiler the (amber) "STAND BY" pilot light will come on.
4. Press the "RESET" switch to begin boiler operation. The "STAND BY" pilot light will go off and the boiler will begin operation.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

4.0 OPERATION INSTRUCTIONS FOR CSD1 EQUIPPED UNITS (Continued)

Daily Shutdown Procedure

1. Turn "OFF" the power switch. Observe that the burners go off.
2. Open the manual blowdown valve, if so equipped. If the appliance is equipped with an automatic blowdown solenoid valve, the boiler's contents, water and steam, will be blown out and exhausted through the appliance drain. The cold water solenoid valve will be activated.

Complete Shutdown Procedure

If the appliance is not intended to be operational for a lengthy period, then shut it down completely.

1. Open the manual blowdown valve, is so equipped.
2. Shut off all supplies of power, gas and water to the appliance.

Normal Boiler Operating Cycle

Water Fill Cycle

On the initial filling of the boiler, the reset switch must be activated to initialize the safety lockout circuit. Once the water in the boiler has reached the proper level, the level control will stop the flow of water to the boiler. As water is consumed in the production of steam, the level control will replenish water to the boiler.

Firing Cycle

The gas valve is controlled by pressure sensing devices. On initial operation of the boiler, steam generation should reach 11 psi in approximately 15 minutes. At this point the "Operating Pressure" switch will close the gas valve. When pressure drops to 9 psi, the pressure switch opens the gas valve and ignition should occur.

Should the pressure rise to more than 14.5 psi the "Override pressure switch" will open the override solenoid valve, releasing the excess steam.

Condensing Drain

A thermostat is located in the drain assembly and is activated by the temperature of steam. The thermostat opens the cooling solenoid valve, supplying water to the drain to condense the steam.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

OPERATION INSTRUCTIONS (Continued)

Automatic Blowdown Valve

If the unit has an automatic blowdown valve, it is activated by the main power switch. The boiler will drain should the main power switch be turned "OFF."

Safety Lockout Conditions

High Temperature Condition

A high temperature safety device is installed on the boiler. Should the temperature exceed the limit of this device, the boiler will be shut down and be put in a state of lockout. The "Temperature" pilot light (Red), and the "Standby" pilot (amber), will come on.

High Pressure Condition

A high pressure safety switch is installed on the boiler. Should the pressure exceed the limit of this device, the boiler will be shut down and be put into a state of lockout. The "Pressure" pilot light (Red), and the Stand By pilot (amber), will come on. Should this device fail to operate, the safety relief valve will open.


Low Water Condition

A second low water safety cut off is supplied with the boiler. Should the water level fall below normal operating levels, this device will activate and put the boiler in a state of lockout. The "Low Water" pilot light (Red), and the "Stand By" pilot (amber) will come on.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

5.0 PERIODIC MAINTENANCE

Be sure to flush your boiler water level control daily. Failure to follow this procedure can cause the control to malfunction resulting in serious boiler damage.

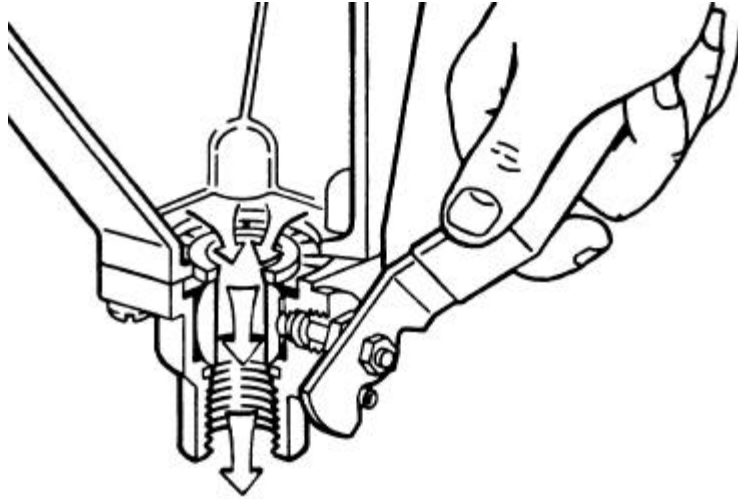

The Boiler Water Level Control installed on your boiler requires periodic maintenance. As boiler water circulates into the float chamber, sand, scale and other sediment may be deposited in the float chamber. While the chamber has been designed with a large accumulation bowl, it is necessary to flush the sediment from the chamber by blowing down the control so that the accumulation of sediment does not interfere with the movement of the float in the control. Control must be flushed at least once a day.



CAUTION: Protect yourself. When flushing control, hot water and steam will flow out of the drain.

When flushing control, note water level in gauge glass, allow the boiler to fill if necessary and also to come up to temperature.

Before flushing control, note that water level in gauge glass is within operating range and the boiler pressure is at least 6 psi. While the boiler is being fired, open blowdown valve at bottom of control by rotating the handle counterclockwise about 1/4 turn to fully open the valve. Opening the blowdown valve also checks the cut-off operation. Float should drop shutting burner off, hot water and steam will flow out the drain flushing away sediment.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G



CAUTION: If burner does not shut off during blowdown, immediately discontinue use of appliance and call for service.

Continue draining water for about fifteen (15) seconds, from control until water is clean. Manually close valve. Recheck gauge glass. If water level has dropped significantly, wait for the boiler to restore water level and pressure and repeat if necessary.

PERIODIC MAINTENANCE



WARNING: Disconnect the power supply to the appliance before cleaning or servicing.

1. If water in sight glass is not clear and appears murky, this indicates poor water quality and may cause control failure. SEE WATER QUALITY STATEMENT, page 4.
2. Safety valve should be tripped during operation once a week to ensure that it is functioning properly.
3. Clean around burners and orifices if lint has accumulated.
4. Visually ensure carry over ports are unobstructed.
5. Visually check that the flue is not obstructed.

CLEANING

DO NOT allow water near the electrical components.

At the end of the day, turn the Main Power Switch OFF (automatic blowdown drains the boiler tank) or if equipped with manual blowdown valve, open. Wash exterior with mild detergent and warm water, rinse, and wipe dry. Do not use steel wool on stainless steel surfaces.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

MAINTENANCE

REMOVAL OF LIME SCALE DEPOSITS

The interior of the steam boiler should be inspected at least twice a year by your authorized service provider to determine whether the boiler needs to be delimed. The service provider should perform any necessary deliming procedure. See descaling instructions.

VENT HOOD

Twice a year check the venting system (hood); remove any obstructions; and clean as necessary.

BOILER DESCALING INSTRUCTIONS

It is recommended that the boiler be checked every 90 to 120 days for scale build up. Regular maintenance should be carried out at this time.

If the boiler is descaled, a new Anode should be installed in the boiler to help extend its life.

1. With boiler empty, close manual blowdown valve. If appliance is equipped with automatic blowdown, turn water supply OFF to appliance. Turn power switch ON. This will energize and close blowdown valve.
2. Remove 3/4" pipe plug from fitting on left front of boiler.
3. Insert appropriate hose or tube through fitting and pour in (½) half gallon (U.S.) of CLR Descaling solution.

Or use the Optional Deliming assembly DPA-1 available from your dealer. For appliances equipped with CSD-1, descaling solution must be introduced through hand hole.

4. Replace 3/4" pipe plug securely.
5. Open water supply to appliance allowing water to fill boiler to required level.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

BOILER DESCALING INSTRUCTIONS (Continued)

6. Let appliance cycle, allowing two hours for descaling and cleaning. **DO NOT TURN STEAM ON TO CONNECTED APPLIANCES.**
7. Open both the blowdown and low water level control valves for complete drainage. Then close both valves.

For appliances equipped with automatic blowdown, turn OFF power switch and open low water control valve. This will allow complete drainage. Once drained close water level control valve.

8. Turn appliance switch ON. When boiler is completely filled, turn power switch OFF. This will rinse and drain boiler. Appliance with manual blowdown valve must be opened to drain.
9. Complete Step 8 twice to assure boiler is completely rinsed.
10. Appliance is now ready for use.

6.0 ADJUSTMENTS

WARNING: At least twice a year have an authorized service person clean and adjust the unit for maximum performance.

TO CALIBRATE PRESSURE SWITCHES

NOTE: Pressure switches are factory set. Calibration is only required if pressure switches are replaced or if adjustment is required.

Pressure switch range is from 1 to 15 psi.

Adjust all settings to maximum on high signal adjustment screw on pressure switches.

Adjust in the following sequence:

- High limit pressure switch.
- Override pressure switch.
- Operating pressure switch.
- Turning screw clockwise to increase, counterclockwise to decrease pressure.
- Use relief valve to release pressure from boiler for setting adjustments.

1. HIGH LIMIT PRESSURE SWITCHES

Allow pressure to build until unit shuts off. This should occur at 15 psi. Set the high signal to switch at 14.5 psi on the gauge and the low signal to 13.0 psi.

2. OVERRIDE PRESSURE SWITCHES

Allow pressure to increase to 13 psi. Set the high signal to switch at 13 psi on the gauge and the low signal to 11 psi.

3. OPERATING PRESSURE SWITCHES

Set the high signal to switch at 11 psi on the gauge and the low signal to 9 psi.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

TO CALIBRATE PRESSURE SWITCHES (Continued)

4. Release pressure in boiler to below 9 psi. Burner will come on. Once pressure has reached 11 psi, burners will shut off. Repeat this process several times to make sure burners come on at 9 psi and shut off at 11 psi.

Once completed, pressure switches have been calibrated.

Should your unit not have the High Limit pressure switch, start procedure at Override pressure switch.

SERVICE

NOTICE: Contact the factory, the factory representative or local service company to perform maintenance and repairs.

7.0 TROUBLESHOOTING

WARNING: The boiler and its parts are hot. Use care when operating, cleaning, or servicing the boiler.

BURNERS PRODUCE CARBON DEPOSITS

1. Wrong size orifices.
2. Burner air not adjusted properly.
3. Wrong gas supply.
4. Incorrect pressure at supply.

PILOT DOES NOT LIGHT

1. Gas supply to unit is OFF.
2. Power supply is OFF.
3. Gas control knob is OFF.
4. Dirty or loose wire connection to module - clean and/or tighten.
5. Ignitor cable, shorting out - check that not in contact with metal or damaged; may require replacement.
6. Defective control or module.
7. Unit goes into 100% lockout - turn off and try again in five minutes.
8. Dirty flame sensor - clean with emery cloth.
9. Cracked ceramic insulator - replace pilot burner/ignitor sensor.
10. Too much draft.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

BURNER DOES NOT COME ON

1. Gas supply to unit is "OFF".
2. Manual shut off valve is "OFF".
3. Power supply is "OFF".
4. Faulty valve or ignition module.
5. Pilot out.
6. Pilot may require flame adjustment.
7. Water level has not been reached in boiler. Check water supply is on, check water level control.
8. If water at proper level, check relay which energizes pressure switch and gas control.
9. Pressure switch may need to be replaced if relay is operating.
10. Gas control may also require replacement if energized but not operating.

SAFETY RELIEF VALVE BLOWS

1. Defective valve.
2. Pressure too high, pressure switch requires adjustment (lower) or may be defective.

WATER NOT BEING SUPPLIED TO BOILER

1. Water supply is "OFF".
2. Defective water fill Solenoid Valve.
3. Water level control clogged or defective, unable to operate fill valve.
4. Check that drain valve is closed.
5. Supply water pressure too low.

BOILER SLOW TO HEAT UP

1. Lime build up - contact service.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

8.0 KETTLE FUNCTIONING MODE

Direct connected steam jacketed kettles consist of a stainless steel bowl and a stainless steel jacket which envelopes the lower surface of the bowl thus forming a sealed pressure vessel (chamber) into which steam is introduced by means of a manual control valve.

The kettle bowl is the container for the food product which ideally should be of a liquid or semi-liquid consistency to achieve complete contact with the bowl surface and thus fully absorb the heat transmitted through that surface.

The temperatures required for the cooking process to function adequately must be greater than the boiling point of the liquid food product. Further, the greater the steam pressure used, the higher the temperature and consequently the quicker the cooking process. For example, steam pressurized at 30 psi attains a temperature of 274 degrees Fahrenheit (135 degrees Celsius).

In the initial stages of the cooking process when the steam comes in contact with the cold kettle bowl surface it condenses and forms considerable amounts of water. A thermostatic steam trap is plumbed to the exit end of the kettle jacket. This trap is a mechanical device that closes on high temperatures and opens when the temperature drops thus allowing the water formed from condensate to exhaust but retain steam under pressure.

9.0 OPERATING PROCEDURES



WARNING: The kettle and its parts are hot. Use care when operating, cleaning or servicing the kettle.

1. Fill kettle with product to desired level.
2. Slowly turn the steam control valve ON to full open position.
3. The water or food should boil 3 - 4 minutes per gallon. If it does not, then incoming pressure should be checked to determine that it is adequate to operate the kettle efficiently.
4. Regulate steam control valve depending on type of food being prepared.
5. When food is cooked, turn off steam, remove food and clean kettle immediately to prevent residue from drying on kettle bowl surface.

INSTALLATION AND OPERATION MANUAL, OYSTER BAR, GAS BOILER,
MODELS OB-2-1-27-G, OB-2-2-27-G, OB-4-1-48-G, OB-4-2-54-G

10.0 CLEANING PROCEDURES

Your kettle should be cleaned immediately after each use.

1. Ensure that steam supply is OFF.
2. Pre-rinse inside of kettle thoroughly and tilt to remove any food particles.
3. Using a nylon brush, clean kettle with a mild detergent and warm water rinse. Never use steel wool or scouring powder as it will scratch stainless steel.
4. Tilt kettle and rinse thoroughly draining out detergent solution.



WARNING: It is not recommended to use cleaning agents that are corrosive.

Use of cleaning agents that contain chloride, acids or salts are corrosive and may cause pitting and corrosion when used over a period of time; this will reduce the life of the appliances.

Should pitting or corrosion occur this is not covered by warranty.

Follow the recommended cleaning instructions. Use a mild detergent, warm water and rinse thoroughly.

11.0 PREVENTIVE MAINTENANCE

No preventive maintenance is required other than adhering to the Cleaning Procedure instructions.