



SENCOR®

SJE 741BK
SJE 742RD
SJE 743WH

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.

We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor and warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

TABLE OF CONTENTS

IMPORTANT SAFETY NOTICE	3
DESCRIPTION OF THE JUICER	5
BEFORE FIRST USE	6
ASSEMBLING THE JUICER	6
USING THE JUICER	6
USEFUL TIPS	7
RECIPES	8
CLEANING AND MAINTENANCE	9
TECHNICAL SPECIFICATIONS	9
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS ..	10
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT	10

IMPORTANT SAFETY NOTICE

- 1) Carefully unpack the appliance and take care not to throw away any part of the packaging before you find all the parts of the appliance.
- 2) This appliance may be used by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- 3) Children must not use this appliance or play with it. Keep the appliance and its power cord out of their reach.
- 4) Never use accessories that have not been delivered with this appliance or are not intended for it.
- 5) Under no circumstances should you try to repair or adjust the appliance on your own - danger of electric shock! Entrust all repairs and adjustments to a specialised company/service. By tampering with the appliance you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.
- 6) Only store and use the appliance away from flammable or volatile materials and solutions.
- 7) Keep the appliance away from extreme temperatures, direct sunlight and excessive humidity. Do not use in a dusty environment.
- 8) Do not place the appliance near heaters, open fires or other products or equipment that are sources of heat.
- 9) This appliance is designed for household use. Do not use it in industrial surroundings or outdoors!
- 10) Do not use the product for purposes other than those intended.
- 11) Before connecting the product to the power outlet ensure that the voltage on the rating label is the same as that in the power outlet.

- 12) Do not place the power cord near hot places or sharp objects. Do not place heavy objects on the power cord. Position the power cord so that it will not be stepped on or tripped over. Make sure the power cord is not touching a hot surface.
- 13) If the power cord of the product is damaged, have it repaired by an authorised service technician to prevent causing a dangerous situation. It is forbidden to use a product with a damaged power cord or plug.
- 14) Do not disconnect the power cord from the wall outlet by pulling the cord.
- 15) Do not use the juicer if the strainer is damaged.
- 16) Never submerge the motor unit in water or any other liquid.
- 17) Always turn off the appliance and disconnect it from the power socket if you will not be using it and if you are leaving it without supervision, before assembly, disassembly or cleaning.
- 18) Prior to removing accessories or parts that move during use, check that the appliance is turned off and disconnected from the power socket and wait until the moving parts come to a stop.
- 20) Do not insert your hands or foreign objects into the feed tube during operation.
- 21) Do not push ingredients into the feed tube using your hands or any utensils. Always use the provided plunger.
- 22) Be careful when handling the stainless steel strainer as the blade on the bottom is very sharp. Careless handling may result in injury.
- 23) The manufacturer takes no responsibility for damages caused by the incorrect use of this product and its accessories (injuries, burns, scalding, fire, food spoilage, etc.).




When the juicer is running, do not place fingers or any other items (except for the juiced fruit and vegetables) into the feed tube.

Juicer

SJE 741BK / SJE 742RD / SJE 743WH

EN

DESCRIPTION OF THE JUICER

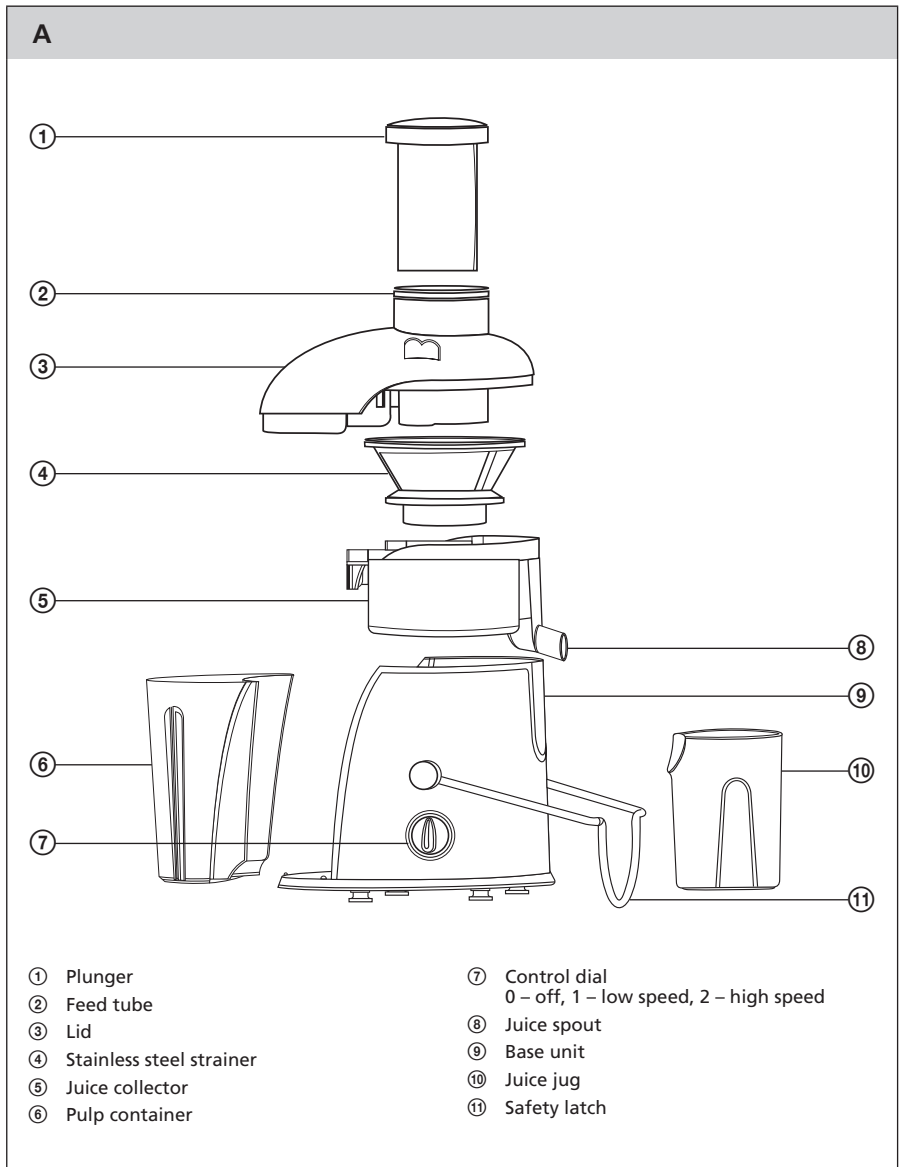


EN-5

BEFORE FIRST USE

- 1) Thoroughly wash all parts that are intended to come into contact with food using warm water and a neutral kitchen detergent. Then rinse with clean water and wipe dry.
- 2) Place the juicer on a stable non-slip even surface.
- 3) Connect the plug of the power cord to a suitable power socket (220-240 V).

ASSEMBLING THE JUICER

- 1) Insert the juice collector into the juicer as shown in the picture. Make sure that the juice collector spout is located in the cut-out in the base unit.
- 2) Place the stainless steel strainer into the juice collector. Make sure that the strainer is firmly seated on the drive shaft. When seated correctly, the top edge of the strainer should be under the level of the top edge of the juice collector.
- 3) Place the pulp container into the base unit. First move the top end and then push down the bottom end towards the juicer. Check that the pulp container is inserted correctly. When correctly seated, there should be a space of no more than 1 mm between the pulp container and the base unit.
- 4) Cover everything with the lid and push it down into the correct position.
- 5) Use one hand to push the lid downwards and at the same time tilt the safety latch on to it so that the lid is secured in the correct position. An audible click will be heard. The juicer is equipped with a safety mechanism that prevents it from being started unless the lid is correctly seated and secured in place with the safety arm.
- 6) Now insert the plunger into the feed tube. Notice, that to make movement easier, the feed tube is equipped with a groove that fits together with the coupling in the top part of the feed tube.

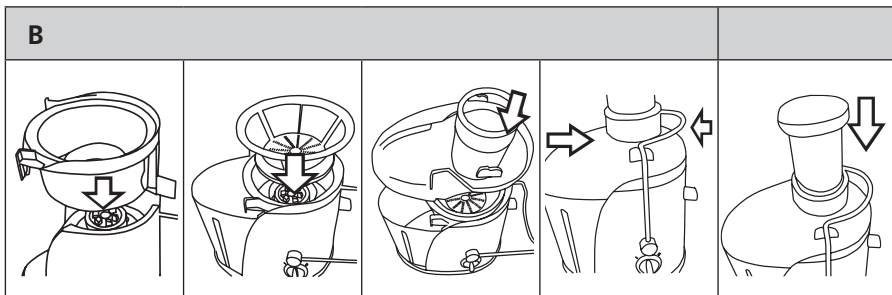

USING THE JUICER

- 1) Slide the juice jug on to the spout.
- 2) Get ready to process ingredients. Thoroughly wash all the ingredients before juicing them. After washing them, cut the ingredients into smaller pieces that will pass through the feed tube. Prior to juicing certain types of fruit and vegetables, it is necessary to first remove hard stones that are contained in, for example, apricots, peaches, mangoes, etc. and inedible peels, e.g. from oranges, pineapples, melons, mandarins, etc. You will find further processing tips in the section "Useful advice" (see below).
- 3) Turn the control dial to position "1" or "2" depending on the type of fruit or vegetables being processed. For softer ingredients, use speed 1 (e.g. grapes, bilberries, melon, raspberries, tomatoes, etc.). For harder ingredients, use speed 2 (e.g. pineapple, celery, carrot, beet, apples, etc.).

- 4) Place the prepared ingredients piece by piece into the feed tube and using the plunger slowly push them down on to the rotating stainless steel strainer. Do not exert excessive force. Juice the ingredients slowly to achieve the maximum possible yield.
- 5) During the juicing process, the juice will go to the juice jug and the pulp is separated and collected in the pulp container. You can empty out the pulp container while juicing, however, first turn the control dial to position "0" (off) and disconnect the power cord from the power socket. Then release the safety arm, remove the lid and carefully take out the container. Before continuing with the juicing process, put the empty pulp container back in its place and return the lid and lock the appliance with the safety arm. Then connect the power cord to the power socket and you can start the juicer again.



Attention:

This appliance is designed only for short term use. When juicing larger batches, do not use this juicer continuously for more than 60 seconds and always allow the juicer to cool down sufficiently between the individual runs for at least 60 seconds. After three juicing cycles, allow the appliance to cool down for at least 15 minutes.

- 6) When you have finished using it, turn the juicer off, disconnect it from the power socket and clean it out according to the instructions contained in the chapter Cleaning and maintenance.

USEFUL TIPS

Before you start using the juicer, read the following tips which will help you achieve maximum juice yield, an optimal taste and also make your work easier:

- Only use fresh and ripe fruit and vegetables as they contain more juice. The following types of fruit and vegetables are particularly suitable for juicing: pineapple, apple, orange, grapes, melons, cucumbers, carrot, celery, beetroot, tomatoes, etc. Do not juice unripe or overripe fruits and vegetables as they could negatively affect the taste of the juice.
- With root vegetables (such as carrot or beetroot), always check before juicing that you have removed all soil, tops and leaves, and that you have washed everything thoroughly.
- Fruits with large, hard seeds or stones (e.g. nectarines, peaches, mangoes, apricots, plums and cherries) must have their seeds or stones removed prior to juicing.
- There is no need to remove edible peels (e.g. from apples, pears). It is only necessary to remove thick rinds (e.g. on oranges, pineapples). Furthermore, always also remove the white fibres in the centre of citrus fruits because they have a bitter taste.
- When preparing apple juice, remember that its thickness depends on the type of apples that you are processing. The juicier the apple, the less thick the juice will be. Apple juice turns brown very quickly. You can slow down this process by adding a few drops of lemon juice.
- This juicer is not suitable for processing leafy vegetables, herbs or fruits such as bananas, avocados, figs.
- If you decide to store the juice in a refrigerator, do not leave it there for longer than a day. Freshly made juices quickly loses valuable vitamins.

RECIPES

Tomato juice

Juice 1 kg of fresh ripe tomatoes and serve immediately. To improve taste, add celery tops and fresh pepper.

Apple juice

Juice 4 large apples and serve immediately. You can combine various types of apples. To achieve a sweeter taste and an increased vitamin content, add a carrot.

Island cocktail

Juice 1 medium-sized pineapple, 1 papaya, 1 large orange and 1 guava. Add 1 mango (process in a mixer). Serve immediately.

Carrot fruit juice

Juice 4 large carrots together with 2 sweet apples. Serve immediately.

Pineapple juice

Juice 4 pineapple slices, 1 medium-sized orange and serve immediately.

CLEANING AND MAINTENANCE

- Before cleaning it, always make sure that the juicer is turned off and disconnected from the power socket.
- First remove all removable parts that come into contact with food (plunger, lid with the feed tube, stainless steel strainer, juice collector, pulp container, juice jug) from the juicer.



Attention:

Prior to disassembly, wait until the stainless steel strainer, that rotates while the juicer is running, comes to a stop.

The blade on the bottom of the stainless steel strainer is very sharp and so it is necessary to be especially careful when handling it to prevent injury.

- Clean the removable parts using warm water and neutral kitchen detergent. Then rinse them under clean running water and wipe dry.
- To clean the base unit, use a cloth dipped in a weak detergent solution. Then wipe everything with a clean dampened cloth and wipe dry.
- Never submerge the base unit or its power cord in water or any other liquids.
- For cleaning, do not use thinners or solvents or cleaning agents causing abrasion. Otherwise the surface of the appliance may be damaged.

TECHNICAL SPECIFICATIONS

Rated voltage	220–240 V
Rated frequency	50/60 Hz
Rated power input	400 W
Safety class (with regard to electric shock protection)	II
Pulp container capacity	1.2 l
Noise level	85 dB(A)

The declared noise emission level of the appliance is 85 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.

Included contents:

1x juicer	1x stainless steel strainer
1x pulp container	1x juice collector
1x juice jug with foam separator	1x user's manual
1x plunger	1x warranty card
1x lid with feed tube	

Changes to text and technical parameters are reserved.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance. Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This appliance meets all the basic requirements of EU directives related to it.