


***Jte man***

## User Manual

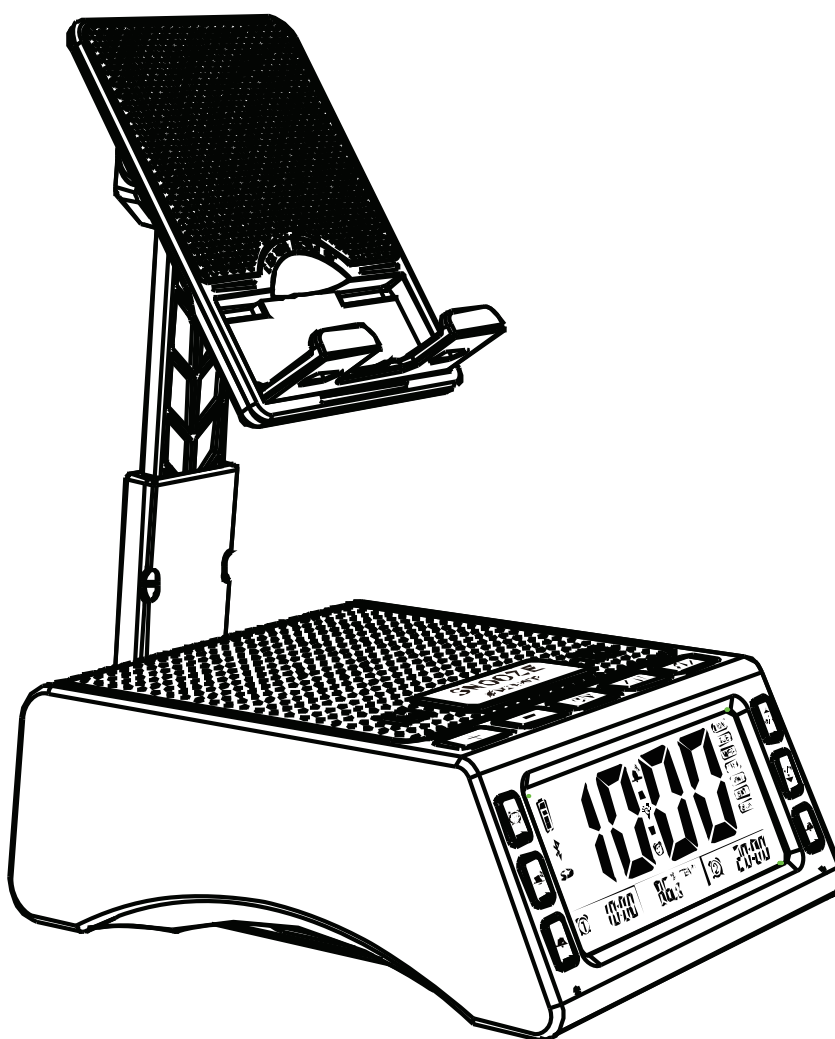

## Multi-function Bluetooth Speaker with Clock

Model No.:L36

**Thank you for purchasing our product.**

**In order to make full use of the new Multi-function Bluetooth speaker with clock,we sincerely invite you to read these instructions prior to use.**

**Note:**

**Before using this product, please get this unit fully charged by using the original data charging cable.**

**Contents**

Product Parameters,Features,Accessories-----\*3

Button Function-----\*4

Bluetooth Mode-----\*6

TF Card-----\*7

Time Setting-----\*8

Alarm Clock Mode-----\*10

Alarm Volume,12/24-Hour Time Mode,Temperature mode-----\*11

Snooze Mode,Charging Interface-----\*12

Stand Unfolding-----\*14

## Product Parameters

Product Model: L36

Bluetooth Name: Jteman L36

Bluetooth Version: 5.0

Speaker Power: 4Ω5W

Product Size: 6.1\*4.3\*2.1in

Product Material: ABS

Product N.W.: 510g

Product Output: DC5V 2A


Charging Time: 3-4 hours

Product Input: DC5V 1A

## Product Features


- Portable mini speaker
- Adjustable phone stand
- Built-in microphone
- Handsfree calling
- Screen display: Date, time, week, temperature and alarm clock
- Two sets of alarm clocks with flexible settings can help you manage your time effectively and avoid missing important events

## Product Accessories

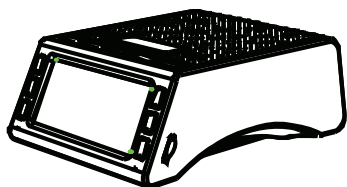


Multi-Function Bluetooth  
Speaker with Clock

\*1

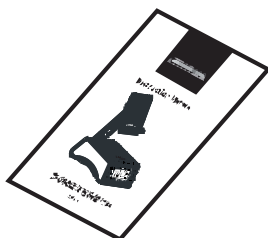

User Manual


\*1

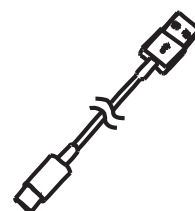

Type-C  
Charging Cable

\*1

## Button Function

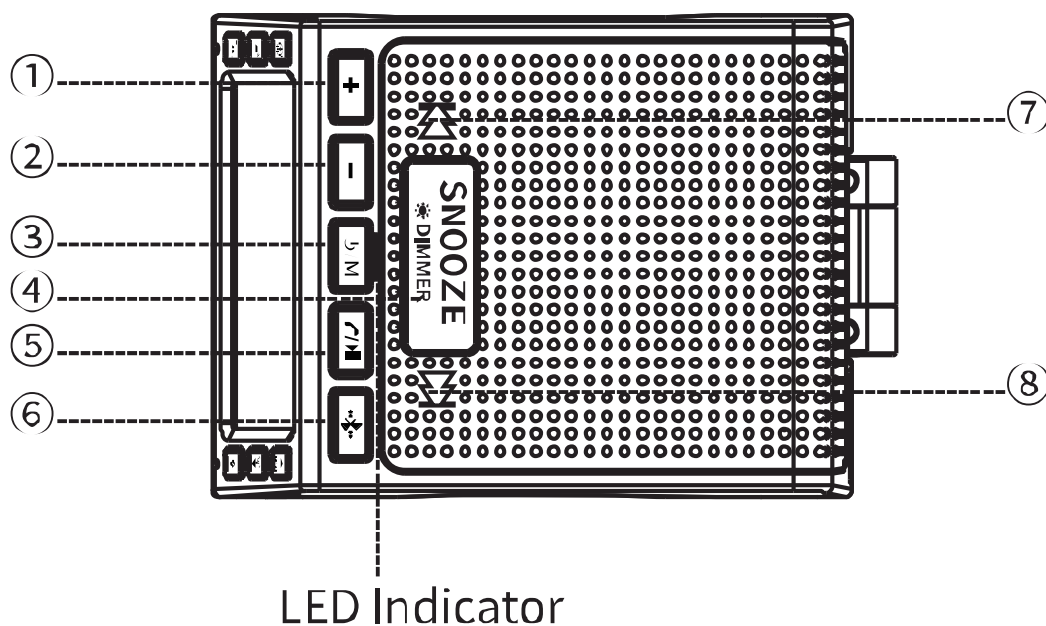

① +

Press to increase the volume

② -

Press to decrease the volume

### ③ Power on/Mode

- a. Press and hold to power on the Bluetooth speaker and enter Time Mode.
- b. After the unit is powered on, Press to switch it to Bluetooth mode or SD card mode. [If there is no TF card inserted, it will remain bluetooth mode.]

### ④ SNOOZE/ DIMMER

- a. When the alarm goes off, press to activate Snooze Mode, the alarm will ring again in 5 minutes. Press and hold for 3 Seconds, the alarm will be turned off.
- b. Screen brightness could be adjusted by short press

### ⑤ Play/Pause/Answer

Press to Pause or play. Press to answer with hands-free speaker phone or hang up phone calls.

## ⑥Bluetooth Pair


Long Press  to disconnect bluetooth and short press  to reconnect bluetooth.

## ⑦Previous

Press  to return to the previous track

## ⑧Next

Press  to go to the next track.

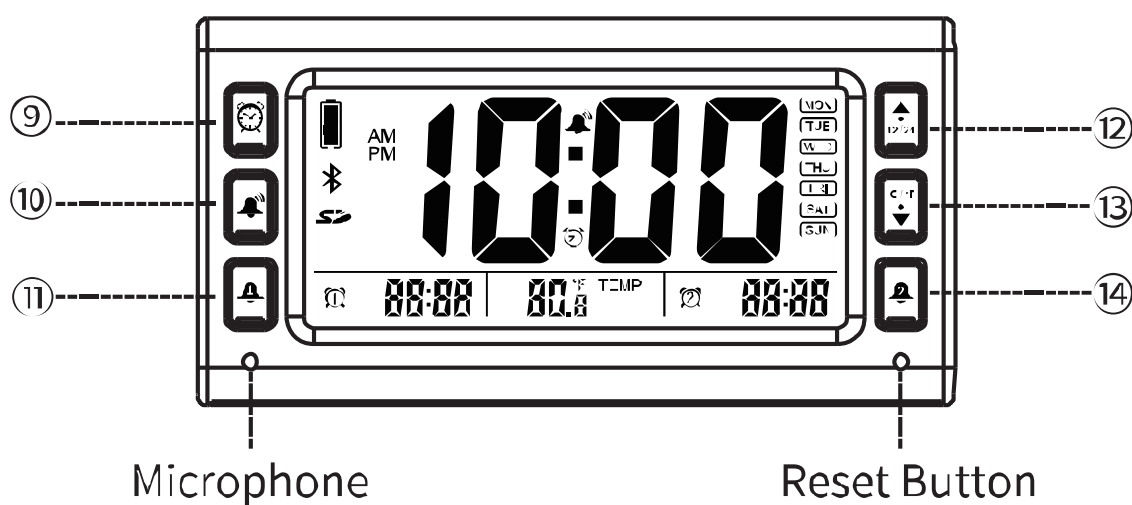

## Reset Button

If the device stops responding, please try to restart it by triggering the reset button. The reset button is in a small hole on the screen bottom right. To trigger this button, it requires a small needle such as a pin to push it into and the device will be shut off. To restart this device, please press the power button, it will enter a full-screen display mode in 3 seconds.

Please recalibrate the time and alarm after restart.

## ⑨Clock

Press and hold  3 seconds to enter Time Setting Mode.

Press and hold  8 seconds to Power Off.

After shut off the device, short press  or  to power on the speaker rapidly when it is connecting to power.

## ⑩ Volume of Alarm Clock

Press  to enter Alarm Volume Setting Mode.

## ⑪ Alarm Clock 1

a. Press  to turn on/off Alarm Clock 1.

b. Press and hold  to enter the Alarm Clock 1 Setting Mode.

## ⑫ 12/24-Hour Time

a. Press and hold  to enter 12/24-Hour Time Setting Mode.

b. In setting mode, press and hold  to switch it to 12H or 24H.

## ⑬ Temperature Mode

a. Press and hold  to entering Temperature °C/F Setting mode.

b. In setting mode, press and hold  to switch it to °C Mode or F Mode.

## ⑭ Alarm Clock 2

a. Press  to turn on/off Alarm Clock 2.

b. Press and hold  to enter Alarm Clock 2 Setting Mode.

## Bluetooth Mode

---

1. Press and hold  for 3 seconds to power on the speaker, it enters Time Mode automatically, then press  again to enter Bluetooth Pair Mode, the LED Indicator will slowly flash blue.


2. Enter Bluetooth setting on your device, search for new devices and select "Jteman L36". When successfully paired, a voice prompt will announce the connection and the LED Indicator will display a solid blue light.

3. Press +/- to increase or decrease the volume.

4. Press  to return to the previous track. Press  to skip to the next track.

5. Press  to pause or play. Press  to answer phone calls with hands-free speaker phone or hang up.

6. Press and hold  to disconnect Bluetooth, press  again will pair the last device automatically.

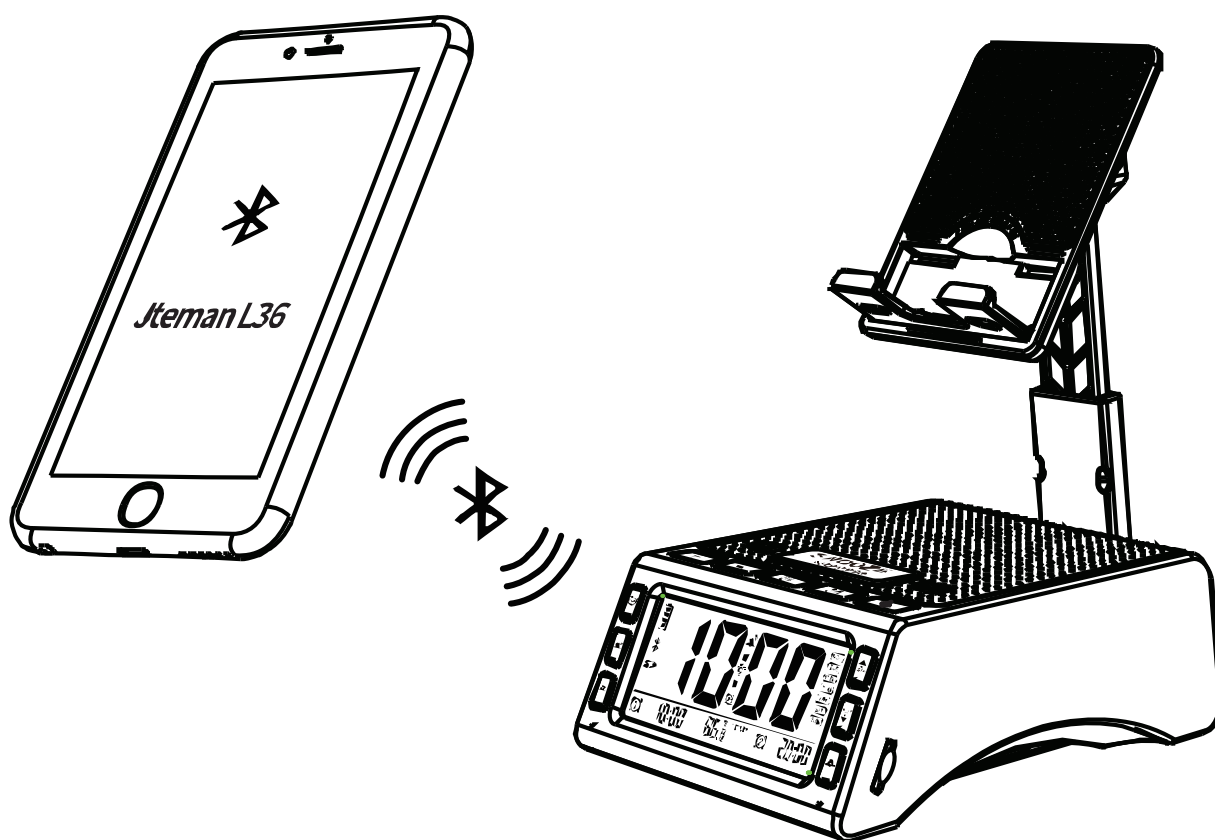

## TF Card Mode

---


1. In Time Mode, press  switch to TF Card Mode.

[If there is no TF card inserted, it will not switch to TF Card Mode].

2. In Bluetooth Mode, by inserting a TF card the speaker will switch to the TF card Mode and play music automatically.

3. Press +/- to increase or decrease volume.

4. Press  to return to the previous track. Press  to skip to the next track.
5. Press  to pause or play. Press  to answer phone calls with hands-free speaker phone or hang up.
6. Press and hold  to disconnect Bluetooth, press  again will pair the last device automatically.

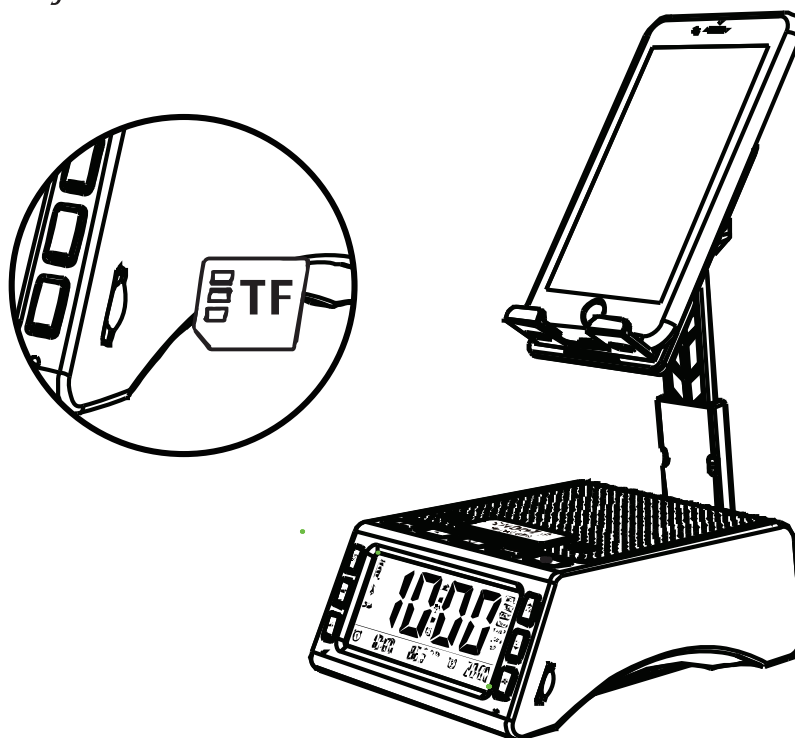


## Time Setting

1. Time and Date will be automatically calibrated after successfully paired the smart phone and speaker. (If your Android phones require confirmation of device trust authorization, please accept it).
2. Press and hold  for 3 seconds to switch to 12H or 24H Time Mode.
3. The time setting steps are as below (Digital on the screen flashes when in setting mode).

**NOTE:** There is a 30S time-out for the display if the Bluetooth Connection has been shut down by long pressing  for 3 seconds.


(Press  or , the digital clock screen will be re-displayed.)

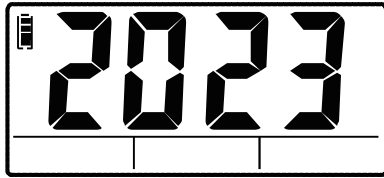

### a. Year Setting

Press and hold  to enter Time Setting Mode.


Beginning with Year setting [Digital which indicates Year will start flashing when in setting mode], press / to modify Year, press  to next step.

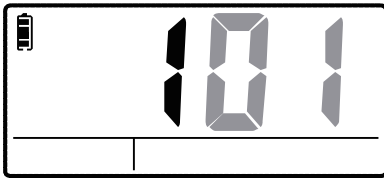

### b. Month Setting

After Year Setting finished, it enters Month Setting

automatically. Month Setting [Digital which indicates Month flashes in setting mode], press / to modify Month, press  to next step.

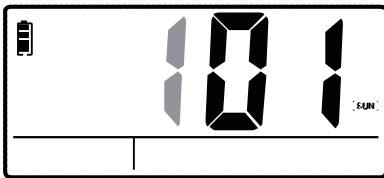

### c. Date Setting

After Month Setting finished, it enters Date Setting


automatically. Date Setting [Digital which indicates Date flashes in setting mode], press / to modify Date, press  to next step.



### d. Hour Setting

After Date Setting finished, it enters Hour Setting

automatically. Hour Setting [Digital which indicates Hour flashes in setting mode], press / to Modify Hour, press  to next step.

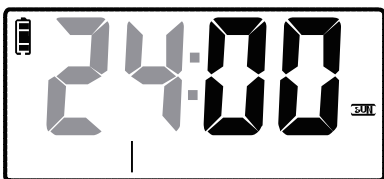

### e. Minutes setting

After Hour Setting finished, it enters Minutes Setting

automatically. Minutes Setting [Digital which indicates Minutes flashes in setting mode], press / to Modify Minutes, press  to next step.

# Alarm Clock Setting

1. Press  to turn on/off Alarm Clock 1. Once Alarm Clock 1 setting is successful, the Alarm Clock 1 icon will display on the screen. When the alarm goes off, short pressing  could activate Snooze Mode, the alarm will ring again in 5 minutes. The Snooze icon will display on the screen. Press and hold  for 3 Seconds, the alarm will be turned off.
2. The volume of alarm default setting is 60.
3. Start from step one to set up Alarm Clock 2.
4. The Alarm Clock 1 Setting steps are as below (Digital flashes when in setting mode).



## a. Hour Setting

Press and hold  for 3 seconds to enter Alarm Clock 1 Setting. Beginning with Hour Setting [Digital which indicates Hour flashes in setting mode]], press / to modify Hour, press  to next step.



## b. Minutes Setting

After Hour Setting finished, it enters Minutes Setting automatically. Minutes Setting [Digital which indicates minutes flashes in setting mode], press / to modify Minutes, press  to next step.



## c. Week Mode Setting

After Minutes Setting finished, it enters Week Setting automatically. Week Setting [Digital which indicates Week flashes in setting mode], press / to modify Week, press  to next step.


## Alarm Clock Repeat Choices

Group 1: 1-5, repeats from Monday to Friday.

Group 2: 1-7, repeats everyday.

Group 3: 6-7, repeats on Saturday and Sunday.

press  to next step.

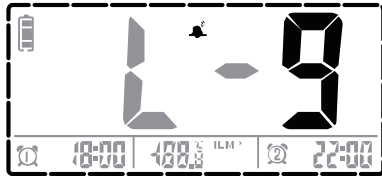

### d. Alarm Ring Setting

After Week Setting finished, it enters Alarm ring setting

automatically. Alarm Ring Setting [Black digital will

start flashing when in setting mode], press  /  to modify alarm ring, press  to next step.

All setting are done.

## Volume of Alarm Setting

Press  to modify the Volume of Alarm, after 3 seconds it will exit settings automatically. [Alarm volume default setting is 60]

## 12/24-Hour Time Mode

Press and hold  for 3 seconds to switch Time Mode to 12H/24H.

## Temperature Mode

Press and hold  to switch Temperature Mode to °C/°F.

## SNOOZE Mode/☀️ DIMMER

a. When the alarm goes off, press **SNOOZE** ☀️ DIMMER to activate Snooze Mode, the alarm will ring again in 5 minutes. Press and hold **SNOOZE** ☀️ DIMMER for 3 Seconds, the alarm will be turned off.


b. Screen brightness could be adjusted by short press **SNOOZE** ☀️ DIMMER .

## Power Port


Plug the Type-C cable into the speaker Input charging interface and then connect the other end to an available power source to charge the device.

**NOTE: The device is NOT a power bank.**

After the device is connected to power, you can charge the phone or other devices through the speaker Output interface.

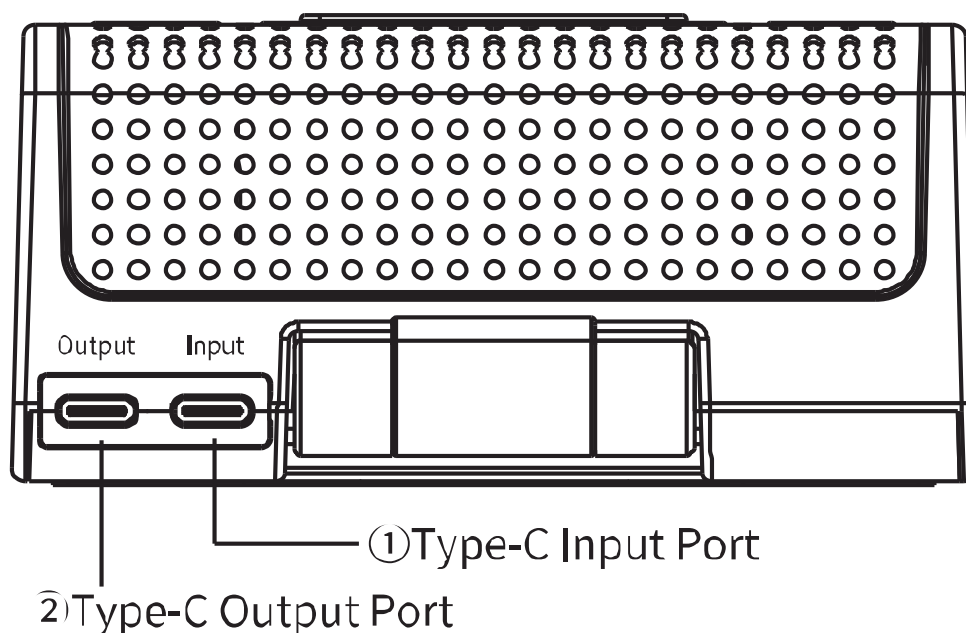

# How to charge the other devices?(as a charging station)

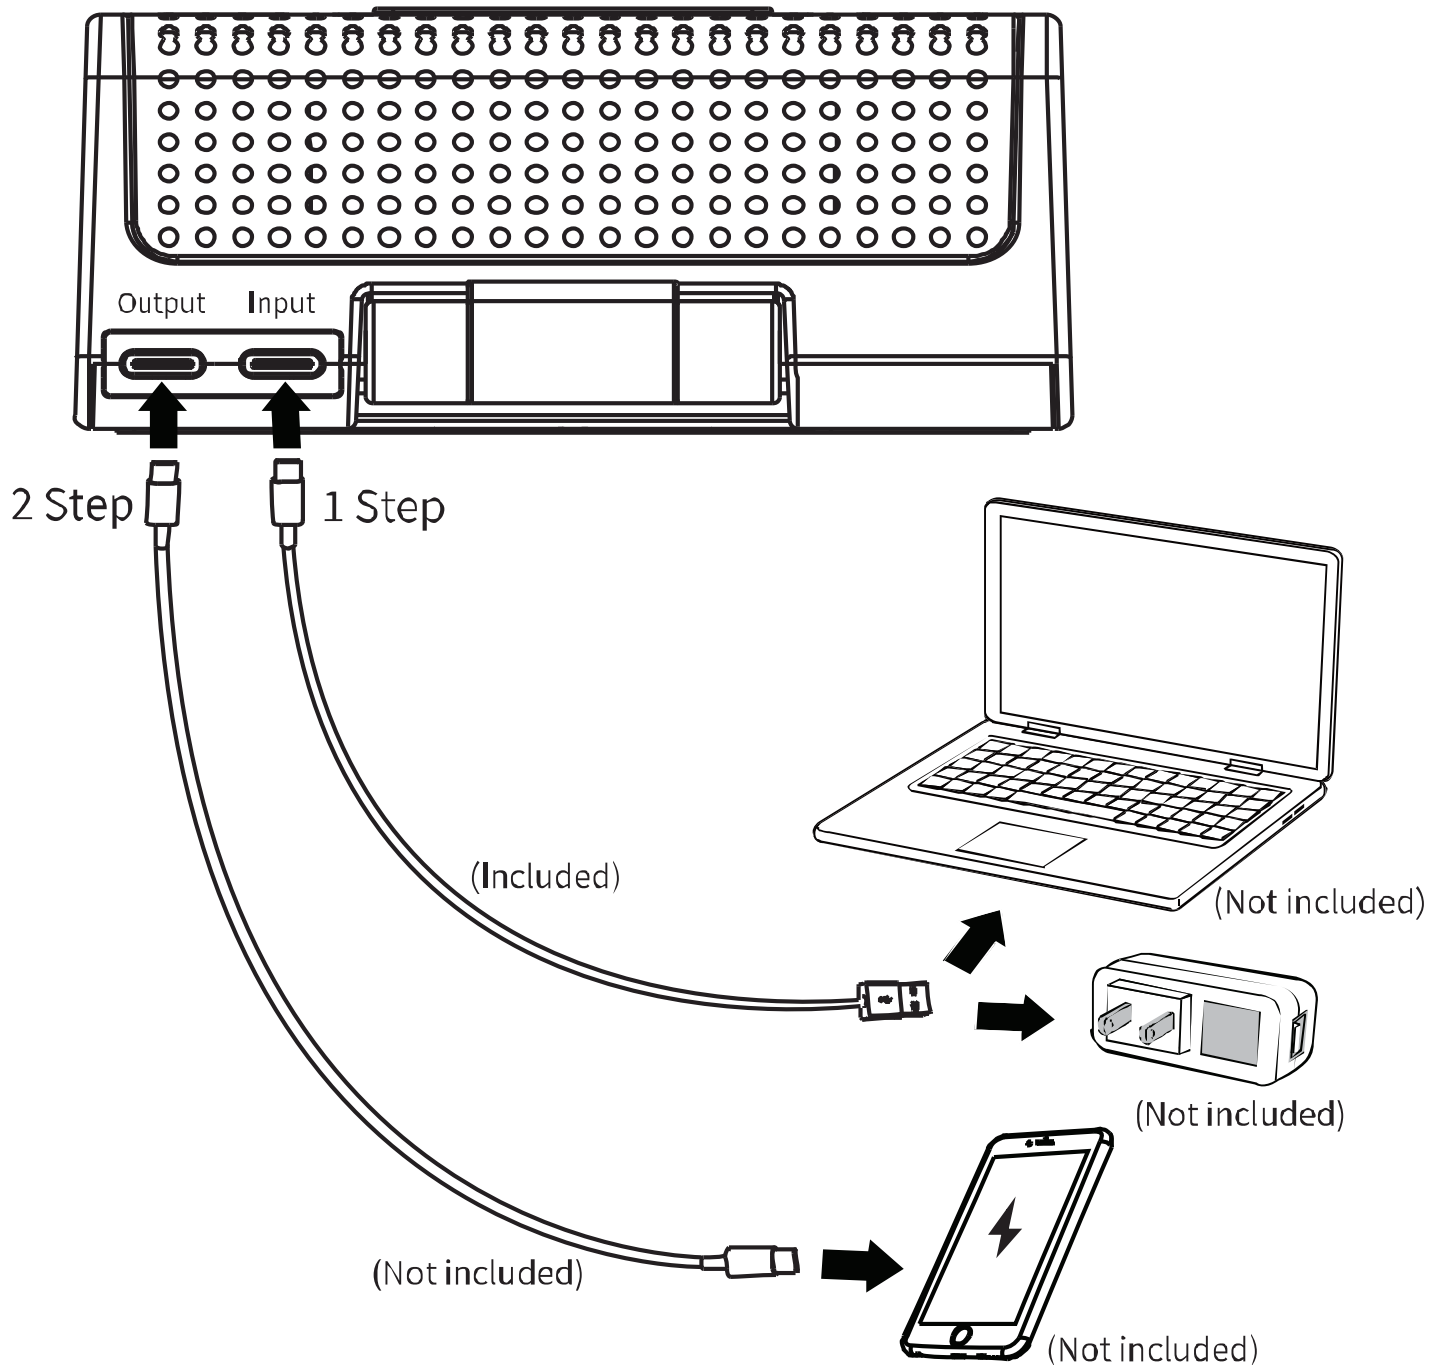


1 step 1: Connect the speaker to power supply through the Type-C Input Port .


2 step 2: Charge the other devices through the Type-C Output Port.

## Stand Unfolding

Place the Multi-function Bluetooth speaker with clock on a flat surface, pull out the phone holder and turn it over as referenced.

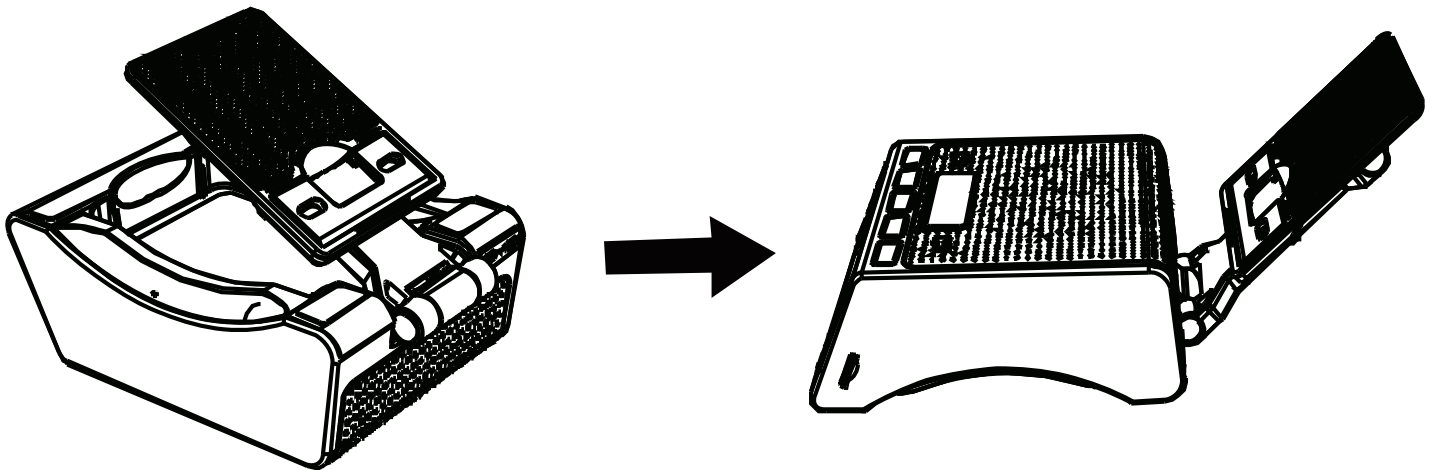

Adjust the height and angle of the phone holder.

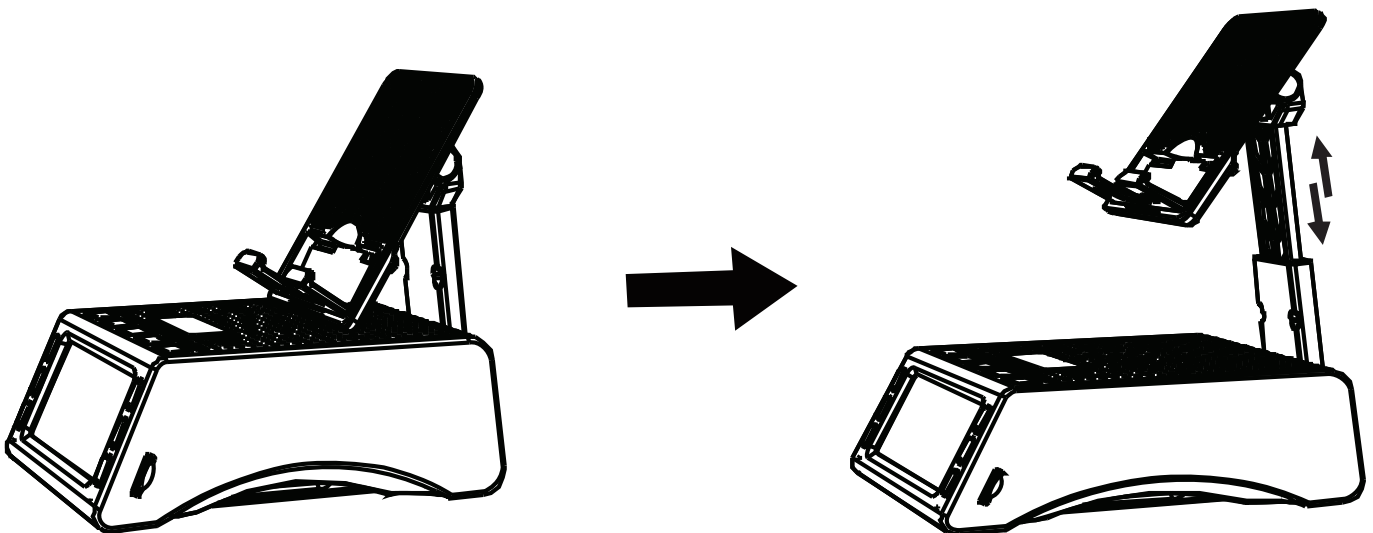

Email:support88vip@163.com

UK  
CA

CE



RoHS



FCC ID: 2ADII-L36 MADE IN CHINA

**This device complies with part 15 of the FCC Rules.  
Operation is subject to the following two conditions:**

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

**If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:**

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**The device has been evaluated to meet general RF exposure requirement.**

**The device can be used in portable exposure condition without restriction**