


Installation and Setup Guide

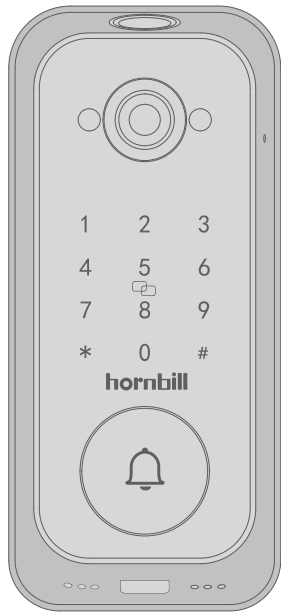

Customer Service

- Toll free:**
1-888-280-5158
- Service Hours:**
Monday to Sunday: 11:00-24:00 (EST)
- Email:**
support@hornbilllock.com

Scan Me

WhatsApp



User Guide Video




V2.0-2025

Model: T1


In the box




Exterior Lock

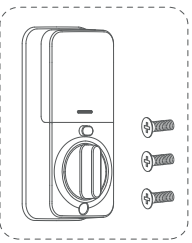


Interior Lock & Screws

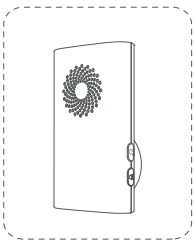


Doorbell Chime

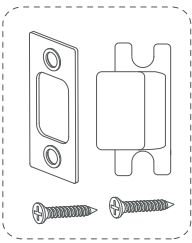


Strike Plate & Strike Box & Screws

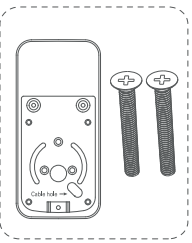


Mounting Plate & Screws

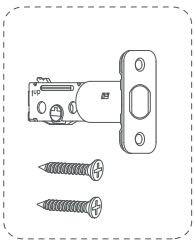


Deadbolt & Screws

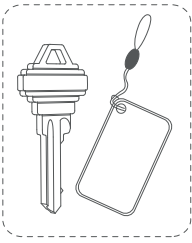

Key & IC Card

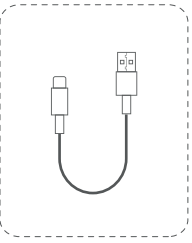


USB-C Cable

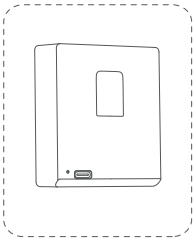


Battery

Product Overview

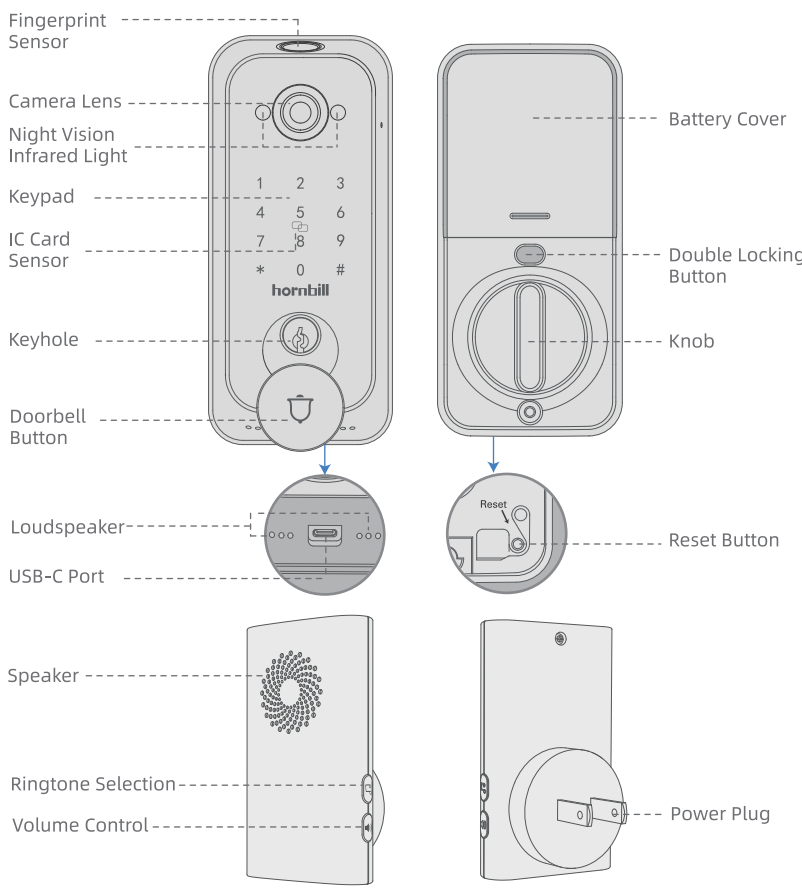


Explosive View

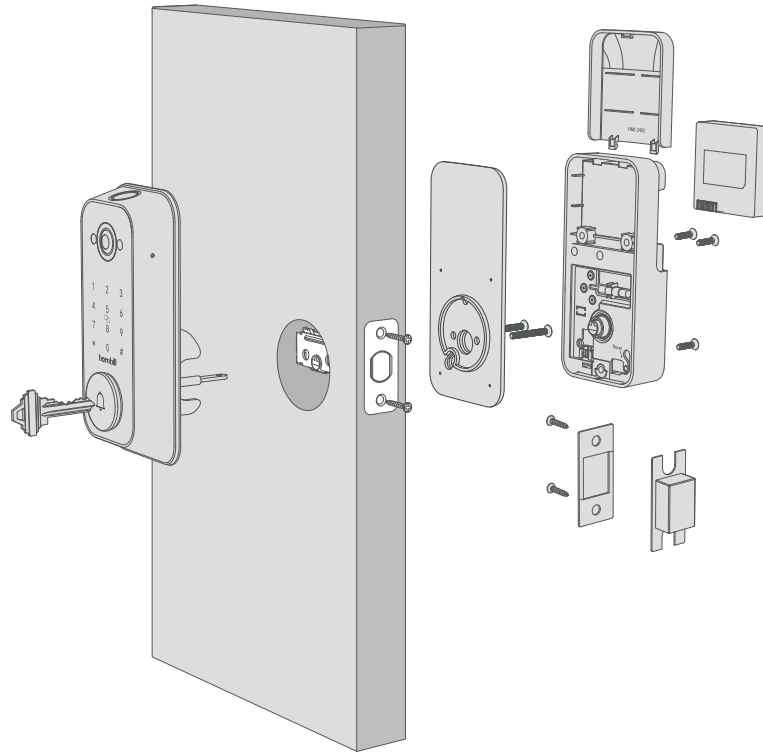


Preparations

(1) Compatible Door Dimensions

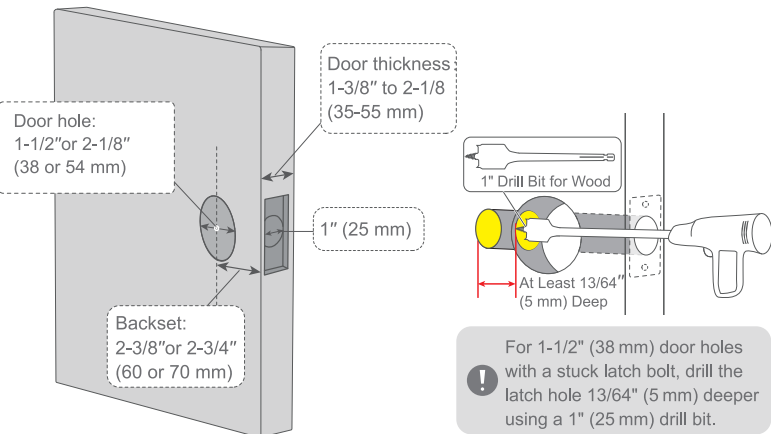


(2) Location Guide

The video smart deadbolt and Wi-Fi router should be on the same floor to ensure enhanced connectivity.

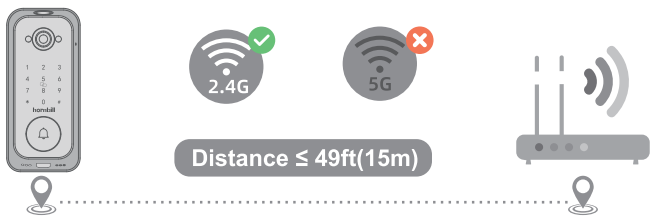


Step 1. Adjust and Install the Deadbolt

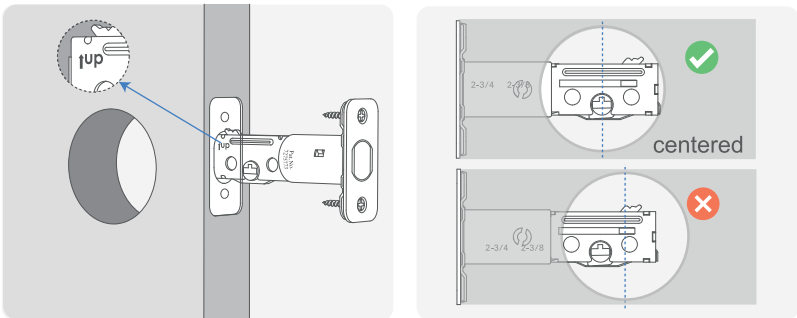

(1) Ensure the word "UP" on the deadbolt faces upward. Keep the deadbolt in the retracted position (unlocked), then insert it into the door frame.


(2) Check if the T-shaped slot is centered in the door hole. If yes, no adjustment is needed. If not, refer to "Deadbolt Adjustment".

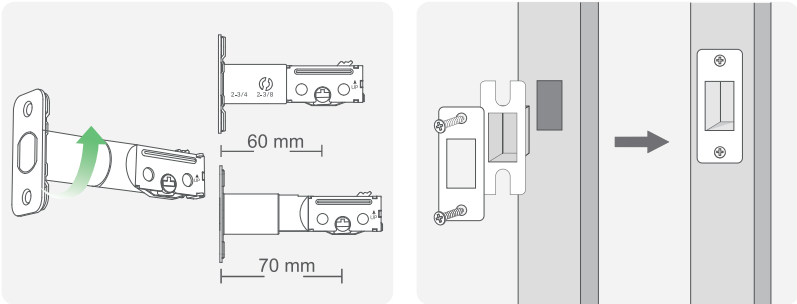

(3) Deadbolt Adjustment (only when needed).


(4) Secure the deadbolt with screws. Install the strike plate.

Step 2. Install the Exterior Lock

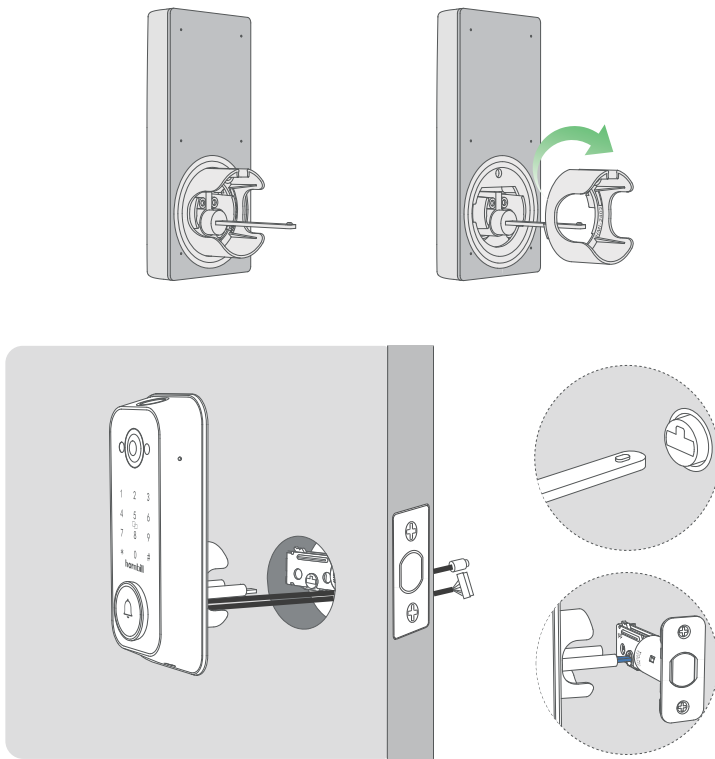


(2) Place the lock spindle with the protrusion facing up, test the deadbolt movement, and ensure the lock spindle remains horizontal while passing the IC wire and Wi-Fi cable under the deadbolt.

Step 3. Install the Mounting Plate

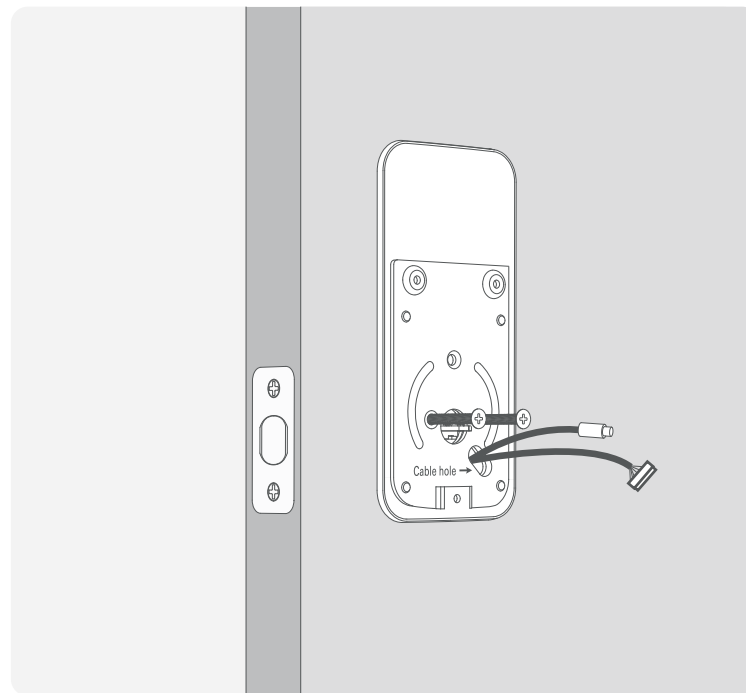


Pass the lock spindle through the central hole, feed the IC wire and Wi-Fi cable through the right-side hole, then secure the mounting plate with two screws, ensuring proper alignment and flush installation.

Step 4. Install the Interior Lock

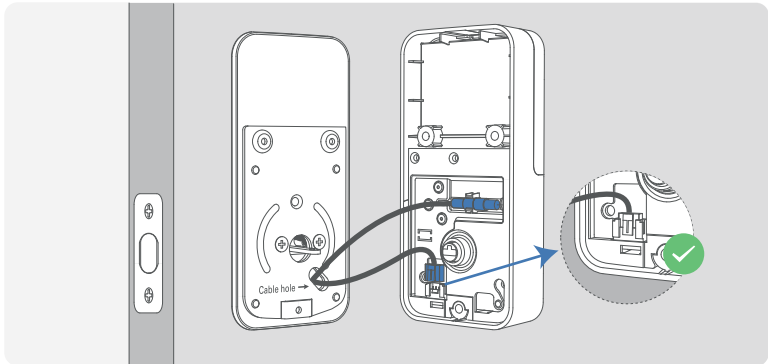


(1) Connect the IC wire and Wi-Fi cable to their respective ports, align the lock spindle with the knob groove, and insert it. Tuck excess wires into the mounting plate hole for neatness.

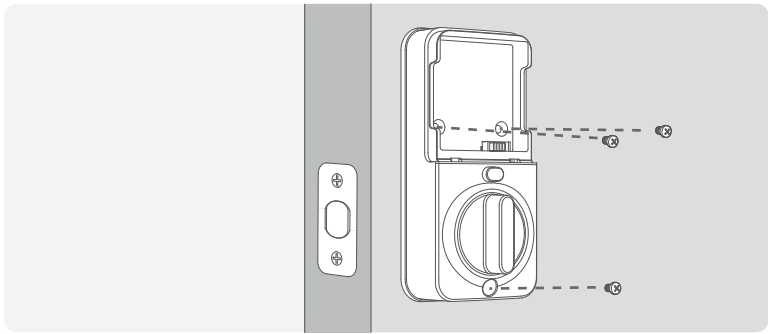

(2) Remove the battery cover and secure the interior lock in place with screws.

Step 5. Install the Battery

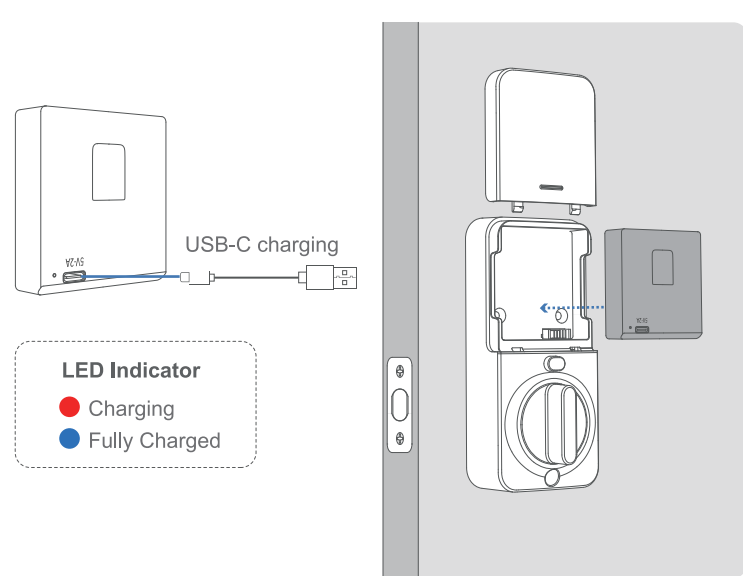


LED Indicator
● Charging
● Fully Charged

(1) To install the battery, align the groove with the port in the bottom right corner of the battery compartment.
(2) It's recommended to fully charge the battery with a 5V-2A charger (not provided) before first use. Charging takes 5-6 hours, indicated by a red light (charging) and blue light (fully charged).


! Do not charge the battery while it's installed in the lock, as it may overheat and affect performance.

Step 6. Test the Lock

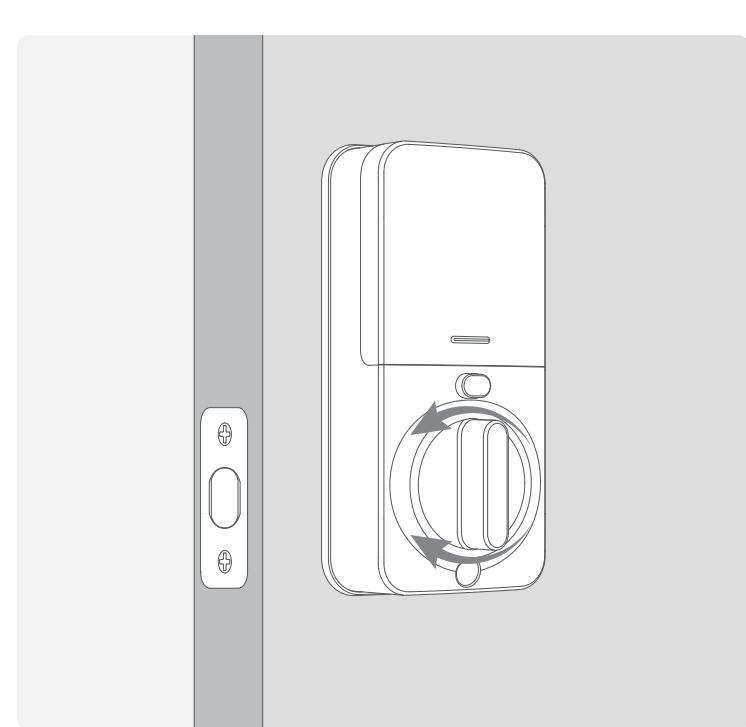

Keep the door open, turn the knob to check smooth deadbolt movement, and ensure the knob is vertical when unlocked and horizontal when locked.

Step 7. Pair the Doorbell Chime

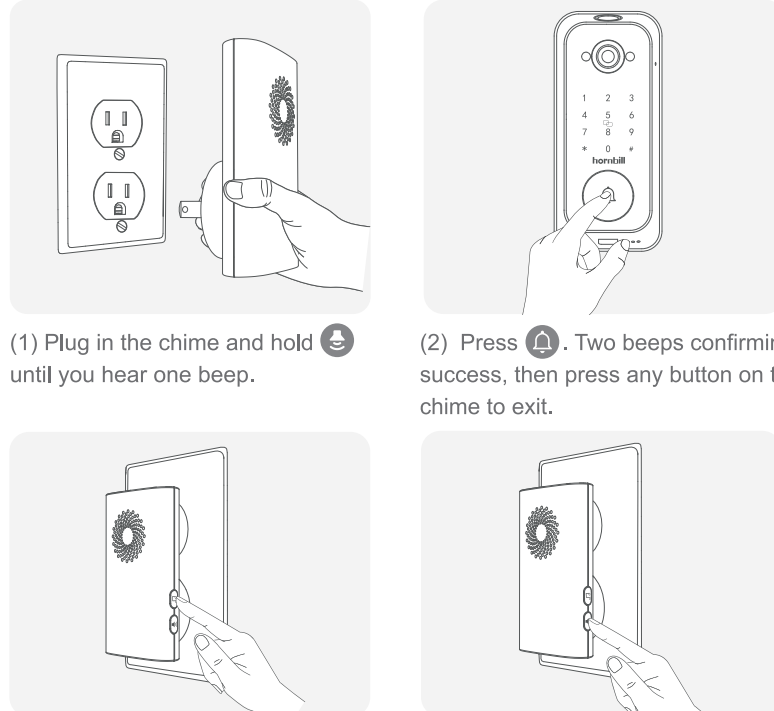

(1) Plug in the chime and hold the double-lock button. Two beeps confirming success, then press any button on the chime to exit.

(3) Press the ringtone button on the doorbell chime to select ringtones.
(4) Press the volume button on the doorbell chime to adjust volume.

! When the doorbell chime is re-powered on, the ringtone volume will reset to the default maximum level.

Using the Lock

Unlock the Door

- Option 1: Light up the keypad first, then enter the password you've set and touch the #key to unlock the door. For example:123456#
- Option 2: Unlock the door with your fingerprint.
- Option 3: Swipe the IC card to unlock the door.
- Option 4: Unlock the door with the mechanical key.
- Option 5: Unlock your door with voice commands using Alexa or Google Home.
- Option 6: Unlock the door via App.


Lock the Door

- Option 1: Press the # key for 2s to lock the door.
- Option 2: Use the mechanical key.
- Option 3: Lock the door via App.
- Option 4: Enable auto-lock in the App, the door automatically locks after the set time.

Reset the Lock


Option 1

Step 1: Light up the keypad, remove the battery for 5 secs, then reload it.
Step 2: Press the double-lock button for 10-15 secs until prompted for the initialization passcode.
Step 3: Enter 000#, you'll hear a confirmation message.

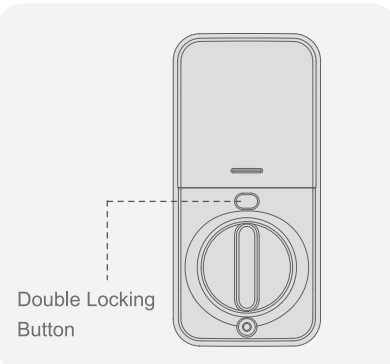

Option 2

Step 1: Remove the battery cover, take out the battery, and unscrew the interior lock.
Step 2: Reload the battery.
Step 3: Hold the reset button for 5 secs until prompted for the initialization passcode.
Step 4: Enter 000# to confirm the reset.

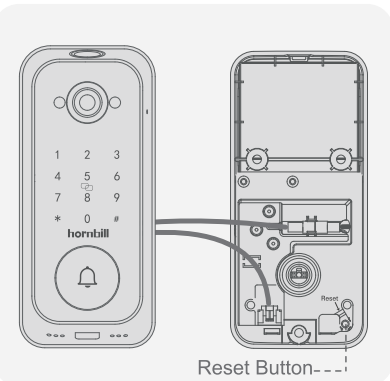

! If option 1 or 2 doesn't work, please contact our customer service for help.

Troubleshooting

- The deadbolt does not operate smoothly after installation.
Make sure the deadbolt is adjusted to the proper length and in right position. Refer to "Adjust and Install the Deadbolt".
- Keypad not responding.
① Make sure the battery is properly installed and has sufficient charge. Replace it if necessary.
② Make sure the IC wire is well-connected to the port and is not damaged.
- Lockset is unable to lock/unlock by the keypad.
① Make sure you enter the right code.
② Make sure the battery is charged.
③ Make sure the IC wire is well-connected to the port and is not damaged.
④ Make sure the deadbolt is installed correctly.
- I cannot remove my key unless the door is in the locked position
Uninstall the lockset. Before you reinstall it, please refer to installation section above.
① Make sure the deadbolt is installed correctly.
② Do not insert any key in lock hole during installation.
③ Make sure the spindle is placed in right position.
- ! If the above steps don't resolve your problem, please contact our customer service for help.

Warranty and Customer Service

Product Warranty Support

At Hornbill, we are committed to ensuring your satisfaction with every product experience. From the date of purchase, your device is covered by a one-year free replacement service. To request warranty support, please contact our customer service team within one year of your purchase. After this period, while free replacements will no longer be available, we remain dedicated to assisting you through paid repair options or extended warranty recommendations tailored to your needs.

Hornbill pledges to address every request with fairness and care. Our team will evaluate each case individually to provide flexible solutions aligned with your circumstances. For warranty details, product inquiries, or personalized assistance, our customer service team is available 24/7 and will respond within 24 hours.

Thank you for choosing Hornbill. Your trust inspires us to continually improve.


Customer Service

- Toll free:**
1-888-280-5158
- Service Hours:**
Monday to Sunday: 11:00-24:00 (EST)
- Email:**
support@hornbilllock.com

WhatsApp



App Guide

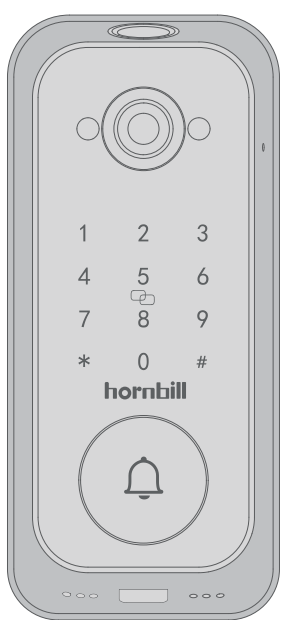


V1.0-2025

Model: T1


Register an Account

Search iCSee Home and download the App on Google Play/App Store or scan the QR code provided.

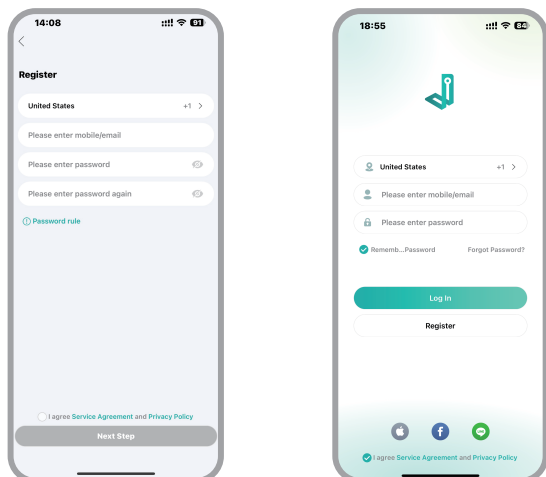


The iCSee Home app is needed to use this lock. Make sure this step is performed by the homeowner.


Pair the Lock

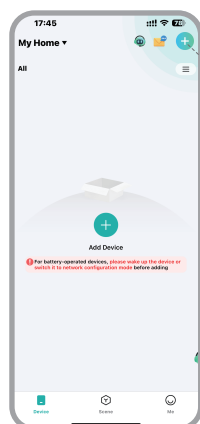

Step 1
Tap on "+" to add lock.

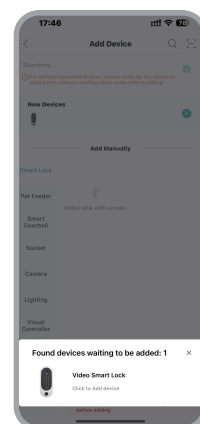


Step 2
Add the device founded. Then modify device name and choose device location.

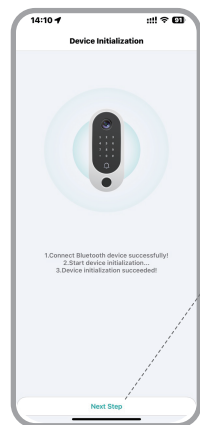

Next Step


Step 3
Tap on "Next Step".

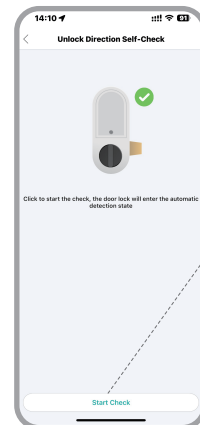

Start Check


Step 4
Tap "Start Check" to adjust unlock direction and click "Next Step".

Pair the Lock

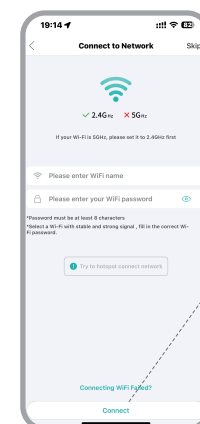


Connect

Step 5
Configure the network and click "Connect".

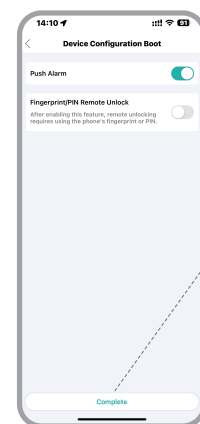

Complete


Step 6
Click "Complete" to finish setup.

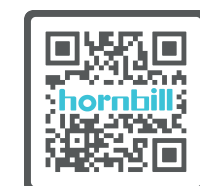

SCAN ME


Now, the lock is paired successfully.

Modify the Administrator Password

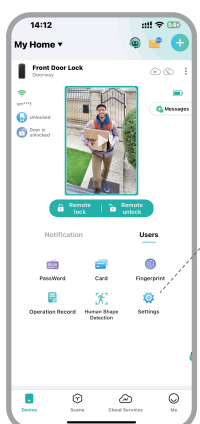


Settings

Step 1
Tap on the Settings icon.

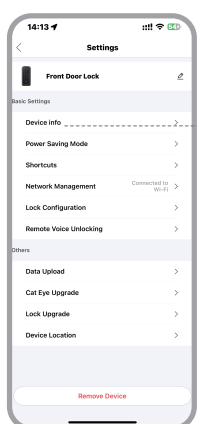


Device info

Step 2
At Settings page, click "Device info".

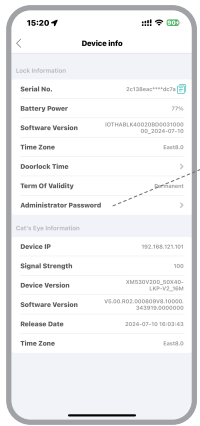

Administrator Password


Step 3
Tap "Administrator Password".

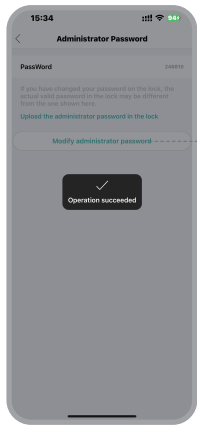

Modify administrator password


Step 4
Click "Modify administrator password" and save changes.

Unlock/Lock by the App & Lock Settings

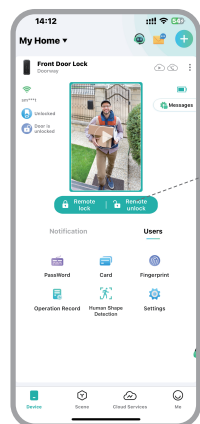

Remote lock

Tap "Remote lock" or "Remote unlock" to lock or unlock the door.

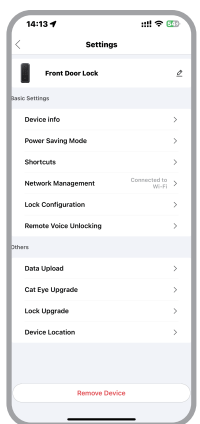


Device info: View and edit the basic info of the lock.

Power Saving Mode: Switch between power saving mode and normal mode.

Shortcuts: Choose whether a second verification is required for remote unlocking.

Network Management: Manage the network.

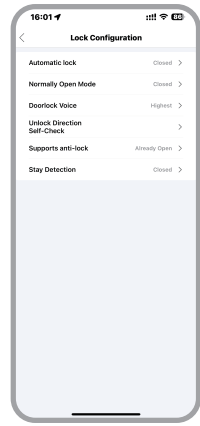

Lock Configuration:

Automatic lock: Enable the auto-lock function.

Normally Open Mode: Allows the door to remain opening state until manually closed.

Doorlock Voice: Set the volume of the lock's voice prompts.

Unlock Direction Self-Check: Re-configure the unlock direction.

Supports anti-lock: Enable the electronic anti-lock function.

Human Shape Detection: Detect if someone is staying and send an alert to the cloud.

Remove Device: Remove this device from your account.


Power Saving Mode

At Settings page, click "Power Saving Mode" to modify.

● Monitor Mode: Continuous Wi-Fi connection, remote video access, higher power consumption.

● Trigger Mode: Disconnects from Wi-Fi after set time, low power consumption in hibernation.

● Image Transmission Mode: Disconnected from Wi-Fi, low power, no remote operation in hibernation.

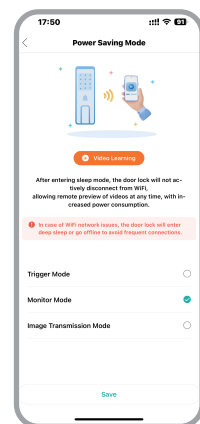

Click "Save" to apply changes. Switch to Trigger or Image Transmission Mode to conserve battery.

Automatic Lock & Normally Open Mode



Automatic Lock

At "Lock Configuration" page, switch on Automatic lock→Set delay time→Click "Save".

Normally Open Mode


At "Lock Configuration" page, click "Normally Open Mode"→Switch on→Set the time period→Click "Save".

When normally open mode is set, auto-lock is disabled. You need to lock it manually.

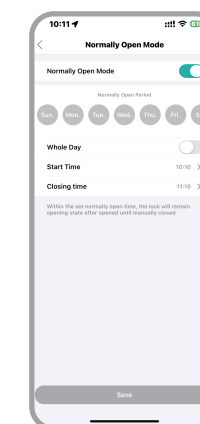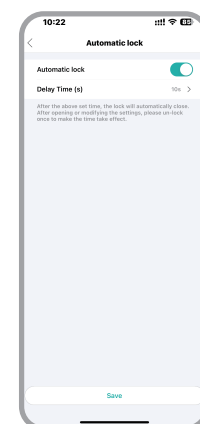


*Temporary Normally Open Mode
After unlocking, enter 123# to disable auto-lock temporarily. To exit this mode, unlock and lock the door once.

Unlock Direction Self-Check

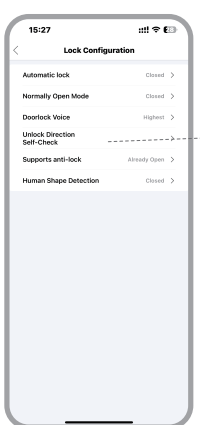

Unlock Direction Self-Check

Step 1
Tap "Unlock Direction Self-Check" at "Lock Configuration" page.

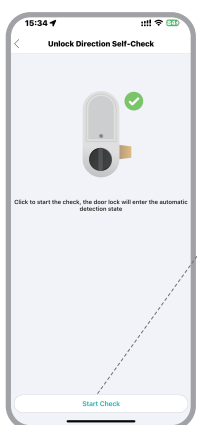


Start Check

Step 2
Click "Start Check".




Complete

Step 3
After hearing "Operation successful", click "Complete".

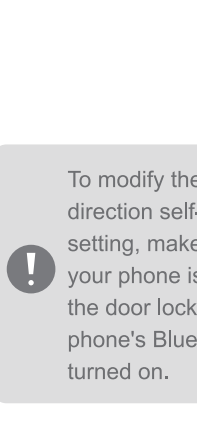

To modify the unlock direction self-check setting, make sure your phone is nearby the door lock and your phone's Bluetooth is turned on.

Anti-Lock Setting

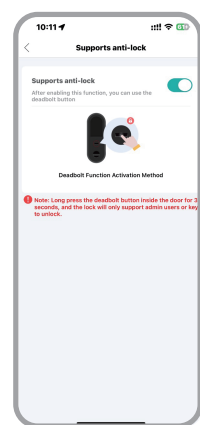

Supports anti-lock

At Lock Configuration page, switch on "Supports anti-lock"



Step 2
After the door is locked, long press the double locking button for 3 sec to engage the anti-lock function.

The anti-lock function will be disabled once the door is manually locked or unlocked. To re-enable the anti-lock function, repeat Step 2.

To modify the anti-lock setting, ensure your phone is near the door lock and Bluetooth is enabled.

In anti-lock state, unlock using:


- Administrator password
- Remote unlock via the Family Owner's app
- Physical key
- Manually unlock

Human Shape Detection

At Lock Configuration page, switch on Human Shape Detection.

- Short Distance: Human shape detection distance is 1 meter.
- Medium Distance: Human shape detection distance is 2 meters.
- Long Distance: Human shape detection distance is 3 meters.


The use environment may affect the detection distance, the above data is for reference only.

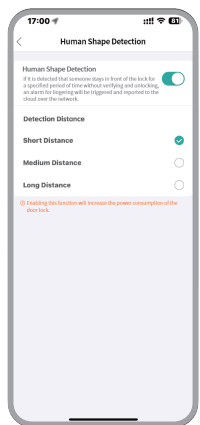

After enabling this feature, when in sleep mode, the device records snapshots or video (video requires subscription) upon detecting motion within range for 5 seconds.


Operation Record & Messages Settings

Operation Record

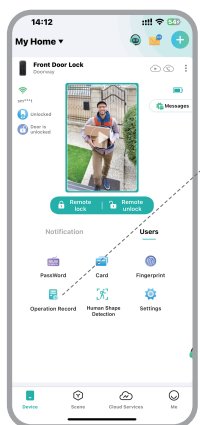

Operation Record

Step 1
Tap "Operation Record".

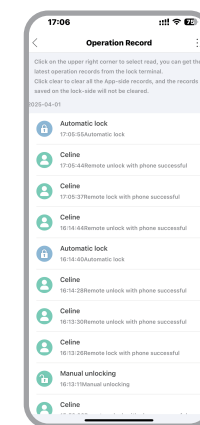

Step 2
Click three dot icon and select "Read records" or "Clear records" to stay organized.

Messages Settings

Step 1 Go to "Me" page at app homepage→Permission Settings→Switch on "Notification"
Step 2 Tap "Messages" icon→Make sure Notifications are on

How to Share the Lock with Others

(1) Family Management & Sharing Family

You can set the permissions for a specific member to join your family as either an admin or user. The invited member can have access to all devices in the family. For more detailed on how to invite, please scan the QR code.

(2) Device Management

You can view the sharing status of each device. If you want to revoke a user's access to the device, simply tap on the user's account and confirm. For more detailed on how to do this, please scan the QR code.

(3) Sharing Device


You can share a specific device to a member as either an admin or user. The member can only have access to this device. For more detailed on how to invite, please scan the QR code.



SCAN ME

Set Passwords/IC Cards/Fingerprints

Click Passwords / Card / Fingerprint icon at homepage and follow the instructions on App to finish settings. For detailed instructions, please scan the QR code.

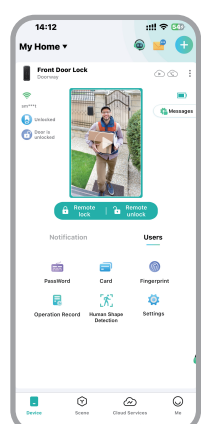


SCAN ME

Cloud Service & Smart Home Integration

Cloud Service

Our app supports cloud service, allowing you to store recorded videos in the cloud.

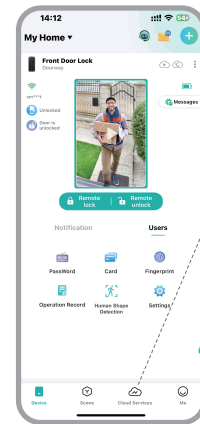

Cloud Services

Step 1
At the app's homepage, select "Cloud Services".



My devices

Step 2
Scroll down and click on the Smart Lock under "My devices"> Choose the desired type of cloud service to access.

Smart Home Integration

Our locks work with both Amazon Alexa and Google Assistant.



With more to come in the future.
For detailed instructions on how to enable the Amazon Alexa and Google Assistant, please scan the QR Code for details.



SCAN ME

FAQs

Why can't the app control the lock when it's anti-locked?

Only administrators can control the lock through the app when it's anti-locked.

Can the door lock voice be muted or turned down?

Launch the app → At "Settings" page, tap "Doorlock Voice"→ Turn it off or select lock volume.

I shared the lock with my friends, but he/she couldn't use the code I send, why?

Make sure the recipient's account location is the same as the administrator's.

How can I cancel anti locking?

- ① Short press the double locking button.
- ② Turn the manual knob.
- ③ Unlock with the administrator password.
- ④ Unlock remotely through the Family Owner's app.
- ⑤ Unlock with the physical key.

How can I check the unlock direction?

Launch the app → At "Settings" page, tap "Unlock Direction Self-Check" → Click "Start Check".

Scan the QR code to explore our constantly updating FAQ for T1 Video Smart Deadbolt.

