

Welcome to your new Soundfreq

Please download the user guide here:

ES Descargue el manual de usuario de:

FR Veuillez télécharger le mode d'emploi ici:

DE Bitte laden Sie die Bedienungsanleitung hier herunter:

IT Scaricare qui la guida per l'utente:


NL Download de gebruikershandleiding hier:

userguides.soundfreq.com



USERGUIDE


Getting to know Sound Rise II

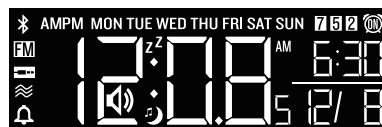


Alarm Time

Month / Date

			Music source	Indicates music source when speaker is ON. Bluetooth, Line In or FM Radio
			Alarm frequency	Indicates if alarm is set for weekdays, weekends or everyday. Alarm can also be set for a specific day of the week.
Everyday	Weekday	Weekend		
			Nature sound	Displayed when nature sound is playing
			Alarm ON	Displayed when alarm is set to go off
			Snooze	Displayed when alarm is snoozed
			Chime	Indicates when alarm wake up sound is the internal chime
			Volume	Displayed when volume is being adjusted

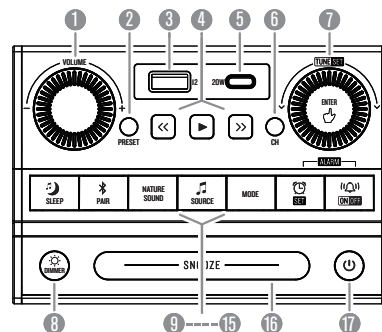

- 1 Volume
- 2 Radio Preset
- 3 USB Type-A
- 4 Play Control
- 5 USB Type-C
- 6 Radio Channel
- 7 Set / Enter
- 8 Dimmer
- 9 Sleep Timer
- 10 Pair
- 11 Nature Sound
- 12 Music Source
- 13 Alarm mode
- 14 Alarm Set
- 15 Alarm ON/OFF
- 16 Snooze
- 17 Standby ON/OFF

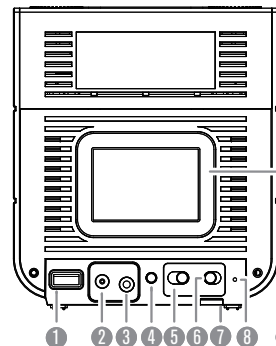

- 1 USB Type-A(QC 3.0)
- 2 DC Power
- 3 Line In
- 4 Setup
- 5 DST(Daylight Saving Time) Selector
- 6 Home /Hotel Selector
- 7 Lanyard connection(bottom)
- 8 FM Antenna
- 9 Passive Radiator for Bass Effect

Contents



Sound Rise II



Power adaptor and AC plugs




User guide and Safety leaflet

Setting up Sound Rise II

Selecting Home/Hotel mode

- The Sound Rise II is designed to suit for **HOME** or **HOTEL** use. On the default setting, the **HOME** mode has been selected.

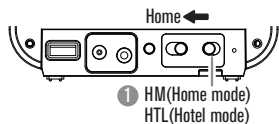

First Time Setup

- Plug into the supplied power adaptor. Extend the wire antenna fully for the best reception.
(Do not use other power adaptor to avoid damages)
- Press and hold the **SETUP** button to enter **SETUP** mode.
- Turn the rotary **SET** knob or press the **<< / >>** buttons to set the current **YEAR**.
- When the desired **YEAR** is displaying, press down the rotary **SET** knob to confirm.
- Repeat 4 & 5 above to set **MONTH**, **DATE**, **HOURL**, **MINUTE** and 12/24.




Note: If you want to change the above settings, simply press and hold the **SETUP** button again and repeat the above setup steps.

- Slide the **DST** (Daylight Saving Time) selector to select the **DST** options:

- A - Enable automatic **DST** adjustment (For US only)
- 0 - Disable **DST** manually
- 1 - Enable **DST** manually to add 1 hour to the display time.

- The default radio frequency step is 100kHz for majority of countries. To change the frequency step to 50kHz, press the **SOURCE** button repeatedly until the FM icon appears on the display. Press and hold the **CH** button for 5 seconds to toggle between 100kHz/50kHz. The "5" digit will display when 50kHz is selected.


- After the setup, if you want to display the current year, press the **PLAY** button in the standby mode.

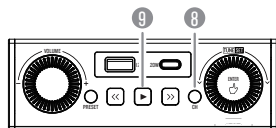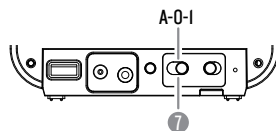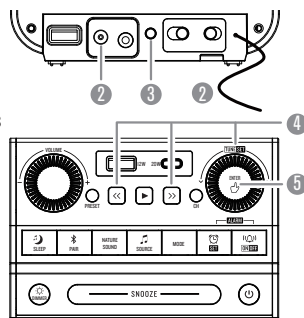

Using the Alarm



Setting Alarm Time

- Press the **ALARM SET** button, the default alarm time of 6:00am will be shown.
- Turn the rotary **SET** knob to the desired alarm time.
- Press down the rotary **SET** knob / **ALARM SET** button to confirm.
- The alarm will be **ON** for the next day and the **ALARM ON** icon will be shown.
- Press **ALARM ON/OFF** button to toggle alarm **ON** or **OFF**.

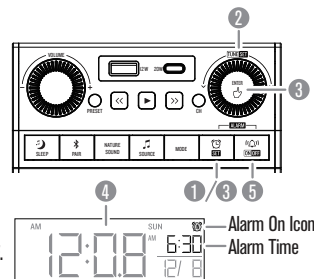

Setting Alarm Wake-up mode


- Press and hold the **MODE** button for 2 seconds button to enter the alarm mode setting.
- Turn the rotary **SET** knob or the **<< / >>** buttons to select music sources to wake to (**Bluetooth**, **Radio** or **Chime**)
- Press down the rotary **SET** knob to confirm.
- Repeat 2 and 3 above to complete the alarm mode options:
 - Day of Week (Everyday **7**, Weekday **5**, Weekend **2** or a specific day of the week).
 - Wake up volume.
- After setting, short press the **MODE** button again to show the alarm mode settings.

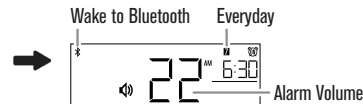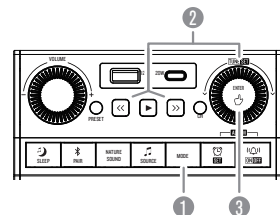

- Note:**
- To wake up to music from your phone or other devices, you must pair the Sound Rise II first and make sure the sound volume is set at an audible level on your device.
 - When waking up to Bluetooth, Sound Rise II will play the current song on your connected device. If your device is not available when the alarm goes off, Sound Rise II will wake you with its built-in chime.
 - When waking up to radio, Sound Rise II will play the current radio station. Please tune to your desired radio station first.

Using Snooze and Shutting off the alarm


- 1 If you prefer to get some more sleep after the alarm goes off, press the **SNOOZE** button and the alarm will go off. The **Z^z** icon will be shown on the display. The default snooze time is 10 minutes and will repeat 12 times.

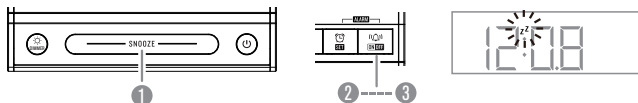

- 2 To cancel the snoozing or shut off alarm permanently after the alarm goes off, press the **ALARM ON/OFF** button once.
- 3 The alarm will be ON for the next day and the **ALARM ON** icon will be shown.


Using the Sound Rise II and Selecting the Audio Source

- 1 Press the **STANDBY** button or the **SOURCE** button to turn the system on.
- 2 Press the **SOURCE** button to select the audio source. The icons of audio source will display on the screen.
 - Bluetooth "B"
 - FM Radio "FM"
 - AUX IN "AUX"
- 3 Turn the rotary **VOLUME** knob to set audio volume level.
- 4 Press the **STANDBY** button to turn the audio off.

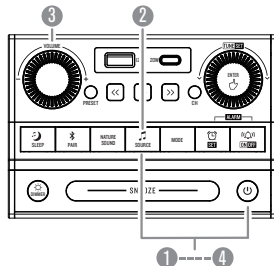

Setting Screen Brightness

- 1 Press **DIMMER** button repeatedly to change the screen brightness.
- 2 When the screen brightness is at the lowest level or **OFF**, press any button to momentarily turn the display on to see the time to operate any functions.
- 3 When the alarm goes off and the screen brightness is off, the display will automatically turn on. If **SNOOZE** is pressed, the display will turn off again until the alarm goes off again.

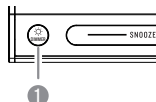

Listening with Bluetooth

Bluetooth Pairing


- 1 You can pair your mobile device in **TWO** ways:

Method 1:

- a) Press the **STANDBY** button to turn on audio
- b) Press the **SOURCE** button to select Bluetooth. The Bluetooth icon will flash slowly.
- c) Press the **PAIR** button to start pairing. The Bluetooth icon will flash rapidly.

Method 2:

- d) Simply press the **PAIR** button directly in the standby mode, the system will turn on automatically and start the pairing mode. The Bluetooth icon will flash rapidly.

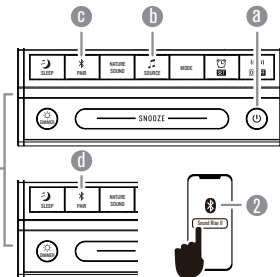


- 2 On your device, open your Bluetooth setting menu to detect available devices. Once the Sound Rise II is detected, select it from the list of available devices to connect.

Note: To pair another new device, press and hold the **PAIR** button for 2 seconds to disconnect the currently paired device. The Bluetooth icon will flash rapidly again for pairing a new device.


Playing Music via Bluetooth

- 1 After pairing, either use the **PLAY CONTROL** buttons on the Sound Rise II or your device to control playback.
- 2 You can change the volume by tuning the **VOLUME** knob on the Sound Rise II or adjusting volume on your paired device. For the max sound volume, turn both volumes to the maximum.

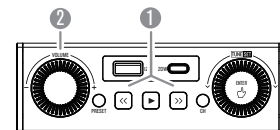

Listening to the Radio


- 1 Press the **STANDBY** button to turn on the Sound Rise II.
- 2 Press the **SOURCE** button repeatedly until the FM icon **FM** appears on the display.
- 3 Press and hold the **<< / >>** buttons for 2 seconds to search a desired station for listening.
- 4 You can also turn the rotary **SET** knob to tune into your desired station for listening.
- 5 Press the **CH** button to show the frequency of the current station.

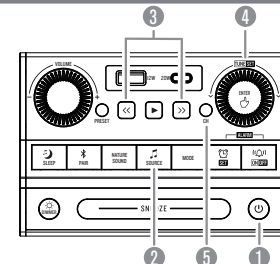

Programming and Recalling Radio Presets


There are 10 radio presets to save your favorite **FM** stations.

- 1 Tune to your preferred radio station.
- 2 Press the **PRESET** button. The present number "P: 01" will display.
- 3 Press the << / >> buttons to change preset number.
- 4 Press the **PRESET** button again to save the current station to the preset number selected.
- 5 To recall the preset station to listen, press the **PLAY** button to toggle through the preset stations.

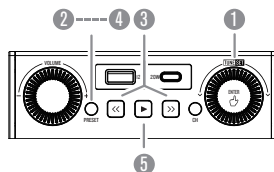


Listening to Nature Sound

- 1 Turn on the unit and press the **NATURE SOUND** button. The icon will be shown.
- 2 Press the << / >> buttons to select your desired nature sound effects.

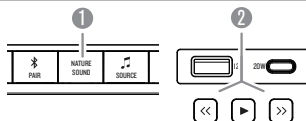

Listening with AUX IN


- 1 Connect your device with a standard headphone jack using a line-in cable(not included) to the **AUX IN** jack at the back of the Sound Rise II.
- 2 Turn on the system and then press the **SOURCE** button repeatedly to enter the AUX IN mode. The icon will be shown.

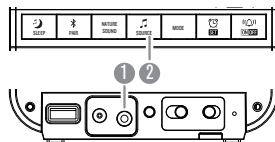

Using Sleep Timer



To set a timer to listen to music while falling asleep.

- 1 Press the **SLEEP** button repeatedly to select the timer duration (15 -> 30, 60, 90, 120, OFF). The sleep icon will display. To select OFF to cancel the sleep timer.
- 2 After selecting the duration, wait for 5 seconds and the sleep timer will start automatically.
- 3 When the timer is running, press the **SLEEP** button again to show the remaining time.
- 4 To cancel the sleep timer, press and hold the **SLEEP** button for 3 seconds.

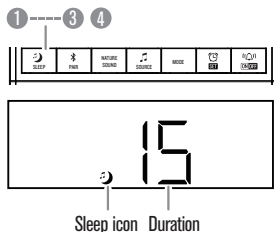

USB Charging

- 1 There are 3 smart USB charging ports on the Sound Rise II. Simply connect your device to the USB ports for charging.

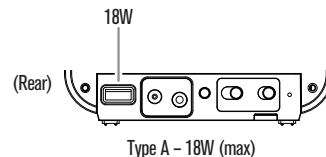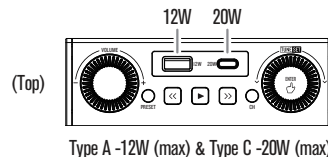

Note: The rear USB port is QC3.0 compatible. You can connect any QC3.0 certified device to this port. For example, wireless charging pad(not included).

Clock Backup & Out of Power Indication

Sound Rise II has battery-free clock backup in case of power outage up to 1 week.

Note: If the unit has been disconnected from the AC power for more than 1 week, once the power is resumed, it will be reset to the first time use condition. The "--:--" will display and please follow the first time setup to setup again.

DECLARATION OF CONFORMITY

Betruet Technology Co Ltd. hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU at the time of its being placed on the market.
The full text of the EU declaration of conformity is available at the following internet address:
<http://userguides.soundfreq.com/>

Bluetooth (Version: V 5.1)
Range: max 10m (in open spaces)
Frequency band: 2.402 GHz to 2.483 GHz
Maximum Transmission Power: 2.5mW

FM
Frequency Range: FM 87.5-108 MHz