




Bar Equipment Boottle Cooler

Installation and Owner's Manual

Read these instructions. Failure to follow maintenance guidelines may result in a cancellation of warranty.

Model

BLBC-36B-HC
BLBC-50B-HC
BLBC-65B-HC
BLBC-95B-HC

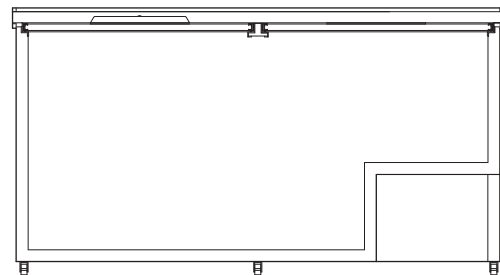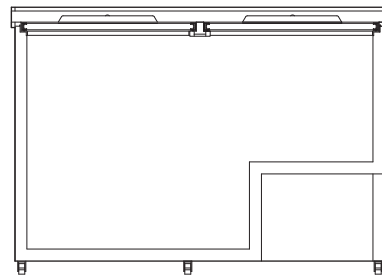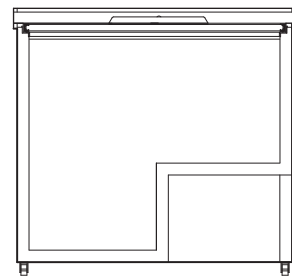

COMMERCIAL REFRIGERATOR SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

Our product instructions will be uploaded on our company official website.



This is the Safety Alert Symbol. This symbol alerts you to potential hazards that can kill or injure you and others. All safety messages will follow the Safety Alert Symbol and either the words "DANGER", "WARNING" or "CAUTION".



Danger means that failure to heed this safety statement may result in severe personal injury or death.



Warning means that failure to heed this safety statement may result in extensive product damage, serious personal injury, or death.



Caution means that failure to heed this safety statement may result in minor or moderate personal injury, or property or equipment damage.

All safety messages will alert you to what the potential hazard is, tell you how to reduce the chance of injury, and let you know what can happen if the instructions are not followed.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Keept the appliance and its cord out of reach of children less than 8 years.

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

The max. loading of shelves is 10kg.

This appliance is intended to be used in house hold and similar applications in this appliance.

- staff kitchen areas in shops, offices and other working environment;
- farm houses and by clients in hotels, motels and other residential type environment;
- bed and breakfast type environment;
- catering and similar non-retail applications.

The appliance shall be used at an ambient temperature listed according to its climate class:

*32 °C ± 2 °C on appliances of climatic class 0, 1, 2, 3, 4, 6 or 8;
43 °C ± 2 °C on appliances of climatic class 5 or 7.*

The appliance use flammable insulation blowing gas C5H10, disposal of the appliance shall in accordance with the regulations of local authorities.

The appliance provided with double-capped fluorescent lamps, the lamp has to be replaced by identical lamps only.

The key for appliance electric box should be safe kept by qualified persons in order to avoid a hazard.

When positioning the appliance socket-outlets or portable power supplies at the rear of the appliance.

Based on business order(s) to EU market, give true EU authorized representative information on the label with full business name and full EU address in the marking plate.

If the appliance use flammable refrigerant, such as R600a, R290:



WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING: Do not damage the refrigerant circuit.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Handling, moving, and use of the refrigerator or freezer to avoid either damaging the refrigerant tubing, or increasing the risk of a leak

L'opération, le mouvement et l'utilisation du réfrigérant ou le congélateur doivent éviter les dommages du tuyau réfrigérant ou le risque de la fuite.

Cautions – Risk of Fire or Explosion due to Flammable Refrigerant Used. Follow Handling Instructions Carefully in Compliance with U.S. Government Regulations

Component parts shall be replaced with like components and that servicing shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.

Les pièces de rechange doivent être remplacées par les composants relatifs et les opérations doivent être faites par les professionnels afin de minimiser le risque d'allumage à cause des parts incorrects ou des opérations impropres.

CAUTION – Risk Of Fire Or Explosion Due To Puncture Of Refrigerant Tubing; Follow Handling Instructions Carefully. Flammable Refrigerant Used

DANGER: Risk of child entrapment. Before you throw away your old refrigerator or freezer:
Take off the doors

Lean the shelves in place so that children may not easily climb inside

The instructions shall contain information regarding the maximum loading of each type of shelf.

For appliances which use FLAMMABLE REFRIGERANTS, the instructions shall include information pertaining to the handling, servicing and disposal of the appliance.

An explanation shall be given of the meaning of the alpha-numeric characters, indicating the climatic class of the appliance, that are marked on the appliance.

The installation and operating instructions for appliances that use a flammable refrigerant shall indicate that component parts shall be replaced with like components so as to minimize the risk of possible ignition due to incorrect parts.

The installation instructions for appliances that use a flammable refrigerant shall indicate the appliance is to be installed in accordance with the Safety Standard for Refrigeration Systems, ANSI/ASHRAE 15.

Apply the requirements of Annex 101. DVS to appliances using flammable refrigerants: self-contained appliance., All services shall be done by the accredited persons by the manufacturer according to local regulation. Services related to breaking into the refrigerating circuit, opening of sealed components are not allowed to be done in the user condition, must be taken to the designed location **WARNING**

Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).

Do not pierce or burn.

Be aware that refrigerants may not contain an odour. and MISE EN GARDE

Ne pas utiliser de moyens autres que ceux recommandés par le fabricant pour accélérer le processus de dégivrage ou pour nettoyer l'appareil.

L'appareil doit être entreposé dans un local ne contenant pas de sources d'inflammation permanentes (flammes nues, appareil à gaz ou dispositif de chauffage électrique en fonctionnement, par exemple).

Ne pas percer ou brûler.

Attention, les fluides frigorigènes peuvent ne pas dégager d'odeur.

- **WARNING:** Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.

- **WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

- **WARNING:** Do not damage the refrigerant circuit.

- **WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

For appliances which use flammable insulation blowing gases, the instructions shall include information regarding disposal of the appliance.

The height of the triangle in the symbol " Caution: risk of fire" shall be at least 15 mm.

The height of the letters used for the marking of the type of flammable insulation blowing gas shall be at least 40 mm.

WARNING

Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.

The appliance shall be stored in a room without continuously operating ignition sources. (for example: open flames an operating gas appliance or an operating electric heater.

Do not pierce or burn.

Be aware that refrigerants may not contain an odour.

MISE EN GARDE

Ne pas utiliser de moyens autres que ceux recommandés par le fabrrcant pour accélérer le processus de degivrage ou pour nettoyer l'appareil.

L'appareil doit être entreposé dans un local ne eontenant pas de sources d'inflammation permanerrtes (flammes nues, appareil à gaz ou dispositif de chauffage electrique en fonctionnernent, par exemple).

Ne pas percer ou brûler.

Attention, les fluides frigorigènes peuvent ne pas dégager d'odeur.

Detection of flammable refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

The following leak detection methods are deemed acceptable for all refrigerant systems.

Electronic leak detectors may be used to detect refrigerant leaks but, in the case of **FLAMMABLE REFRIGERANTS**, the sensitivity might not be adequate. or might need recalibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not apotential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed.

Leak detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine can react with the refrigerant and corrode the copper pipe-work.

If a leak is suspected, all naked flames shall be removed/extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system. or isolated (by means of shut off valves) in a part of the system remote from the leak. All services shall be done by the accredited persons by the manufacturer according to local regulation. Services related to breaking into the refrigerating circuit, opening of sealed components are not allowed to be done in the user condition, must be taken to the designed location.

Sealed electrical components shall be replaced.

Intrinsically safe components must be replaced.

Item a) DANGER - Risk Of Fire or Explosion. Flammable Refrigerant Used. Do Not Use Mechanical Devices To Defrost Refrigerator. Do Not Puncture Refrigerant Tubing. and
DANGER-Risque d'incendie ou d'explosion. Fluide frigorigène inflammable utilisé. Ne pas utiliser des moyens mécaniques pour décongeler le réfrigérateur. Ne pas perforer la conduite de fluide frigorigène.

Item b) DANGER - Risk Of Fire Or Explosion. Flammable Refrigerant Used. To Be Repaired Only By Trained Service Personnel. Do Not Puncture Refrigerant Tubing. And
DANGER-Risque d'incendie ou d'explosion. Fluide frigorigène inflammable utilisé. Doit uniquement être réparé par un technicien de service formé. Ne pas perforer la conduite de fluide frigorigène.

Item c) CAUTION - Risk Of Fire Or Explosion. Flammable Refrigerant Used. Consult Repair Manual/Owner's Guide Before Attempting To Install or Service This Product. All Safety Precautions Must be Followed. and
ATTENTION-Risque d'incendie ou d'explosion. Fluide frigorigène inflammable utilisé. Consulter le guide du propriétaire ou le manuel de réparation avant d'essayer d'installer ou de réparer ce produit. Toutes les précautions de sécurité doivent être prises.

Item d) CAUTION-Risk Of Fire Or Explosion. Dispose Of Properly In Accordance With Federal Or Local Regulations. Flammable Refrigerant Used. and
ATTENTION - Risque d'incendie ou d'explosion. Mettre au rebut conformément aux règlements fédéraux ou locaux. Fluide frigorigène inflammable utilisé.

Item e) CAUTION-Risk Of Fire Or Explosion Due To Puncture Of Refrigerant Tubing; Follow Handling Instructions Carefully. Flammable Refrigerant Used. and
CAUTION - Risque d'incendie ou d'explosion en cas de perforation d'une canalisation de fluide frigorigène; suivez attentivement les instructions de maintenance. Fluide frigorigène inflammable utilisé.

Item f) DANGER-Risk of Fire or Explosion due to Flammable Refrigerant Used. Follow Handling Instructions Carefully in Compliance. with National Regulations. and
DANGER-Risque d'incendie ou d'explosion dû à l'utilisation d'un fluide frigorigène. Suivez attentivement les instructions de maintenance conformément aux règlements nationaux.

Note:

a) The marking specified in Item (a) shall be provided on or near any evaporators that can be contacted by the user.

b) The markings specified in Items (b) and (c) shall be provided near the machine compartment.

c) The marking specified in Item (d) shall be provided on the exterior of the refrigerator.

d) The marking specified in Item (e) shall be provided near any and all exposed refrigerant tubing.

e) The marking specified in Item (f) shall be provided on appliance packaging if factory charged.

f) All the markings shall be in letters no less than 6.4mm (1/4in) high.

The marking in Item b) shall also contain the symbol "Caution, risk of fire" (Fire in a triangle): The color and format of this sign shall be as shown in Symbol W021 in ISO 7010. The perpendicular height of the triangle containing the "Caution, risk of fire" sign shall be at least 15 mm (9/16in).

g) Refrigeration tubing or other devices through which the refrigerant is intended to be serviced shall be painted, colored red. This color shall be present at all places where service puncturing or otherwise creating an opening in the refrigerant circuit might be expected. In the case of a process tube on a compressor, the color mark shall extend at least 2.5cm(1 inch) from the compressor.

CONTENTS

SPECIFICATIONS.....	6
CONGRATULATIONS ON YOUR NEW COOLER.....	6
INSTALLATION.....	6
ELECTRICAL CONNECTION.....	7
OPERATION INSTRUCTIONS.....	7
STORAGE OF FOOD STUFFS.....	7
DEFROSTING THE CABINET.....	7
MAINTENANCE.....	7
TROUBLE SHOOTING.....	10
DISPOSAL.....	10
SPECIAL PIONTS TO NOTE.....	10
WIRING DIAGRAM.....	11

SPECIFICATION

MODEL#	V/Hz/Ph	AMPS	STORAGE CAPACITY Cu-ft	HP	BTU	CHARGE OZ	SHIP WEIGHT LBS	NEMA PLUG
BLBC-36B-HC	115/60/1	3.3	9.27	1/4	2000	2.12	211	5-15P
BLBC-50B-HC	115/60/1	3.3	13.7	1/4	3200	2.47	246	5-15P
BLBC-65B-HC	115/60/1	3.3	19	1/4	5400	3.17	284	5-15P
BLBC-95B-HC	115/60/1	3.0	29.1	1/3	7600	3.53	394	5-15P

CONGRATULATIONS ON YOUR NEW COOLER

Note these instructions apply to all coolers. Installations of equipment may not exactly correspond to your model.

INSTALLATION

Make sure that the cooler is not damaged on arrival. Your supplier must be notified of any transport damage, within 24 hours of delivery.

The cooler should be placed in a warm, dry room, with suitable ventilation.

Place the cooler in such a way, as to allow the free circulation of air around it. That is, with at least 100mm space all around it.

Never place the cooler in strong sunlight. The cooler be placed on a level surface. Make sure that it does not rock.

If the cooler has been stored or transported cold, it must not be started before the compressor is judged to have reached a temperature at least 41°F. It is recommended to clean up the cooler before starting it.

ELECTRICAL CONNECTION

The cooler must be connected to a socket with the correct voltage/frequency, as show on the nameplate. The standard for u.s is 115V/50HZ. Voltage variations of $\pm 10\%$ are acceptable. Greater variations can damage the cooler, and in such cases the factory warranty is not valid. In the case of extreme voltage variation, above or below the standard, your local supplier will be able to advise you, what to do.

The cooler requires extra protection according to the Danish Heavy Current Regulations.

This also applies, if a new cooler is replaced, which did not have such protection. The purpose of extra protection, is to protect the user from dangerous electric shocks, in the case of defect.

OPERATION INSTRUCTIONS

The temperature in the cooler is automatically regulated by a pre adjusted thermostat.

The position of the cooler, the ambient temperature, the number of times the lid is opened and for how long the lid is opened, all these factors affect the temperature in the cooler, which should therefore not be placed in sunlight or closed to a heat-radiating surface.

If your cooler is fitted with a lock, the key should be kept out of the reach of children. If your new cooler is to replace an older one, which is not in use any more, you should remove the lock mechanism, on the old one, before disposing it.

STORAGE OFF FOOD STUFFS

The cooler is only designed as a conserver, and is the not suited to cold freeze foodstuffs. In other words, only refrozen food must be placed in the cooler. Next to that the cooler must not be filled beyond the height limit of the contents line, or in cases where there is no such line, to within 100mm below the lid. This is to ensure the product temperature less than 36°F.

DEFROSTING THE CABINET

In the course of time, a frost layer will be naturally formed within the cooler.

When this layer is 5-8mm thick, the cabinet should be defrosted the following way:

- remove the plug from the socket;
- open the lid and leave it open;
- loosen the frost layer using a plastic or wooden scraper.

The defrosting process can be speeded up by using bowls of hot water.

Never use sharp or pointed instruments

After final defrosting, the cabinet should be cleaned as described in section: Maintenance. the cabinet should be thoroughly dried after cleaning.

OPERATION



CAUTION

Do not throw items into the storage area. Failure to heed these recommendations could result in damage to the interior of the cabinet.

Refrigerated cycle

Refrigerators: During the refrigeration cycle, the evaporator fans will run continuously even when one or more doors are open. The door switch will activate the lights when opened.

1. Every 6 hours, the unit will turn off and to allow the evaporator coil to defrost. The controller now displays the defrost symbol. When the coil temperature reaches 41°F or after 20 minutes of defrost, the unit will turn on again.
2. Anti-condensation heaters on door frames work in conjunction with the compressor.
3. The factory setting for the temperature range is 34°F to 38° F.

SOLID-STATE THERMOSTAT DESCRIPTIONS

1. FRONT PANEL COMMANDS



SET: To display target set point; in programming mode it selects a parameter or confirms an operation.

(DEF) To start a manual defrost

(UP) To view the latest alarm occurrence; in programming mode it browses the parameter codes or increases the display value

(DOWN) To view the latest alarm occurrence; in programming mode it browses the parameter codes or decreases the display value

KEY COMBINATION

+ To lock & unlock the keyboard

SET + To enter in programming mode

SET + To return to the room temperature display

1.1 Function of LEDS

LED	MODE	SIGNIFICATO
	On	Compressor enabled
	Flashing	Anti-short cycle delay enabled (AC parameter)
	On	Defrost in progress
	Flashing	Dripping in progress
	On	Fans output enabled
	Flashing	Fans delay after defrost
°C	On	Measurement unit
	Flashing	Programming mode
°F	On	Measurement unit
	Flashing	Programming mode

2. MAIN FUNCTIONS

2.1 HOW TO SEE THE SETPOINT

1. Push and immediately release the **SET** key: the display will show the set point value.
2. Push and immediately release the **SET** key or wait for 5 seconds to display the sensor value again.



2.2 HOW TO CHANGE THE SETPOINT

1. Hold the **SET** key for more than 2 seconds to change the set point value.
2. The value of the set point will be displayed and the ❄️ LED starts blinking.
3. To change the set value push the ▲ or ▼ key within 10s.
4. To set a new point value, push the SET key again or wait 10s.

2.3 HOW TO START A MANUAL DEFFROST

Hold the ❄️ key for more than 2 seconds and the manual defrost will start



2.4 HOW TO LOCK THE KEYBOARD

1. Hold the ▲ and ▼ keys for more than 3s.
2. The "POF" message will be displayed and the keyboard will be locked. At this point, it will be possible only to see the set point or the MAX or Min temperature stored.
3. If a key is pressed more than 3s the "POF" message will be displayed.



2.5 HOW TO UNLOCK THE KEYBOARD

Hold the ▲ and ▼ keys together for more than 3s, till the "POF" message is displayed.

3. ALARM SIGNALS

HOW TO SEE THE ALARM AND RESET THE RECORDED ALARM

1. Hold the ▲ or ▼ key to display the alarm signals.
2. When the signal is displayed, hold the **SET** key until the "rst" message is displayed, and push the **SET** key again. The "rst" message starts blinking and the normal temperature will be displayed.

Message	Cause	Outputs
"P1"	Room probe failure	Compressor output according to par. "Con" and "COF"
"P2"	Evaporator probe failure	Defrost end is timed
"HA"	Maximum temperature alarm	Outputs unchanged.
"LA"	Minimum temperature alarm	Outputs unchanged.
"dA"	Door open	Regulation restarts
"EA"	External alarm	Output unchanged.
"CA"	Serious external alarm (i1F=bAL)	All outputs OFF.
"CA"	Pressure switch alarm (i1F=PAL)	All outputs OFF

MAINTENANCE

This cooler can be cleaned using warm water and a mild detergent. Rinse with clean water to finish off.

Never use detergents that contain chlorine.

The lid may be cleaned in the same way as the cooler.

If a condenser and associated fan are fitted at the back bottom of the cooler, they can gather dust and dirt. If cleaning is necessary, they should be vacuumed with a soft brush.

Please note that the parts behind the protective grille can be hot and rotating.

TROUBLE SHOOTING

If you are having problems with your cooler, please check the following point before calling service personnel:

- Is the cooler connected to the power supply?
- Is the socket switch on?
- Is the fuse in the switch cabinet intact?
- Has the earth leak circuit breaker (if there is one) cut out?
- Has there been power cut?

If the cooler is in a place that is very hot or with bad ventilation, make sure to provide adequate ventilation. If the condenser mentioned in Section Maintenance is not clean, make sure to vacuum it.

If the above points have been checked and the cooler is still not working, please call service personnel. Inform them the nature of the problem, the type of cooler, serial number and item number (provided on the nameplate at the back of the cabinet).

Do not open the cabinet, as every opening hastens the thawing point. As a rule, the goods will not suffer damage at the first 12 hours. If more time passes, the goods must be moved to another cooler.

DISPOSAL

When a worn-out cooler is to be disposed off, this must be done in a correct manner, with respect to the environment. Please be aware of the rules covering the disposal of such terms; there may be special requirements or conditions to be observed.

Information about disposal may be obtained from:

- your supplier;
- the relevant authorities (the Local Authority, environmental agencies, etc.).

SPECIAL POINTS TO NOTE


The information contained in these instructions for use, was correct at the time of printing. On account of our constant product development, however, we reserve the right to make changes in the cooler described here. Naturally, we will attempt to keep instructions for use up to date.

If you are in doubt as to the correct use of the cooler, please contact your supplier, who will be able to advise you.


The producer is not responsible for accidents or problems, occurred as a result of wrong connection of the cooler.

WIRING DIAGRAM

MODEL: BLBC-36B-HC / BLBC-50B-HC / BLBC-65B-HC

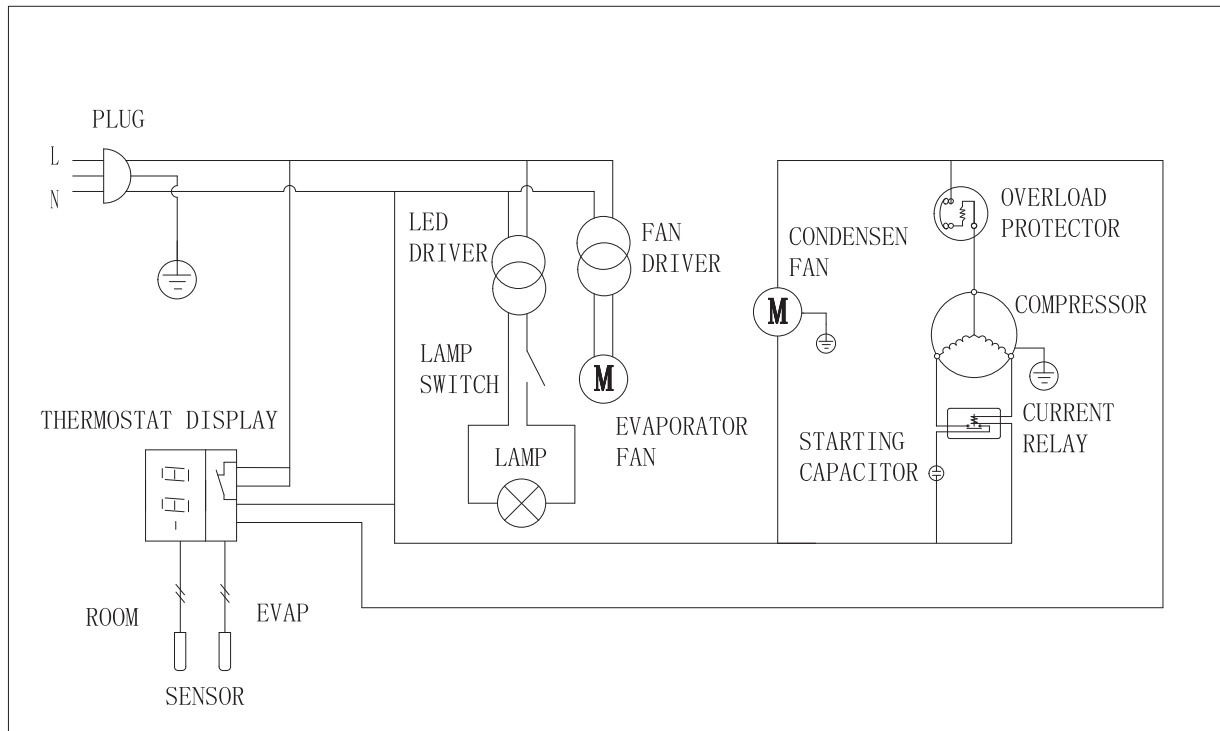


MODEL: BLBC-95B-HC

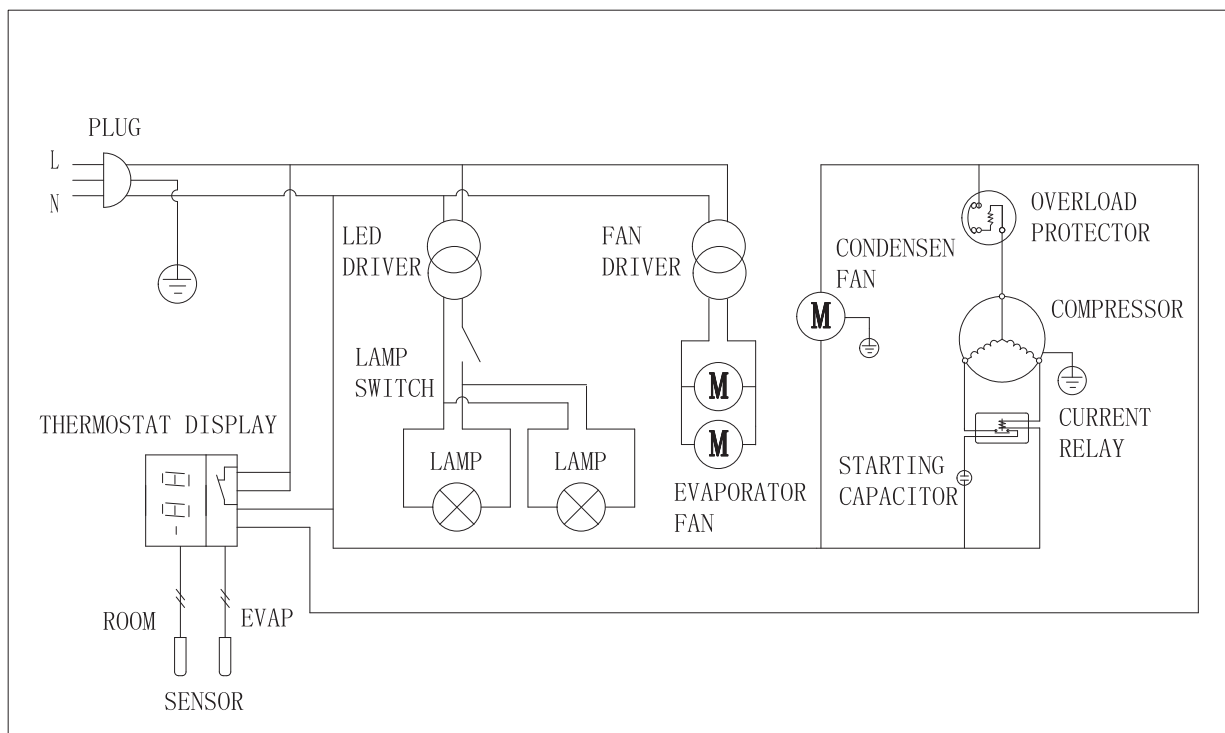


WIRING DIAGRAM

MODEL: BLBC-36B-HC / BLBC-50B-HC / BLBC-65B-HC

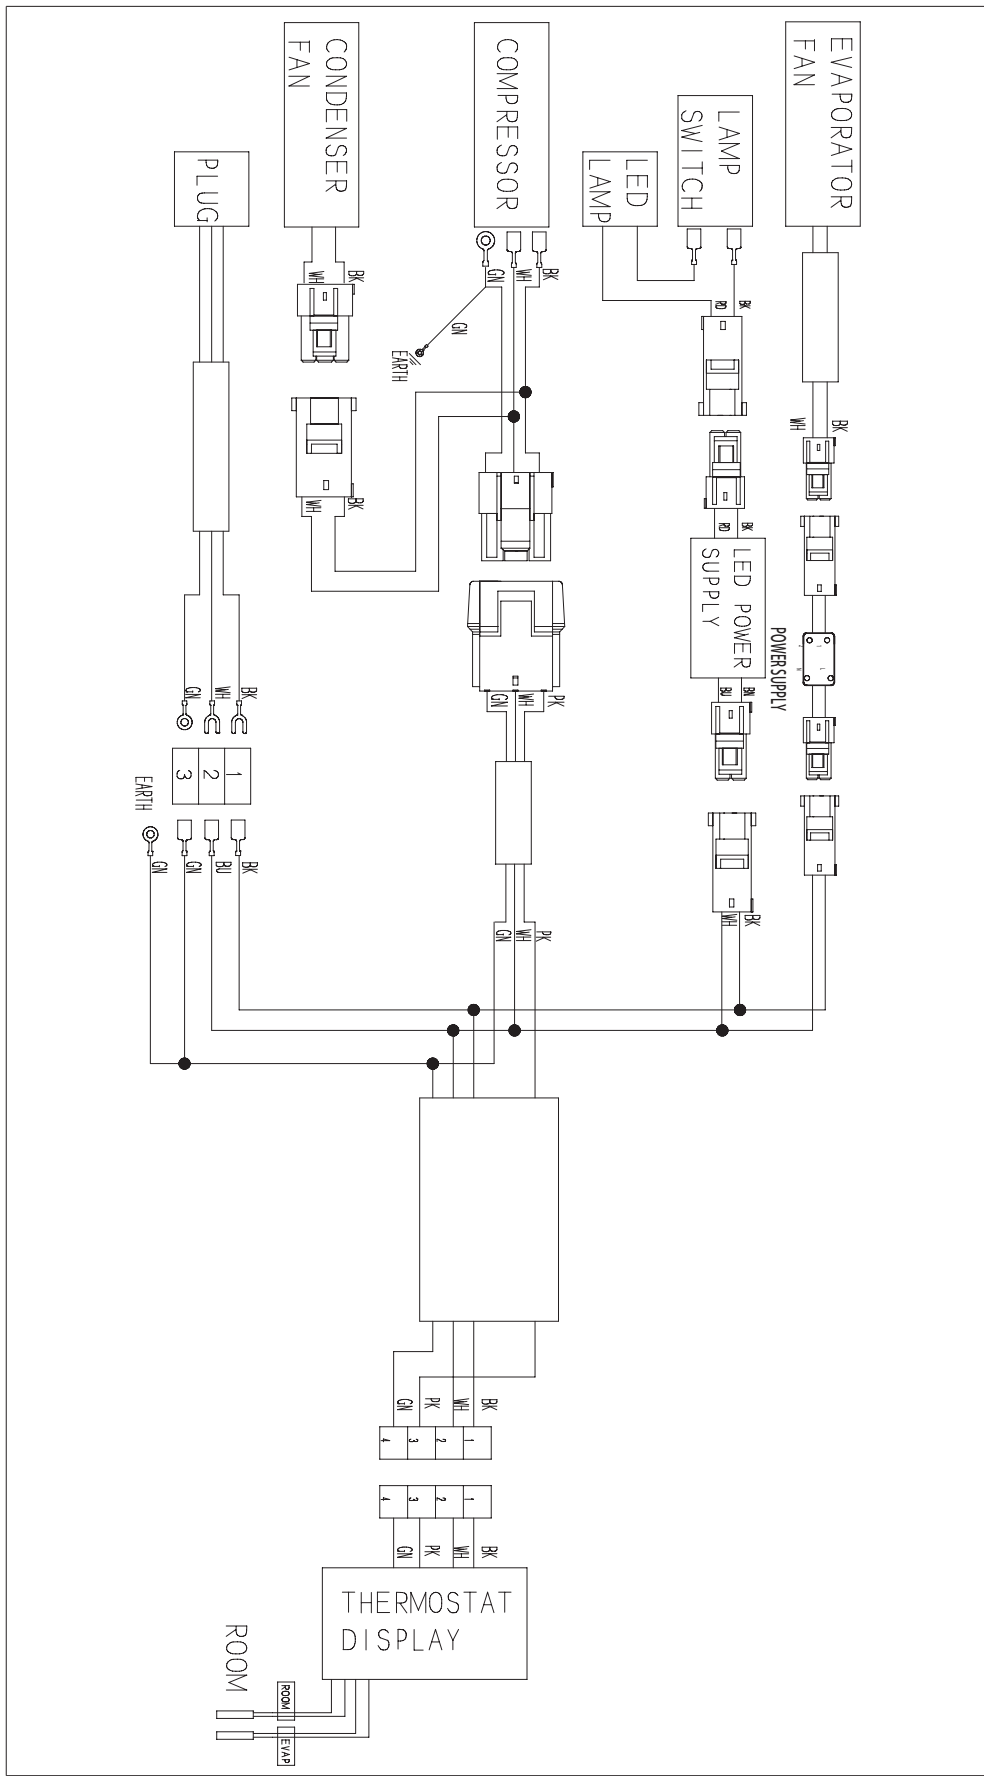

WIRING DIAGRAM

MODEL: BLBC-95B-HC

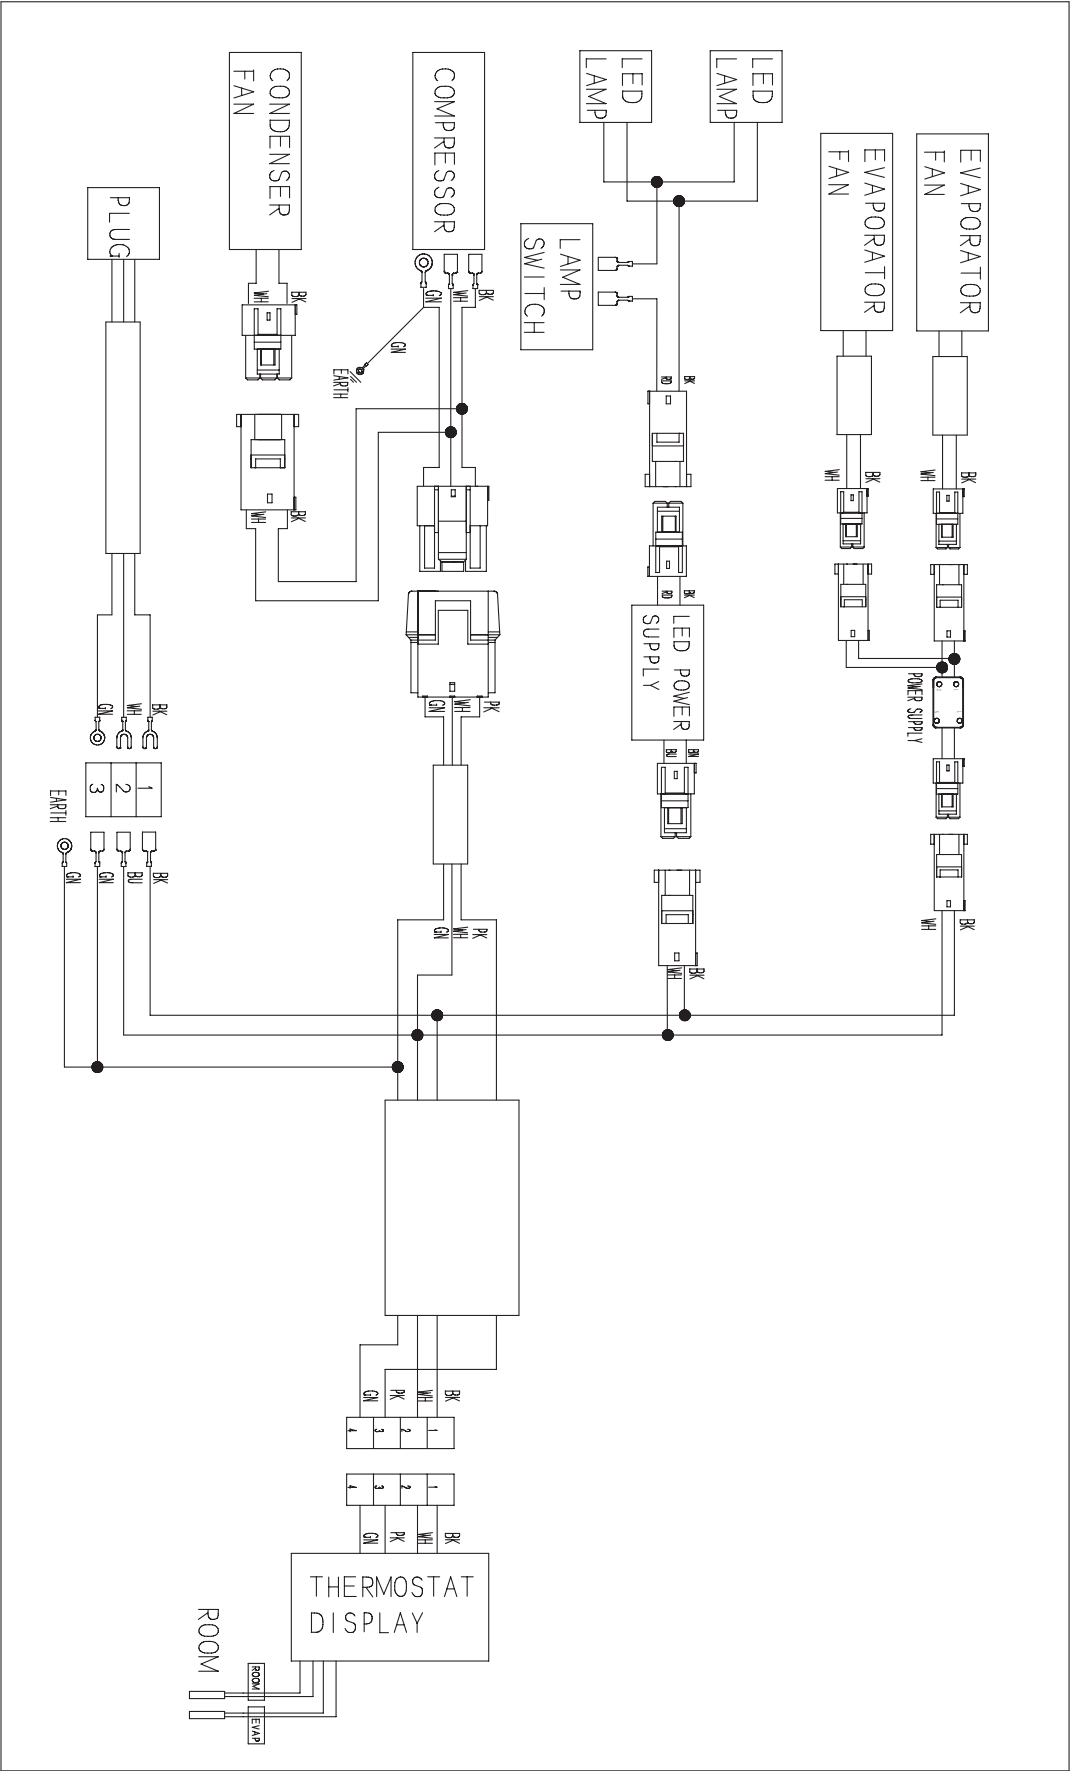



WARRANTY CERTIFICATE

This warranty is subject to all of the terms and conditions listed below.

Online warranty registration or Warranty card furnished with this unit must be properly executed and returned to BLUE AIR immediately after installation. Failure to complete online registration or to return the warranty registration card within 15 days of installation will automatically void all warranties.

The term "Original Purchaser" as used herein shall be deemed to refer to that person, firm, association, or company for whom the refrigeration unit refers to herein is originally installed.

Standard Warranty

Three (3) Years Parts & Labor Warranty

Back bar coolers: BLBB23-1B/59-2B/69-3B/90-4B-HC including glass door and stainless-steel models, Narrow back bar coolers: BLNBB-48B/60B/72B-HC including glass door, sliding door, and stainless-steel models, Keg coolers: BLKC23-1B/59-2B/69-3B/90-4B-HC including stainless-steel models, Bottle coolers: BLBC-36B/50B/65B/80B/95B-HC including stainless-steel models

BLUE AIR warrants to the original purchaser the BLUE AIR unit that the unit and its components to be free from defects in material or workmanship, under normal use and service for a period of three years (36 months) from the date of sale or thirty-nine months (36 months and 3 additional months) from date of shipment by Blue Air, whichever occurs first. *The compressor only warranty is 5 years.*

Five (5) Years Compressor Warranty

The five-year compressor warranty detailed above will be voided if the following procedure is not carefully adhered to:

1. Drier replacement is very important and must be changed when a system is opened for servicing. A drier using XH-9 desiccant or an exact replacement solid core drier must be used. The new drier must also be the same capacity as the drier being replaced.
2. Micron level vacuums must be achieved to insure low moisture levels in the system. 500 microns or lower must be obtained.
3. All Compressor replacements must be obtained through BLUE AIR's warranty department unless BLUE AIR waives this requirement in writing and at its sole discretion.
Failure to comply with this requirement will void the compressor warranty.

Warranty Claims

All claims for parts and labor must be made directly through Blue Air. All claims must include model number of the unit, the serial number of the cabinet, original invoice or proof of purchase, date of installation and all pertinent information supporting the alleged defect. Any part returned to the company under the terms of this warranty must be accompanied by a record of the cabinet model number, serial number, return authorization number and such returns shall be on the basis of TRANSPORTATION CHARGES PREPAID. In case of compressor replacement under warranty, either compressor or compressor tag must be returned to Blue Air along with the above listed information. All claims must be reported to Blue Air within one (1) year of occurrence. Warranty will not be effective unless the warranty card is returned to Blue Air or registered online with Blue Air within fifteen (15) days of installation. Failure to comply with warranty policies will result in voiding claims.

WHAT IS NOT COVERED BY THIS WARRANTY

BLUE AIR's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additional limitations below. This warranty neither assumes nor authorizes any person to assume obligations other than those expressly covered by this warranty.

NON WARRANTY PARTS.

BLUE AIR excludes specific parts exposed to normal wear and tear. These parts include, but are not limited to, lamps. Gaskets, casters, shelves and shelf clips, pans, bin and pan dividers and airflow guards.

NO CONSEQUENTIAL DAMAGES.

BLUE AIR IS NOT RESPONSIBLE FOR ECONOMIC LOSS; PROFIT LOSS; OR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, LOSSES OR DAMAGES ARISING FROM FOOD OR PRODUCT SPOILAGE CLAIMS WHETHER OR NOT ON ACCOUNT OF REFRIGERATION FAILURE.

WARRANTY IS NOT TRANSFERABLE.

This warranty is not assignable and applies only in favor of the original purchaser, owner or lessee of the unit. Warranty does not transfer with change of ownership or lessee. ANY SUCH ASSIGNMENT OR TRANSFER SHALL VOID THE WARRANTIES HEREIN AND SHALL VOID ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

IMPROPER USAGE.

BLUE AIR ASSUMES NO LIABILITY FOR PARTS OR LABOR COVERAGE FOR COMPONENT FAILURE OR OTHER DAMAGES RESULTING FROM IMPROPER USAGE OR INSTALLATION OR FAILURE TO CLEAN CONDENSER COIL AND/OR MAINTAIN PRODUCT AS SET FORTH IN THE WARRANTY PACKET PROVIDED WITH THE UNIT. ANY MISUSE OF THE DRAWER UNITS — INCLUDING INTENTIONALLY ROUGH HANDLING SUCH AS SLAMMING THE DOORS, PULLING THE DOOR OPEN WITH EXCESSIVE FORCE, APPLYING EXCESSIVE WEIGHT, SUCH AS LEANING ON THE DRAWER OR OVER STOCKING WITH HEAVY ITEMS IS NOT COVERED UNDER WARRANTY

ALTERATION, NEGLECT, ABUSE, MISUSE, ACCIDENT, DAMAGE DURING TRANSIT OR INSTALLATION, FIRE, FLOOD, ACTS OF GOD.

BLUE AIR is not responsible for the repair or replacement of any parts that BLUE AIR determines have been subjected after the date of manufacture to alteration, neglect, abuse, misuse, accident, damage during transit or installation, fire, flood, or act of God.

IMPROPER ELECTRICAL CONNECTIONS.

BLUE AIR IS NOT RESPONSIBLE FOR THE REPAIR OR REPLACEMENT OF FAILED OR DAMAGED COMPONENTS RESULTING FROM INCORRECT SUPPLY VOLTAGE, THE USE OF EXTENSION CORDS, LOW VOLTAGE, OR UNSTABLE SUPPLY VOLTAGE. THE USE OF A GENERATOR IS NOT COVERED UNDER WARRANTY.

OTHER:

THE FOLLOWING ARE NOT COVERED UNDER WARRANTY: WATER DAMAGE TO ELECTRICAL COMPONENTS, EXPOSURE TO OUTDOOR ENVIRONMENTAL CONDITIONS, INADEQUATE VENTILATION, CLEANING OR MAINTENANCE OF THE UNIT, ISSUES RELATED TO IMPROPER INSTALLATION SUCH AS ENCLOSED AREA, UNEVEN FLOORING, OR INCORRECT FITTING

NO IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE:

THERE ARE NO OTHER WARRANTIES, EXPRESSED, IMPLIED OR STATUTORY, EXCEPT THE WARRANTIES AS DESCRIBED ABOVE. THESE WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, INCLUDING IMPLIED WARRANTY AND MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. **THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF.**

OUTSIDE U.S.:

This warranty does not apply to, and BLUE AIR is not responsible for, any warranty claims made on products sold or used outside the United States.

CERTAIN REGIONS HAVE RESTRICTED SERVICE WARRANTY COVERAGE:

In Alaska and Hawaii, our warranty extends solely to parts, with no coverage for labor costs associated with repairs.

Blue Air FSE, LLC

223 W. Rosecrans Ave, Gardena, CA 90248

Phone: (310-808-0102)

Email: warrantyservice@blueairfse.com

Ver06122026



223 W Rosecrans Ave., Gardena, CA 90248
T. 310-808-0102 www.blueairfse.com