

**Homeleader**®  
*Spice your life*

## **Instruction manual of chopper**

**Model: K56-015**



# Safety Instruction

## Suggestion

- Please read the instruction carefully before using for the first time.
- Check whether the rated voltage of the appliance is consistent with the power supply voltage.
- Your appliance is only suitable for using indoors.
- If the appliance is damaged or does not work, contact the service center.
- Do not immerse electrical appliances, wires and plugs into water or other liquids.
- Don't hang wires in a place where children can reach them.
- The power cord must be kept away from the heat source and sharp edges.
- For your safety, ONLY USE the parts we have equipped with the machine.
- DO not put any kitchen ware(spoon, shovel and so on) into the glass bowl.
- Do not run your appliance while it is empty.

## Safety of use

1, If the power cord is damaged, it must be replaced by the manufacturer, its service agent or a similar person to avoid danger.

2, Children should be supervised to ensure that they do not play with electrical appliances.

Care is needed when handling cutting blades, especially when removing the blade from the bowl, emptying the bowl and during cleaning.

Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.

always disconnect the chopper from the supply if it is left unattended and before

assembling, disassembling.

This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.


Children shall not play with the appliance.

Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

Warning: misuse may cause serious injury.

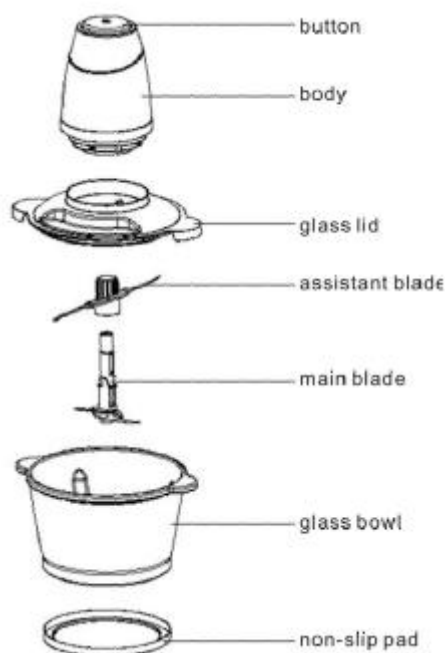

## **Maximum capacity and working time**

pork and meat: Max 300g

The maximum amount of prepared food such as pork, beef , etc. is 300 grams, operation time of 15 seconds, each time interval at least 2 minutes. Then keep the machine at room temperature.

## **Use appliance**

1.Put the anti-skid cushion at the bottom of the glass bowl.

2. Put the glass bowl on the flat platform.

3. Remove the protective sleeve of the blade and insert the blade assembly in the glass bowl.

4.Add your food, and choose the range of food, pay attention to the processing guide.

-Cut large pieces of food into 1-2cm chunks.

-Do not cut hard food, such as coffee beans, ice cubes, spices or chocolate, or you will damage the blade.

5.Put the lid on the glass bowl.

6.Install the host.

-The host will match in 4 locations correctly.

7. Plug in and press the key.

-If the machine is running slow, Switch off the appliance and disconnect from supply and then take out some of the mixture and continue the batch processing.

8. Switch off the appliance and disconnect from supply remove the assembly.

## **Clean**

-Disconnect the power plug from the socket.

Use a damp cloth to clean the host and dry.

Clean the other attachment with water and dry ,take careful with stainless steel blades to avoid cutting yourself.

### Processing Guide

food	maximum capacity	Operation cycles	Operation time	preparation
meat	300g	3	15 seconds	remove the bone, cut the fat and piece of cartilage into 1 or 2 cm
parsley(clery,etc)	80g	1	15 seconds	Remove the rib
nut (almond,etc)	300g	3	15 seconds	Remove the rib
cheese	150g	2	10 seconds	Cut into 1 to 2 cm chunk
bread	120g	1	15 seconds	Cut into 1 to 2 cm chunk
boiled egg	300g	1	10 seconds	a half or a quarter
carrot (onion)	400g	3	15 seconds	cut into 2 cm size
biscuit	250g	2	10 seconds	Breaking into squares
berries (berry)	500g	3	15 seconds	Remove the rib

## IMPORTANT

### NOTE:

1. Each time interval at least 2 minutes. Then keep the machine at room temperature.
2. Please add adequet food for better chopping or it would not meet your chopping expectation.
3. In some cases, if the motor stops when you use it in the first time, please do not worry. The motor oil is heated in the first use so the motor gets hot but it will cool down in several mins and work fine in the next operation.

### Please note that:

Do not disassemble the knife assembly and place it in the glass bowl: the wrong operation may seriously damage the product.

What should you do if your appliance doesn't work?

Check:

- connection
- The host is properly installed in the four position of the glass bowl cover.
- Install correctly.

## Specifications:

For US standard only

Rated Power	300W
Rated Voltage	AC120V, 60Hz
Materials of bowl	Glass, 1.2L

Any questions, please contact us through Amazon message or send us an email to [services@homeleader.com.cn](mailto:services@homeleader.com.cn). We will reply as soon as we can and solve your concerns. Please do leave us a review about the chopper if it works fine. Enjoy the product! Thanks.