

LJ Bed Remote Control

BYKQ01-A0

Product Manual

Version V0.10

Thank you for choosing our product. Please read this product manual
carefully before use.

Manufacturer: Hangzhou Zhiyuan Technology Co., Ltd.

**Address: No.10, Naxian Street, Liangzhu Dalu Industrial Park, Hangzhou,
Zhejiang, China**




Revision History


Version	Date	Description	Editor	Reviewer	Approver
V0.10	2026/07/15	Initial release	Liu Weiqiang	Liu Tong	Jiang Shi

一、 Appearance and Dimensions

1. 15-key version (for A21, A22, A31, A41)

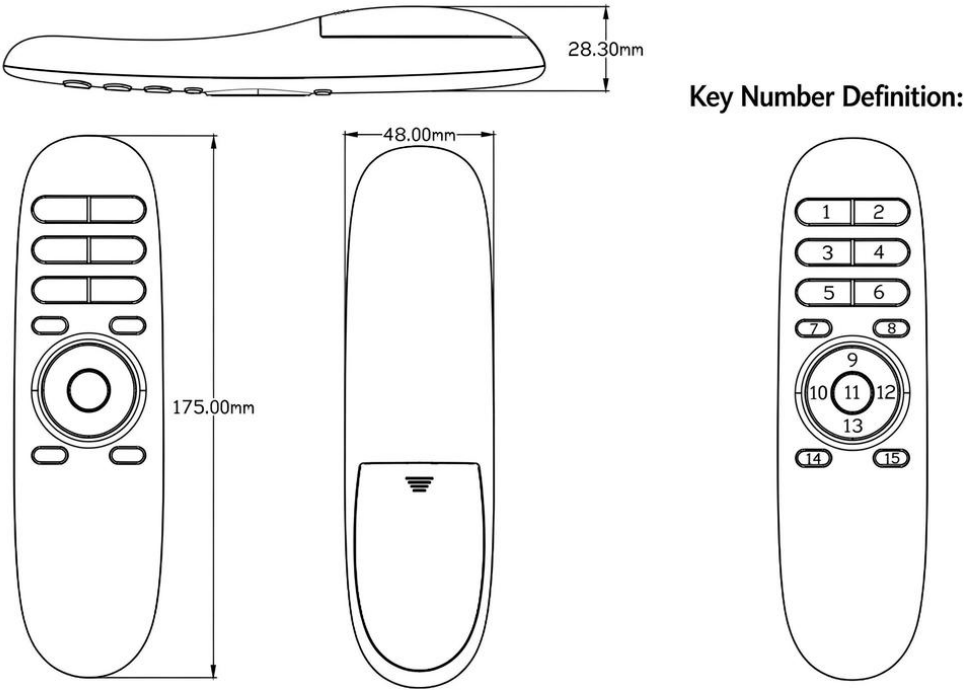

2. 21-key version (for B21, B22, B31, B32, B33, B34, B35, B41, B42, B43, B51, B52, B53)

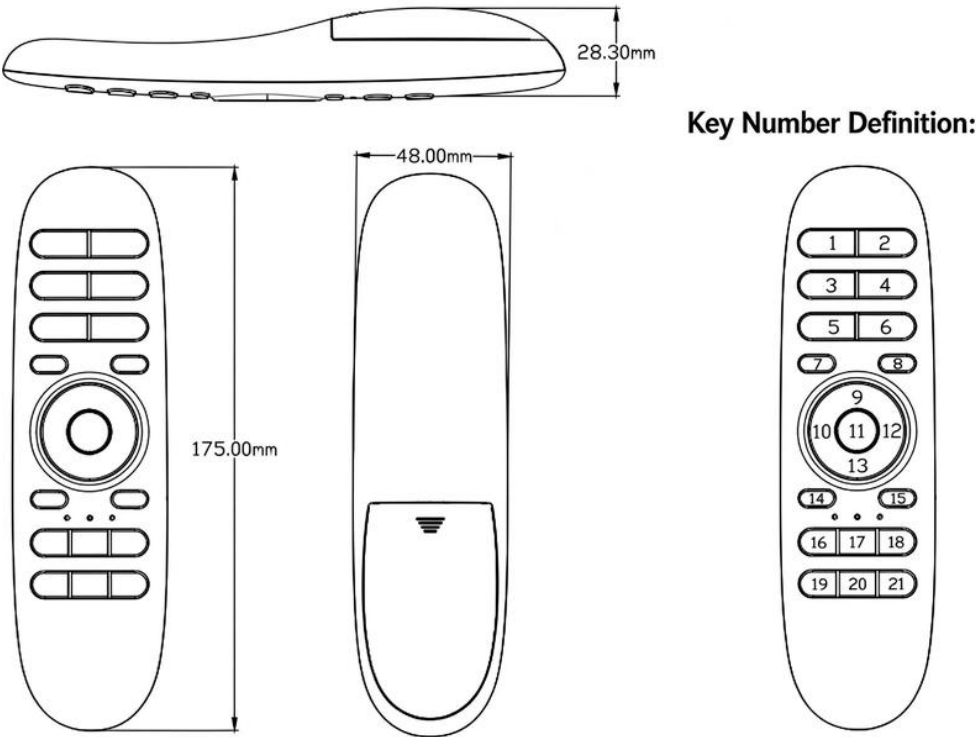

二、 Function Descriptions of Each Remote Control Version

1. Two-Motor Basic (A21)

#	Icon	Key Definition	Function Description
1		Pairing	Press and hold to activate; after pressing, the backlight blinks, and pairing succeeds once the backlight stays steadily on.
2		Child Lock	When unlocked, press and hold this key to switch the backlight from steady on to blinking and lock the remote (key presses are then disabled); while locked, press and hold this key to switch the backlight from blinking to steady on and release the child lock.
3		Zero Gravity	Press and release this key, and the motor runs to the preset "Zero Gravity" position.
4		Snoring Intervention	Press and release this key, and the motor runs to the preset "Snoring Intervention" position.
5		Yoga Mode	Press and release this key, and the motor runs to the preset "Yoga Mode" position.
6		Cinema Mode	Press and release this key, and the motor runs to the preset "Cinema Mode" position.
7		Assist Up	Press and release this key, and the motor runs to the preset "Assist Up" position.
8		Sleep Aid	Press and release this key, and the bed runs the sleep aid sequence, with the motors and vibrators operating as preset.
9		Back Motor Up	Press and hold this key, and the back motor raises; release it to stop.
10		Leg Motor Up	Press and hold this key, and the leg motor raises; release it to stop.
11		One-touch Flat	Press and release this key, and the motor runs to the preset "Flat" position.
12		Leg Motor Down	Press and hold this key, and the leg motor lowers; release it to stop.
13		Back Motor Down	Press and hold this key, and the back motor lowers; release it to stop.
14		Memory 1	Press and hold this key for about 5 seconds to set the current motor position as "Memory 1". Briefly press and release this key, and the motor runs to the preset "Memory 1" position.
15		Memory 2	Press and hold this key for about 5 seconds to set the current motor position as "Memory 2". Briefly press and release this key, and the motor runs to the preset "Memory 2" position.

2. Two-Motor + Massage (B21)

#	Icon	Key Definition	Function Description
1		Pairing	Press and hold to activate; after pressing, the backlight blinks, and pairing succeeds once the backlight stays steadily on.

2		Snoring Intervention	Press and release this key, and the motor runs to the preset "Snoring Intervention" position.
3		Zero Gravity	Press and release this key, and the motor runs to the preset "Zero Gravity" position.
4		Cinema Mode	Press and release this key, and the motor runs to the preset "Cinema Mode" position.
5		Yoga Mode	Press and release this key, and the motor runs to the preset "Yoga Mode" position.
6		Reading Mode	Press and release this key, and the motor runs to the preset "Reading Mode" position.
7		Assist Up	Press and release this key, and the motor runs to the preset "Assist Up" position.
8		Sleep Aid	Press and release this key, and the bed runs the sleep aid sequence, with the motors and vibrators operating as preset.
9		Back Motor Up	Press and hold this key, and the back motor raises; release it to stop.
10		Leg Motor Up	Press and hold this key, and the leg motor raises; release it to stop.
11		One-touch Flat	Press and release this key, and the motor runs to the preset "Flat" position.
12		Leg Motor Down	Press and hold this key, and the leg motor lowers; release it to stop.
13		Back Motor Down	Press and hold this key, and the back motor lowers; release it to stop.
14		Memory 1	Press and hold this key for about 5 seconds to set the current motor position as "Memory 1". Briefly press and release this key, and the motor runs to the preset "Memory 1" position.
15		Memory 2	Press and hold this key for about 5 seconds to set the current motor position as "Memory 2". Briefly press and release this key, and the motor runs to the preset "Memory 2" position.
16		Massage On/Off	Press and release this key to start/stop the two vibrators.
17		Massage Timer	Press and release this key to cycle through the massage timer [10min→20min→30min→10min].
18		Massage Mode	Press and release this key to cycle through the massage modes [Off→Mode 1→Mode 2→Mode 3→Off].
19		Leg Intensity	Press and release this key to cycle the leg vibrator intensity through four modes.
20		Child Lock	When unlocked, press and hold this key to switch the backlight from steady on to blinking and lock the remote (key presses are then disabled); while locked, press and hold this key to switch the backlight from blinking to steady on and release the child lock.

21		Back Intensity	Press and release this key to cycle the back vibrator intensity through four modes.
----	---	----------------	---

3. Two-Motor + Light (A22)

#	Icon	Key Definition	Function Description
1		Pairing	Press and hold to activate; after pressing, the backlight blinks, and pairing succeeds once the backlight stays steadily on.
2		Child Lock	When unlocked, press and hold this key to switch the backlight from steady on to blinking and lock the remote (key presses are then disabled); while locked, press and hold this key to switch the backlight from blinking to steady on and release the child lock.
3		Zero Gravity	Press and release this key, and the motor runs to the preset "Zero Gravity" position.
4		Snoring Intervention	Press and release this key, and the motor runs to the preset "Snoring Intervention" position.
5		Yoga Mode	Press and release this key, and the motor runs to the preset "Yoga Mode" position.
6		Cinema Mode	Press and release this key, and the motor runs to the preset "Cinema Mode" position.
7		Light	Press and release this key to turn the LED strip on/off.
8		Sleep Aid	Press and release this key, and the bed runs the sleep aid sequence, with the motors and vibrators operating as preset.
9		Back Motor Up	Press and hold this key, and the back motor raises; release it to stop.
10		Leg Motor Up	Press and hold this key, and the leg motor raises; release it to stop.
11		One-touch Flat	Press and release this key, and the motor runs to the preset "Flat" position.
12		Leg Motor Down	Press and hold this key, and the leg motor lowers; release it to stop.
13		Back Motor Down	Press and hold this key, and the back motor lowers; release it to stop.
14		Memory 1	Press and hold this key for about 5 seconds to set the current motor position as "Memory 1". Briefly press and release this key, and the motor runs to the preset "Memory 1" position.
15		Memory 2	Press and hold this key for about 5 seconds to set the current motor position as "Memory 2". Briefly press and release this key, and the motor runs to the preset "Memory 2" position.

4. Two-Motor + Massage + Light (B22)

#	Icon	Key Definition	Function Description
1		Pairing	Press and hold to activate; after pressing, the backlight blinks, and pairing succeeds once the backlight stays steadily on.

2		Child Lock	When unlocked, press and hold this key to switch the backlight from steady on to blinking and lock the remote (key presses are then disabled); while locked, press and hold this key to switch the backlight from blinking to steady on and release the child lock.
3		Zero Gravity	Press and release this key, and the motor runs to the preset "Zero Gravity" position.
4		Cinema Mode	Press and release this key, and the motor runs to the preset "Cinema Mode" position.
5		Yoga Mode	Press and release this key, and the motor runs to the preset "Yoga Mode" position.
6		Snoring Intervention	Press and release this key, and the motor runs to the preset "Snoring Intervention" position.
7		Assist Up	Press and release this key, and the motor runs to the preset "Assist Up" position.
8		Sleep Aid	Press and release this key, and the bed runs the sleep aid sequence, with the motors and vibrators operating as preset.
9		Back Motor Up	Press and hold this key, and the back motor raises; release it to stop.
10		Leg Motor Up	Press and hold this key, and the leg motor raises; release it to stop.
11		One-touch Flat	Press and release this key, and the motor runs to the preset "Flat" position.
12		Leg Motor Down	Press and hold this key, and the leg motor lowers; release it to stop.
13		Back Motor Down	Press and hold this key, and the back motor lowers; release it to stop.
14		Memory 1	Press and hold this key for about 5 seconds to set the current motor position as "Memory 1". Briefly press and release this key, and the motor runs to the preset "Memory 1" position.
15		Memory 2	Press and hold this key for about 5 seconds to set the current motor position as "Memory 2". Briefly press and release this key, and the motor runs to the preset "Memory 2" position.
16		Massage On/Off	Press and release this key to start/stop the two vibrators.
17		Message Timer	Press and release this key to cycle through the massage timer [10min→20min→30min→10min].
18		Massage Mode	Press and release this key to cycle through the massage modes [Off→Mode 1→Mode 2→Mode 3→Off].
19		Leg Intensity	Press and release this key to cycle the leg vibrator intensity through four modes.
20		Light	Press and release this key to turn the LED strip on/off.
21		Back Intensity	Press and release this key to cycle the back vibrator intensity through four modes.

5. Three-Motor Light (A31)

#	Icon	Key Definition	Function Description
1		Pairing	Press and hold to activate; after pressing, the backlight blinks, and pairing succeeds once the backlight stays steadily on.
2		Child Lock	When unlocked, press and hold this key to switch the backlight from steady on to blinking and lock the remote (key presses are then disabled); while locked, press and hold this key to switch the backlight from blinking to steady on and release the child lock.
3		Zero Gravity	Press and release this key, and the motor runs to the preset "Zero Gravity" position.
4		Cinema Mode	Press and release this key, and the motor runs to the preset "Cinema Mode" position.
5		Snoring Intervention	Press and release this key, and the motor runs to the preset "Snoring Intervention" position.
6		Sleep Aid	Press and release this key, and the bed runs the sleep aid sequence, with the motors and vibrators operating as preset.
7		Waist Motor Up	Press and hold this key, and the waist motor raises; release it to stop.
8		Waist Motor Down	Press and hold this key, and the waist motor lowers; release it to stop.
9		Back Motor Up	Press and hold this key, and the back motor raises; release it to stop.
10		Leg Motor Up	Press and hold this key, and the leg motor raises; release it to stop.
11		One-touch Flat	Press and release this key, and the motor runs to the preset "Flat" position.
12		Leg Motor Down	Press and hold this key, and the leg motor lowers; release it to stop.
13		Back Motor Down	Press and hold this key, and the back motor lowers; release it to stop.
14		Memory 1	Press and hold this key for about 5 seconds to set the current motor position as "Memory 1". Briefly press and release this key, and the motor runs to the preset "Memory 1" position.
15		Memory 2	Press and hold this key for about 5 seconds to set the current motor position as "Memory 2". Briefly press and release this key, and the motor runs to the preset "Memory 2" position.

6. Three-Motor - Head (B31)

#	Icon	Key Definition	Function Description
1		Pairing	Press and hold to activate; after pressing, the backlight blinks, and pairing succeeds once the backlight stays steadily on.
2		Child Lock	When unlocked, press and hold this key to switch the backlight from steady on to blinking and lock the remote (key presses are then disabled); while

			locked, press and hold this key to switch the backlight from blinking to steady on and release the child lock.
3		Zero Gravity	Press and release this key, and the motor runs to the preset "Zero Gravity" position.
4		Cinema Mode	Press and release this key, and the motor runs to the preset "Cinema Mode" position.
5		Snoring Intervention	Press and release this key, and the motor runs to the preset "Snoring Intervention" position.
6		Sleep Aid	Press and release this key, and the bed runs the sleep aid sequence, with the motors and vibrators operating as preset.
7		Head Motor Up	Press and hold this key, and the head motor raises; release it to stop.
8		Head Motor Down	Press and hold this key, and the head motor lowers; release it to stop.
9		Back Motor Up	Press and hold this key, and the back motor raises; release it to stop.
10		Leg Motor Up	Press and hold this key, and the leg motor raises; release it to stop.
11		One-touch Flat	Press and release this key, and the motor runs to the preset "Flat" position.
12		Leg Motor Down	Press and hold this key, and the leg motor lowers; release it to stop.
13		Back Motor Down	Press and hold this key, and the back motor lowers; release it to stop.
14		Memory 1	Press and hold this key for about 5 seconds to set the current motor position as "Memory 1". Briefly press and release this key, and the motor runs to the preset "Memory 1" position.
15		Memory 2	Press and hold this key for about 5 seconds to set the current motor position as "Memory 2". Briefly press and release this key, and the motor runs to the preset "Memory 2" position.
16		Massage On/Off	Press and release this key to start/stop the two vibrators.
17		Massage Timer	Press and release this key to cycle through the massage timer [10min→20min→30min→10min].
18		Massage Mode	Press and release this key to cycle through the massage modes [Off→Mode 1→Mode 2→Mode 3→Off].
19		Leg Intensity	Press and release this key to cycle the leg vibrator intensity through four modes.
20		Light	Press and release this key to turn the LED strip on/off.
21		Back Intensity	Press and release this key to cycle the back vibrator intensity through four modes.

7. Three-Motor - Waist (B32)

#	Icon	Key Definition	Function Description
---	------	----------------	----------------------

1		Pairing	Press and hold to activate; after pressing, the backlight blinks, and pairing succeeds once the backlight stays steadily on.
2		Child Lock	When unlocked, press and hold this key to switch the backlight from steady on to blinking and lock the remote (key presses are then disabled); while locked, press and hold this key to switch the backlight from blinking to steady on and release the child lock.
3		Zero Gravity	Press and release this key, and the motor runs to the preset "Zero Gravity" position.
4		Cinema Mode	Press and release this key, and the motor runs to the preset "Cinema Mode" position.
5		Snoring Intervention	Press and release this key, and the motor runs to the preset "Snoring Intervention" position.
6		Sleep Aid	Press and release this key, and the bed runs the sleep aid sequence, with the motors and vibrators operating as preset.
7		Waist Motor Up	Press and hold this key, and the waist motor raises; release it to stop.
8		Waist Motor Down	Press and hold this key, and the waist motor lowers; release it to stop.
9		Back Motor Up	Press and hold this key, and the back motor raises; release it to stop.
10		Leg Motor Up	Press and hold this key, and the leg motor raises; release it to stop.
11		One-touch Flat	Press and release this key, and the motor runs to the preset "Flat" position.
12		Leg Motor Down	Press and hold this key, and the leg motor lowers; release it to stop.
13		Back Motor Down	Press and hold this key, and the back motor lowers; release it to stop.
14		Memory 1	Press and hold this key for about 5 seconds to set the current motor position as "Memory 1". Briefly press and release this key, and the motor runs to the preset "Memory 1" position.
15		Memory 2	Press and hold this key for about 5 seconds to set the current motor position as "Memory 2". Briefly press and release this key, and the motor runs to the preset "Memory 2" position.
16		Massage On/Off	Press and release this key to start/stop the two vibrators.
17		Massage Timer	Press and release this key to cycle through the massage timer [10min→20min→30min→10min].
18		Massage Mode	Press and release this key to cycle through the massage modes [Off→Mode 1→Mode 2→Mode 3→Off].
19		Leg Intensity	Press and release this key to cycle the leg vibrator intensity through four modes.
20		Light	Press and release this key to turn the LED strip on/off.

21		Back Intensity	Press and release this key to cycle the back vibrator intensity through four modes.
----	---	----------------	---

8. Three-Motor – Split Back (B33)

#	Icon	Key Definition	Function Description
1		Pairing	Press and hold to activate; after pressing, the backlight blinks, and pairing succeeds once the backlight stays steadily on.
2		Child Lock	When unlocked, press and hold this key to switch the backlight from steady on to blinking and lock the remote (key presses are then disabled); while locked, press and hold this key to switch the backlight from blinking to steady on and release the child lock.
3		Zero Gravity	Press and release this key, and the motor runs to the preset "Zero Gravity" position.
4		Cinema Mode	Press and release this key, and the motor runs to the preset "Cinema Mode" position.
5		Snoring Intervention	Press and release this key, and the motor runs to the preset "Snoring Intervention" position.
6		Sleep Aid	Press and release this key, and the bed runs the sleep aid sequence, with the motors and vibrators operating as preset.
7		Back 2 Motor Up	
8		Back 2 Motor Down	
9		Back Motor Up	Press and hold this key, and the back motor raises; release it to stop.
10		Back 1 Motor Up	
11		One-touch Flat	Press and release this key, and the motor runs to the preset "Flat" position.
12		Back 1 Motor Down	
13		Back Motor Down	Press and hold this key, and the back motor lowers; release it to stop.
14		Memory 1	Press and hold this key for about 5 seconds to set the current motor position as "Memory 1". Briefly press and release this key, and the motor runs to the preset "Memory 1" position.
15		Memory 2	Press and hold this key for about 5 seconds to set the current motor position as "Memory 2". Briefly press and release this key, and the motor runs to the preset "Memory 2" position.

16		Massage On/Off	Press and release this key to start/stop the two vibrators.
17		Massage Timer	Press and release this key to cycle through the massage timer [10min→20min→30min→10min].
18		Massage Mode	Press and release this key to cycle through the massage modes [Off→Mode 1→Mode 2→Mode 3→Off].
19		Leg Intensity	Press and release this key to cycle the leg vibrator intensity through four modes.
20		Light	Press and release this key to turn the LED strip on/off.
21		Back Intensity	Press and release this key to cycle the back vibrator intensity through four modes.

9. Three-Motor – Parallel Lift (B34)

#	Icon	Key Definition	Function Description
1		Pairing	Press and hold to activate; after pressing, the backlight blinks, and pairing succeeds once the backlight stays steadily on.
2		Child Lock	When unlocked, press and hold this key to switch the backlight from steady on to blinking and lock the remote (key presses are then disabled); while locked, press and hold this key to switch the backlight from blinking to steady on and release the child lock.
3		Zero Gravity	Press and release this key, and the motor runs to the preset "Zero Gravity" position.
4		Cinema Mode	Press and release this key, and the motor runs to the preset "Cinema Mode" position.
5		Snoring Intervention	Press and release this key, and the motor runs to the preset "Snoring Intervention" position.
6		Sleep Aid	Press and release this key, and the bed runs the sleep aid sequence, with the motors and vibrators operating as preset.
7		Parallel Motor Up	Press and hold this key, and the parallel motor raises; release it to stop.
8		Parallel Motor Down	Press and hold this key, and the parallel motor lowers; release it to stop.
9		Back Motor Up	Press and hold this key, and the back motor raises; release it to stop.
10		Leg Motor Up	Press and hold this key, and the leg motor raises; release it to stop.
11		One-touch Flat	Press and release this key, and the motor runs to the preset "Flat" position.
12		Leg Motor Down	Press and hold this key, and the leg motor lowers; release it to stop.
13		Back Motor Down	Press and hold this key, and the back motor lowers; release it to stop.
14		Memory 1	Press and hold this key for about 5 seconds to set the current motor position as "Memory 1". Briefly press and release this key, and the motor runs to the preset "Memory 1" position.

15		Memory 2	Press and hold this key for about 5 seconds to set the current motor position as "Memory 2". Briefly press and release this key, and the motor runs to the preset "Memory 2" position.
16		Massage On/Off	Press and release this key to start/stop the two vibrators.
17		Massage Timer	Press and release this key to cycle through the massage timer [10min→20min→30min→10min].
18		Massage Mode	Press and release this key to cycle through the massage modes [Off→Mode 1→Mode 2→Mode 3→Off].
19		Leg Intensity	Press and release this key to cycle the leg vibrator intensity through four modes.
20		Light	Press and release this key to turn the LED strip on/off.
21		Back Intensity	Press and release this key to cycle the back vibrator intensity through four modes.

10. Three-Motor – Storage (B35)

#	Icon	Key Definition	Function Description
1		Pairing	Press and hold to activate; after pressing, the backlight blinks, and pairing succeeds once the backlight stays steadily on.
2		Child Lock	When unlocked, press and hold this key to switch the backlight from steady on to blinking and lock the remote (key presses are then disabled); while locked, press and hold this key to switch the backlight from blinking to steady on and release the child lock.
3		Zero Gravity	Press and release this key, and the motor runs to the preset "Zero Gravity" position.
4		Cinema Mode	Press and release this key, and the motor runs to the preset "Cinema Mode" position.
5		Snoring Intervention	Press and release this key, and the motor runs to the preset "Snoring Intervention" position.
6		Sleep Aid	Press and release this key, and the bed runs the sleep aid sequence, with the motors and vibrators operating as preset.
7		Storage Motor Up	Press and hold this key, and the storage motor raises; release it to stop.
8		Storage Motor Down	Press and hold this key, and the storage motor lowers; release it to stop.
9		Back Motor Up	Press and hold this key, and the back motor raises; release it to stop.
10		Leg Motor Up	Press and hold this key, and the leg motor raises; release it to stop.
11		One-touch Flat	Press and release this key, and the motor runs to the preset "Flat" position.
12		Leg Motor Down	Press and hold this key, and the leg motor lowers; release it to stop.
13		Back Motor Down	Press and hold this key, and the back motor lowers; release it to stop.

14		Memory 1	Press and hold this key for about 5 seconds to set the current motor position as "Memory 1". Briefly press and release this key, and the motor runs to the preset "Memory 1" position.
15		Memory 2	Press and hold this key for about 5 seconds to set the current motor position as "Memory 2". Briefly press and release this key, and the motor runs to the preset "Memory 2" position.
16		Massage On/Off	Press and release this key to start/stop the two vibrators.
17		Massage Timer	Press and release this key to cycle through the massage timer [10min→20min→30min→10min].
18		Massage Mode	Press and release this key to cycle through the massage modes [Off→Mode 1→Mode 2→Mode 3→Off].
19		Leg Intensity	Press and release this key to cycle the leg vibrator intensity through four modes.
20		Light	Press and release this key to turn the LED strip on/off.
21		Back Intensity	Press and release this key to cycle the back vibrator intensity through four modes.

11. Four-Motor Light (A41)

#	Icon	Key Definition	Function Description
1		Zero Gravity	Press and release this key, and the motor runs to the preset "Zero Gravity" position.
2		Cinema Mode	Press and release this key, and the motor runs to the preset "Cinema Mode" position.
3		Snoring Intervention	Press and release this key, and the motor runs to the preset "Snoring Intervention" position.
4		Sleep Aid	Press and release this key, and the bed runs the sleep aid sequence, with the motors and vibrators operating as preset.
5		Memory 1	Press and hold this key for about 5 seconds to set the current motor position as "Memory 1". Briefly press and release this key, and the motor runs to the preset "Memory 1" position.
6		Memory 2	Press and hold this key for about 5 seconds to set the current motor position as "Memory 2". Briefly press and release this key, and the motor runs to the preset "Memory 2" position.
7		Head Motor Up	Press and hold this key, and the head motor raises; release it to stop.
8		Head Motor Down	Press and hold this key, and the head motor lowers; release it to stop.
9		Back Motor Up	Press and hold this key, and the back motor raises; release it to stop.

10		Leg Motor Up	Press and hold this key, and the leg motor raises; release it to stop.
11		One-touch Flat	Press and release this key, and the motor runs to the preset "Flat" position.
12		Leg Motor Down	Press and hold this key, and the leg motor lowers; release it to stop.
13		Back Motor Down	Press and hold this key, and the back motor lowers; release it to stop.
14		Waist Motor Up	Press and hold this key, and the waist motor raises; release it to stop.
15		Waist Motor Down	Press and hold this key, and the waist motor lowers; release it to stop.

12. Four-Motor Basic (B41)

#	Icon	Key Definition	Function Description
1		Zero Gravity	Press and release this key, and the motor runs to the preset "Zero Gravity" position.
2		Cinema Mode	Press and release this key, and the motor runs to the preset "Cinema Mode" position.
3		Snoring Intervention	Press and release this key, and the motor runs to the preset "Snoring Intervention" position.
4		Sleep Aid	Press and release this key, and the bed runs the sleep aid sequence, with the motors and vibrators operating as preset.
5		Memory 1	Press and hold this key for about 5 seconds to set the current motor position as "Memory 1". Briefly press and release this key, and the motor runs to the preset "Memory 1" position.
6		Memory 2	Press and hold this key for about 5 seconds to set the current motor position as "Memory 2". Briefly press and release this key, and the motor runs to the preset "Memory 2" position.
7		Head Motor Up	Press and hold this key, and the head motor raises; release it to stop.
8		Head Motor Down	Press and hold this key, and the head motor lowers; release it to stop.
9		Back Motor Up	Press and hold this key, and the back motor raises; release it to stop.
10		Leg Motor Up	Press and hold this key, and the leg motor raises; release it to stop.
11		One-touch Flat	Press and release this key, and the motor runs to the preset "Flat" position.
12		Leg Motor Down	Press and hold this key, and the leg motor lowers; release it to stop.
13		Back Motor Down	Press and hold this key, and the back motor lowers; release it to stop.
14		Waist Motor Up	Press and hold this key, and the waist motor raises; release it to stop.

15		Waist Motor Down	Press and hold this key, and the waist motor lowers; release it to stop.
16		Massage On/Off	Press and release this key to start/stop the two vibrators.
17		Massage Timer	Press and release this key to cycle through the massage timer [10min→20min→30min→10min].
18		Massage Mode	Press and release this key to cycle through the massage modes [Off→Mode 1→Mode 2→Mode 3→Off].
19		Leg Intensity	Press and release this key to cycle the leg vibrator intensity through four modes.
20		Light	Press and release this key to turn the LED strip on/off.
21		Back Intensity	Press and release this key to cycle the back vibrator intensity through four modes.

13. Four-Motor – Rotation (B42)

#	Icon	Key Definition	Function Description
1		Zero Gravity	Press and release this key, and the motor runs to the preset "Zero Gravity" position.
2		Cinema Mode	Press and release this key, and the motor runs to the preset "Cinema Mode" position.
3		Snoring Intervention	Press and release this key, and the motor runs to the preset "Snoring Intervention" position.
4		Sleep Aid	Press and release this key, and the bed runs the sleep aid sequence, with the motors and vibrators operating as preset.
5		Memory 1	Press and hold this key for about 5 seconds to set the current motor position as "Memory 1". Briefly press and release this key, and the motor runs to the preset "Memory 1" position.
6		Memory 2	Press and hold this key for about 5 seconds to set the current motor position as "Memory 2". Briefly press and release this key, and the motor runs to the preset "Memory 2" position.
7		Rotation Motor Up	Press and hold this key, and the rotation motor raises; release it to stop.
8		Rotation Motor Down	Press and hold this key, and the rotation motor lowers; release it to stop.
9		Back Motor Up	Press and hold this key, and the back motor raises; release it to stop.
10		Leg Motor Up	Press and hold this key, and the leg motor raises; release it to stop.

11		One-touch Flat	Press and release this key, and the motor runs to the preset "Flat" position.
12		Leg Motor Down	Press and hold this key, and the leg motor lowers; release it to stop.
13		Back Motor Down	Press and hold this key, and the back motor lowers; release it to stop.
14		Sit-up Motor Up	Press and hold this key, and the sit-up motor raises; release it to stop.
15		Sit-up Motor Down	Press and hold this key, and the sit-up motor lowers; release it to stop.
16		Massage On/Off	Press and release this key to start/stop the two vibrators.
17		Massage Timer	Press and release this key to cycle through the massage timer [10min→20min→30min→10min].
18		Massage Mode	Press and release this key to cycle through the massage modes [Off→Mode 1→Mode 2→Mode 3→Off].
19		Leg Intensity	Press and release this key to cycle the leg vibrator intensity through four modes.
20		Light	Press and release this key to turn the LED strip on/off.
21		Back Intensity	Press and release this key to cycle the back vibrator intensity through four modes.

14. Four-Motor – Tilt (B43)

#	Icon	Key Definition	Function Description
1		Zero Gravity	Press and release this key, and the motor runs to the preset "Zero Gravity" position.
2		Cinema Mode	Press and release this key, and the motor runs to the preset "Cinema Mode" position.
3		Snoring Intervention	Press and release this key, and the motor runs to the preset "Snoring Intervention" position.
4		Sleep Aid	Press and release this key, and the bed runs the sleep aid sequence, with the motors and vibrators operating as preset.
5		Memory 1	Press and hold this key for about 5 seconds to set the current motor position as "Memory 1". Briefly press and release this key, and the motor runs to the preset "Memory 1" position.
6		Memory 2	Press and hold this key for about 5 seconds to set the current motor position as "Memory 2". Briefly press and release this key, and the motor runs to the preset "Memory 2" position.
7		Forward Tilt On	Press and hold this key, and the forward tilt motor raises; release it to stop.
8		Forward Tilt Off	Press and hold this key, and the forward tilt motor lowers; release it to stop.

9		Back Motor Up	Press and hold this key, and the back motor raises; release it to stop.
10		Leg Motor Up	Press and hold this key, and the leg motor raises; release it to stop.
11		One-touch Flat	Press and release this key, and the motor runs to the preset "Flat" position.
12		Leg Motor Down	Press and hold this key, and the leg motor lowers; release it to stop.
13		Back Motor Down	Press and hold this key, and the back motor lowers; release it to stop.
14		Backward Tilt On	Press and hold this key, and the backward tilt motor raises; release it to stop.
15		Backward Tilt Off	Press and hold this key, and the backward tilt motor lowers; release it to stop.
16		Massage On/Off	Press and release this key to start/stop the two vibrators.
17		Massage Timer	Press and release this key to cycle through the massage timer [10min→20min→30min→10min].
18		Massage Mode	Press and release this key to cycle through the massage modes [Off→Mode 1→Mode 2→Mode 3→Off].
19		Leg Intensity	Press and release this key to cycle the leg vibrator intensity through four modes.
20		Light	Press and release this key to turn the LED strip on/off.
21		Back Intensity	Press and release this key to cycle the back vibrator intensity through four modes.

15. Five-Motor Basic (B51)

#	Icon	Key Definition	Function Description
1		Zero Gravity	Press and release this key, and the motor runs to the preset "Zero Gravity" position.
2		Snoring Intervention	Press and release this key, and the motor runs to the preset "Snoring Intervention" position.
3		Cinema Mode	Press and release this key, and the motor runs to the preset "Cinema Mode" position.
4		Memory 1	Press and hold this key for about 5 seconds to set the current motor position as "Memory 1". Briefly press and release this key, and the motor runs to the preset "Memory 1" position.
5		Head Motor Up	Press and hold this key, and the head motor raises; release it to stop.
6		Head Motor Down	Press and hold this key, and the head motor lowers; release it to stop.
7		Waist Motor Up	Press and hold this key, and the waist motor raises; release it to stop.
8		Waist Motor Down	Press and hold this key, and the waist motor lowers; release it to stop.

9		Back Motor Up	Press and hold this key, and the back motor raises; release it to stop.
10		Leg Motor Up	Press and hold this key, and the leg motor raises; release it to stop.
11		One-touch Flat	Press and release this key, and the motor runs to the preset "Flat" position.
12		Leg Motor Down	Press and hold this key, and the leg motor lowers; release it to stop.
13		Back Motor Down	Press and hold this key, and the back motor lowers; release it to stop.
14		Hip Motor Up	Press and hold this key, and the hip motor raises; release it to stop.
15		Hip Motor Down	Press and hold this key, and the hip motor lowers; release it to stop.
16		Massage On/Off	Press and release this key to start/stop the two vibrators.
17		Massage Timer	Press and release this key to cycle through the massage timer [10min→20min→30min→10min].
18		Massage Mode	Press and release this key to cycle through the massage modes [Off→Mode 1→Mode 2→Mode 3→Off].
19		Leg Intensity	Press and release this key to cycle the leg vibrator intensity through four modes.
20		Light	Press and release this key to turn the LED strip on/off.
21		Back Intensity	Press and release this key to cycle the back vibrator intensity through four modes.

16. Five-Motor – Storage (B52)

#	Icon	Key Definition	Function Description
1		Zero Gravity	Press and release this key, and the motor runs to the preset "Zero Gravity" position.
2		Snoring Intervention	Press and release this key, and the motor runs to the preset "Snoring Intervention" position.
3		Cinema Mode	Press and release this key, and the motor runs to the preset "Cinema Mode" position.
4		Memory 1	Press and hold this key for about 5 seconds to set the current motor position as "Memory 1". Briefly press and release this key, and the motor runs to the preset "Memory 1" position.
5		Head Motor Up	Press and hold this key, and the head motor raises; release it to stop.
6		Head Motor Down	Press and hold this key, and the head motor lowers; release it to stop.
7		Waist Motor Up	Press and hold this key, and the waist motor raises; release it to stop.
8		Waist Motor Down	Press and hold this key, and the waist motor lowers; release it to stop.

9		Back Motor Up	Press and hold this key, and the back motor raises; release it to stop.
10		Leg Motor Up	Press and hold this key, and the leg motor raises; release it to stop.
11		One-touch Flat	Press and release this key, and the motor runs to the preset "Flat" position.
12		Leg Motor Down	Press and hold this key, and the leg motor lowers; release it to stop.
13		Back Motor Down	Press and hold this key, and the back motor lowers; release it to stop.
14		Storage Motor Up	Press and hold this key, and the storage motor raises; release it to stop.
15		Storage Motor Down	Press and hold this key, and the storage motor lowers; release it to stop.
16		Massage On/Off	Press and release this key to start/stop the two vibrators.
17		Massage Timer	Press and release this key to cycle through the massage timer [10min→20min→30min→10min].
18		Massage Mode	Press and release this key to cycle through the massage modes [Off→Mode 1→Mode 2→Mode 3→Off].
19		Leg Intensity	Press and release this key to cycle the leg vibrator intensity through four modes.
20		Light	Press and release this key to turn the LED strip on/off.
21		Back Intensity	Press and release this key to cycle the back vibrator intensity through four modes.

17. Five-Motor - Rotation (B53)

#	Icon	Key Definition	Function Description
1		Zero Gravity	Press and release this key, and the motor runs to the preset "Zero Gravity" position.
2		Snoring Intervention	Press and release this key, and the motor runs to the preset "Snoring Intervention" position.
3		Cinema Mode	Press and release this key, and the motor runs to the preset "Cinema Mode" position.
4		Memory 1	Press and hold this key for about 5 seconds to set the current motor position as "Memory 1". Briefly press and release this key, and the motor runs to the preset "Memory 1" position.
5		Parallel Motor Up	Press and hold this key, and the parallel motor raises; release it to stop.
6		Parallel Motor Down	Press and hold this key, and the parallel motor lowers; release it to stop.
7		Rotation Motor Up	Press and hold this key, and the rotation motor raises; release it to stop.
8		Rotation Motor Down	Press and hold this key, and the rotation motor lowers; release it to stop.

9		Back Motor Up	Press and hold this key, and the back motor raises; release it to stop.
10		Leg Motor Up	Press and hold this key, and the leg motor raises; release it to stop.
11		One-touch Flat	Press and release this key, and the motor runs to the preset "Flat" position.
12		Leg Motor Down	Press and hold this key, and the leg motor lowers; release it to stop.
13		Back Motor Down	Press and hold this key, and the back motor lowers; release it to stop.
14		Sit-up Motor Up	Press and hold this key, and the sit-up motor raises; release it to stop.
15		Sit-up Motor Down	Press and hold this key, and the sit-up motor lowers; release it to stop.
16		Massage On/Off	Press and release this key to start/stop the two vibrators.
17		Massage Timer	Press and release this key to cycle through the massage timer [10min→20min→30min→10min].
18		Massage Mode	Press and release this key to cycle through the massage modes [Off→Mode 1→Mode 2→Mode 3→Off].
19		Leg Intensity	Press and release this key to cycle the leg vibrator intensity through four modes.
20		Light	Press and release this key to turn the LED strip on/off.
21		Back Intensity	Press and release this key to cycle the back vibrator intensity through four modes.

三、 Technical Specifications

Top Cover Color	Matte Black
Bottom Cover Color	Matte Black
Battery Cover Color	Matte Black
Key Type	Black Translucent Silicone
Material	ABS
Battery Specification	2*AAA 1.5V
Operating Current	12mA
Sleep Current	16uA

Operating Environment	Temperature 0° C~50° C, Humidity 20%~75%
Storage Environment	Temperature -10° C~60° C, Humidity 0%~80%
Certification	

四、 Version Information

Hardware Version	(P1)BYKQ(H)A01
Software Version	(P1)BYKQ(S)A0

FCC Warning:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.