



Instruction Manual

Wireless Charging Alarm Clock


Model: DS2266




Thank you for purchasing DreamSky Wireless Charging Alarm Clock. To ensure the best product performance, please read this user manual in detail and retain it for future reference.

Questions? Contact Customer Service Center at info@dreamsky4u.com

Overview

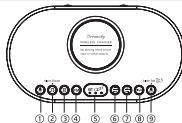

1. Press to enter alarm volume setting
2. Press to enter alarm sound setting
3. Press to set auto off timer for radio and Bluetooth
Press and hold to turn off timer
4. Press to turn on/off the FM radio
5. Press to turn on the Bluetooth
Press and hold to turn off the Bluetooth
Press to snooze while alarm goes off
6. Press to decrease the value
7. Press to increase the value
8. Press to enter time setting
9. Press to enable/disable the alarm
Press and hold to enter alarm setting

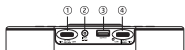

1. Scroll to adjust Bluetooth and radio volume
2. Power input port

1

3. USB charging port
4. Scroll to adjust the display brightness

Package Content

- 1 x Wireless Charging Alarm Clock
- 1 x Power Adapter (US Standard, 100V-240V Main Supply Applicable)

1 x User Manual

Getting Started

1. (Optional) Insert 2 X AAA alkaline batteries (not included) into the battery compartment.
Follow the polarity (+/-) diagram in the battery compartment.



2. Power source plugged in



2

Note: This clock is AC adapter powered. Time will not display with battery power only. Batteries

can be used to preserve the clock settings in the event of power failure so you don't need to reset the clock when the main power is back.

Wireless Charging

Please first make sure your phone is wireless charging compatible. Then place it on the circular wireless charging area, screen facing up. The charging icon ⚡ will light up to indicate the charging status.

• **The icon ⚡ shows red and stays lit:** Cell phone is charging normally.

• **The icon ⚡ blinks or doesn't show up:** Cell phone is not charging. Please place it on the correct charging area with the screen facing up.



Note:

1. Remove phone case thicker than 5mm while charging.
2. Magnetic, electronic device (such as remote controller, lamp etc.) or cellphone without wireless charging function placed on the charging pad will make the icon ⚡ flash.

3

3. It usually takes 4-6 hours to get the cellphone fully charged. Please check your cell phone if it is fully charged.

Time Setting

1. Press the [TIME] button. The 12H or 24H digits will flash on the display. Then press the ⏮ or ⏭ button to adjust the time format.



2. Press the [TIME] button again. The hour digits will flash on the display. Then press the ⏮ or ⏭ button to adjust the hour (hold for fast adjustment).



3. Press the [TIME] button again. The minute digits will flash on the display. Then press the ⏮ or ⏭ button to adjust the minute (hold for fast adjustment).



4. Press the [TIME] button once more to save and exit setting mode.

Note:

It will automatically exit TIME SET MODE and save

4

the current setting if no button is pressed within 8 seconds.

Alarm Setting

1. Press and hold the ⏻ button for 2 seconds. The hour digits will flash on the display. Release the button, then press the ⏮ or ⏭ button to adjust the hour (hold for fast adjustment).



2. Press the ⏻ button again. The minute digits will flash on the display. Then press the ⏮ or ⏭ button to adjust the minute (hold for fast adjustment).



3. Press the ⏻ button once more to save and exit setting mode.

Note:

The clock will automatically exit ALARM SET MODE and save the current setting if no button is pressed within 8 seconds.

Adjust the Alarm Sound



5

Press the 🎵 button. The alarm sound code (S01, S02, etc.) will appear on the display. Then press the ⏮ or ⏭ button to adjust the sound (hold for fast adjustment). 9 alarm sounds optional.

Note: (1) It will automatically exit ALARM SOUND SET MODE and save the current setting if no button is pressed within 5 seconds.

(2) If S09 (FM radio) is selected, it will play the last station listened to when alarm goes off.

Adjust the Alarm Volume



Press the 🔊 button. The alarm volume code (U08, U09, etc.) will appear on the display. Then press the ⏮ or ⏭ button to adjust the volume (hold for fast adjustment). 16 volume levels optional.

Note:

It will automatically exit ALARM VOLUME SET MODE and save the current setting if no button is pressed within 5 seconds.

Turn OFF the Alarm for One Day

When the alarm goes off, you can press **any button except SNOOZE** to turn it off for the day. The alarm will then go off again at the set time the next day. If no button is pressed, the alarm will last for 30 minutes and then shut off automatically.

6



Note: If you accidentally press the **BT/ZZZ** button and enter snooze mode, you can still press any other button to exit snooze mode and shut it off for the day.

Snooze Mode

When the alarm goes off, press the **BT/ZZZ** button to enter snooze mode. The **Zz** icon will blink on the display, and the alarm will go off again 9 minutes later.

To Disable the Alarm

Press the **Alarm Off** button to disable the alarm. The bell icon will disappear from the display, indicating that the alarm is disabled.



Adjust the Brightness

Scroll the DIMMER wheel to adjust the display brightness from 0% to 100%.



Adjust the Bluetooth/Radio Volume

Scroll the BT/FM VOLUME wheel to adjust the Bluetooth or radio volume from U01 to U16.



FM Radio

Tip: For best reception, please untie and extend the antenna cord.

1. Press the **FM** button to turn on the FM radio.
2. Press the **FM** or **FM** to adjust the frequency. (hold to auto-scan)
3. Press the **FM** button to turn off the FM radio.

Bluetooth

Tip: Pairing your phone with the clock via Bluetooth will synchronize the time automatically. Some phones may pop up a window asking for access to messages. If this happens, please allow access so the time can sync.

1. Press the **BT/ZZZ** button to turn on Bluetooth. The **BT** icon will flash on the display, indicating that the clock is in pairing mode.
2. Turn on the Bluetooth on your phone and select "DS2266" on the Bluetooth list to initiate pairing.

** If pairing successfully, a voice prompt "connected" will be played and the Bluetooth icon will remain still.*

3. Press the **BT/ZZZ** button to play or pause audio.

4. Press the **FM** or **FM** button to play the previous or next track.
5. Press and hold the **BT/ZZZ** button for 2 seconds to turn off the Bluetooth.

Clear the Pairing History

Press and hold the **FM** button for 2 seconds. The clock will disconnect from the last paired device and enter pairing mode. A voice prompt will say "disconnected," and the Bluetooth icon will flash on the display.

Set Countdown Timer

1. With Bluetooth or FM radio on, press the **FM** button to turn on the countdown timer. The countdown time 120/110(minutes) ... will show.
2. Press the **FM** button repeatedly to set the countdown time.

** In normal time display, press the **FM** button once to check the remaining countdown time.*

3. Press and hold the **FM** button for 2 seconds to turn off the timer. The **FM** icon will disappear.

USB Port

There is a USB port at the back of the clock to help you charge your cellphone or other electronic gadgets.



Troubleshooting

1. Alarm doesn't go off at the set time?

- Check if the alarm is set to AM or PM time;
- Check if the alarm is turned on (**Alarm On** icon displays on the screen).

2. Display doesn't light up?

- Check if the power connection is loose;
- Try another working outlet;
- Slide the dimmer wheel to a higher setting in case the display is too dark to see.

3. How to set radio as alarm?

- Enter the alarm sound setting and select S09 (see **Adjust the Alarm Sound** part for details).

4. How to set radio alarm to go off with the station I prefer?

- If radio (S09) is selected as alarm sound, it will go off with the last station you listened to.

For example, if 90.5 MHz is the last station you listened to, when alarm goes off, it will play the 90.5 MHz station. If you change radio station to 104.3 MHz, when alarm goes off, it will play the 104.3 MHz station.

5. The clock time does not sync with my phone after Bluetooth pairing.

- Find Bluetooth device DS2266 on your phone and proceed to forget this device. Then scan and

re-pair with DS2266. If a pop-up window asks for access to your phone messages, please select **Allow** to access. (see **Bluetooth** part for details).

** If the issue remains, please unplug the clock and try the above steps again.*

6. The radio signal is weak or sound is unclear.

- Many electronic devices in your home can emit electromagnetic interference. Please stay away from interference sources such as irons, computers, microwaves, and so on.
- Please put the clock near open air for better reception.

Our Warranty

30 days money back for any reason

Within 30 days after the date of purchase, you can return your undamaged product to Amazon and get a full refund for any reason.

12 months replacement for quality-related issue

Within 12 months after the date of purchase, we provide replacement for quality-related issues.

Kind reminder: be sure to use your products per instructions.

Lifetime user support

If you have any concerns, questions or need assistance while using this product, please contact us by email:

info@dreamsky4u.com

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/ TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, Human proximity to the antenna shall not be less than 20cm(8 inches)during normal operation.