


Installation

Installation


1. Turn Off Power to Heating/Cooling System

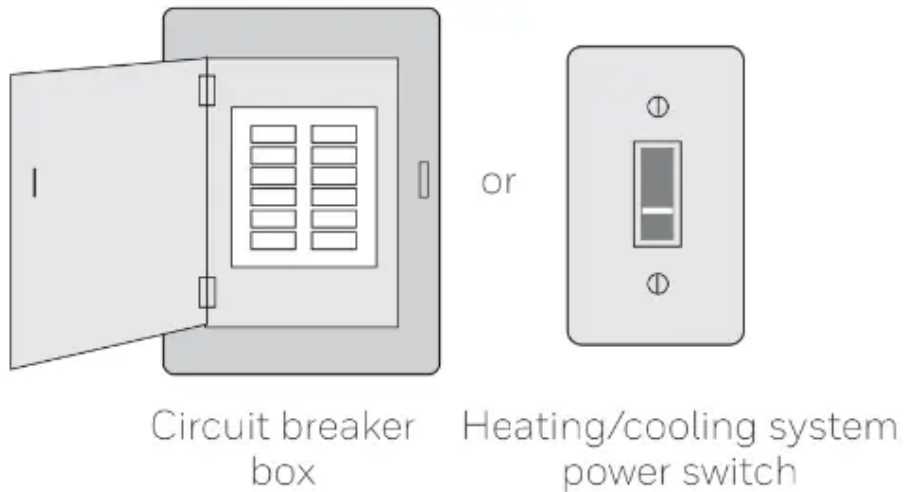

2. Remove Old Thermostat

Remove old thermostat but leave wallplate with wires attached.

Caution: If you have an older thermostat with a sealed mercury tube, turn to page 2 for proper disposal instructions.

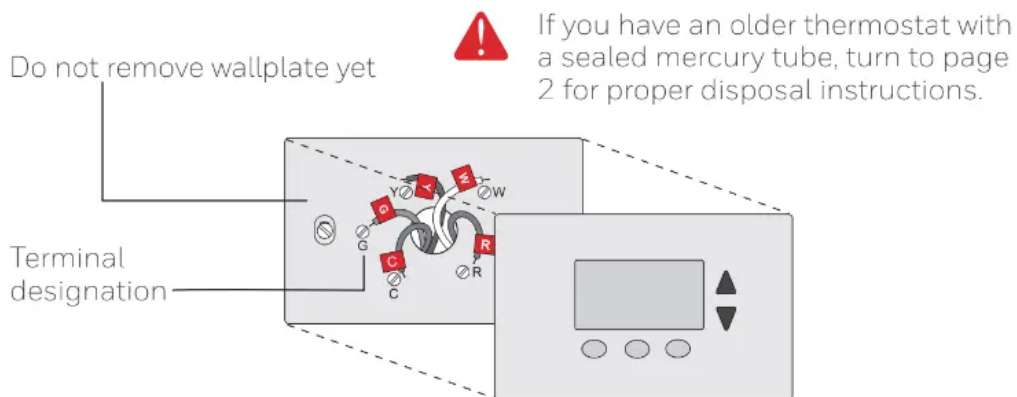


3. Label Wires with Tags

Label the wires using the supplied wire labels as you disconnect them.


Wiring Labels			Étiquettes de fils			Rótulos para los cables			
Apply these wiring labels to each wire with the appropriate terminal designation as you remove it from the existing thermostat.			Lorsque vous retirez les fils des bornes du thermostat existant, collez ces étiquettes sur chaque fil correspondant à la lettre de la borne.			Coloque estos rótulos, con la designación de las terminales, en cada cable al remover los cables del termostato actual.			
B	B	Y2	Y2	C	C	E	E	F	F
G	G	H	H	L	L	O	O	P	P
R	R	RC	RC	RH	RH	T	T	U	U
VVR	VVR	W	W	W1	W1	W2	W2	W3	W3
X	X	X1	X1	X2	X2	Y	Y	Y1	Y1

69-9623EFS • 5-03 • Printed in U.S.A. www.honeywellhome.com

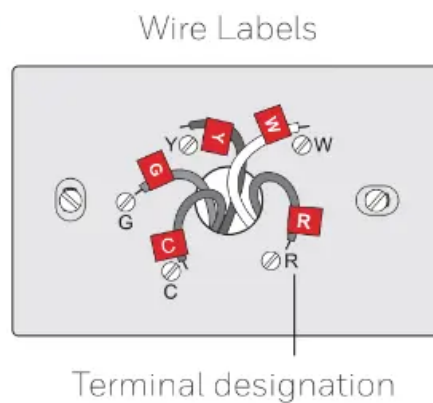

4. Separate Wallplate from New Thermostat


Remove wallplate from the new thermostat and mount onto wall.

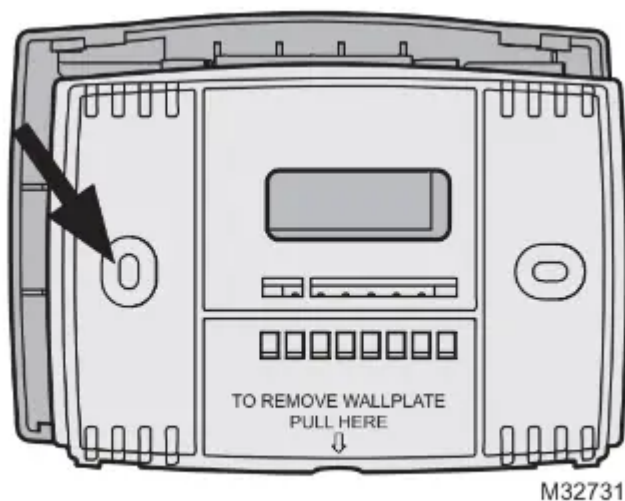

Wallplate

5. Mount Wallplate

Mount the new wallplate using the included screws and anchors.

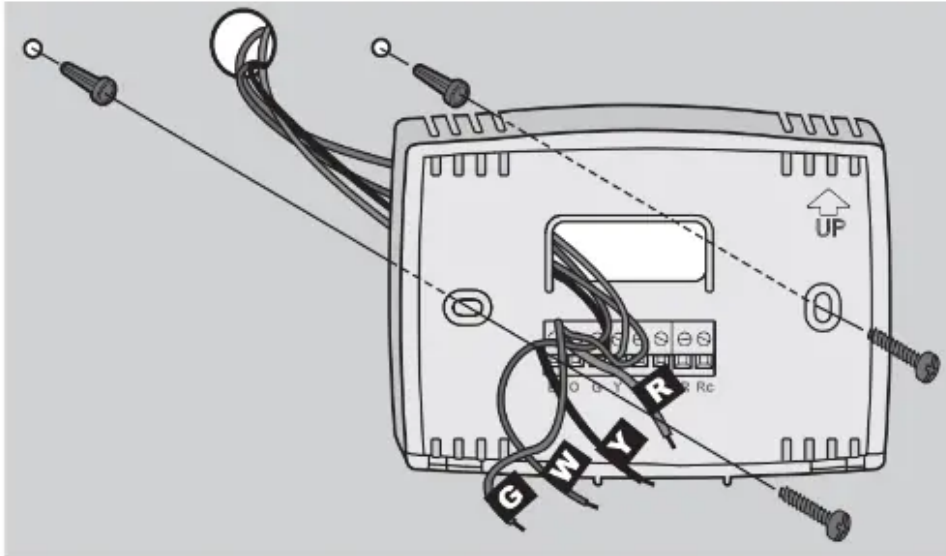

M32714


Drill 3/16-in. holes for drywall

Drill 3/32-in. holes for plaster

6. Connect Wires

Simply match wire labels.

If labels do not match letters on the thermostat, check “Alternate Wiring (Conventional Systems)” on page 6 and connect to terminal as shown (see notes, below).

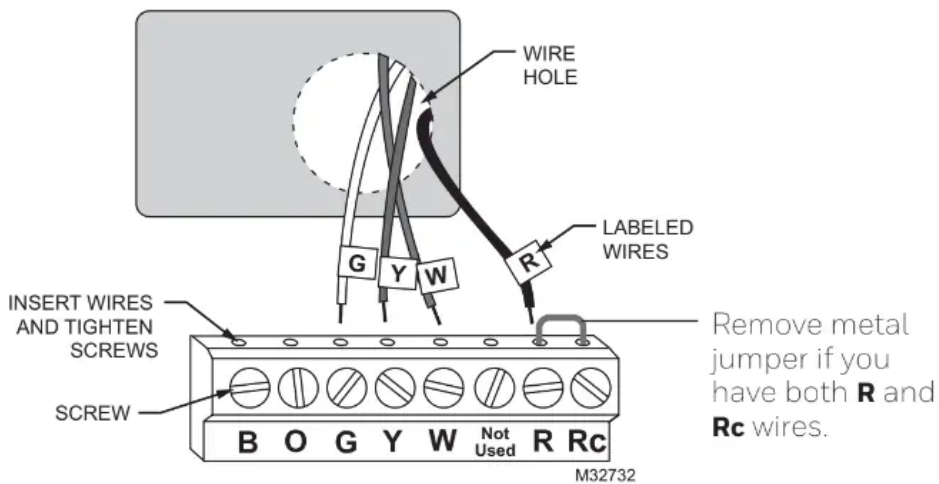


Maximum load: 1 A @ 24 Vac, 50/60HZ per output.

We are here to help. Call 1-800-468-1502 for wiring assistance.

Alternate Wiring (Conventional Systems)


If labels do not match letters on the thermostat, check the chart below and connect to terminal as shown here (see notes, below).

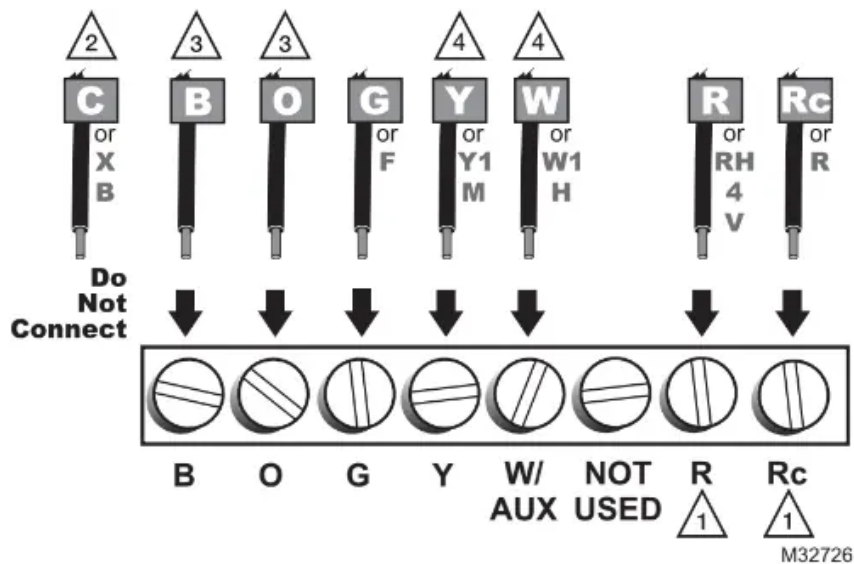

1. If wires will be connected to both R and Rc terminals, remove metal jumper.
2. Do not use C or X. Wrap bare end of wire with electrical tape.
3. If you have a heat pump without auxiliary/backup heat connect O or B, not both. If you do not have a heat pump, do not connect B. Wrap bare end of wire with electrical tape.
4. Place a jumper (piece of wire) between Y and W if you are using a heat pump without auxiliary/backup heat.


Alternate Wiring (Heat Pump)

If labels do not match letters on thermostat

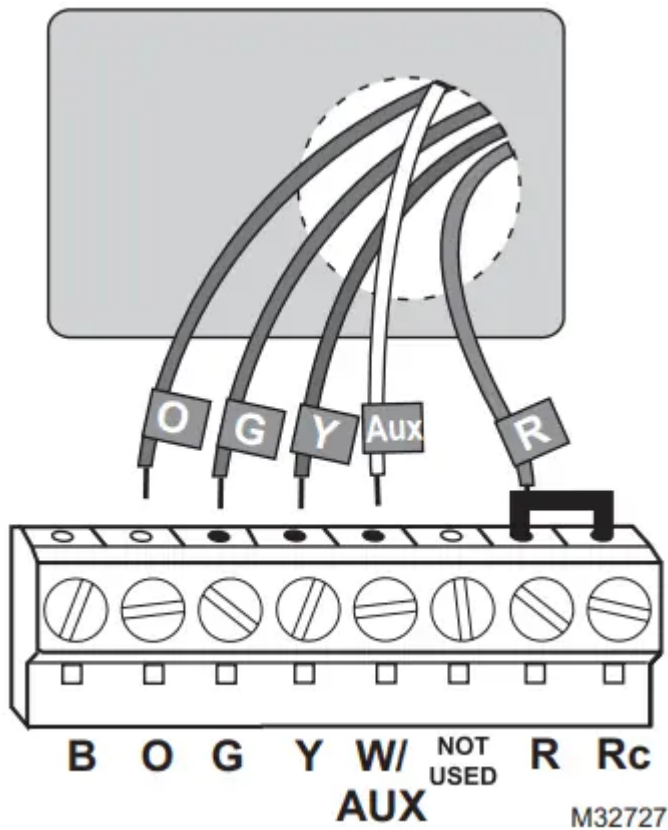

Alternate wiring (for heat pumps with auxiliary or backup heat only)

If labels do not match letters on the thermostat, check the chart below and connect to terminal as shown here (see notes, below).

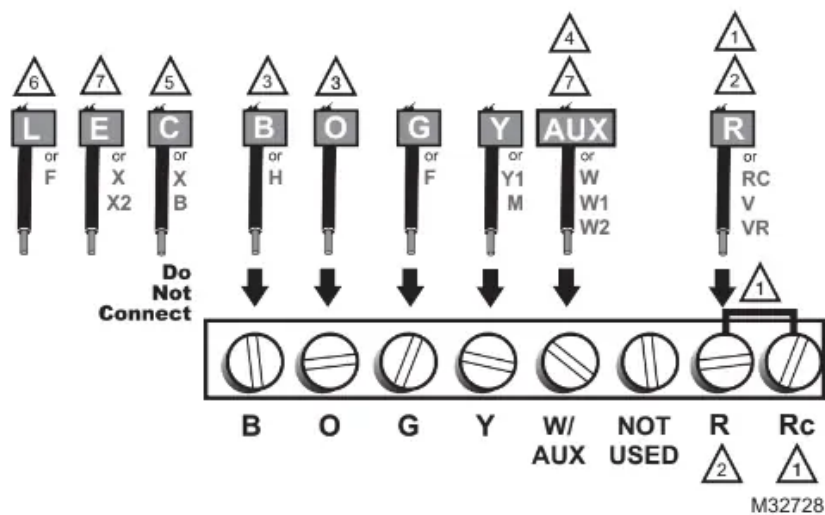


1. Leave metal jumper in place, connecting R & Rc terminals.
2. If your old thermostat had both V and VR wires, stop now and contact a qualified contractor for help.



3. If your old thermostat had separate O and B wires, wrap the B wire in electrical tape and do not connect.
4. If your old thermostat had Y1, W1 and W2 wires, stop now and contact a qualified contractor for help.
5. Do not use C or X wire. Do not use B wire if you already have O wire. Wrap bare end of wire with electrical tape.
6. Do not use L wire. Wrap bare end of wire with electrical tape.
7. If your old thermostat had E and Aux wires (or alternate wires), connect both wires to Aux terminal.


7. Install Batteries

Install two AAA alkaline batteries.

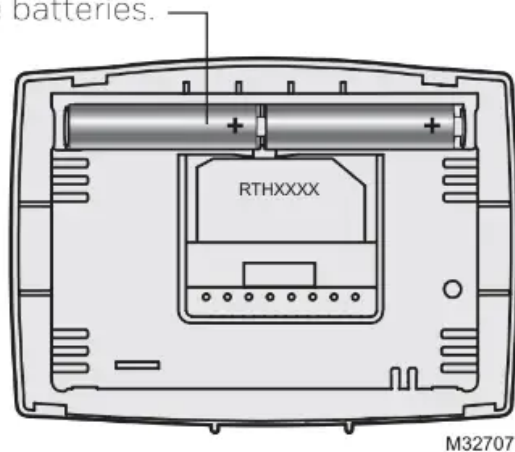

Back of thermostat

8. Set Fan Operation Switch

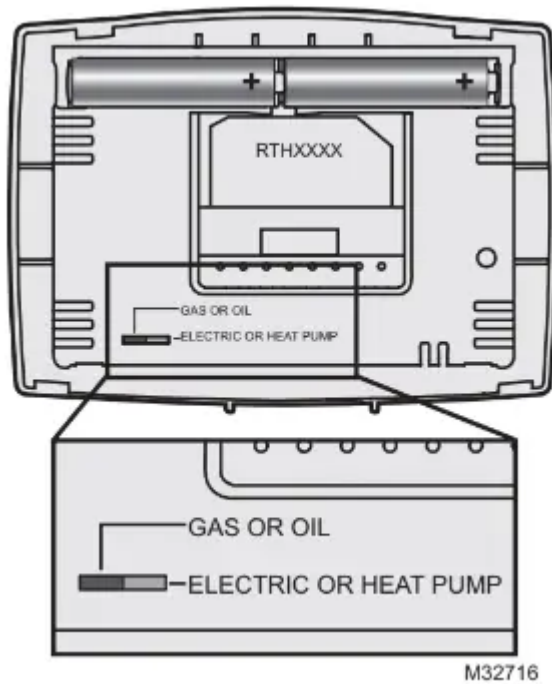


Move the switch to the proper setting:

Gas or Oil: For gas or oil heating systems, leave the fan operation switch in this factory-set position (for systems that control the fan in a call for heat).

Electric or Heat Pump: Change the switch to this setting for heat pump or electric heat systems. (This setting is for systems that allow the thermostat to control the fan in a call for heat, if a fan wire is connected to the G terminal.)


9. Install Thermostat Onto Wallplate

Install thermostat onto the wallplate on the wall.

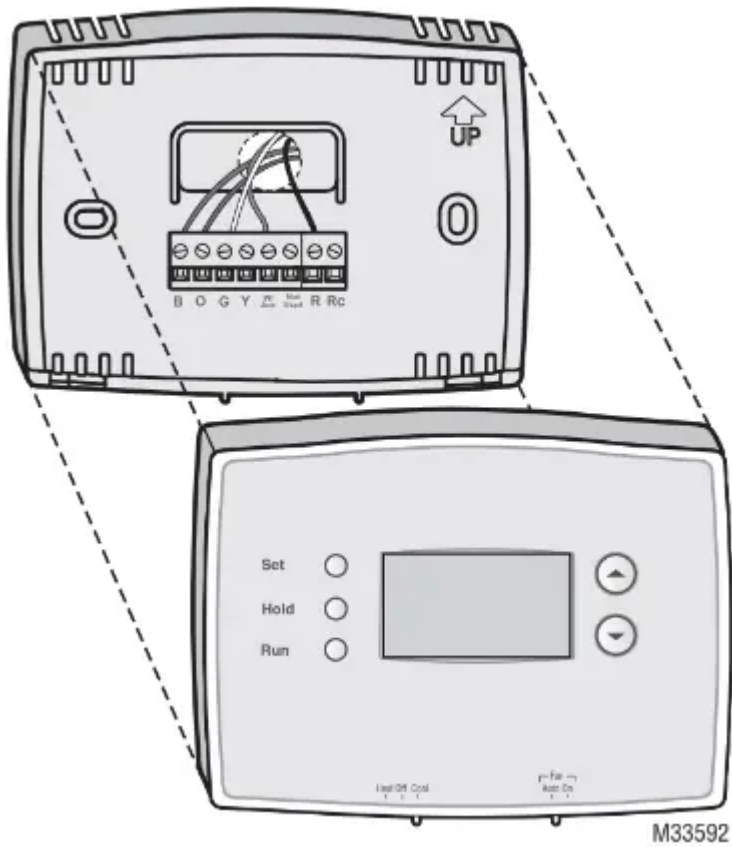

10. Turn Power Back On

Turn the power back on to the heating/cooling system.

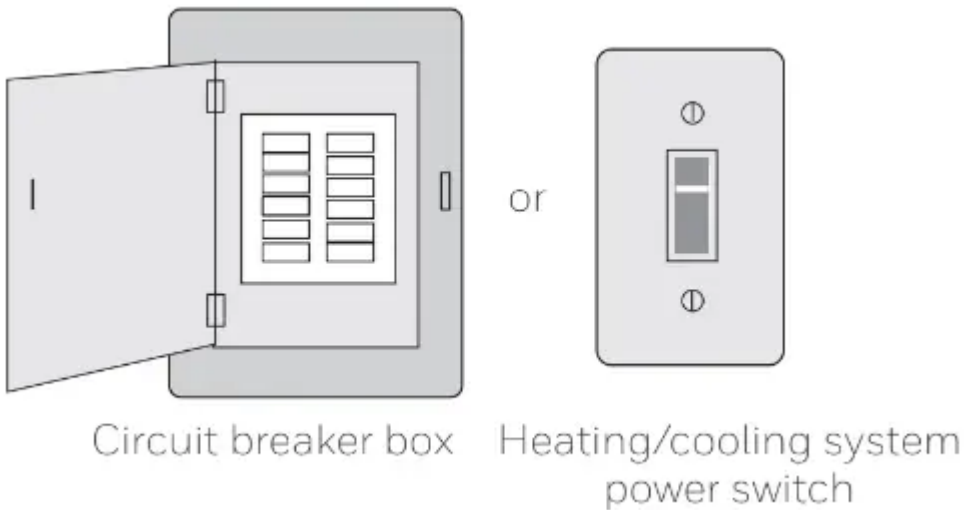

11. If Your System Type is...

If your system type is:

- Single Stage Heat and Cool



- Heat Only or Cool Only

Congratulations, you're done!

If your system type is:

- Heat Pump* with Backup Heat

Continue with Advanced Installation to match your thermostat to your system type.


Heat Pump—an air conditioner that provides cooling in the summer, and also runs in reverse in the winter to provide heating.

If you are not sure of your system type or if you have other questions, call us toll-free at 1-800-468-1502.

This thermostat works on 24 volt or 750 mV systems. It will NOT work on multi- stage conventional systems.


Advanced Installation

Enter System Setup

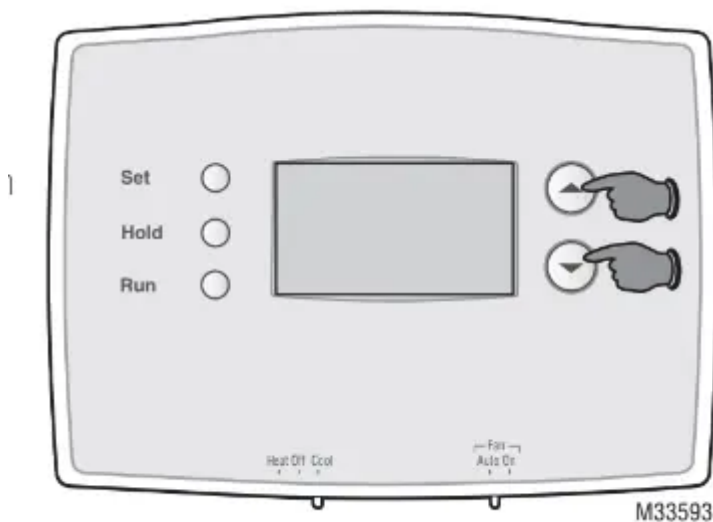

To enter system setup, press and hold both the ▲ and ▼ buttons until the display changes (approximately 5 seconds).

Changing Settings

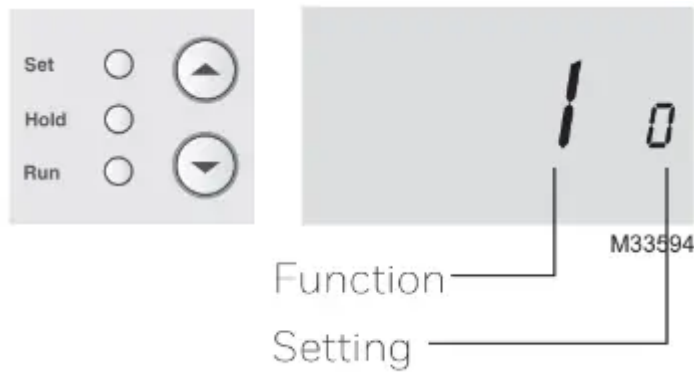

1. Press the ▲ or ▼ button to change the setting.
2. Press the ▲ and ▼ buttons simultaneously for one second to advance to the next function.
3. Press the RUN button to exit and save settings.

NOTE: If you do not press any button for 60 seconds while you are in the setup menu, the thermostat automatically saves any changes made and exits the menu.

Function	Description Press the ▲ or ▼ button to	Setting
1	select system type	0 Heating & cooling: Gas, oil or electric heating with central air conditioning or heat pump without auxiliary/back-up heat. 1 Heat pump with auxiliary/backup heat: Outside compressor provides both heating and cooling.
5	select your heating system and optimize its operation	5 Gas or oil furnace: Use this setting if you have a standard gas or oil furnace that is less than 90% efficient. 6 Electric furnace: Use this setting if you have any type of electric heating system. 3 Heat pump, hot water or high-efficiency furnace: Use this setting if you have a hot water system or a gas furnace of greater than 90% efficiency. 2 Gas/oil steam or gravity system: Use this setting if you have a steam or gravity heat system.
13	select Early Start	1 On 0 Off
14	select Fahrenheit or Celsius temperature display	0 Fahrenheit temperature display (°F) 1 Celsius temperature display (°C)
15*	select Compressor Protection settings	1 On 0 Off
20	select clock display	0 12-hour display 1 24-hour display
21	select Change Filter Timer	0 Off 1 30 days 2 90 days 3 6 months 4 9 months 5 1 year
40	restore program schedule to default settings	0 Off 1 On: Program schedule default settings are listed on page 12.

Compressor Protection: This feature forces the compressor to wait approximately 5 minutes before restarting, to prevent equipment damage. During the wait time, the message "Cool On" or "Heat On" is displayed on screen.

About Your New Thermostat

Your new Resideo thermostat has been designed to give you many years of reliable service and easy-to-use, push-button climate control.

- Backlit display is easy to read
- Displays ambient (measured) temperature at all times
- One-touch access to setpoint temperature
- Preset program settings
- Temporary and permanent override of schedule
- Early start ensures the right temperature at the right time
- Built-in compressor protection

Thermostat Controls


Set: Press to set time/day/schedule.

Hold: Press to override programmed temperature control.

Run: Press to resume program schedule.

System Switch is used to control your heating or cooling system.

- **Heat:** Heating system control.
- **Off:** All systems off.
- **Cool:** Cooling system control.

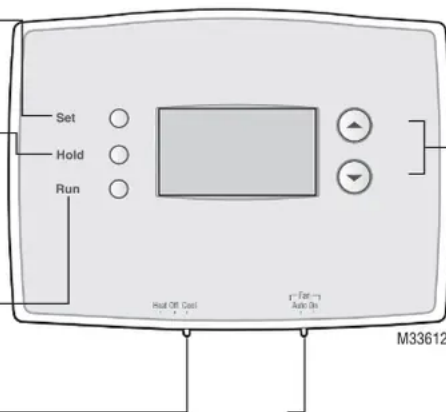

Temperature adjustment

Press the up or down buttons until you reach the desired temperature.

NOTE: Make sure the **SYSTEM** switch is set to the system you want to control (Heat or Cool).

Fan Switch is used to control your fan.

In "Auto" mode, the fan runs only when the heating or cooling system is on.

If set to "On," the fan runs continuously.

Display Screen

Setpoint indicator

Appears when the setpoint temperature is displayed.

Current day/time

(see page 12)

Current program period

Wake/Leave/Return/Sleep
(see pages 12–14)

System status

Cool on: Cooling system is on.

Heat on: Heating system is on.

When Cool On is flashing, compressor protection is engaged (see page 15).

Low battery warning

(see page 16)




Temperature


The ambient (measured) temperature is normally displayed. To view the setpoint temperature, press the Up or Down button once. The setpoint temperature will appear for five seconds.

Programming and Operation

Set the Time and Day

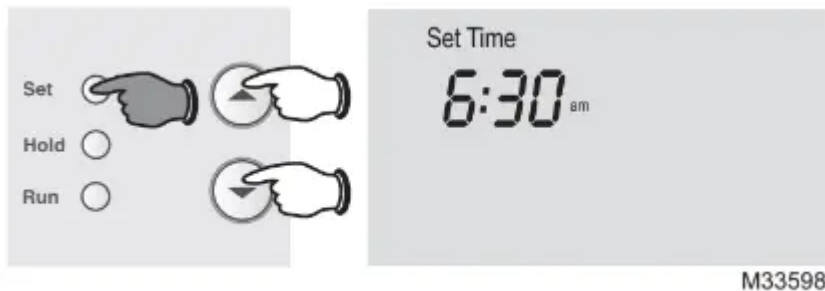

1. Press the SET button, then press ▲ or ▼ to set the clock time.
2. Press the SET button, then press ▲ or ▼ to select the day of the week.
3. Press RUN to save & exit.

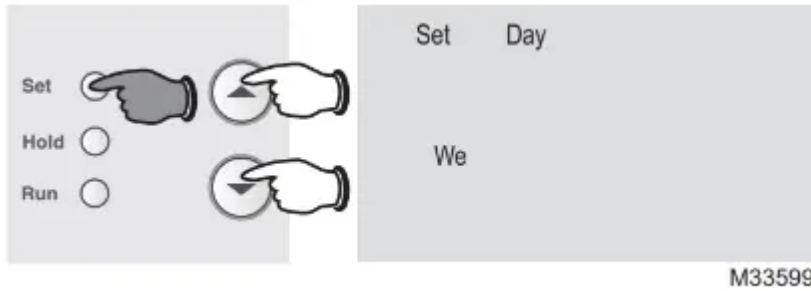

NOTE: If the clock flashes, the thermostat will follow your settings for the Monday “Wake” time period until you reset the time and day.

Program Schedule

You can program four time periods each day, with different settings for weekdays and weekends. We recommend the pre-set settings (shown in the table below), since they can reduce your heating/cooling expenses.

	Heat	Cool
Wake (6:00 am)	70°	78°
Leave (8:00 am)	62°	85°
Return (6:00 pm)	70°	78°
Sleep (10:00 pm)	62°	82°

Wake - Set to the time you awaken and the temperature you want during the morning, until you leave for the day.

Leave - Set to the time you leave home and the temperature you want while you are away (usually an energy- saving level).


Return - Set to the time you return home and the temperature you want during the evening, until bedtime.

Sleep - Set to the time you go to bed and the temperature you want overnight usually an energy-saving level).

NOTE: Leave and Return periods can be canceled on weekends.

To Adjust Program Schedules (RTH2510)

1. Press SET until Set Schedule is displayed.
2. Press ▲ or ▼ to set your Wake time for the day displayed, then press SET.
3. Press ▲ or ▼ to set the temperature for this time period, then press SET.
4. Set time and temperature for the next time period (Leave). Repeat steps 2 and 3 for each day's time period.
5. Press RUN to save & exit.

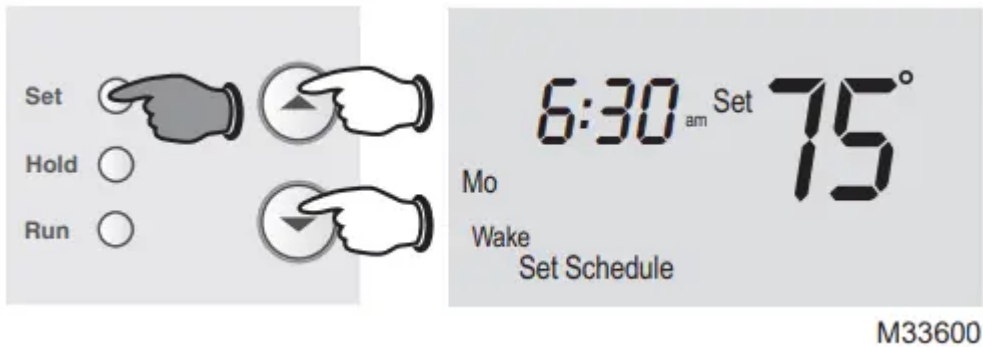

NOTE: Make sure the thermostat is set to the system you want to program (Heat or Cool).


To Adjust Program Schedules (RTH2410)



1. Press SET until Set Schedule is displayed.
2. Press ▲ or ▼ to set your Wake time (Mo-Fr), then press SET.
3. Press ▲ or ▼ to set the temperature for this time period, then press SET.
4. Set time and temperature for the next time period (Leave). Repeat steps 2 and 3 for each weekday time period.
5. Press SET to set weekend time periods (Sa & Su), then press RUN to save & exit.


NOTE: Make sure the thermostat is set to the system you want to program (Heat or Cool).

Program Schedule Override (Temporary)

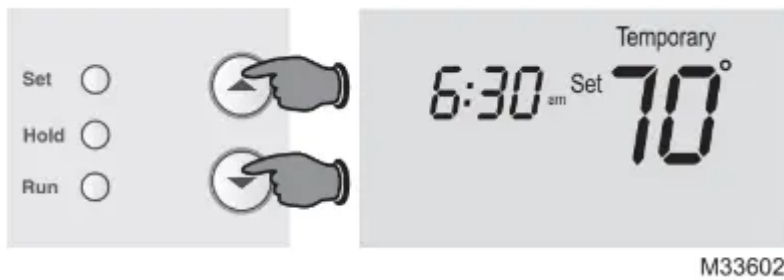

Press ▲ or ▼ to immediately adjust the temperature. This will temporarily override the temperature setting for the current time period.

"Temporary" will appear on the display and the current program period will flash.

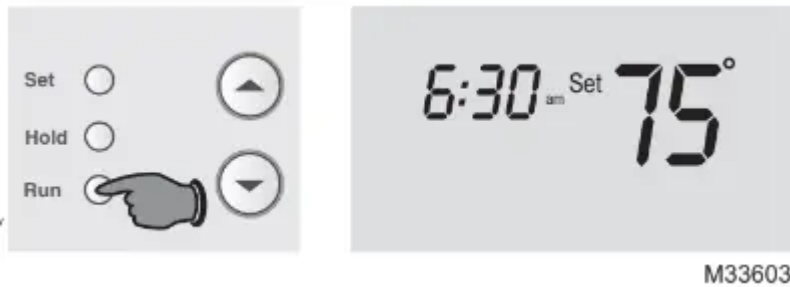


The new temperature will be maintained only until the next programmed time period begins (see page 12).

To cancel the temporary setting at any time, press RUN.


NOTE: Make sure the thermostat is set to the system you want to control heat or cool).

Program Schedule Override (Permanent)

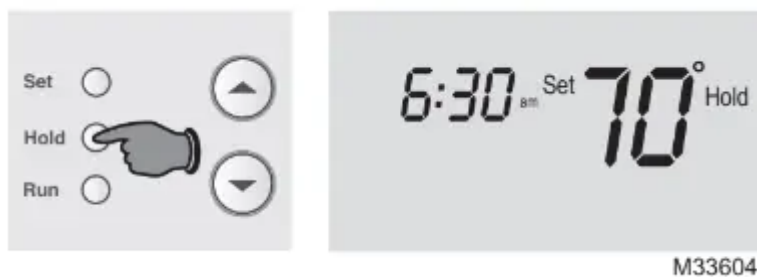

Press HOLD to permanently adjust the temperature. This will override the temperature settings for all time periods.

The "Hold" feature turns off the program schedule and allows you to adjust the thermostat manually, as needed.

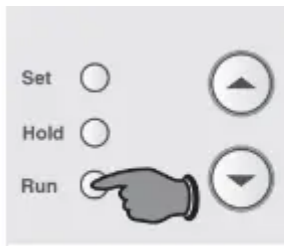

M33603

Whatever temperature you set will be maintained 24 hours a day, until you manually change it, or press RUN to cancel “Hold” and resume the program schedule.

NOTE: Make sure the thermostat is set to the system you want to control heat or cool).

Built-In Compressor Protection



M32711

This feature helps prevent damage to the compressor in your air conditioning or heat pump system.

Damage can occur if the compressor is restarted too soon after shutdown. This feature forces the compressor to wait 5 minutes before restarting.

During the wait time, the display will flash the message Cool On (or Heat On if you have a heat pump). When the safe wait time has elapsed, the message stops flashing and the compressor turns on.

Early Start



M32712

This feature allows the heating or cooling to turn on before the program start time, so the temperature is reached at the time you set. For example: Set the Wake time to 6 am, and the temperature to 70°. The heat will come on before 6 am, so the temperature is 70° by the time you wake at 6. The next time period is displayed when the system is activated before a scheduled time period.

Change Filter




M33632

If the filter reminder is turned on during installation, the words Change Filter will flash on the screen when the filter needs to be replaced.

After you replace the air filter, press and hold the RUN button for 3 seconds to reset the alert.

Battery Replacement

Pull at bottom to remove thermostat from wallplate.

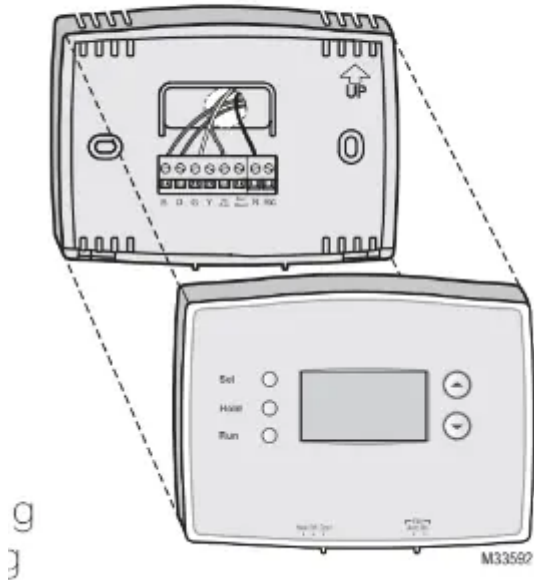


Install two fresh AAA batteries when Lo Batt flashes on the screen. Lo Batt appears for 60 days before the batteries are depleted.

Replace batteries once a year, or when you will be away for more than a month.

Most settings are stored in non-volatile (permanent) memory. Only the clock and the day must be set after you replace the batteries.

Caution: Set the System switch to Off before removing the batteries. Otherwise, the heating/cooling system could remain activated even when batteries are removed.

Turn thermostat over, insert fresh AAA alkaline batteries, then reinstall thermostat.

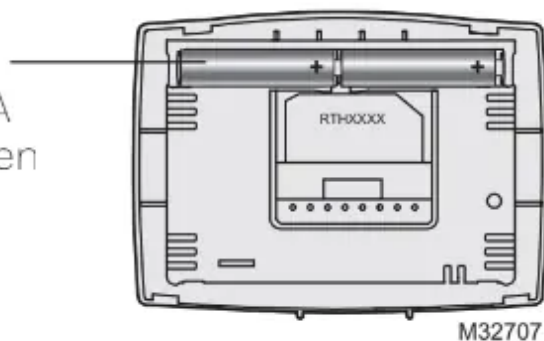

Appendices

Troubleshooting

If you have difficulty with your thermostat, please try the following suggestions.

Most problems can be corrected quickly and easily.

Display is blank	<ul style="list-style-type: none">• Make sure fresh AAA alkaline batteries are correctly installed.
Heating or cooling system does not respond	<ul style="list-style-type: none">◦ Set system switch to Heat. Make sure the temperature is set higher than the Inside temperature.◦ Set system switch to Cool. Make sure the temperature is set lower than the Inside temperature.◦ Wait 5 minutes for the system to respond.
Temperature settings do not change	Make sure heating and cooling temperatures are set to acceptable ranges: <ul style="list-style-type: none">• Heat: 40° to 90°F (4.5° to 32°C).• Cool: 50° to 99°F (10° to 37°C).
"Cool On" or "Heat On" is flashing	Compressor protection feature is engaged. Wait 5 minutes for the system to restart safely, without damage to the compressor.
"Heat On" is not displayed	Set the System switch to Heat, and set the temperature level above the current room temperature.
"Cool On" is not displayed	Set the System switch to Cool, and set the temperature level below the current room temperature.

For assistance with this product, please visit honeywellhome.com or call Resideo Customer Care toll-free at 1-800-468-1502.

Warning



This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

