


USER INSTRUCTIONS Electric Range

FEATURE GUIDE

This manual covers several models. Your model may have some or all of the items listed. Refer to this manual or the Frequently Asked Questions (FAQs) section of our website at www.maytag.com for more detailed instructions.

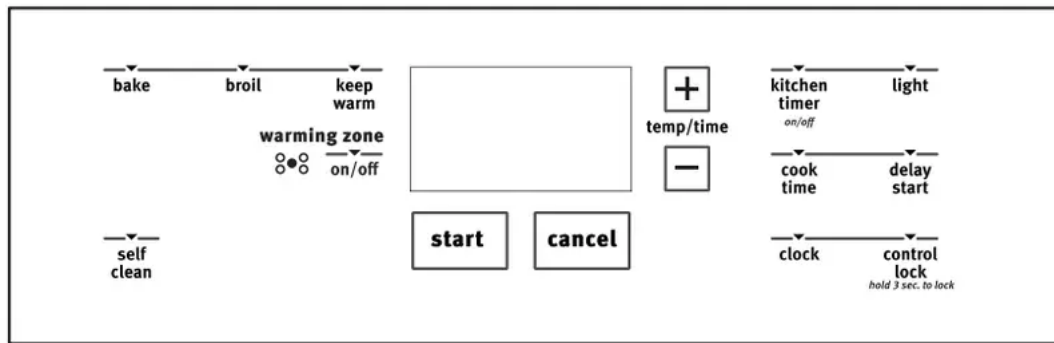

WARNING - Food Poisoning Hazard: Do not let food sit in oven more than one hour before or after cooking. Doing so can result in food poisoning or sickness.


| KEYPAD | FEATURE | INSTRUCTIONS |
|-----------------------------|----------------------------|---|
| CLOCK | Clock | <p>This clock uses a 12-hour cycle.</p> <ol style="list-style-type: none"> 1. Check that the oven is OFF. 2. Press CLOCK. 3. Press the Temp/Time “+” or “-” keypad to set the time of day and hold to scroll quickly. 4. Press CLOCK or START. |
| LIGHT | Oven cavity light | <p>While the oven door is closed, press LIGHT to turn the light on and off. The light will come on when the oven door is opened.</p> |
| KITCHEN TIMER ON/ OFF | Oven timer | <p>The Timer can be set in hours or minutes up to 9 hours and 59 minutes.</p> <ol style="list-style-type: none"> 1. Press KITCHEN TIMER. 2. Press the Temp/Time “+” or “-” keypad to set the length of time. Press and hold to scroll quickly. 3. Press START to begin the countdown. If enabled, timer tone will sound at the end of countdown. 4. Press KITCHEN TIMER to cancel the Timer and return to the time of day. Do not press the Cancel keypad because the oven will not start. If the timer is not in the display, press KITCHEN TIMER to display the countdown for 5 seconds.. |
| START | Cooking start | <p>The Start keypad begins any oven function. If Start is not pressed within 30 seconds, a tone will sound, and Start will blink until pressed or canceled. If Start is not pressed within 1 minute after pressing a keypad, the function is canceled and the time of day is displayed.</p> |
| CANCEL | Range function | <p>The Cancel keypad stops any function except the Clock, Kitchen Timer, and Control Lockout.</p> |
| BAKE | Baking and roasting | <ol style="list-style-type: none"> 1. Press BAKE. 2. Press the Temp/Time “+” or “-” keypad to set the desired temperature. Press and hold to scroll quickly. The temperature will not scroll below the minimum or maximum allowable temperature. 3. Press START. 4. To change the temperature, repeat Step 2. Press START for the new temperature to take effect. |

| | | |
|---|-----------------------------|---|
| | | 5. Press CANCEL when finished. |
| BROIL | Broiling | <ol style="list-style-type: none"> 1. Press BROIL. 2. Press the Temp/Time “+” or “-” keypad to set the desired temperature. Press and hold to scroll quickly. The temperature will not scroll past the minimum or maximum allowable temperature. 3. Press START, and then allow the oven to preheat for 5 minutes. 4. Position the cookware in the oven and leave the door open at the broil stop position. 5. Press CANCEL when finished. |
| KEEP WARM | Hold warm | <p>Food must be at serving temperature before placing it in the warmed oven.</p> <ol style="list-style-type: none"> 1. Press KEEP WARM. 2. Press the Temp/Time “+” or “-” keypad to set the desired temperature. Press and hold to scroll quickly. The temperature will not scroll past the minimum or maximum allowable temperature. 3. Press START. 4. Press CANCEL when finished. |
| DELAY START | Delayed start | <p>The Delay Start keypad is used to enter the starting time for an oven timer with a delayed start. Delay Start should not be used for foods such as casseroles and cakes because they may not bake properly.</p> <p>To set a Timed Cook or a Delayed Timed Cook, see the “Cook Time” section.</p> |
| COOK TIME | Timed cooking | <p>Cook Time allows the oven to be set to turn on at a certain time of day, for a set length of time, and/or shut off automatically.</p> <p>To set a Timed Cook or a Delayed Timed Cook, see the “Cook Time” section.</p> |
| WARMING ZONE ON/OFF | Warming zone | <p>Press WARMING ZONE ON/OFF to select the warming element on the oven.</p> <p>Press START. Press WARMING ZONE ON/OFF to turn off the warming zone.</p> |
| SELF CLEAN | Self-Cleaning cycle | See the “Self-Cleaning Cycle” section. |
| CONTROL LOCK hold 3 sec. to lock | Oven control lockout | <ol style="list-style-type: none"> 1. Check that the ovens and timers are OFF. 2. Press and hold CONTROL LOCK for 3 seconds. 3. If enabled, a tone will sound and a lock will be displayed. |

4. Repeat to unlock. Only the Clock, Light, and Kitchen Timer function with the controls locked. The cooktop functions are not available by the oven control lockout.

COOKTOP USE

WARNING - Fire Hazard: Turn off all controls when done cooking. Failure to do so can result in death or fire.

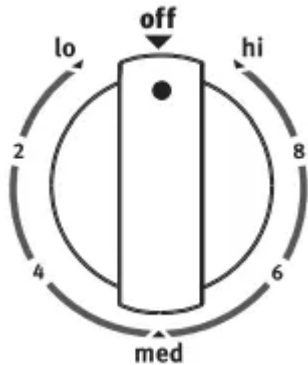


- The control knobs can be set to anywhere between Hi and Lo. Push in and turn to setting.

REMEMBER: When range is in use or (on some models) during the Self-Cleaning cycle, the entire cooktop area may become hot

Ceramic Glass

- The surface cooking area may glow red when an element is ON. Some parts of the surface cooking area may not glow red when an element is ON. The glow will also randomly cycle off and back on again, even while on Hi, to keep the cooktop from extreme temperatures. This is normal operation.
- It is normal for the surface of light-colored ceramic glass to appear to change color when surface cooking areas are hot. As the glass cools, it will return to its original color.
- Clean the cooktop after each use to help avoid scratches, pitting, abrasions, and to condition the glass surface. affresh® Cooktop Cleaner and the Cooktop Scraper are also recommended for stubborn soils. Do not use abrasive cleaners, cleaning pads, or harsh chemicals for cleaning. The Cooktop Care Kit contains all of the items needed to clean and condition your ceramic glass cooktop. Refer to the “Range Care” section for additional information.
- **IMPORTANT:** To avoid permanent damage to the cooktop surface and to make soils easier to remove, clean the cooktop after each use to remove all soils.
 - Avoid storing jars or cans above the cooktop. Dropping a heavy or hard object onto the cooktop could crack the cooktop.

- To avoid damage to the cooktop, do not leave a hot lid on the cooktop. As the cooktop cools, air can become trapped between the lid and the cooktop and the ceramic glass could break when the lid is removed.
- For foods containing sugar in any form, clean up all spills and soils as soon as possible. Allow the cooktop to cool down slightly. Then, while wearing oven mitts, remove the spills using a scraper while the surface is still warm. If sugary spills are allowed to cool down, they can adhere to the cooktop and cause pitting and permanent marks.
- To avoid scratches, do not slide cookware or bakeware across the cooktop. Aluminum or copper bottoms and rough finishes on cookware or bakeware could leave scratches or marks on the cooktop.
- Do not cook popcorn in prepackaged aluminum containers on the cooktop. They could leave aluminum marks that cannot be removed completely.
- To avoid damage to the cooktop, do not allow objects that could melt, such as plastic or aluminum foil, to touch any part of the entire cooktop.
- To avoid damage to the cooktop, do not use the cooktop as a cutting board.
- Use cookware about the same size as the surface cooking area. Cookware should not extend more than 1/2" (13 mm) outside the area.

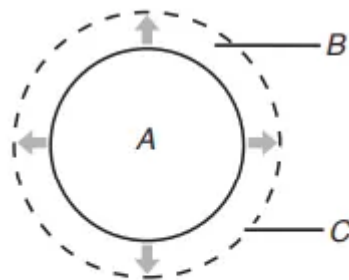

*A. Surface cooking area
 B. Cookware/canner
 C. 1/2" (13 mm) maximum overhang*

- Use flat-bottomed cookware for best heat conduction and energy efficiency. Cookware with rounded, warped, ribbed, or dented bottoms could cause uneven heating and poor cooking results.
- Determine flatness by placing the straight edge of a ruler across the bottom of the cookware. While you rotate the ruler, no space or light should be visible between it and the cookware.
- Cookware designed with slightly indented bottoms or small expansion channels can be used.
- Make sure the bottoms of pots and pans are clean and dry before using them. Residue and water can leave deposits when heated.
- To avoid damage to the cooktop, do not cook foods directly on the cooktop.

Cooktop On Indicator Light


- The Cooktop On indicator light is located on the display panel. When any cooktop element on the console panel is turned on, the Cooktop On indicator light will glow.

Hot Surface Indicator Light (on some models)

- On ceramic glass models, the hot surface indicator light is located on the console panel.
- The hot surface indicator light will glow as long as any surface cooking area is too hot to touch, even after the surface cooking area is turned off.

Dual Zone Cooking Element

- The Dual Zone cooking element offers flexibility depending on the size of the cookware. Single size can be used in the same way as a regular element. The dual size combines both the single and outer element and is recommended for larger size cookware.

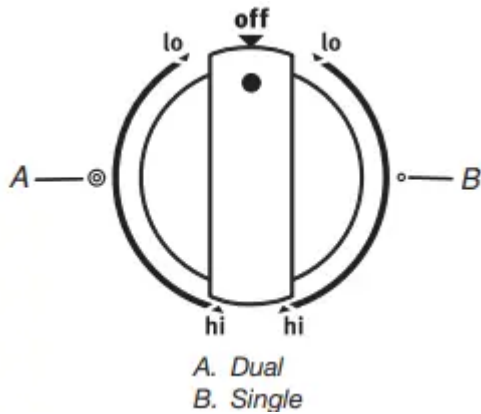

Warm Zone

WARNING - Food Poisoning Hazard: Do not let food sit in oven more than one hour before or after cooking. Doing so can result in food poisoning or sickness

- Use the cooktop Warming Zone to keep cooked foods warm. One hour is the recommended maximum time to maintain food quality.
- Do not use it to heat cold foods.
- The Warming Zone can be used alone or when any of the other surface cooking areas are being used.
- The Warming Zone area will not glow red when cycling on. However, the Cooktop On indicator light will be displayed when the Warming Zone is in use.
 - Use only cookware recommended for oven and cooktop use.
 - Cover all foods with a lid or aluminum foil. When warming baked goods, allow a small opening in the cover for moisture to escape.
 - To avoid damage to the cooktop, do not use plastic wrap to cover food because the plastic wrap may melt.

- Use pot holders or oven mitts to remove food.

warming zone



To Use:

1. To turn on, press WARMING ZONE ON/OFF and then START.
2. To turn off, press WARMING ZONE ON/OFF.

Cookware

IMPORTANT: Do not leave empty cookware on a hot surface cooking area, element, or surface burner.


Ideal cookware should have a flat bottom, straight sides, and a well-fitting lid, and the material should be of medium-to-heavy thickness.

Rough finishes may scratch the cooktop or coils. Aluminum and copper may be used as a core or base in cookware. However, when used as a base, they can leave permanent marks on the surfaces.

Cookware material is a factor in how quickly and evenly heat is transferred, which affects cooking results. A nonstick finish has the same characteristics as its base material. For example, aluminum cookware with a nonstick finish will take on the properties of aluminum.

Cookware with nonstick surfaces should not be used under the broiler.

Check for flatness by placing the straight edge of a ruler across the bottom of the cookware. While you rotate the ruler, no space or light should be visible between it and the cookware.

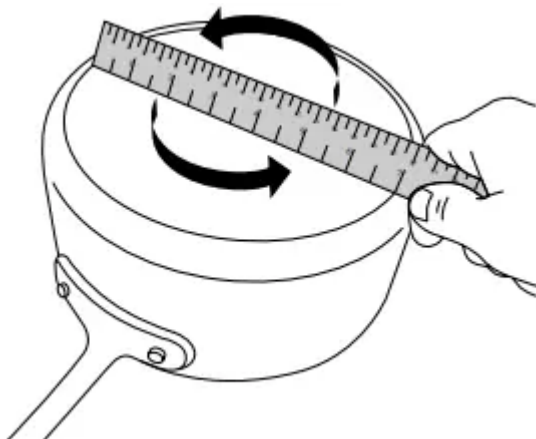


Use the following chart as a guide for cookware material characteristics.

| Cookware | Characteristics |
|---------------------------------|---|
| Aluminum | <ul style="list-style-type: none"> • Heats quickly and evenly. |
| | <ul style="list-style-type: none"> • Suitable for all types of cooking |
| | <ul style="list-style-type: none"> • Medium or heavy thickness is best for most cooking tasks. |
| | <ul style="list-style-type: none"> • May leave aluminum residues which may be diminished if cleaned immediately after cooking. |
| Cast iron | <ul style="list-style-type: none"> • Heats slowly and evenly. |
| | <ul style="list-style-type: none"> • Good for browning and frying |
| | <ul style="list-style-type: none"> • Maintains heat for slow cooking. |
| | <ul style="list-style-type: none"> • Rough edges or burrs may scratch the cooktop. |
| Ceramic or ceramic glass | <ul style="list-style-type: none"> • Follow manufacturer's instructions. |
| | <ul style="list-style-type: none"> • Heats slowly but unevenly. |
| | <ul style="list-style-type: none"> • Ideal results on low-to-medium heat settings |
| | <ul style="list-style-type: none"> • May scratch the cooktop. |
| Copper | <ul style="list-style-type: none"> • Heats very quickly and evenly. |
| | <ul style="list-style-type: none"> • May leave copper residues which may be diminished if cleaned immediately after cooking. |
| | <ul style="list-style-type: none"> • Can leave a permanent stain or bond to the cooktop if overheated. |
| Earthenware | <ul style="list-style-type: none"> • Follow manufacturer's instructions. |
| | <ul style="list-style-type: none"> • Use on low heat settings. |
| | <ul style="list-style-type: none"> • May scratch the cooktop. |



| | |
|---|---|
| Porcelain enamel on steel or cast iron | <ul style="list-style-type: none"> • See stainless steel or cast iron |
| | <ul style="list-style-type: none"> • Porcelain enamel bakeware without the metal base may bond to the cooktop if overheated. |
| Stainless steel | <ul style="list-style-type: none"> • Heats quickly but unevenly |
| | <ul style="list-style-type: none"> • A core or base of aluminum or copper on stainless steel provides even heating. |

Use flat-bottomed cookware for best cooking results and energy efficiency. The cookware should be about the same size as the cooking area outlined on the cooktop. Cookware should not extend more than 1 /2" (13 mm) outside the area.

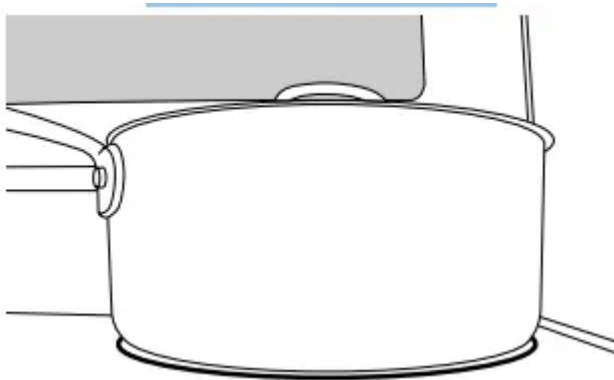

Home Canning

Canning can be performed on a glass smooth-top cooking surface or traditional coil element cooktop. When canning for long periods, alternate the use of surface cooking areas or elements between batches. This allows time for the most recently used areas to cool.

- Center the canner on the largest surface cooking area or element. On electric cooktops, canners should not extend more than 1 /2" (13 mm) beyond the surface cooking area or element.
- Do not place canner on 2 surface cooking areas or elements at the same time.
- On ceramic glass models, use only flat-bottomed canners to avoid damage to the cooktop and elements.
- For more information, contact your local agricultural extension office or refer to published home canning guides. Companies that manufacture home canning products can also offer assistance.

OVEN USE

Odors and smoke are normal when the oven is used the first few times or when it is heavily soiled.

IMPORTANT: The health of some birds is extremely sensitive to the fumes given off. Exposure to the fumes may result in death to certain birds. Always move birds to another closed and well-ventilated room.

Electronic Oven Controls

Control Display

- The display will flash when powered up or after a power loss. Press CANCEL to clear.
When the oven is not in use, the time of day is displayed

Tones

Tones are audible signals, indicating the following:

- One tone
 - Valid pad press
 - Oven is preheated (long tone)
 - Function has been entered
 - Reminder (on some models), repeating each minute after the end-of-cycle tones
- Three tones
 - Invalid pad press
- Four tones
 - End of cycle

Fahrenheit and Celsius

- The temperature is preset at Fahrenheit, but can be changed to Celsius.
- To change: Press and hold the Temp/Time “+” arrow keypad for 5 seconds. “°C” or “°F” will appear on the display. Repeat to change back.
- To exit mode, press CANCEL.

Keypress Tones

- Activates or turns off the tones when a keypad is pressed.
- To change: Press and hold LIGHT for 5 seconds. Repeat to change back.
- To exit mode, press CANCEL

Demo Mode

- **IMPORTANT:** This feature is intended for use on the sales floor with 120 V power connection and permits the control features to be demonstrated without heating elements turning on. If this feature is activated, the oven will not work.
- **To change:** Press CANCEL, CANCEL, the Temp/Time “+” keypad, KITCHEN TIMER. Repeat to change back and end Demo mode.

Oven Temperature Control

IMPORTANT: Do not use a thermometer to measure oven temperature. Elements will cycle on and off as needed to provide consistent temperature, but they may run slightly hot or cool at any point in time due to this cycling. Most thermometers are slow to react to temperature change and will not provide an accurate reading due to this cycling.

The oven provides accurate temperatures; however, it may cook faster or slower than your previous oven, so the temperature can be adjusted to personalize it for your cooking needs. It can be changed in Fahrenheit or Celsius.

To Adjust Oven Temperature:

1. Press and hold the Temp/Time “-” keypad for 5 seconds until the oven display shows the current setting, for example “0°F CAL” or “00.”
2. Press the Temp/Time “+” or “-” keypad to increase or decrease the temperature in 5°F (3°C) amounts. The adjustment can be set between 30°F (18°C) and -30°F (-18°C).
3. Press START

Keep Warm

IMPORTANT: Food must be at serving temperature before placing it in the warmed oven. Food may be held up to 1 hour; however, breads and casseroles may become too dry if left in the oven during the Keep Warm function. For best results, cover food. The Keep Warm feature allows hot cooked foods to stay at serving temperature.

To Use:

1. Press KEEP WARM.
2. Press the Temp/Time “+” or “-” keypad to set the desired temperature. Press and hold to scroll quickly. The temperature will not scroll past the minimum or maximum allowable temperature. **NOTE:** The temperature may be changed at any time by pressing the Temp/Time “+” or “-” keypad to enter the desired temperature and then START.
3. Press START.
4. Place food in the oven.
5. Press CANCEL when finished.
6. Remove food from the oven.

To Cancel Keep Warm:

1. Press CANCEL.
2. Remove food from oven.

Sabbath Mode

The Sabbath mode sets the oven to remain on in a Bake setting until turned off. A Timed Bake can also be set to keep the oven on for only part of the Sabbath. The Oven Control Lockout Feature (if present) will be disabled during the Sabbath. After the Sabbath mode is set, no tones will sound, the display will not show the temperature, the Kitchen Timer mode will be canceled (if active), and only the following keypads will function:

- “+” or “-” keypads
- Cancel

When the oven door is opened or closed, the oven light will not turn on or off and the heating elements will not turn on or off immediately.

When power is restored after a power failure, the oven will return to Sabbath mode and remain Sabbath compliant with the bake elements OFF until Cancel is pressed.

Pressing Cancel at any time returns the oven to the normal cooking mode (not Sabbath compliant).

Before entering the Sabbath mode, it must be decided if the oven light is to be ON or OFF for the entire Sabbath mode period. If the light is ON when entering Sabbath mode, it will remain ON for the entire time Sabbath mode is in use. If the light is OFF when entering Sabbath mode, it will remain OFF for the entire time Sabbath mode is in use. Opening the oven door or pressing Light will not affect the oven light once Sabbath mode has been entered.

If the oven has the Convection Bake feature, the oven light is controlled by a separate Oven Light switch on the console. If the oven light is ON when entering the Sabbath mode, it will remain ON for the entire time Sabbath mode is in use. For the oven light to be OFF during the Sabbath mode, the light bulb must be removed from the oven prior to entering the Sabbath mode. Not performing these steps will cause the oven light to turn on when the oven door is opened, resulting in the oven being not Sabbath compliant.

On the Holiday, the oven temperature can be changed once the oven is in Sabbath mode by pressing the “+” or “-” keypad. The oven temperature will change 25°F (14°C) each time the keypad is pressed. The display will not change and there will be no sounds during this adjustment.

To Bake using Sabbath Mode:

1. Press BAKE.
2. Press the Temp/Time “+” or “-” keypad.
3. Press START.
4. Press and hold KITCHEN TIMER for 5 seconds. “SAb” will flash in the display.

5. Press START within 5 seconds to enter Sabbath mode; otherwise, the entire cycle cancels out. "SAb" will stop flashing and remain ON in the display. The oven is now in Sabbath mode and is Sabbath compliant.

Pressing Cancel at any time returns the oven to the normal cooking mode (not Sabbath mode compliant).

To set a Timed Bake using Sabbath Mode (on some models):

WARNING - Food Poisoning Hazard: Do not let food sit in oven more than one hour before or after cooking. Doing so can result in food poisoning or sickness.

1. Press BAKE.
2. Press the Temp/Time "+" or "-" keypad to enter a temperature other than the one displayed.
3. Press COOK TIME. The Cook Time indicator light will light up.
4. Press the Temp/Time "+" or "-" keypad to enter a cook time length.
5. Press START.
6. Press and hold KITCHEN TIMER for 5 seconds. "SAb" will flash in the display.
7. Press START within 5 seconds to enter Sabbath mode; otherwise, the entire cycle cancels out. "SAb" will stop flashing and remain ON in the display. The oven is now in Sabbath mode and is Sabbath compliant. The Bake, On, and Cook Time indicator lights will be displayed.

When the set cook time ends, the oven will shut off automatically and the indicator lights will turn off, indicating the end of the cycle.

Pressing Cancel at any time returns the oven to the normal cooking mode (not Sabbath compliant).

To set a Delayed Timed Bake using Sabbath Mode (on some models):

1. Press BAKE.
2. Press the Temp/Time "+" or "-" keypad to enter a temperature other than the one displayed.
3. Press COOK TIME. The Cook Time indicator light will light up.
4. Press the Temp/Time "+" or "-" keypad to enter a cook time length.
5. Press DELAY START. The Delay indicator light will light up.
6. Press the Temp/Time "+" or "-" keypad to enter a start time.
7. Press START.
8. Press and hold KITCHEN TIMER for 5 seconds. "SAb" will flash in the display.
9. Press START within 5 seconds to enter Sabbath mode; otherwise, the entire cycle cancels out. "SAb" will stop flashing and remain ON in the display. The oven is now in

Sabbath mode and is Sabbath compliant. The On and Delay indicator lights will be displayed.

When the start time is reached, the Bake, On, and Cook Time indicator lights will automatically turn on. When the set cook time ends, the oven will shut off automatically and the indicator lights will turn off, indicating the end of the cycle.

Pressing Cancel at any time returns the oven to the normal cooking mode (not Sabbath compliant).

Aluminum Foil

- **IMPORTANT:** To avoid permanent damage to the oven bottom finish, do not line the oven bottom with any type of foil or liner.
- For best cooking results, do not cover entire oven rack with foil because air must be able to move freely.

Positioning Racks and Bakeware

IMPORTANT: To avoid permanent damage to the porcelain finish, do not place food or bakeware directly on the oven door or bottom.

Bakeware


- To cook food evenly, hot air must be able to circulate. Allow 2" (5 cm) of space around bakeware and oven walls. Make sure that no bakeware piece is directly over another.

Racks

- Position racks before turning on the oven.
- Do not move racks with bakeware on them.
- Make sure racks are level.

To move a rack, pull it out to the stop position, raise the front edge, and then lift it out. Use the following illustration and chart as a guide for positioning rack

Rack Positions

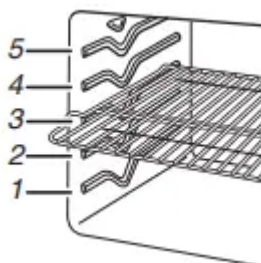

| Food | Rack Position |
|---|---------------|
| Roasting large and small cuts of meat and poultry | 1 |
| Pies, casseroles, yeast bread, quick breads, frozen convenience foods, and 2-rack baking | 2 |
| Most baked goods on a cookie sheet, muffin pan, or jelly roll pan; layer cakes; broiling chicken pieces | 3 |
| Use for 2-rack baking and broiling. | 4 |
| Toasting bread or broiling thin, non-fatty foods | 5 |

Multiple Rack Cooking


- 2-rack: Use rack positions 2 and 4.

Baking Layer Cakes on 2 Racks

- For best results when baking cakes on 2 racks, use rack positions 2 and 4. Place the cakes on the racks as shown.



Oven Vent

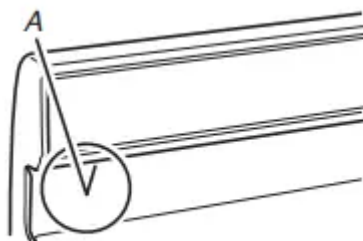

A. Oven vent

- The oven vent releases hot air and moisture from the oven, and should not be blocked or covered. Blocking or covering the vent will cause poor air circulation, affecting cooking

and cleaning results. Do not set plastics, paper or other items that could melt or burn near the oven vent.

Baking and Roasting

Preheating

- When beginning a Bake cycle, the oven will begin preheating after Start is pressed. The oven will take approximately 12 to 15 minutes to reach 350°F (177°C) with all of the oven racks provided with your oven inside the oven cavity. Higher temperatures will take longer to preheat. The preheat cycle rapidly increases the oven temperature. The actual oven temperature will go above your set temperature to offset the heat lost when your oven door is opened to insert food. This ensures that when you place your food in the oven, the oven will begin at the proper temperature. Insert your food when the preheat tone sounds. Do not open the door during preheat before the tone sounds.

Oven Temperature

- While in use, the oven elements will cycle on and off as needed to maintain a consistent temperature, but they may run slightly hot or cool at any point in time due to this cycling. Opening the oven door while in use will release the hot air and cool the oven which could impact the cooking time and performance. It is recommended to use the oven light to monitor cooking progress. NOTE: On models with convection, the convection fan may run in the non-convection Bake mode to improve oven performance.

Temperature Management System

- The Temperature Management System electronically regulates the oven heat levels during preheat and bake to maintain a precise temperature range for optimal cooking results. The bake and broil elements or burners cycle on and off in intervals. On convection range models, the fan will run while preheating and may be cycled on and off for short intervals during bake to provide the best results. This feature is automatically activated when the oven is in use.
- Before baking and roasting, position racks according to the “Positioning Racks and Bakeware” section. When roasting, it is not necessary to wait for the oven preheat cycle to end before putting food in unless it is recommended in the recipe.

Broiling

When broiling, preheat the oven for 5 minutes before putting food in unless recommended otherwise in the recipe. Leave the desired oven door open 6" (15 cm) at the broil stop position to ensure proper broiling temperature. Position food on grid in a broiler pan, and then place it in the center of the oven rack



NOTE: Odors and smoke are normal the first few times the oven is used or if the oven is heavily soiled.

Changing the temperature when broiling allows more precise control when cooking. The lower the broil setting is, the slower the cooking. Thicker cuts and unevenly shaped pieces of meat, fish, and poultry may cook better at lower broil settings. Refer to the “Positioning Racks and Bakeware” section for more information.

On lower settings, the broil element will cycle on and off to maintain the proper temperature.

- For best results, use a broiler pan and grid. It is designed to drain juices and help avoid spatter and smoke. If you would like to purchase a broiler pan, one may be ordered. See the “Accessories” section.

Cook Time

To Set a Timed Cook:

1. Press BAKE.
2. Press the Temp/Time “+” or “-” keypad to set the desired temperature. Press and hold to scroll quickly. The temperature will not scroll past the minimum or maximum allowable temperature.
3. Press COOK TIME.
4. Press the Temp/Time “+” or “-” keypad to enter the length of time to cook.
5. Press START. The display will count down the time. When the time ends, the oven will shut off automatically.
6. Press CANCEL to clear the display.

To Set a Delayed Timed Cook:

Before setting, make sure the clock is set to the correct time of day. See the “Clock” keypad feature in the “Feature Guide” section.

1. Press BAKE.
2. Press the Temp/Time “+” or “-” keypad to set the desired temperature. Press and hold to scroll quickly. The temperature will not scroll past the minimum or maximum allowable temperature.
3. Press COOK TIME.
4. Press the Temp/Time “+” or “-” keypad to enter the length of time to cook.

5. Press DELAY START.
6. Press the Temp/Time “+” or “-” keypad to enter the time of day to start. Press and hold to scroll quickly.
7. Press START. When the start time is reached, the oven will automatically turn on. The temperature and/or time settings can be changed anytime by repeating steps 1 through 7. When the set cook time ends, the oven will shut off automatically and “End” will appear on the display.
8. Press CANCEL to clear the display.

RANGE CARE

Self-Cleaning Cycle (on some models)

WARNING- Burn Hazard: Do not touch the oven during the Self-Cleaning cycle. Keep children away from oven during Self-Cleaning cycle. Failure to follow these instructions can result in burns.

IMPORTANT: The health of some birds is extremely sensitive to the fumes given off during the Self-Cleaning cycle. Exposure to the fumes may result in death to certain birds. Always move birds to another closed and well-ventilated room.

Keep the kitchen well-ventilated during the Self-Cleaning cycle to help get rid of heat, odors, and smoke

Do not block the oven vent(s) during the Self-Cleaning cycle. Air must be able to move freely. Depending on your model, see “Oven Vent” section.

Do not clean, rub, damage or move the oven door gasket.

Prepare Range

- Remove the broiler pan, grid, cookware and bakeware, all cooking utensils, oven racks and aluminum foil and, on some models, the temperature probe from the oven.
- Use a damp cloth to clean inside door edge and the 1½" (3.8 cm) area around the inside oven cavity frame, being certain not to move or bend the gasket.
- Wipe out any loose soil to reduce smoke and avoid damage. At high temperatures, foods react with porcelain. Staining, etching, pitting, or faint white spots can result. This will not affect cooking performance.
- Remove plastic items from the cooktop because they may melt.
- Remove all items from the storage drawer.

How the Cycle Works

- IMPORTANT: The heating and cooling of porcelain on steel in the oven may result in discoloring, loss of gloss, hairline cracks, and popping sounds.

- The Self-Cleaning cycle uses very high temperatures, burning soil to a powdery ash.
- Once the oven has completely cooled, remove ash with a damp cloth. To avoid breaking the glass, do not apply a cool, damp cloth to the inner door glass before it has completely cooled.
- The oven light is disabled during the Self-Cleaning cycle.
- To stop the Self-Cleaning cycle at any time, press CANCEL. If the temperature is too high, the oven door will remain locked and “cool” and “locked” will be displayed.
- When “locked” shows in the display, the door of the oven cannot be opened. To avoid damage to the door, do not force the door open when “locked” is displayed.
- Before self-cleaning, make sure the door is completely closed or the door will not lock and the Self-Cleaning cycle will not begin

Electronic Oven Control with Adjustable Clean Time (on some models)

The Self-Cleaning cycle is time adjustable between 2 hours 30 minutes and 4 hours 30 minutes in 15-minute increments. Suggested clean times are 2 hours 30 minutes for light soil and 4 hours 30 minutes for heavy soil. The last 30 minutes of the cycle is for cooldown.

To Self-Clean:

1. Press SELF CLEAN.
2. Press the Temp/Time “+” or “-” keypad to enter the desired Self-Cleaning cycle time.
3. Press START. The oven door will automatically lock. The Door Locked and Clean indicator lights will be displayed. The time remaining will also be displayed.
4. When the Self-Cleaning cycle is complete and the oven cools, the Door Locked and Clean indicator lights will turn off.
5. When the oven is completely cooled, remove ash with a damp cloth. To exit the Self-Cleaning cycle before completed, press CANCEL. The door will unlock once the oven cools.

General Cleaning

IMPORTANT: Before cleaning, make sure all controls are off and the oven and cooktop are cool. Always follow label instructions on cleaning products. For additional information, you can visit the Frequently Asked Questions (FAQs) section of our website at www.maytag.com.

Soap, water and a soft cloth or sponge are suggested first unless otherwise noted.

EXTERIOR PORCELAIN ENAMEL SURFACES (on some models)

Food spills containing acids, such as vinegar and tomato, should be cleaned as soon as the entire range is cool. These spills may affect the finish.

Cleaning Method:

- Glass cleaner, mild liquid cleaner or nonabrasive scrubbing pad: Gently clean around the model and serial number plate because scrubbing may remove numbers.
- affresh® Kitchen and Appliance Cleaner Part Number W10355010 (not included): See the “Accessories” section for more information.

STAINLESS STEEL (on some models)

NOTE: To avoid damage to stainless steel surfaces, do not use soap-filled scouring pads, abrasive cleaners, Cooktop Cleaner, steel-wool pads, gritty washcloths or abrasive paper towels. Damage may occur to stainless steel surfaces, even with one-time or limited use.

Cleaning Method: Rub in direction of grain to avoid damaging.

- affresh® Stainless Steel Cleaner Part Number W10355016 (not included): See the “Accessories” section for more information.

METALLIC PAINT (on some models)


- Do not use abrasive cleaners, cleaners with bleach, rust removers, ammonia or sodium hydroxide (lye) because paint surface may stain.

CERAMIC GLASS

Cleaning Method:

To avoid damaging the cooktop, do not use steel wool, abrasive powder cleansers, chlorine bleach, rust remover, or ammonia.


1. Remove food/residue with the Cooktop Scraper.

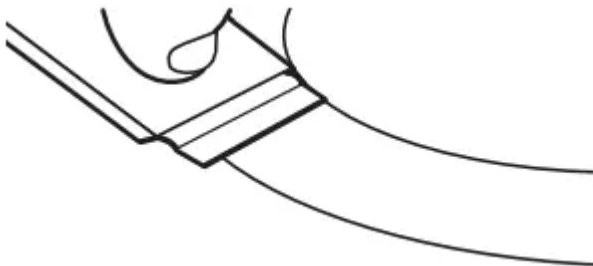

- For best results, use the Cooktop Scraper while the cooktop is still warm but not hot to the touch. It is recommended to wear an oven mitt while scraping the warm cooktop.
- Hold the Cooktop Scraper at approximately a 45° angle against the glass surface and scrape the residue. It will be necessary to apply pressure in order to remove the residue.

Allow the cooktop to cool down completely before proceeding to Step 2.

2. Apply a few dime-sized drops of affresh® Cooktop Cleaner to the affected areas.

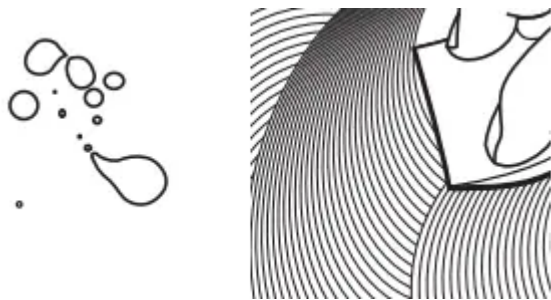

- Rub affresh® Cooktop Cleaner onto the cooktop surface with the blue Cooktop Cleaning Pad. Some pressure is needed to remove stubborn stains.
- Allow the cleaner to dry to a white haze before proceeding to Step 3.

3. Polish with a clean, dry cloth or a clean, dry paper towel



- Repeat steps 1 through 3 as necessary for stubborn or burned-on stains.

The Complete Cooktop Cleaner Kit is available for order and includes the following:

- Cooktop Scraper
- affresh® Cooktop Cleaner
- Blue Cooktop Cleaning Pads

See the “Accessories” section for part numbers and information on ordering.

COOKTOP CONTROLS

To avoid damage to the cooktop controls, do not use steel wool, abrasive cleansers, or oven cleaner.

To avoid damage, do not soak knobs. When replacing knobs, make sure knobs are in the Off position.

On some models, do not remove seals under knobs.

Cleaning Method:

- Soap and water: Pull knobs straight away from control panel to remove.

CONTROL PANEL AND OVEN DOOR EXTERIOR

To avoid damage to the control panel, do not use abrasive cleaners, steel-wool pads, gritty washcloths or abrasive paper towels.

Cleaning Method:

- Glass cleaner and soft cloth or sponge: Apply glass cleaner to soft cloth or sponge, not directly on panel.
- affresh® Kitchen and Appliance Cleaner Part Number W10355010 (not included): See the “Accessories” section for more information.

OVEN RACKS

Cleaning Method:

- Steel-wool pad
- For racks that have discolored and are harder to slide, a light coating of vegetable oil applied to the rack guides will help them slide.

STORAGE DRAWER

Check that storage drawer or warming drawer is cool and empty before cleaning.

Cleaning Method:

- Mild detergent

OVEN CAVITY

Do not use oven cleaners.

Food spills should be cleaned when oven cools. At high temperatures, foods react with porcelain. Staining, etching, pitting, or faint white spots can result.

Cleaning Method:

- Clean cycle: See the “Self-Cleaning Cycle” section.

Oven Light

The oven light is a standard 40-watt appliance bulb. Before replacing, make sure the oven and cooktop are cool and the control knobs are in the off position.

To Replace:

1. Unplug range or disconnect power.
2. Turn the glass bulb cover in the back of the oven counterclockwise to remove.
3. Turn bulb counterclockwise to remove from socket.
4. Replace bulb, then bulb cover by turning clockwise.
5. Plug in range or reconnect power.

TROUBLESHOOTING



| Problem | Possible Causes and/or Solutions |
|---|---|
| Nothing will operate | <p>Power supply cord is unplugged: Plug into a grounded outlet.</p> <p>Household fuse is blown or a circuit breaker is tripped: Replace the fuse or reset the breaker. If the problem continues, call an electrician.</p> <p>The control displays an F9 or F9 E0 error code: The electrical outlet in the home may be miswired. Contact a qualified electrician to verify the electrical supply.</p> |
| Cooktop will not operate | <p>The control knob is not set correctly: Push in knob before turning to a setting.</p> <p>On ceramic glass models, the oven control lockout is set: See the “Control Lock” feature in the “Feature Guide” section.</p> <p>A Self-Cleaning cycle has been selected: On some ceramic glass models, the cooktop will not operate during a Self-Cleaning cycle.</p> |
| Excessive heat around cookware on cooktop | <p>Cookware is not the proper size: Use cookware about the same size as the surface area, element, or surface burner. Cookware should not extend more than 1/2" (1.3 cm) beyond the cooking area.</p> |
| Cooktop cooking results not what expected | <p>Control knob set to incorrect heat level: See the “Cooktop Use” section. Range is not level: Level the range. See the Installation Instructions.</p> |
| Cooktop element cycles on and off on Hi setting | <p>Element cycling due to a temperature limiter: This is normal operation. The element cycles on and off to keep the cooktop from overheating.</p> |
| Oven will not operate | <p>Delay Start is set: See the “Cook Time” section.</p> <p>Control is locked: Press and hold CONTROL LOCK for 3 seconds to unlock.</p> <p>Control is in Demo mode: See the “Electronic Oven Controls” section. Demo mode is used on display models in a showroom.</p> <p>Electronic oven control set incorrectly: See “Electronic Oven Controls” section.</p> |
| Oven temperature too high or too low | <p>Oven temperature needs adjustment: See “Oven Temperature Control” in the “Electronic Oven Controls” section.</p> |
| Oven indicator lights flash | <p>Power to range is turned on or restored: See “Control Display” in the “Electronic Oven Controls” section. If the indicator lights keep flashing, call for service. See the “Warranty and Service” section for contact information.</p> |



Display shows messages **Power failure (display shows flashing time):** Clear the display. On some models, reset the clock, if needed. See “Clock” keypad feature in the “Feature Guide” section.

Error code (display shows letter followed by number): Press CANCEL to clear the error. See “Control Display” in the “Electronic Oven Controls” section. If it reappears, call for service. See the “Warranty” section for contact information.

Self-Cleaning cycle will not operate **The oven door is not closed:** Make sure the oven door is fully closed.

The Self-Cleaning function has not been entered correctly: See the “Self-Cleaning” section.

A Timed Cooking function has been entered: See the “Cook Time” section.

The range is in Sabbath mode: See the “Sabbath Mode” section.

Oven cooking results not what expected **Range is not level:** Level the range. See the Installation Instructions.

The set temperature was incorrect: Double-check the recipe in a reliable cookbook.

Oven temperature is calibrated incorrectly: See “Oven Temperature Control” in the “Electronic Oven Controls” section.

Oven was not preheated: See “Baking and Roasting” section.

Racks were positioned improperly: See “Positioning Racks and Bakeware” section.

Not enough air circulation around bakeware: See “Positioning Racks and Bakeware” section.

Darker browning of food caused by dull or dark bakeware: Lower oven temperature (15°C) or move rack to a higher position in the oven.

Lighter browning of food caused by shiny or light-colored bakeware: Move rack to a lower position in the oven.

Batter distributed unevenly in pan: Check that batter is level in the pan.

Incorrect length of cooking time was used: Adjust cooking time.

Oven door was not closed: Be sure that the bakeware does not keep the door from closing.

Oven door was opened during cooking: Oven peeking releases oven heat and can increase longer cooking times.

Rack is too close to bake burner, making baked items too brown on bottom: Move rack to a higher position in the oven.

Pie crusts browning too quickly: Use aluminum foil to cover the edge of the crust and reduce baking temperature.

Warning



This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

