


USE

The Control Panel

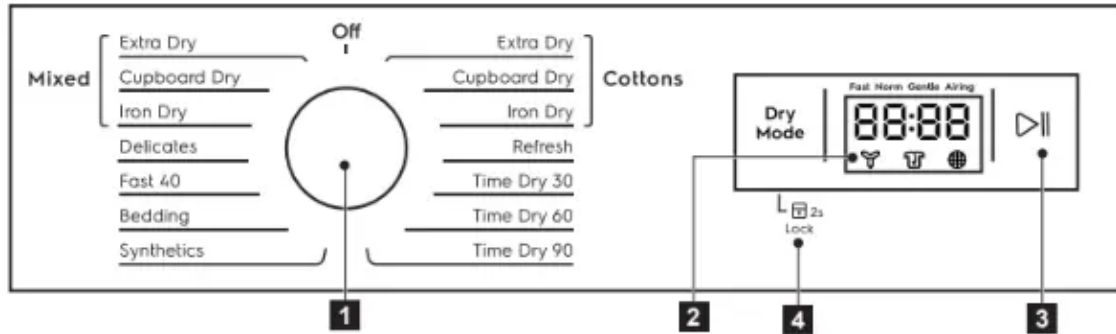

1. PROGRAM SELECTOR KNOB

- Turn the Program Selector knob to choose a drying program. The table “Program Guide” shown on page 9 will help you in selecting the right program.

NOTES : The Program Selector knob is not a timer. Once you select a dry program, the Program Selector knob will stay at that position for the whole dry cycle.

2. DISPLAY

The display shows the following information

DRYING CYCLE IN PROGRESS




After selecting a program, the duration is displayed in hours and minutes for example 1:45 (which means 1 hour and 45 minutes)

The duration is calculated automatically on the basis of the maximum recommended load for each type of fabric.

After the program has started, the time remaining is updated every minute.

COOLING CYCLE IN PROGRESS

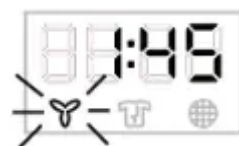

Your dryer will automatically switch off the heater at the end of every cycle. the Cooling progress indicator LED will light up and blink.

This is important as it remove residual heat from clothes and help prevent creasing.

ANTI CREASE CYCLE IN PROGRESS



To prevent creases forming in the clothes after normal drying cycle has ended. The Anti crease progress indicator will start blinking during the time anti crease phase is running.

END OF PROGRAM and CLEAN FILTER REMINDER



When the drying program is completed, the display will show text "End"

The Clean Filter LED turns on and blinks at the end of each dry cycle to serve as a reminder to user to clean lint filter at the end of each load.

3. START/PAUSE BUTTON

This button allows you to start or pause the dryer to check the contents or perhaps add more clothes.

NOTE: The dryer will not start unless the door is closed. (If door is not closed you will hear 6 beeps and "E40" on display.)

SETTING DRYING MODE

This mode gives you the option of selecting different drying levels.



Touch this touch pad to select the drying mode. Corresponding light for each mode is shown on display.

Drying mode can only be selected during initial set up.

- **Fast**

For small load

- **Normal**

For drying most fabrics.

- **Gentle**

For drying delicates and synthetics at lower heat for maximum care of the fabrics. The Low Heat setting will cause the heater to cycle on for shorter time than the normal setting.

- **Airing :**

This setting does not heat. ONLY circulate the air in the dryer to shake out dust and refresh clothes

4. CHILD LOCK


Activating Child Lock

To activate Child Lock touch and hold Dry Mode touch pad for 2 seconds. Display will show "LOC" for 2 seconds then back to cycle duration.



Deactivating Child lock

To deactivate Child Lock touch and hold Dry Mode touch pad for 2 seconds. Display will show "unL" for 2 seconds then back to cycle duration.

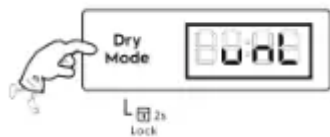

Operating Sequence

Step 1

Load your dryer loosely until it is no more than TWO THIRDS FULL. Clothes must tumble freely in a dryer. Don't cram them in. Wet clothes fluff up when dry.



Overloading will :

Reduce efficiency


Increase drying time
Increase the risk of creasing.

CAUTION: Do not load clothes or other articles which are dripping wet or have sand and grit on them into your dryer.

Step 2


Switch On

The dryer will not operate unless the door fully pressed in.

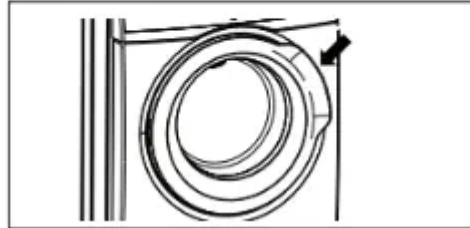

Step 3

Turn the Program Selector knob to choose drying program you want.

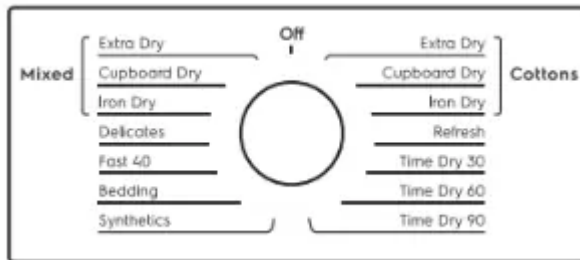

Program Guide

Program	Load Size info	Texile type info
Extra Cottons Dry	Full	Cotton Towel, Jeans For thick fabrics
Cupboard Cottons Dry	Full	Bath towels, Cotton underwear. For fabric that do not need to be ironed
Iron Cottons Dry	Full	Cotton Polo shirt, Cotton T-Shirt, For fabric that do need ironed
Delicates	3.5 kg	Silk, fine fabrics and lingerie. For delicates fabrics that are heat-sensitive
Fast 40	2.0 kg	Cotton Shirt
Bedding	Half	Bedding items
Synthetics	3.5 kg	Normal synthetic for Polyester fabric
Extra Mixed Dry	Half	Mixed load consisting of cotton and synthetic. For thick fabrics.
Cupboard Mixed Dry	Half	Mixed load consisting of cotton and synthetic. For fabrics that do not need to be ironed
Iron Mixed Dry	Half	Mixed load consisting of cotton and synthetic. For fabrics that do need to be ironed
Refresh	5 pcs	Normal synthetic that need to be damp after, For fabrics that have been in storage long time
Time dry 30	1-1.5 kg	For Cotton fabric selected drying time for 30 minutes
Time dry 60	3.0 kg	For Cotton fabric selected drying time for 60 minutes
Time dry 90	4.0 kg	For Cotton fabric selected drying time for 90 minutes

WARNING: Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Reversing Action

The drum is designed to rotate in both direction, clockwise and anti-clockwise. The reduces and give more even drying in a shorter time

Step 3

Turn the Program Selector knob to "OFF" When you have finished using the dryer to turn off the power, then switch off at the power point. It is recommended to power off the appliance when not in use.

Step 4

Clean Lint Filter

After every load clean the lint filter to reduce drying time and avoid overheating.

Checking the Load

To check the dryness or add clothes during the cycle, simply open the door. The dryer will beep several times indicating the door is open. If further drying is required, close the door and then press the Start/Pause button to continue.

For the best drying performance, only add or remove clothes at beginning of the drying cycle.

Next time you turn your dryer on it will be ready to go as it remembers the last program, Temperature and Option setting used. You can change the setting if you wish.

Hints

- Never tumble dry the following: Delicate items such as net curtains, woollen, silk, fabric with metal trim, nylon tights, bulky materials such as anoraks, blankets, eiderdown, sleeping bags, feather quilts and any item containing rubber foam or materials similar to foam rubber.
- Do not place in your dryer undergarments such as bras and corsets that contain metal reinforcements. Your dryer may be damaged if metal parts were to come loose from the garment. Place such items in a bag designed for this purpose.
- Check and empty pockets. Clips, pens, nails and pins can damage both the dryer and your clothes. Other items such as matches or cigarette lighters will cause a fire.
- Close all press studs, hooks, eyes and zips that may catch on something else. Tie all belts and apron strings to prevent tangling.
- Drying time will depend on fabric type and construction, load size and wetness. Save time and money and always spin the load as dry as possible in your washing machine.
- Drying time will also be affected by voltage fluctuations, room temperature and humidity. Clothes will dry more slowly on a cool or humid day.
- For best results, sort the load according to fabric types. Such as heavy items which may take longer to dry, eg towels, flannelette sheets etc, than ones which dry quickly, eg poly/cotton shirts and sheets.
- Avoid drying dark clothes with light coloured items such as towels as lint will show on the dark clothes.

Note: Some fabrics will collect lint from other clothes and items. Separate the lint "givers" and the lint "collectors" to minimise this problem.

Clothes that give lint include towels, nappies, chenille. Clothes that collect lint include corduroy, synthetics and permanent press garments.

- If individual items are still damp after drying, set a minute post drying time. This will be necessary particularly for multilayered items (eg collars, pockets, etc).

- Always clean the lint filter-this will reduce drying time and save you money.
- The laundry must be thoroughly spun before tumble drying.
- Easy-care items eg shirts, should be briefly pre-spun before drying (depending on the crease resistance approximately 30 seconds)
- To avoid static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Remove the laundry when the dryer has finished drying.
- Do not over-dry laundry, this avoids creasing and saves energy.
- Clothes or towels containing sand or grit should be washed first.
- Due to variations in dryer load fabric texture and thickness it is possible that not all items will be dried evenly. If you experience uneven dryness on Cupboard program please use either Extra Dry or Timer Program but be mindful of the type of fabric being dried to avoid overdrying certain types of fabric. Always follow drying instructions attached to the items intended to be dried in a clothes dryer.

To help you, here is a list of the average weights of some common laundry items.

Sheet	700 - 1000g
Tablecloth	400 - 500g
Kitchen towel	70 - 120g
Table napkin	50 - 100g
Towelling hand towel	150 - 250g
Bathrobe	1000 - 1500g
Men's shirt	200 - 300g
Pillowcase	100 - 200g
Men's pyjamas	400 - 500g
Ladies nightdress	200 - 250g
Bath towel	300 - 400g

TROUBLESHOOTING & ACCESSORIES

Troubleshooting

Check the points listed here before you call for help, and make sure that you have followed the Important safety Instructions on pages 3 and 4.

The dryer will not start:

- Plug is not firmly in socket, or power not turned on.
- You have blown a fuse. Check the power point with another appliance.
- You have not closed the dryer door or pushed in the door safety switch button.

Your clothes are still wet:

- The selected drying time was insufficient. Select a longer time setting.
- Longer time may be needed when the room temperature is 10 oC or less.
- Check that the lint filter is not blocked.
- Check to see that you have read all the instructions carefully.
- Contact the Service Center if you are still having problems. Write down the model and serial numbers and the date of purchase before you ring. The Service Center will need this information.

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.