

Getting to know your appliance


In this section, we will explain the display and controls. You will also find out about the various functions of your appliance.

Note: Depending on the appliance model, individual details and colours may differ.

Control panel

You can set your appliance's various functions on the control panel. The current settings are shown on the display.

The overview shows the control panel when the appliance is switched on with a clock time that has been set

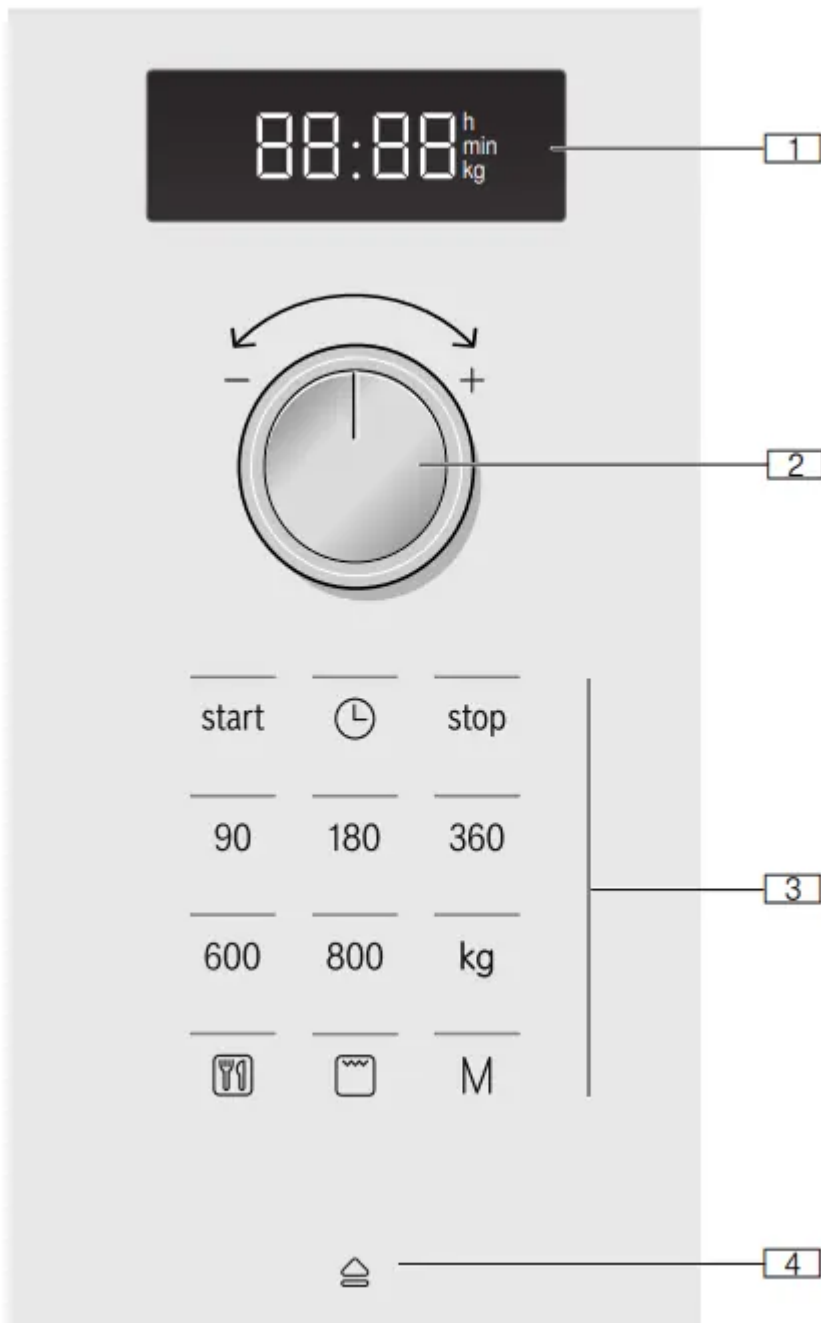

1 Display

For clock and cooking times

2 Rotary selector

For setting the clock and cooking times or for setting automatic programmes

3 Button





4 Automatic door opening button

Controls

You will find a brief explanation of the various buttons below. These buttons allow you to set your appliance simply and directly.

Buttons and their meaning

You will find a brief explanation of the various buttons below

Buttons	Meaning
Symbol	
start	Start the appliance
	Setting the time
stop	Stop or pause the appliance
90	Select a microwave power output of 90 watts
180	Select a microwave power output of 180 watts
360	Select a microwave power output of 360 watts
600	Select a microwave power output of 600 watts
800	Select a microwave power output of 800 watts
kg	Select a weight for the programmes
	Select automatic programmes
	Select the grill
M	Select the memory
	Open appliance door

Rotary selector

The rotary selector is used to alter the default values and set values.

The rotary selector is retractable. Press on the rotary selector to lock it in or out

Automatic door opening

The appliance door springs open if you activate the automatic door opening. You can fully open the appliance door manually.

The automatic door opening does not work in the event of a power cut. You can open the door manually.

Cooling fan

The appliance is equipped with a cooling fan. The fan may run on even if the oven has been switched off.

Changing the signal duration

You will hear a signal when the appliance is switched off. You can change the duration of the acoustic signal. Press the "start" button for approx. 6 seconds.

The new signal duration is adopted.

The clock reappears.

The following are possible:


Short signal duration - 3 tones

Long signal duration - 30 tones.

Accessories

Below, you will find an overview of the accessories included and information on how to use them correctly.

Caution! When removing dishes, make sure that the turntable does not move. Make sure that the turntable is properly locked. The turntable can turn left or right.

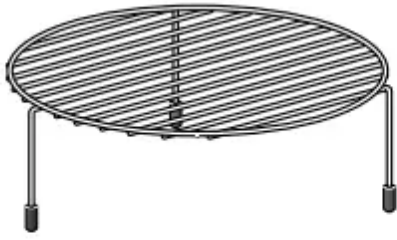

Wire rack

Wire rack for grilling, e.g. steak, sausages or bread, or for setting down cookware, e.g. shallow ovenproof dishes.

Note: Place the wire rack onto the turntable.



Turntable

Note: Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.



Roller ring

Special accessories

Special accessories can be purchased from our aftersales service, from specialist retailers, or online. You will find a comprehensive range of products in our brochures and online.

Their availability and whether it is possible to order them online varies from country to country. Please see our sales brochures for more details.

Note: Not all special accessories are suitable for every appliance. When purchasing, please always quote the exact identification number (E-no.) of your appliance. → "Customer service" on page 17

Steaming utensils

For cooking rice, potatoes and vegetables

Microwave

You can use the microwave to cook, heat up or defrost food quickly. You can use the microwave on its own or in combination with the grill.

To ensure optimum use of the microwave, please observe the notes on cookware and familiarise yourself with the data in the application tables at the end of the instruction manual.


Try out the microwave straight away. You could heat up a cup of water for your tea, for example

Use a large cup without any decorative gold or silver trim and place a teaspoon in it. Place the cup containing the water somewhat eccentrically on the turntable.

1. Press the 800 W button.
2. Use the rotary knob to set 1:30 minutes.
3. Press the "Start" button.

After 1 minute 30 seconds, a signal sounds. The water is hot.

Warning – Risk of scalding! There is a possibility of delayed boiling when a liquid is heated. This means that the liquid reaches boiling temperature without the usual steam bubbles rising to the surface. Even if the container only vibrates a little, the hot liquid may suddenly boil over and spatter. When heating, always place a spoon in the container. This will prevent delayed boiling.

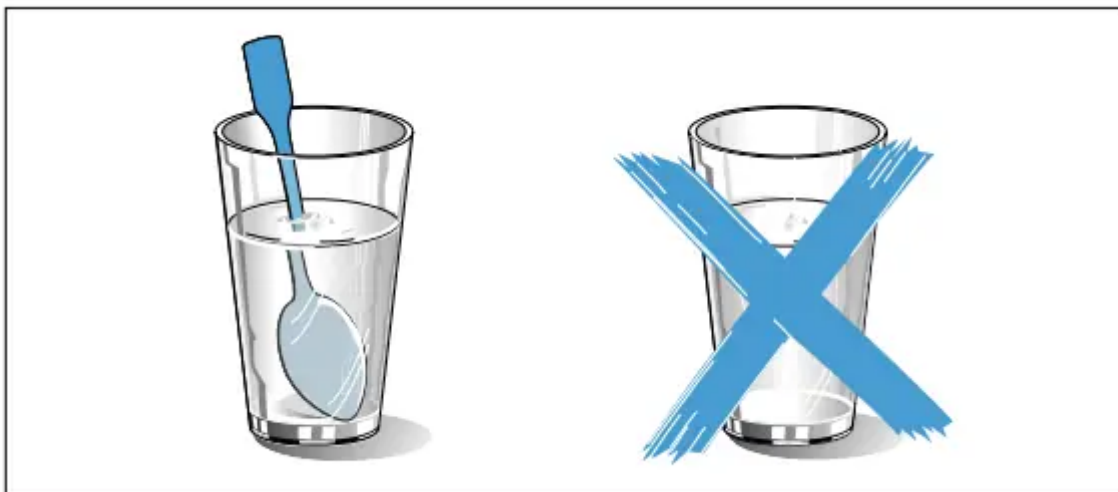

Cookware

Not all cookware is microwavable. So that your food is heated and the appliance is not damaged, only use microwavable cookware.

Suitable cookware

Heat-resistant cookware made of glass, glass ceramic, porcelain, ceramic or heat-resistant plastic are suitable. These materials allow microwaves to pass through.

You can also use serving dishes. This saves you having to transfer food from one dish to another. You should only use cookware with decorative gold or silver trim if the manufacturer guarantees that they are suitable for use in microwaves.

Unsuitable cookware

Metal cookware is unsuitable. Metal does not allow microwaves to pass through. Food in covered metal containers will remain cold.

Caution!

Creation of sparks: Metal – e.g. a spoon in a glass – must be kept at least 2 cm from the cooking compartment walls and the inside of the door. Sparks can irreparably damage the glass on the inside of the door.

Cookware test

Never switch on the microwave unless there is food inside. The short cookware test is the only exception to this rule.

Perform the following test if you are unsure whether your cookware is suitable for use in the microwave.

1. Heat the empty cookware at maximum power for ½ to 1 minute.
2. Check the temperature of the cookware during this time.

The cookware should remain cold or warm to the touch. The cookware is unsuitable if it becomes hot or sparks are generated.

Microwave power settings

Use the button to set the desired microwave power.

90 W	For defrosting delicate foods
180 W	For defrosting and continued cooking
360 W	For cooking meat and heating delicate foods
600 W	For heating and cooking food
800 W	For heating liquids


Note: You can set the 800 W microwave power setting for 30 minutes, 600 W for 1 hour, the other power settings for 1 hour and 39 minutes respectively

Setting the microwave

Example: microwave power 600 watts, 5 minutes

1. Press the required microwave power setting. The indicator light above the button lights up.

2. Set a cooking time using the rotary selector.

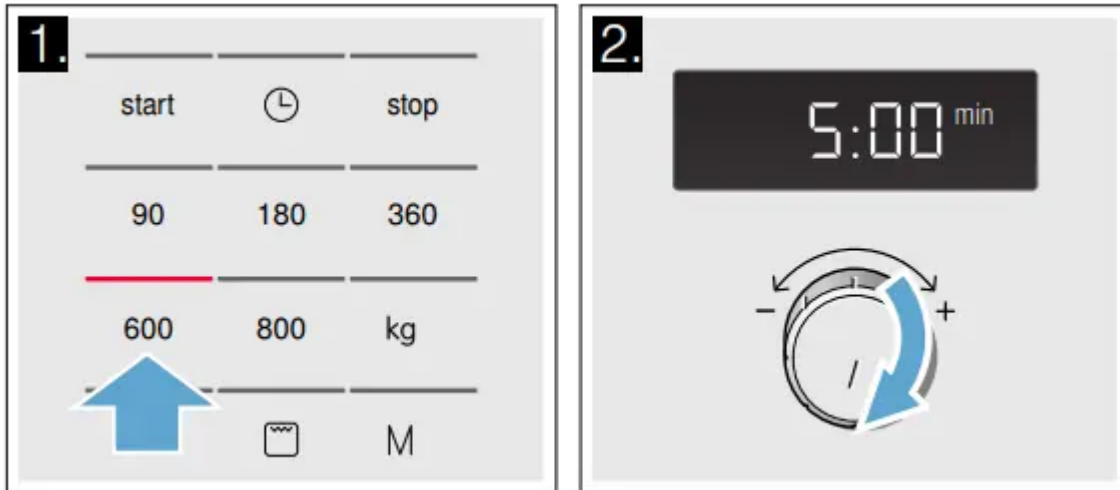

3. Press the start button.

The cooking time counts down in the display.

The cooking time has elapsed

A signal sounds. Open the appliance door or press Stop. The clock reappears.

Changing the cooking time

This can be done at any time. Change the cooking time using the rotary selector.

Pausing the appliance

Touch the Stop button once or open the appliance door. This pauses the appliance. The indicator above the Stop button will light up. After closing the door, touch the Start button again.

Cancelling operation

Grilling

The grill is perfect for gratinating and browning the top of dishes.


You can use the grill on its own or in combination with the microwave

Setting the grill

1. Press the  Grill button.

The indicator light above the button lights up and "10:00 min" appears in the display.

2. Use the rotary selector to set a cooking time.

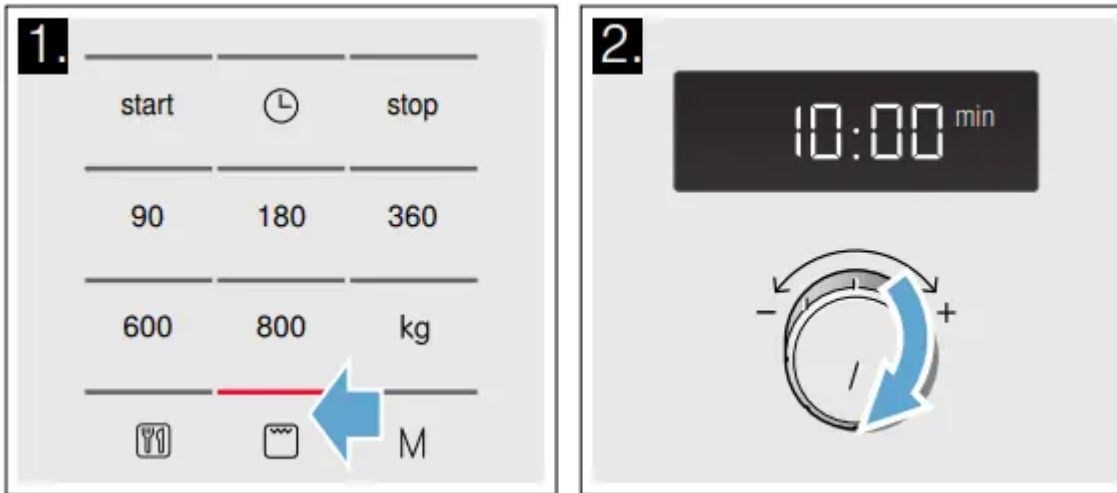

3. Press the "Start" button.

The cooking time counts down in the display.

The cooking time has elapsed

A signal sounds. Open the appliance door or press Stop. The clock reappears.

Changing the cooking time

This can be done at any time. Change the cooking time using the rotary selector.

Pausing the appliance

Touch the Stop button once or open the appliance door. This pauses the appliance. The indicator above the Stop button will light up. After closing the door, touch the Start button again.

Correction

You may correct a set cooking time at any time.

Cancelling

Press the "stop" button twice, or open the door and press the "stop" button once.

Setting the microwave to combi-mode

This involves simultaneous operation of the grill and the microwave. Using the microwave makes your dishes ready more quickly, but they are still nicely browned.

You can switch on all microwave power settings. Exception: 800 and 600 W.


Setting the microwave and grill

Example: 360 W, grill , 5 minutes

1. Press the required microwave power setting.

The indicator light above the button lights up and "1:00 min" appears in the display.

2. Press the  Grill button.

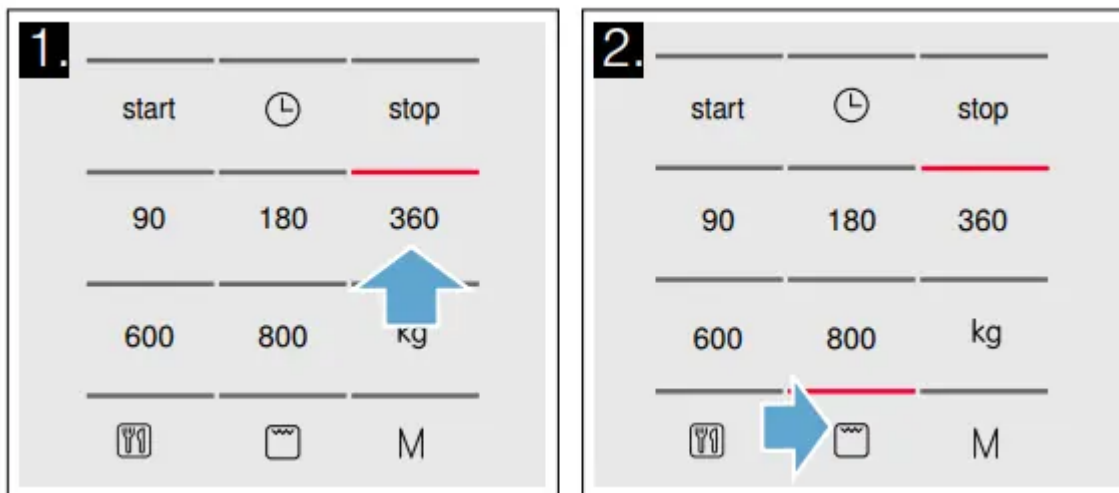

3. Use the rotary selector to set a cooking time.

4. Press the "Start" button



The cooking time counts down in the display.

The cooking time has elapsed

A signal sounds. Open the appliance door or press Stop. The clock reappears.

Changing the cooking time

This can be done at any time. Change the cooking time using the rotary selector.

Pausing the appliance

Touch the Stop button once or open the appliance door. This pauses the appliance. The indicator above the Stop button will light up. After closing the door, touch the Start button again.

Cancelling operation

Press the Stop button twice, or open the door and press the Stop button once.

Note: You can also adjust the cooking time first and then the microwave power setting

Memory


The memory function allows you to save the setting for a dish and call it up at any time.

The memory function is useful if you prepare one dish particularly frequently

Saving memory settings

Example: 360 W, 25 minutes

1. Press the **M** button. The indicator light above the button lights up.
2. Press the required microwave power setting. The indicator light above the button lights up and "1:00 min" appears in the display.
3. Use the rotary selector to set the cooking time.

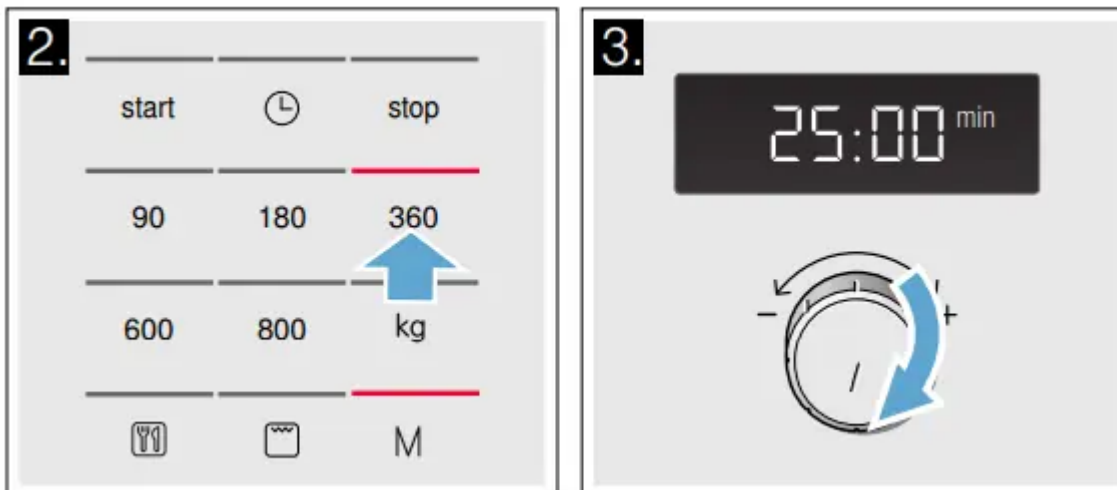

4. Confirm by pressing the **M** button. The clock reappears. The setting has been saved

Starting the memory

It is very easy to start the saved programme. Place your meal into the appliance. Close the appliance door.

1. Press the **M** button. The saved settings are displayed.
2. Press the "Start" button.

The cooking time counts down in the display.

The cooking time has elapsed

A signal sounds. Open the appliance door or press Stop. The clock reappears.

Pausing the appliance

Touch the Stop button once or open the appliance door. This pauses the appliance. The indicator above the Stop button will light up. After closing the door, touch the Start button again.

Cancelling


Press the "stop" button twice, or open the door and press the "stop" button once.


Programmes

You can prepare food really easily using the various programmes. You select a programme and enter the weight of your food. The program then applies the most suitable settings.


Setting a programme

Once you have selected a programme, make settings as follows:

1. Press the  button repeatedly until the required programme number appears. The indicator light above the button lights up.
2. Press the h button. The indicator light above the button lights up and a suggested value appears in the display

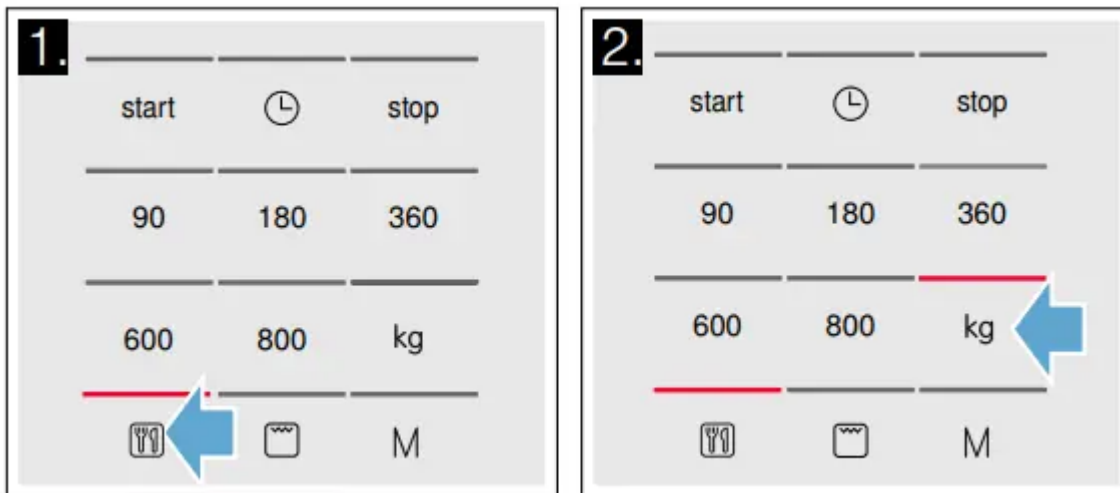

3. Use the rotary selector to set the weight of the dish.
4. Press the "Start" button

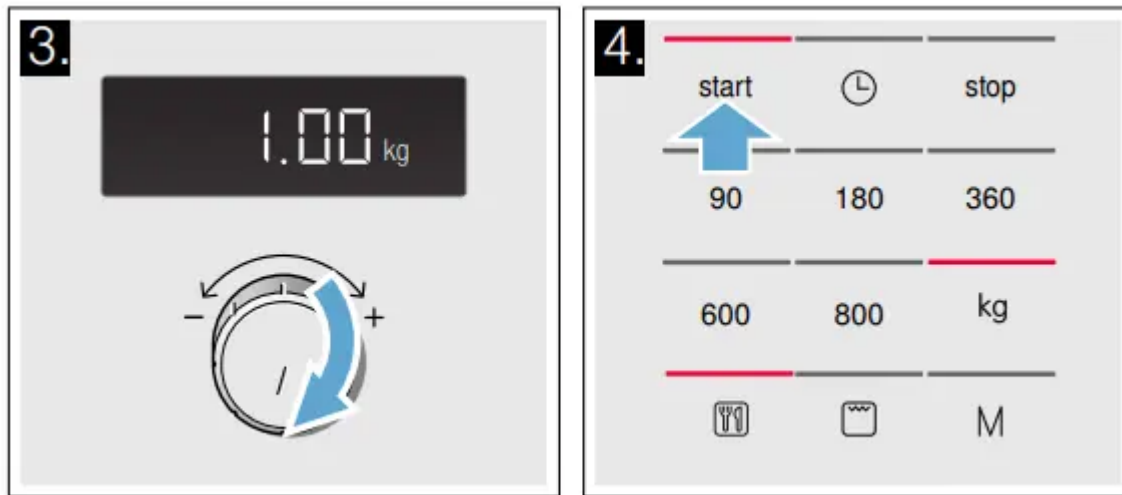

The cooking time for the programme starts counting down.

The cooking time has elapsed

A signal sounds. Open the appliance door or press Stop. The clock reappears.

Correction

Press the "stop" button twice and reset.

Pausing the appliance

Touch the Stop button once or open the appliance door. This pauses the appliance. The indicator above the Stop button will light up. After closing the door, touch the Start button again.

Cancelling

Press the "stop" button twice, or open the door and press the "stop" button once.

Defrosting using the automatic programmes

You can use the 4 defrosting programmes to defrost meat, poultry and bread.

Notes

- **Preparing food**

Use food that has been frozen at -18 °C and stored in portion-sized quantities that are as thin as possible. Take the food to be defrosted out of all packaging and weigh it. You need to know the weight to set the programme

- Liquid will be produced when defrosting meat or poultry. Drain off this liquid when turning meat and poultry and under no circumstances use it for other purposes or allow it to come into contact with other foods.

- **Ovenware**

Place the food in a microwaveable shallow dish, e.g. a china or glass plate, but do not cover

- **Resting time**

The defrosted food should be left to stand for an additional 10 to 30 minutes until it reaches an even temperature. Large pieces of meat require a longer standing time than smaller pieces. Flat pieces of meat and items made from minced meat should be separated from each other before leaving to stand. After this time, you can continue to prepare the food, even though thick pieces of meat may still be frozen in the middle. The giblets can be removed from poultry at this point.

- **Signal**

For some programmes, a signal sounds after a certain time. Open the appliance door and separate the food out or turn the meat or poultry. Close the door and press the Start button.

Programme no.		Weight range in kg
	Defrost	
P 01	Minced meat	0.20 - 1.00
P 02	Pieces of meat	0.20 - 1.00
P 03	Chicken, chicken pieces	0.40 - 1.80
P 04	Bread	0.20 - 1.00

Cooking with the automatic programmes

With the 3 cooking programmes, you can cook rice, potatoes or vegetables.

Notes

- **Ovenware**

The food must be cooked in microwaveable cookware with a lid. For rice, you should use a large, deep dish

- **Preparing food**

Weigh out the food. You need to know the weight to set the programme. Rice: Do not use boil-in-the-bag rice. Add the required amount of water, as specified on the packaging. This is usually two or three times the quantity of rice. Potatoes: For boiled potatoes, cut the fresh potatoes into small, even-sized pieces. Add one tablespoon of water for each 100 g boiled



potatoes, and a little salt. Fresh vegetables: Weigh out the fresh, trimmed vegetables. Cut the vegetables into small, even-sized pieces. Add a tbsp water for each 100 g vegetables.

- **Signal**

While the programme is running, a signal sounds after some time. Stir the food.

- **Resting time**

Once the programme has finished, stir the food again. You should leave it to stand for another 5 to 10 minutes until it reaches an even temperature. The cooking result will depend on the quality and consistency of the food.

Programme no.	Weight range in kg	
	Cooking	
P 05	Rice	0.05 - 0.2
P 06	Potatoes	0.15 - 1.0
P 07	Vegetables	0.15 - 1.0

Combicooking programme

Notes

- **Ovenware**

Cook the food in ovenware which is not too big, and is heat resistant and microwaveable.

- **Preparing food**

Take the food out of its packaging and weigh it. If it is not possible to enter the exact weight, you should round it up or down.

- **Resting time**

Once the programme has finished, allow the food to rest for another 5 to 10 minutes so it reaches an even temperature.

Programme no.	Weight range in kg	
	Combi-cooking programme	
P 08	Bake, frozen, up to 3 cm in height	0.4 - 0.9

Basic settings

Your appliance has basic settings that you can change to suit your needs.

Setting	Options
1 Button tone	On* Switched on
	OFF Switched off Button tone (will remain active for the start and stop buttons)
2 Demo mode	dE0 The appliance is switched off. You can use the buttons and the display, but the buttons will not activate any function on the appliance (i.e. the microwave has no power). Demo mode is mainly used by dealers.

* Factory setting (factory settings may vary depending on the appliance model)

You can change the button tone on your appliance if you wish

Changing the button tone

The appliance must be switched off when you do this.

1. Press and hold the start and stop buttons at the same time for a couple of seconds. **!** will appear in the display.
2. Touch the start button. **On** will start flashing in the display.
3. Turn the rotary selector to **OFF**.
4. Touch the start button. The setting has been applied.
5. Touch the stop button. The button tone has been switched off.

You can change this setting at any time.

Cleaning

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. We will explain here how you should correctly care for and clean your appliance

Note: Unpleasant odours, for example after fish has been prepared, can be removed very easily. Add a few drops of lemon juice to a cup of water. Always place a spoon in the container to prevent delayed boiling. Heat the water for 1 to 2 minutes at maximum microwave output

Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information in the table.

Do not use:

- Harsh or abrasive cleaning agents.
- Metal or glass scrapers to clean the door panels.
- Metal or glass scrapers to clean the door seal.
- Hard scouring pads or sponges.
- Cleaning agents with a high alcohol content.

Wash new sponge cloths thoroughly before use.

Area	Cleaning product
Appliance front	Hot soapy water: Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.
Appliance front with stainless steel	Hot soapy water: Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin (e.g. egg white) immediately. Corrosion can form under these patches or splashes. Special stainless-steel cleaning products are available from the after-sales service or from specialist retailers. Do not use glass cleaners or metal or glass scrapers for cleaning.
Cooking compartment made of stainless steel	Hot soapy water or vinegar solution: Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.
Recess in the cooking compartment	Damp cloth: Water must not be allowed to run into the appliance through the turntable drive. Dry the turntable drive with a cloth
Turntable and roller ring	Hot soapy water: When placing the turntable back into its recess, it must engage properly
Wire rack	Hot soapy water: Soak and clean with a dish cloth or brush. Do not scour. Do not use metal or glass scrapers for cleaning
Door panel	Glass cleaner: Clean with a dish cloth. Do not use glass scrapers.

Trouble shooting

If a fault occurs, there is often a simple explanation. Before calling the after-sales service, please refer to the fault table and attempt to correct the fault yourself.

Tip: If a dish does not turn out exactly as you wanted, refer to the following chapter, where you will find lots of tips and notes relating to the optimum

Fault table

Fault	Possible cause	Remedy/information
The appliance is not working	The plug is not plugged into the mains	Connect the appliance to the electricity supply
	Power failure	Check whether other kitchen appliances are working
	The circuit breaker/fuse is faulty	Check in the fuse box to make sure that the circuit breaker/fuse for the appliance is in working order
	Faulty operation	Switch off the circuit breaker/fuse for the appliance in the fuse box and switch it back on after approximately 10 seconds
Three zeros are lit on the display	Power failure	Reset the time.
The appliance is not operating. A cooking time is shown on the display	The rotary selector has been accidentally turned.	Press the "stop" button.
	The "start" button has not been pressed after the setting was applied.	Press the "start" button or cancel the setting by pressing the "stop" button.
The microwave is not working.	The door has not been properly closed.	Check whether food remnants or debris is/are trapped in the door
	The "start" button has not been pressed	Press the "start" button.
It is taking longer than usual for food to heat up	The microwave power output has been set too low.	Select a higher microwave power setting.
	A larger amount of food than usual has been placed in the appliance.	Double the amount – double the time.

	The food was colder than usual.	Stir or turn the food during heating
The turntable is making a scraping or grinding noise.	Dirt or debris in the area around the turntable drive	Clean the roller ring and the recess in the cooking compartment
The microwave has stopped for no apparent reason.	The microwave has a fault	If this fault recurs, please call the after-sales service.
An M is shown on the display.	The appliance is in demo mode	Deactivate demo mode. → "Basic settings" on page 14
Error message "E - 3"	Fault in automatic door opening system.	If an error message is displayed, switch the appliance off and on again; if the message disappears, it was a one-off problem. If the fault occurs again or the error message is still displayed, please contact the aftersales service and provide the fault code.

Technical specifications

Input voltage	230-240 V AC, 50 Hz
Power consumption	1270 W
Max. output power	800 W (IEC 60705)
Max. grill output power	1000 W
Microwave frequency	2450 MHz
Circuit breaker/fuse rating	10 A
Dimensions (H/W/D)	
- Appliance	382 x 594 x 317 mm
- Cooking compartment	201 x 308 x 282 mm
VDE approved	Yes
CE mark	Yes

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.