


Getting to Know Your TV

FRONT PANEL

Remote Sensor and Power Indicator

When using the remote, aim it directly at this sensor. The power indicator flashes on when the TV turns on, then goes out after several seconds. To keep the power indicator on, see Turning the Power Indicator On or Off on page

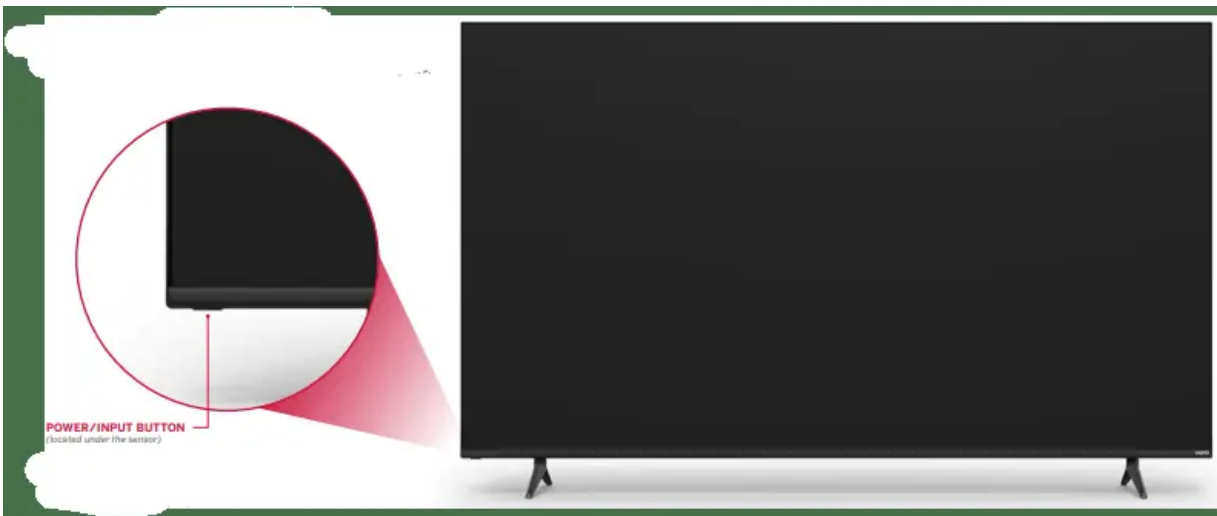

When TV is OFF:

Press to turn on the TV.

When TV is ON:

Press to change to the next input source.

Press, hold (3 seconds) and release to turn TV off.

Press and hold (12 seconds) to reset TV to default settings.

REAR PANEL



HDMI

Connect an HDMI device



Composite

Connect a composite



Audio Out

Connect to an RCA device, such as sound bar



Coaxial

Connect to a coaxial cable from cable, satellite, or antenna



USB

Connect a USB thumb drive to play photo, music, or video



Optical Audio Out

Connect to an optical/SPDIF audio device, such as home audio receiver



Ethernet


Connect an Ethernet cable to modem/router

Connecting a device — AUDIO & VIDEO CABLE TYPES

Your TV can be used to display output from most devices.

1. Verify that your device has a video port that matches an available port on the TV (HDMI, Composite, etc.).
2. Connect the appropriate cable (not included) to the TV and the device.
3. Turn the TV and your device on.
4. Set the TV's input to match the connection you used (HDMI-1, HDMI-2, etc.)

HDMI CABLE



HDMI

COAXIAL CABLE



Coaxial

COMPOSITE (AV) CABLE



Y



L



R

Connecting a device — AUDIO CABLE TYPES

Your TV can be output sound to an audio device, such as a receiver or sound bar.

1. Verify that your device has an audio port that matches an available port on the TV (optical, RCA, etc).
2. Connect the appropriate cable (not included) to the TV and the device.
3. Turn the TV and your device on.

HDMI CABLE



HDMI

COMPONENT AND/OR COMPOSITE CABLE



R



L

OPTICAL/SPDIF CABLE



Optical

Note: The actual ports and their locations may vary, depending on the TV model.

WALL-MOUNTING THE TV

First you will need a wall mount. Consult the provided table below to find the appropriate mount for your TV.

Be sure the mount you choose is capable of supporting the weight of the TV.

To install your TV on a wall:


1. Disconnect any cables connected to your TV.
2. Place the TV face-down on a clean, flat, stable surface. Be sure the surface is clear of debris that can scratch or damage the TV.

3. If attached, remove the stands by loosening and removing the screws.

4. Attach your TV and wall mount to the wall by carefully following the instructions that came with your mount. Use only with a UL-listed wall mount bracket rated for the weight/load of your TV.

TIP: Installing a TV on a wall requires lifting. To prevent injury or damage to the TV, ask someone to help you.

WARNING: Do not use the screws that are included inside the wall mount holes to mount TV.

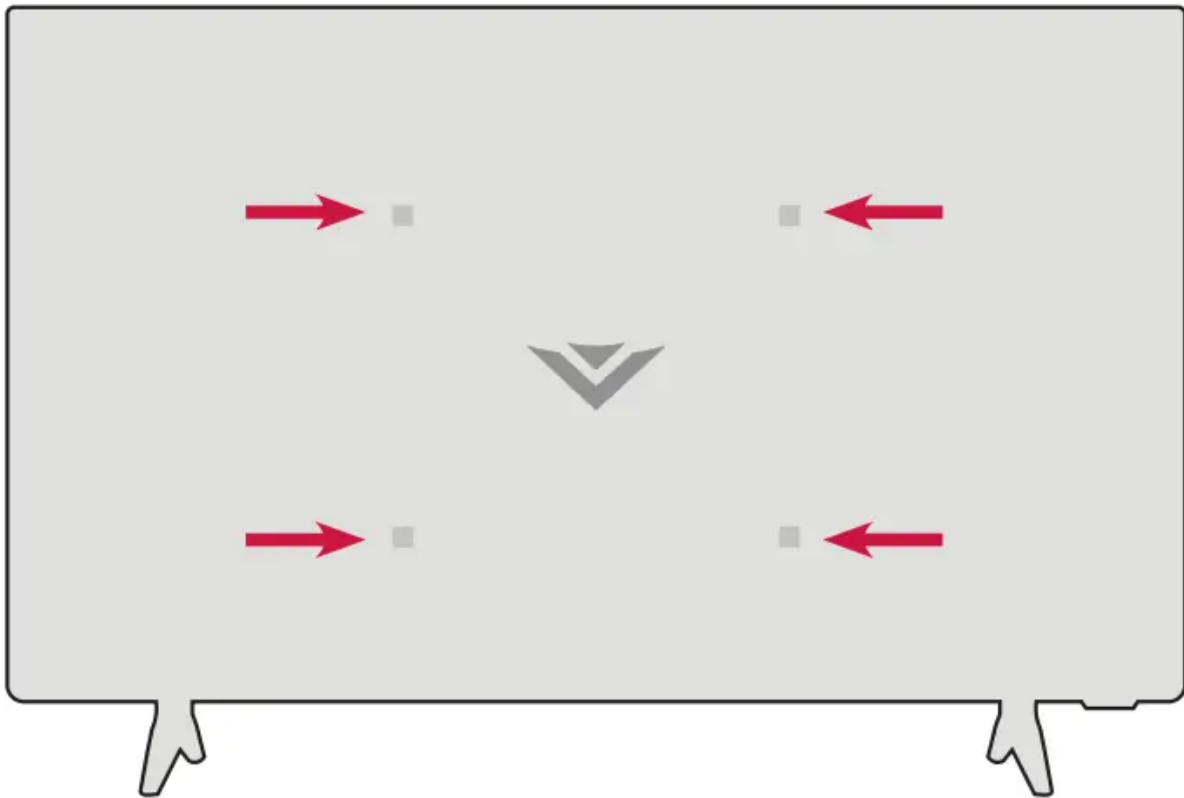


Note: The image shown here is for illustrative purposes only and may be subject to change. The actual number of ports and their locations may vary, depending on the model.

| | M43Q6-J04 | M50Q6-J01 | M55Q6-J01 | M65Q6-J09 | M70Q6-J03 | M75Q6-J03 |
|----------------------------|-----------------|---------------------|---------------------|--------------------|-------------------|---------------------|
| Screw Size | M4 | M6 x 14 mm | M6 x 14 mm | M6 | M6 | M6 |
| # of Screws (not included) | 4 | 4 | 4 | 4 | 4 | 4 |
| Hole Depth | 10 mm | 14 mm | 14 mm | 9 mm | 12 mm | 12 mm |
| Hole Pattern | 200 mm x 100 mm | 200 mm x 200 mm | 300 mm x 200 mm | 400 mm x 200 mm | 400 mm x 200 mm | 400 mm x 200 mm |
| Weight w/o Stand | 16.5 lb (7.5kg) | 25.46 lb (11.55 kg) | 29.39 lb (13.33 kg) | 41.23 lb (18.7 kg) | 54.0 lb (24.5 Kg) | 62.38 lb (28.29 kg) |




USING THE REMOTE

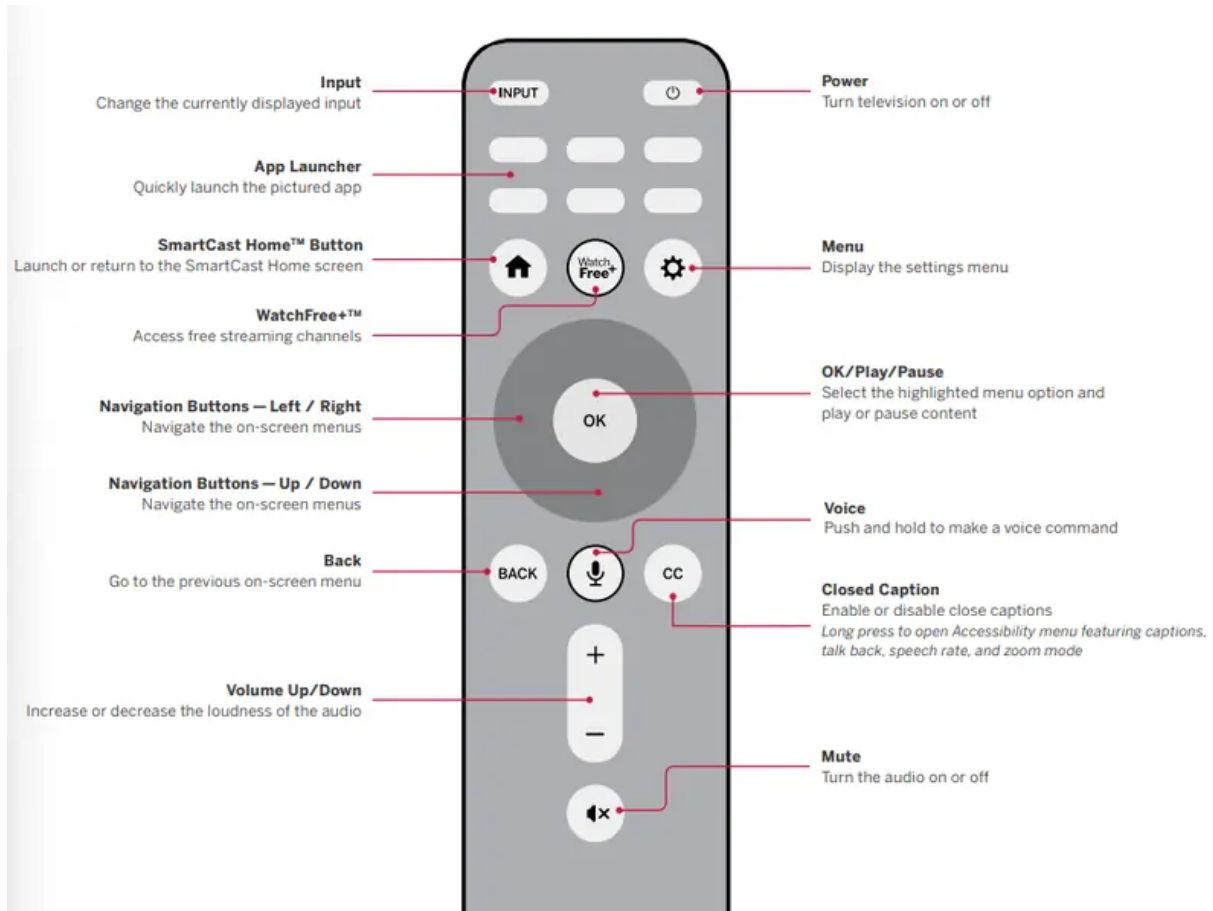

Replacing the Batteries

1. Push and slide the cover down. Then lift the cover to access the battery compartment.
2. Insert two batteries into the remote control. Make sure that the (+) and (-) symbols on the batteries match the (+) and (-) symbols inside the battery compartment.
3. Replace the battery cover and slide to close.

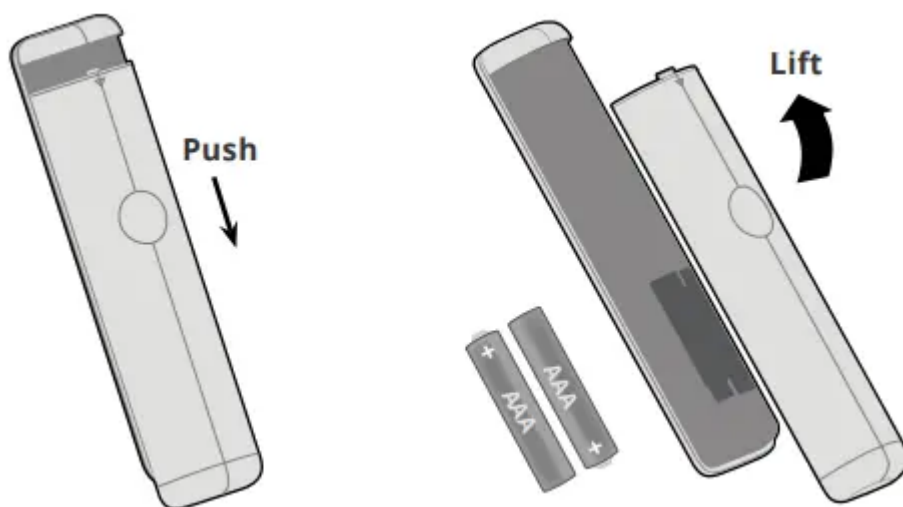

In many places batteries cannot be thrown away or discarded with household waste. Please ensure you properly dispose of your batteries consistent with the laws and/or regulations where you live. For more information please visit: www.vizio.com/environment

WARNING: Keep the remote control batteries away from children. It may cause choking and/or lead to a fire or chemical burn if mishandled. Do not dispose of batteries in fire. Replace only with batteries of the correct type. Risk of fire or explosion if the battery is replaced by an incorrect type.

TIP: When needed, VIZIO recommends replacing the batteries that came with this remote with two, new Duracell 'AAA' alkaline batteries.

USING THE VOICE REMOTE

You can easily control your TV with the included Voice Remote.

To pair your remote to the TV:

Here are some phrases you can say: During first-time setup, your remote should automatically pair to your TV with Bluetooth.

To manually pair:

Press the MIC  button to launch pairing mode

TIP: The voice remote must be within close enough range of the TV to pair properly.

How to use the voice control:

1. Push and hold the  MIC button while speaking a command.



Here are some phrases you can say:

- ▼ "Find free comedy movies."
- ▼ "Switch input to HDMI-2."
- ▼ "Launch WatchFree+."
- ▼ "Turn on captions."
- ▼ "Lower volume to 10."

Using the SmartCast Mobile™ app for voice control:

You can also use the free VIZIO SmartCast Mobile app as a voice control remote. Refer to the SmartCast Mobile section on page 29 for more information.

Connect to other popular voice assistant devices:

VIZIO TVs also work with Google Assistant, Siri, and Alexa-enabled devices for hands-free voice control.



TIP: If you want to use a voice assistant to turn your TV on, make sure Quick Start Mode is enabled. Refer to Adjusting the Power Mode on page 23.

Completing the First-Time Setup


Before you begin the first-time setup:

- Your TV should be installed and the power cord should be connected to an electrical outlet.
- If you have a wireless network, have the network password ready.

- If you are connecting to your network with an Ethernet cable, connect it to the Ethernet port on the TV.

The first time you turn on the TV, the on-screen instructions will guide you through each of the steps necessary to get your TV ready for use:


1. Choose your language. Pressing the CC button will enable TTS (text-to-speech) functionality.

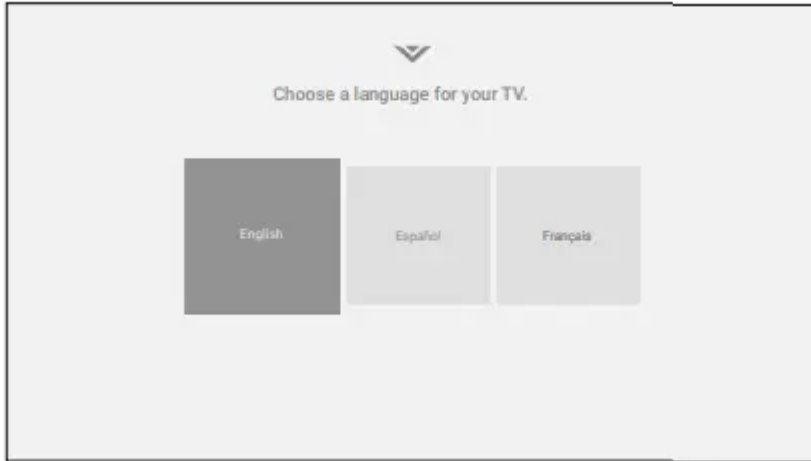


2. Choose home use.



3. Pair your voice remote.

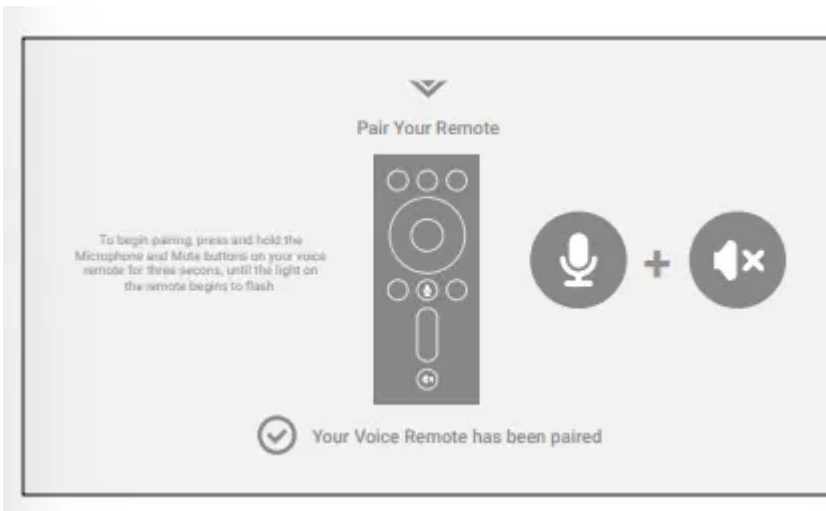


4. Choose your country.

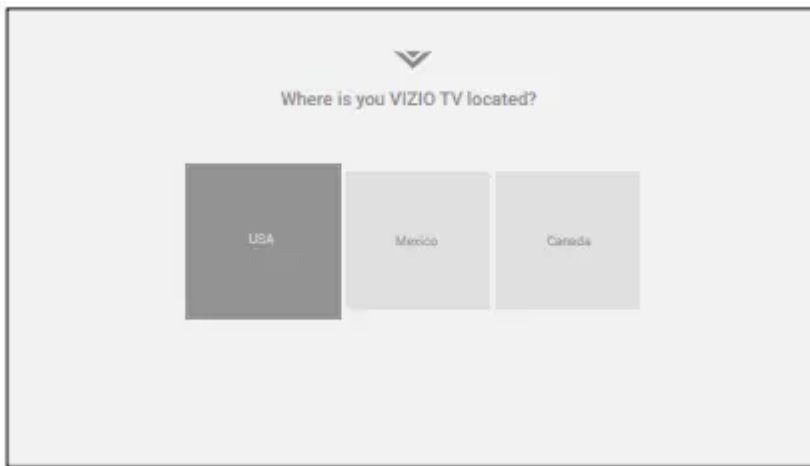

5. Choose your Wi-Fi network and enter the password.




6. Name your TV.

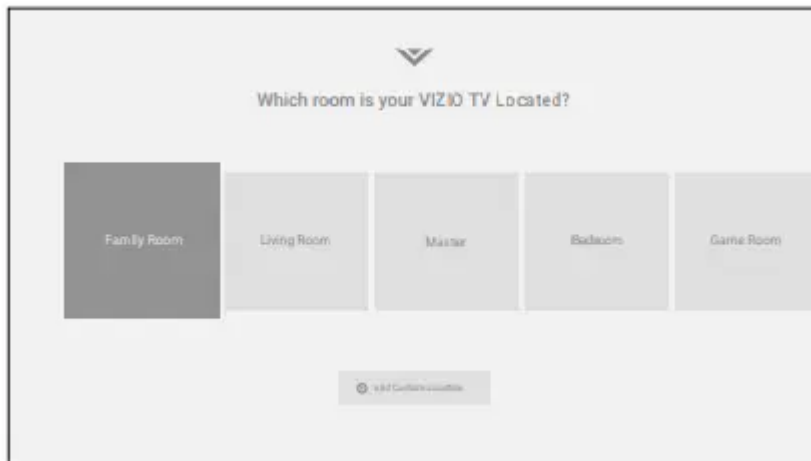

7. Scan for channels.



8. Accept the Terms & Conditions.

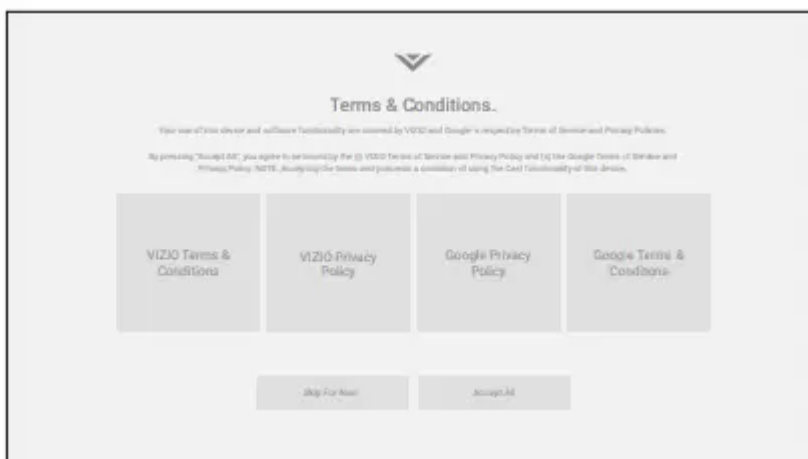

9. View and accept VIZIO Viewing Data Policy.






Using the On-Screen Menu

Your TV features an easy-to-use on-screen menu.

- To open the on-screen menu, press the MENU button on the remote.
- From this menu, you can:
- Adjust the picture settings
- Adjust the audio settings
- Adjust the network settings
- Adjust the TV channel settings
- Adjust accessibility settings
- Adjust TV system settings
- Access admin and privacy settings
- View the user manual



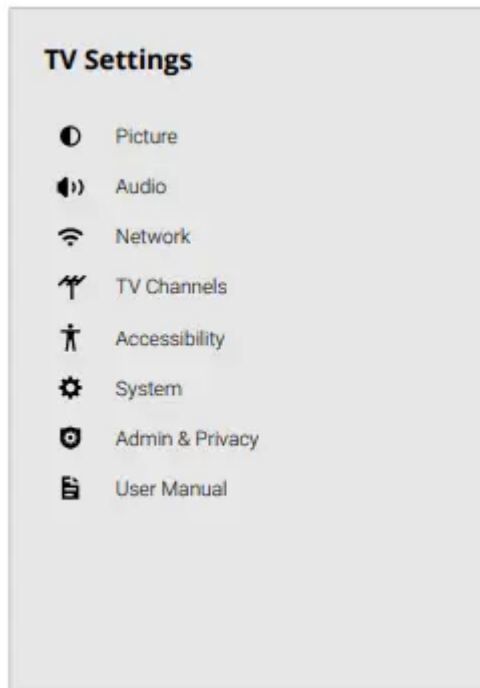

NAVIGATING THE ON-SCREEN MENU

To open the on-screen menu:

1. Press the MENU button on the remote.
2. Use the Navigation buttons to highlight a menu option, and press the OK button to select that option.


TIP: While navigating the on-screen menu, you can press the BACK button at any time to return to the previous menu screen.

CHANGING THE INPUT SOURCE

External devices, such as DVD players, Blu-ray players, and video game consoles, can be connected to your TV. To use one of these devices with your TV, you must first change the input source using the input menu.

To change the input sources:

1. Press the INPUT button on the remote. The input menu is displayed.
2. Use the Navigation buttons or the INPUT button on the remote to highlight the input you wish to view. The corresponding inputs are named on the back of your TV.
3. Press OK or release the INPUT button. The selected input is displayed.

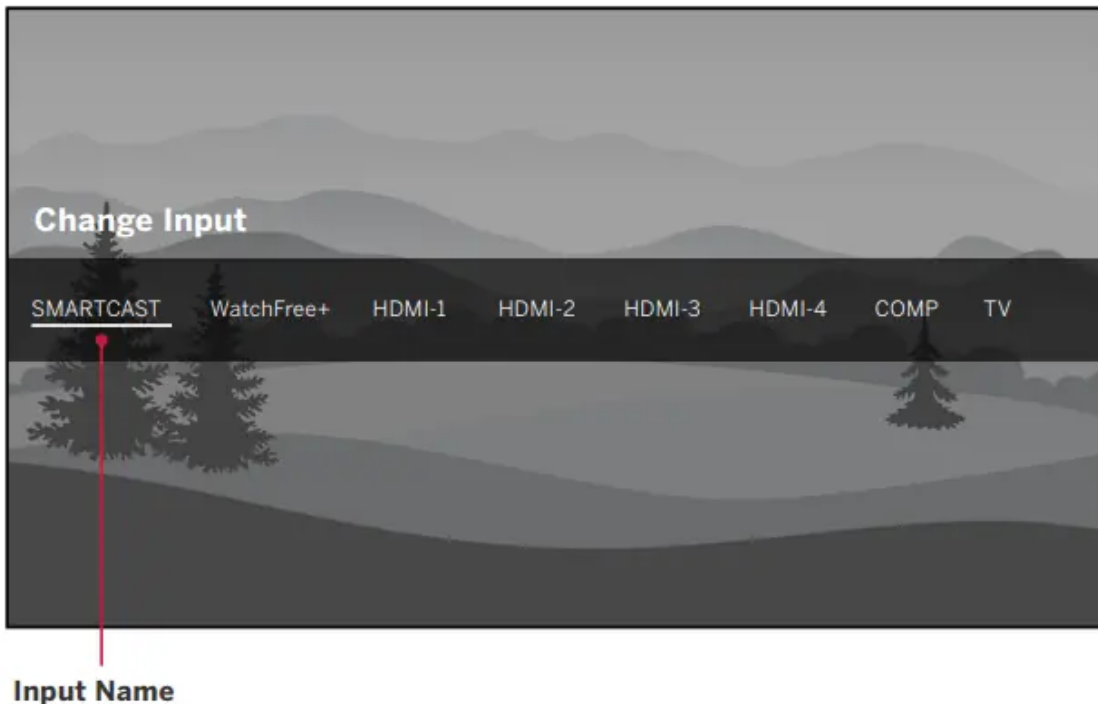

The underlined input on the left is the current input selected. Inputs may vary by TV

TIP: You can change the input names that appear on the Input menu to make your devices easy to recognize. See Renaming Devices on the Input Menu on page 23

ADJUSTING THE PICTURE SETTINGS

Your TV can be adjusted to suit your preferences and viewing conditions.

To adjust the picture mode settings:

Menu > Picture > Picture Mode


1. Use the Navigation buttons on the remote to highlight Picture Mode, then use the Left/Right Navigation buttons to change the picture mode:

- **Vivid** — Sets the picture settings to values that produce a brighter, more vivid picture.
- **Bright** — Great for viewing everyday TV, such as news and TV shows, that requires a brighter image with motion enhancements.
- **Calibrated** — Accurate colors intended for cinema content viewing in a bright room.
- **Calibrated Dark** — Accurate colors intended for cinema content viewing in a dark room or at nighttime.
- **Game** — Reduces throughput delays and optimizes the picture settings for displaying game console output. Also the preferred picture mode for computer mode.
- **Sports** — Sets the picture settings to values ideal for watching sport events with motion control setting.

TIP: If you save changes to the setting for a picture mode, an asterick will appear after its name. See Saving a Custom Picture Mode on page 13.

2. To manually change each of the picture settings, use the Up/Down Navigation buttons on the remote to highlight that picture setting, then use the Left/Right Navigation buttons to adjust the setting:

- **Ambient Light Sensor** — Detects your room's light level and automatically adjusts Picture the background. Select Low for the darkest picture or High for the brightest picture. Picture Mode Calibrated Select Off for manual backlight control.
- **Backlight** (SDR content) or Tone Mapping (HDR content) — Adjusts Brightness the LED brightness to affect the overall Contrast brilliance of the picture.
- **Brightness** — Adjusts the black level of Tint the picture. When this setting is too low, Sharpness the picture may be too dark to distinguish Color Temperature Normal details. When this setting is too high, the Picture Aspect Normal picture may appear faded or washed out.
- **Contrast** — Adjusts the white level of the picture. When this setting is too low, the picture may appear dark. When this setting is too high, the picture may appear faded or washed out. If the setting is too high or too low, detail may be difficult to distinguish in dark or bright areas of the picture.
- **Color** — Adjusts the intensity of the picture colors.
- **Tint** — Adjusts the hue of the picture. This setting is useful in adjusting the flesh tones in the picture. If flesh appears too orange, reduce the level of color before adjusting tint.
- **Sharpness** — Adjusts the edge sharpness of picture elements. It can be used to sharpen non-HD (high definition) content; however, it will not produce detail that does not otherwise exist.

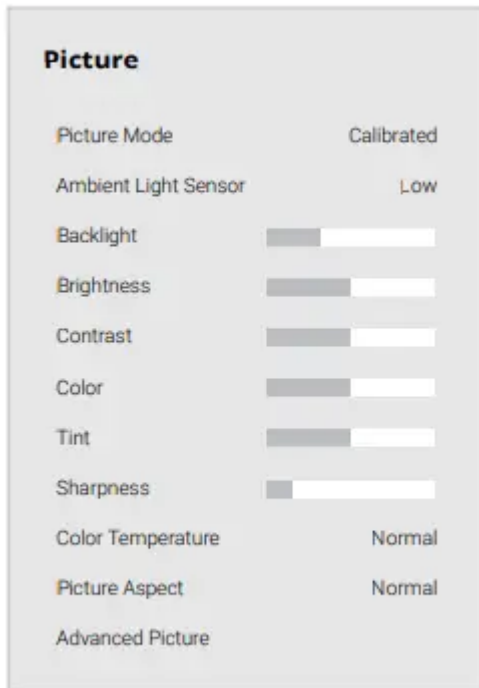

Adjusting the Color Temperature


Adjusting the color temperature changes the white balance of the picture.

To adjust the color temperature:

Menu > Picture > Color Temperature

Use the Navigation buttons on the remote to highlight a color temperature preset and then press OK.

- **Warm** — Produces an orange-hued picture.
- **Cool** — Produces a blue-hued picture.
- **Normal** — Optimized for television viewing.

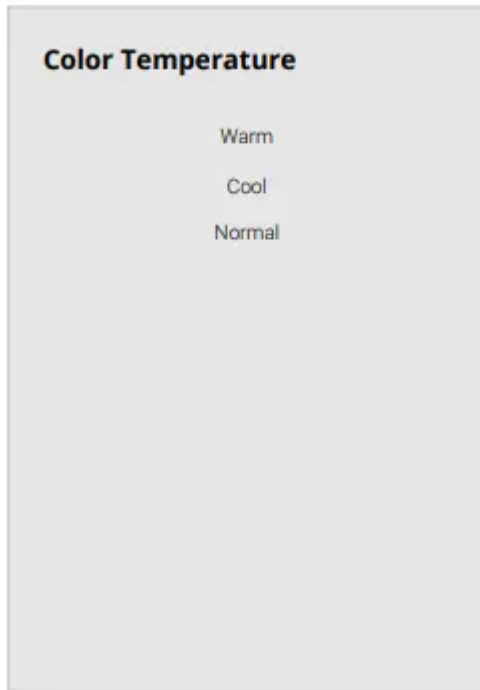

Changing the Picture Aspect Ratio

To change the screen aspect ratio:


Menu > Picture > Aspect Ratio

Use the Navigation buttons to highlight the aspect ratio you wish to view.

Your TV can display images in different modes:

- **Normal (default)** — No change to aspect ratio.
- **Panoramic*** — Stretches a 4:3 image to fill 16:9 screen with an algorithm so the center doesn't look stretched.
- **Wide** — Stretches a 4:3 aspect ratio to fill 16:9 screen. If a 16:9 image, adds black bars to top and bottom.
- **Zoom** — Expands image both horizontally and vertically by 14%.
- **Stretch*** — When the 16:9 signal is a 4:3 image with black bars left and right, stretches to fill the screen.

Some programs have black bars on the top or sides of the screen so that the picture keeps its original shape. Examples include widescreen movies and older TV programs.

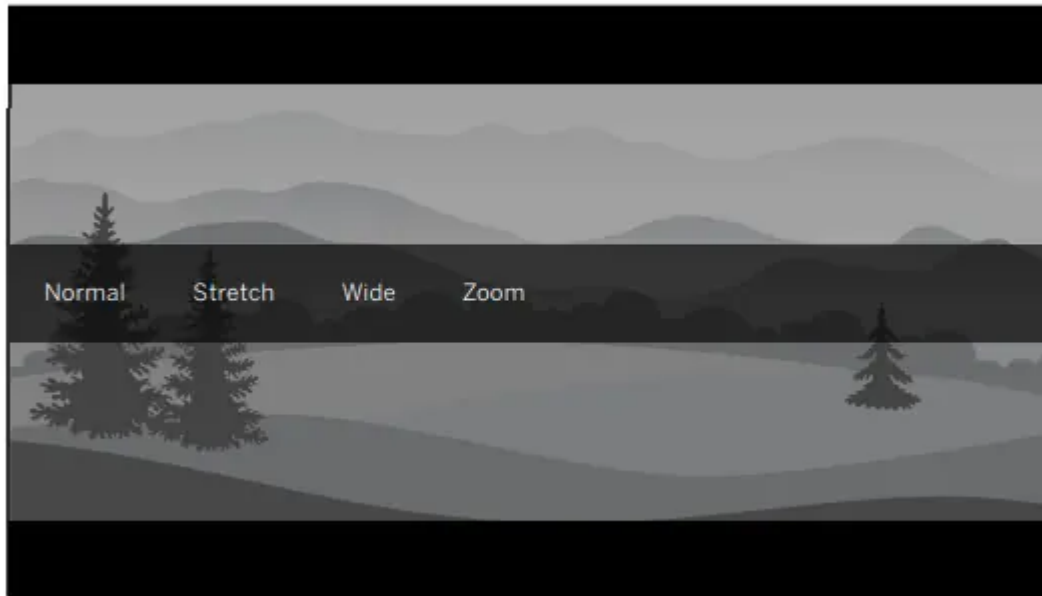

TIP: The aspect ratio cannot be changed for Ultra HD content or HDR content.

Adjusting Advanced Picture Settings

To adjust advanced picture settings:

Menu > Picture > Advanced Picture

Use the Navigation buttons to highlight the setting you wish to adjust, then press the Left/Right Navigation buttons to change the setting:

- **Black Detail** — Adjusts the average brightness of the picture to compensate for large areas of brightness.
- **Super Resolution** — Configures the resolution to enhance dim and blurred pictures resulting in a sharper image.
- **Edge Enhancement** — Increases the smoothness of edges.
- **Local Contrast** — Adjust the contrast of the picture locally.
- **Backlight Control** — Dynamically improves the contrast ratio of the picture by adjusting the backlight.

| Advanced Picture | |
|------------------------|--------------|
| Black Detail | Off |
| Super Resolution | Medium |
| Edge Enhancement | Low |
| Local Contrast | Low |
| Backlight Control | Off |
| Reduce Noise | |
| Gaming Engine™ | |
| Film Mode | On |
| Gamma | 2.1 - Normal |
| Enhanced Viewing Angle | |
| Color Calibration | Off |

- **Reduce Noise:**

- **Signal Noise:** Reduces background picture noise when viewing analog sources. This function helps to correct "speckle" noise with a slight reduction in sharpness.
- **Block Noise:** Reduces the side effects of digital compression such as "blocking" and noise on sharp edges. The High setting will cause a slight reduction in sharpness.
- **Contour Smoothing:** Removes visible contour noise without loss of the complex detail.

- **Gaming Engine™:**

- **Game Low Latency:** Reduces video delay (lag) when gaming. When set to Auto and Automatic Low Latency Mode (ALLM) is detected, ALLM will apply for the duration of the game.
- **Game HDR:** Optimizes picture quality for HDR game.

- **Film Mode** — Optimizes the picture for watching films. Select On or Off.

- **Gamma** — Set the shape of the Gamma curve. Use lower Gamma values for bright room conditions, and higher values when it's dark.

- **Color Calibration** — Calibrate colors using HSB, gain, offset and 20 point white balance and test or reset colors to defaults.

Adjusting the Color Tuner Settings

The Color Tuner settings allow you to adjust the color management system, 20 point white balance, turn color channels off for testing, and display SMPTE, flat, ramp, and uniformity analyzer test patterns.

To access the color tuner table:

Menu > Picture > Advanced Picture > Color Calibration > Color Tuner

WARNING: The Color Tuner, 20 Point White Balance, and test patterns allow technicians to manually calibrate the TV. Calibration requires specialized training, an input with precisely set colors, and a specialized light meter.

To turn color channels of and on:

1. Use the Navigation buttons on the remote to highlight Red, Green, or Blue.
2. Press the OK button to turn the color channel off or on. An X appears over a color channel that has been turned off.
3. Only two color channels can be turned off at the same time.

TIP: Any changes made affect the color temperature setting. Select the preferred color temperature setting first. See Adjusting the Color Temperature on page 9.

To adjust the color management system settings:


1. Use the Navigation buttons on the remote to highlight the Hue, Saturation, Brightness, Offset, or Gain of the color you wish to adjust. Press the OK button.
2. Use the Left/Right Navigation buttons to adjust the value. When you are finished press the OK button to save the setting.

| Color Tuner | | | | | | |
|-------------|-----|-------|------|------|---------|--------|
| | Red | Green | Blue | Cyan | Magenta | Yellow |
| Hue | 0 | 0 | 0 | 0 | 25 | -14 |
| Saturation | -1 | 5 | -4 | 0 | -2 | 0 |
| Brightness | -24 | 0 | -22 | 0 | 0 | 0 |
| | | | | | | |
| | | | | | | |

To show or hide the SMPTE Test

Pattern: Menu > Picture > Advanced Picture > Color Calibration > Color Tuner > SMPTE Test Pattern



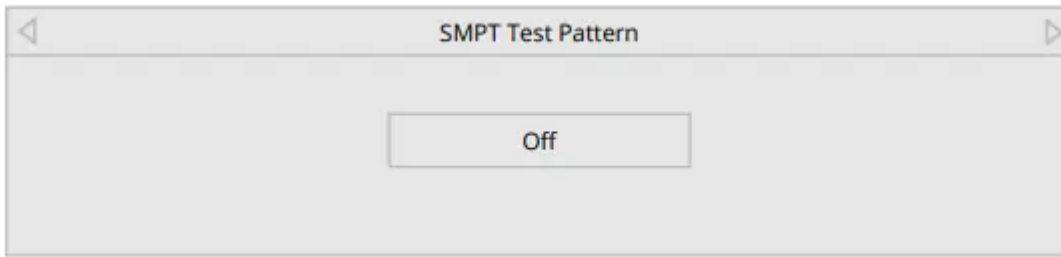


1. Use the Navigation buttons on the remote to highlight Off. Use the Left/Right Navigation buttons to select On to show the SMPTE Pattern.

—or—

2. To hide the SMPTE Test Pattern, use the Left/Right Navigation buttons to select Off.

To show or hide the Ramp Test Pattern:

Menu > Picture > Advanced Picture > Color Calibration > Color Tuner > Ramp Test Pattern

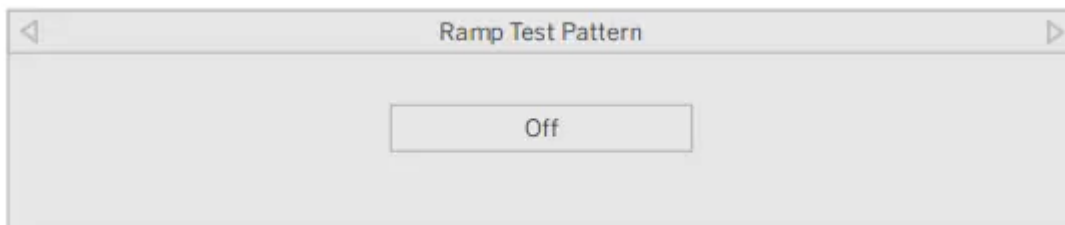


1. Use the Navigation buttons on the remote to highlight Off. Use the Left/Right Navigation buttons to select the color for the ramp test pattern. Selecting a color immediately shows that color ramp.

—or—

2. To hide the Ramp Test Pattern, use the Left/Right Navigation buttons to select Off.

To show or hide the Uniformity Analyzer Test Pattern:

Menu > Picture > Advanced Picture > Color Calibration > Color Tuner > Uniformity Analyzer Test Pattern

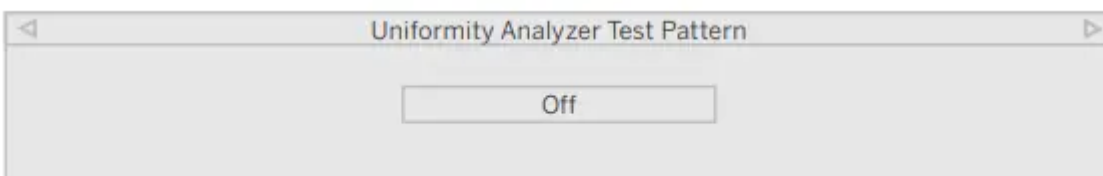

1. Use the Navigation buttons on the remote to highlight Off. Use the Left/Right Navigation buttons to select On to show the Uniformity Analyzer Test Pattern.

—or—


2. To hide the Uniformity Analyzer Test Pattern, use the Left/Right Navigation buttons to select Off.

To adjust the White Balance Tuner settings:



Menu > Picture > Advanced Picture > Color Calibration > White Balance Tuner

1. Use the Navigation buttons on the remote to highlight the Gain and Color values you wish to adjust. Press the OK button and use the Left/Right Navigation buttons to adjust the value. When you are finished, press the OK button to save the setting

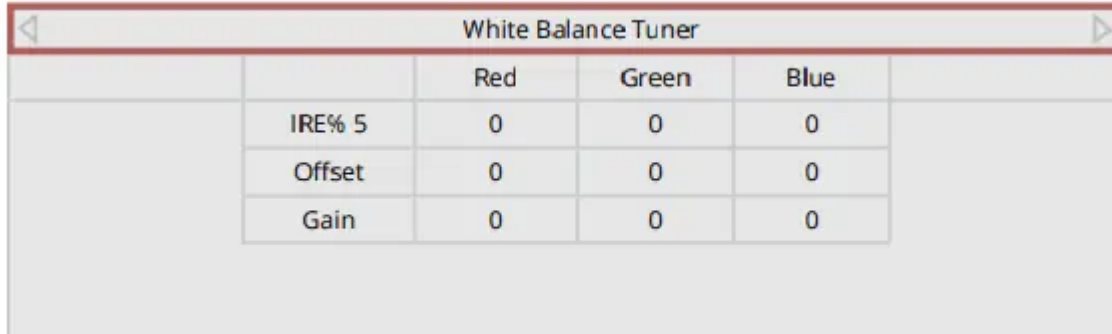

| | Red | Green | Blue |
|--------|-----|-------|------|
| IRE% 5 | 0 | 0 | 0 |
| Offset | 0 | 0 | 0 |
| Gain | 0 | 0 | 0 |

Adjusting Picture Input Settings

Enable HDMI Mode, Full Color 4:4:4, and adjust picture size and position.

To adjust the Input settings:

Menu > Picture > Input Picture Settings

Use the Navigation buttons to highlight the setting you wish to adjust.

- **Picture Size and Position*** — configure the display size and position of the picture to the screen.
- **HDMI Mode*** — Expanded color display. Only available for an HDMI input.
- **Full Color 4:4:4*** — Maintains full color data with 4:4:4 content. Some picture settings will not be available when this setting is On. Only available for an HDMI input.
- **Color Space Range** — Select Color Space for the source. Video sources uses YCbCr, but PC uses RGB.

Adjusting the Picture Mode Edit Settings

Manage custom picture modes and reset preset picture modes.


To adjust the Picture Mode Edit settings:

Menu > Picture > Picture Mode Edit

Use the Navigation buttons to highlight the setting you wish to adjust, then press OK to change the setting: •

- **Save Picture Mode** — Save a custom picture mode.
- **Copy Picture Mode** — Copy the settings for a custom picture mode.
- **Lock Picture Mode**—Prevent changes to custom picture modes.

- **Reset Picture Mode** —Reset the picture mode settings to factory default values. Only available on customized preset modes.
- **Delete Picture Mode** —Delete a custom picture mode. Inputs assigned to the custom picture mode will use the Calibrated picture mode.

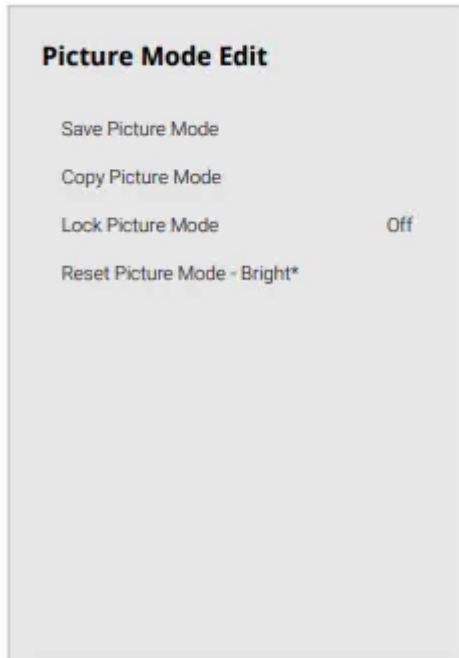

Saving a Custom Picture Mode

Custom picture modes allow you to save a group of custom settings for various viewing conditions and video sources.

To save a custom picture mode:

Menu > Picture > Picture Mode Edit > Save Picture Mode > Enter a Name > Save

Custom picture modes allow you to save a group of custom settings for various viewing conditions and video sources.

- Changes made while on any preset picture mode will add an asterisk on the top right corner of the preset mode.
- The custom picture mode is not automatically saved.



Copy a Picture Mode

Custom picture mode settings can be copied to be applied to other inputs.

1. Complete the desired changes for the selected picture mode.
 - Select Save Picture Mode to save picture mode for all inputs.
2. Select the input you want to copy your saved picture mode edits to.
3. Change the picture mode to your custom saved mode: Menu > Picture > Picture Mode > select saved custom picture mode
4. Copy your custom picture mode: Menu > Picture > Picture Mode Edit > Copy Picture Mode
5. Select what picture mode you would like to copy over.
6. A notification displays after the copy to your selected picture mode is completed. Now this picture mode will have your custom settings saved over it for the selected input.
7. Repeat as needed to customize additional inputs.

Lock a Picture Mode


Custom picture modes can be locked/unlocked with a unique PIN to prevent accidental changes to their settings. If not previously set, you can set up your system PIN code here.

To lock all custom picture modes:

Menu > Picture > Picture Mode Edit > Lock Picture Mode > On > Enter Your PIN > Save

To unlock all custom picture modes:

Menu > Picture > Picture Mode Edit > Lock Picture Mode > Of > Enter Your PIN

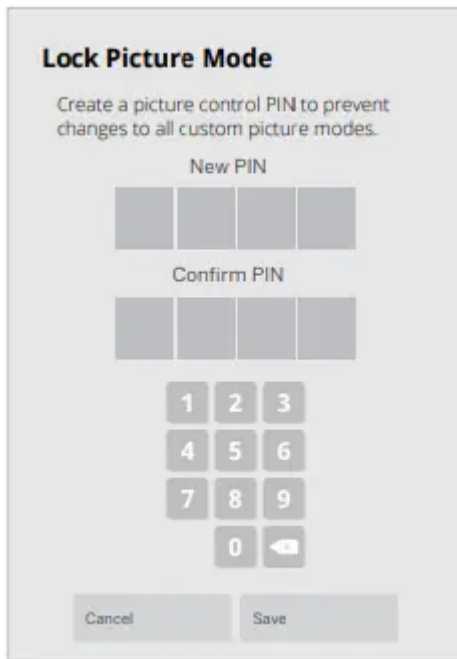

TIP: To set a custom PIN code, see Setting a System PIN Code on page 25.


Deleting a Picture Mode

Custom picture modes that are no longer needed can be deleted.

TIP: Inputs assigned to deleted custom picture modes become assigned to the Calibration picture mode.

To delete a custom picture mode:

Menu > Picture > Picture Mode Edit > Delete Picture Mode > Delete

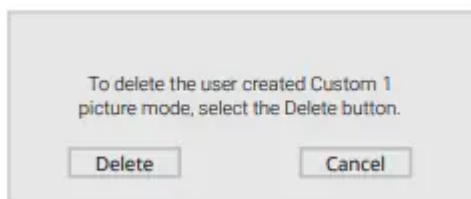

Resetting a Picture Mode

A preset picture mode that has been edited can be restored to the factory default settings.

To reset a customized preset picture mode:

Menu > Picture > Picture Mode Edit > Reset Picture Mode > Reset


ADJUSTING THE AUDIO SETTINGS

To adjust the audio settings:

Menu > Audio

Use the Navigation buttons to highlight the setting you wish to adjust, then press Left/Right Navigation buttons to change the setting:

- **TV Speakers** — Built-in speakers automatically turn off if a sound bar is discovered. Turn the built-in speakers On or Off.
- **Surround Sound** — When set to On, enables surround sound suitable for sports and TV shows. Virtual:X™ adds virtualized height best for movies.
- **Volume Leveling** — When set On, DTS TruVolume™ audio solution levels the speaker volume.
- **Balance** — Balance the audio loudness between the left and right speakers.
- **Bass** — Increase or decrease the bass level.
- **Treble** — Increase or decrease the treble level.
- **Lip Sync** — Synchronize the display image with the audio track.

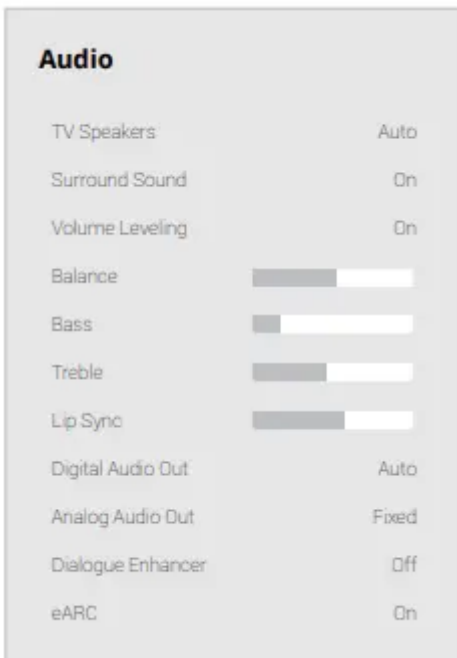

- **Digital Audio Out** — Select the digital audio output format for both the optical and HDMI ARC audio devices.
 - To hear talk back when Talk Back function is enabled, digital audio out must be set to PCM.

TIP: You must select Digital for audio with more than two channels (e.g., 3.0, 5.0, or 5.1).

- **Analog Audio Out** — Select Variable if you are controlling the volume with the remote. Select Fixed if an external audio device (sound bar or AV receiver) will control the volume.
- **Dialogue Enhancer** — If enabled and the signal source includes Dolby 5.1 AC-4 audio then clarity of dialogue is enhanced.

- **eARC** — Toggle between ARC (Off) and eARC (On) for audio output using HDMI 1. If On, audio is sent using eARC and is uncompressed. If Off, audio is sent using ARC and some audio formats may play in standard Dolby Audio, DTS Digital Surround, or PCM.

TIP: Your connected sound bar or audio receiver must support eARC in order to receive uncompressed audio. Check your device's user manual for more information.

- **Equalizer** — Only available when Surround Sound is set to OFF. Boosts or attenuates loudness at different frequencies.


Your TV is Internet-ready, featuring both an Ethernet port and built-in high-speed wireless internet.

TIP: If your TV is connected to a network with an Ethernet cable, you will not see the wireless network connection menu. You must unplug the Ethernet cable to set a wireless network connection

Connecting to a Wireless Network

To connect to a wireless network whose Network network name (SSID) is being broadcast:

Menu > Network > Choose your network > Enter in the password > Connect

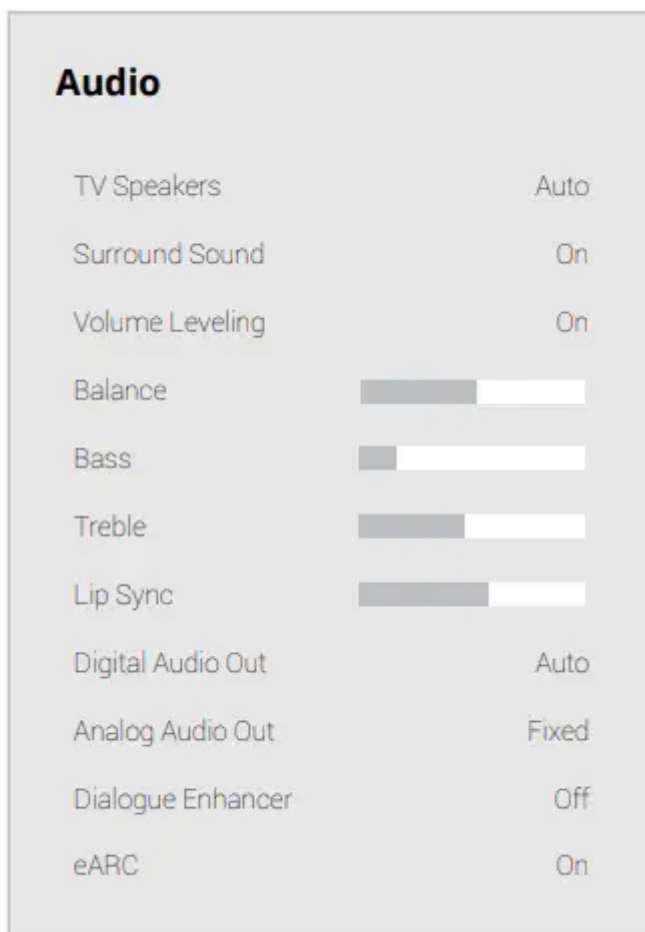

To forget a saved network:

Highlight a saved wireless access point > OK > Forget

If you do not see your wireless network displayed, click on:

More Access Points > Highlight your wireless network > Enter in the password > Connect

Changing the Manual Setup Settings


Advanced users can fine-tune the network settings using the Manual Setup feature. The security settings on your router may require you to enter the TV's MAC address.

To change advanced network settings:

Menu > Network > Manual Setup > DHCP > Of

1. Use the Navigation and OK buttons to adjust each setting:

- **IP Address** — The IP address assigned to Pref. DNS Server the TV.
- **Subnet Mask** — The subnet Exit 2D.
- **Default Gateway** — Your network's default gateway address.
- **Pref. DNS Server** — Your preferred domain name server address.
- **Alt. DNS Server** — Your alternate domain name server address.

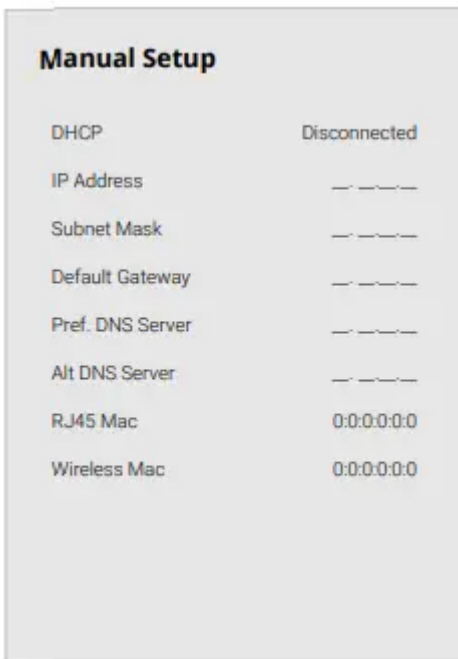

2. Use the Navigation buttons on the remote to highlight Save and press OK

To find the TV's MAC address:

Menu > Network > Manual Setup



You can find your TV's MAC address at the bottom of the list. The MAC addresses for the connections in use are displayed:

- **RJ45 MAC** — The Ethernet or RJ45 MAC address may be needed to set up your network when you have connected the TV to your network when you have connected the TV to your network with an Ethernet (Cat 5) cable.
- **Wireless MAC** — The Wireless (Wi-Fi) MAC address may be needed to connect your TV to your network with Wi-Fi.

Connecting to a Hidden Network

To connect to a wireless network whose network name (SSID) is not being broadcast:

Menu > Network > Hidden Network > Enter the Access Point Name > Connect > Enter in the password

Testing Your Network Connection

To test your network connection:

Menu > Network > Test Connection




SETTING UP TV CHANNELS

You can use the TV's Channels menu to:

- Find channels
- Find new channels
- Select channels to skip
- Select analog audio mode

- Select the language for digital audio
- Set parental controls

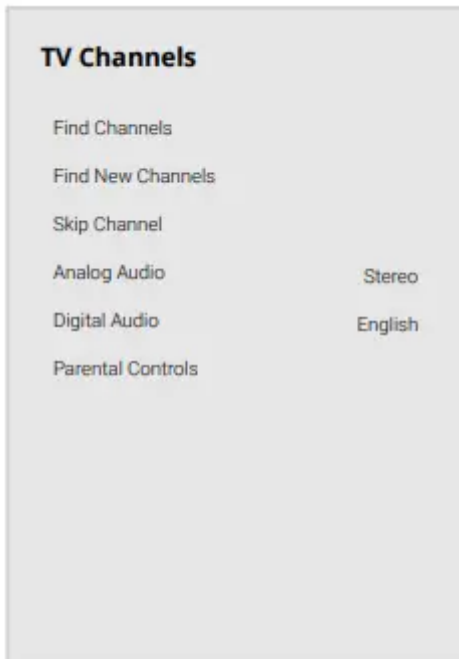

Scanning for TV Channels


The TV may need to scan for channels before it can display programs and their associated information. A channel scan is required for free over-the-air channels (using an antenna) and cable channels from an out-of-the-wall connection (without a cable box). Moving the TV to an area with different channels requires the TV to scan for channels again.

To perform an Auto Channel Scan:

Menu > TV Channels > Find Channels

Wait until the channel scan is 100% complete. Highlight Done and press OK.

- If the channel scan is canceled, the channels that were already discovered are retained.

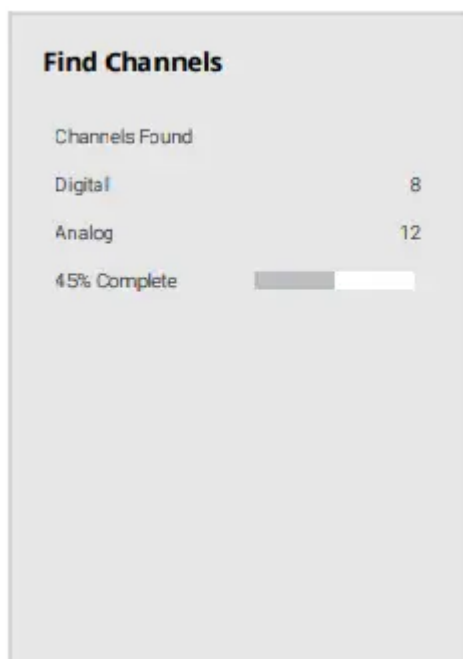

To perform a New Channel Scan:

Menu > TV Channels > Find New Channels

A New Channel Scan saves the current channel map and scans for additional channels.

Skipping

Channels After a channel scan is completed, you may find that some channels are too weak to watch comfortably. There may also be some channels you do not want to view. You can remove these channels from the TV's memory with the Skip Channel feature.

WARNING: Channels that have been removed with the Skip Channel feature can still be viewed if the channel is entered using the number pad.

If you wish to completely block a channel from being viewed, use see Locking and Unlocking Channels on page 19

To remove a channel

1. From the TV CHANNELS menu, highlight Skip Channel, and press OK. The SKIP CHANNEL menu is displayed.
2. For each channel you wish to remove, use the Up/Down Navigation buttons on the remote to highlight the channel and press OK. A P appears to the right of each channel you select.

Skip Channel


| | | |
|---|--------|--------------------------|
| 0 | Test 0 | <input type="checkbox"/> |
| 1 | Test 1 | <input type="checkbox"/> |
| 2 | Test 2 | <input type="checkbox"/> |
| 3 | Test 3 | <input type="checkbox"/> |
| 4 | Test 4 | <input type="checkbox"/> |

Changing the Analog Audio Language

Some analog over-the-air (free) and cable channels broadcast programs in more than one language. The TV's Analog Audio feature allows you to listen to audio in an alternate language using Secondary Audio Programming (SAP).

WARNING: Not all programs are broadcast in SAP. The Analog Audio Language feature only works when the program being viewed is being broadcast with Secondary Audio Programming


- **Stereo** — More than one speaker channel is being used. Sounds may be dispersed through different speakers depending on how the audio is programmed.
- **SAP (Secondary Audio Program)** — Typically used for audio in a different language other than the native one used in the program.
- **Mono** — All speakers are producing the same sound; there is no distinction between left or right sounds.

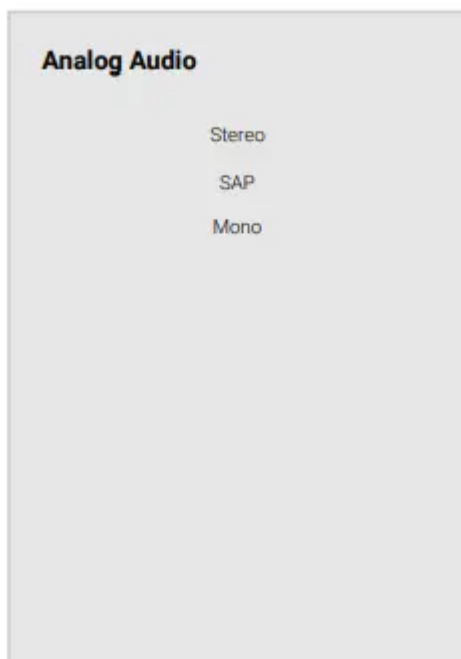

To use the Digital Language feature:

Menu > TV Channels > Digital Audio

Select the preferred audio language. Available languages or video description depend on the broadcast content.

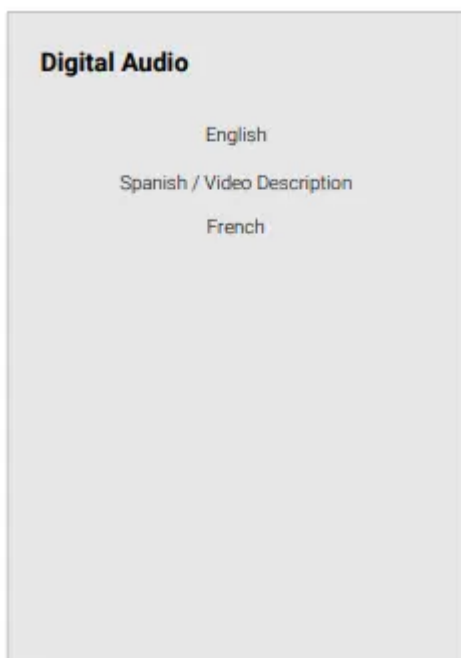

Using Parental Controls

The TV's parental controls allow you to prevent the TV from displaying certain channels or programs unless a PIN is used.



Accessing the Parental Controls Menu

To access the Parental Controls menu you must first set up a system PIN:

Menu > TV Channels > Parental Controls > Enter in PIN

TIP: to set a custom PIN code, see Setting a System PIN Code on page 25.

The Parental Controls menu only appears when:

- You are using the tuner to receive your TV signals, such as when you are using an antenna for Over-the-Air signals or when connected to cable TV directly from the wall (no cable box).
- You have a device connected using a composite video cable or a coaxial cable, such as a VCR, satellite or cable box, or DVR.

TIP: Other devices have their own parental control settings.

Enabling or Disabling Program Ratings

To manage program content according to its rating, you must first enable the Program Rating feature.

To enable or disable the Program Rating feature:

Menu > TV Channels > Parental Controls > Locks > Of/On


Locking and Unlocking Channels


When a channel is locked, it cannot be accessed. Locking a channel is a good way to prevent children from viewing inappropriate material.

To lock or unlock a channel:

Menu > TV Channels > Parental Controls > Channel Locks

Highlight the channel you want to lock or unlock and press OK

When a channel is locked, the Lock icon appears  locked. The channel is not accessible unless the system PIN is entered.

When a channel is unlocked, the Lock icon appears  unlocked.

Blocking and Unblocking Content by Rating

A channel may sometimes broadcast programs that are meant for a variety of audiences (some for children and some for adults). You might not want to block the channel completely using a channel lock, but you can block certain programs from being viewed.

You can use the TV's Rating Block feature to block content based on its rating.



To block or unblock content by its rating:

1. From the Parental Controls menu, highlight the content type you want to adjust and press OK:

- **USA TV** — USA television program broadcasts.
- **USA Movie** — USA movie broadcasts.
- **Canadian English** — Canadian English television program broadcasts.
- **Canadian French** — Canadian French television program broadcasts.

TIP: For a list of content ratings and their definitions, please visit: www.tvguidelines.org.

2. For each rating type you want to block or unblock, use the Navigation buttons to highlight the rating type and press OK.

- When the rating type is blocked, the Lock icon appears  locked. Content with this rating and all higher ratings cannot be viewed.
- When the rating type is unblocked, the Lock icon appears  unlocked. Content with this rating and all lower ratings can be viewed.
- If you want to block all unrated content, highlight Block Unrated Shows and use the Navigation buttons on the remote to select On.

ACCESSIBILITY SETTINGS


VIZIO is committed to providing intuitive, user-friendly products. Your new VIZIO TV offers several accessibility features that can help you with easy navigation.

To access the Accessibility menu:

Menu > Accessibility

1. **Captions** — Activate and customize analog and digital closed captions.
2. **Video Description** — If included by the broadcaster, provides a narrated description of the action for the content
3. **Talk Back*** — Enables your TV to speak all settings changes and adjustments using the remote in English.
4. **Speech Rate** — Adjusts the rate in which Text-to-Speech is spoken. Select Slow Normal (default), or Fast
5. **Zoom Mode** — Enlarges a section of the screen by approximately 200%

TIP: You can also enable/disable accessibility features using the included remote. See Using the Remote on page 5.

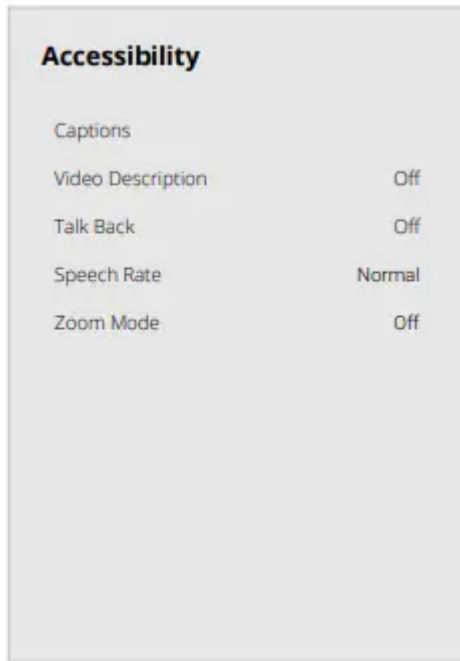

Setting Up Closed Captioning

Your TV can display closed captions for programs that include them. Closed captions display a transcription of a program's dialogue.

TIP: Closed Captioning is available for tuner, composite and streaming content (if supported by the app). Note that most apps will support their own CC from within the app.


To activate or deactivate Close Captions for current content:

Menu > Accessibility > Captions > Closed Captions > Of/On



Push the CC button on the remote.

1. Use the Navigation buttons on the remote to highlight either Analog or Digital Closed Captions
2. Use the Left/Right Navigation buttons on the remote to select the caption channel you wish to display.

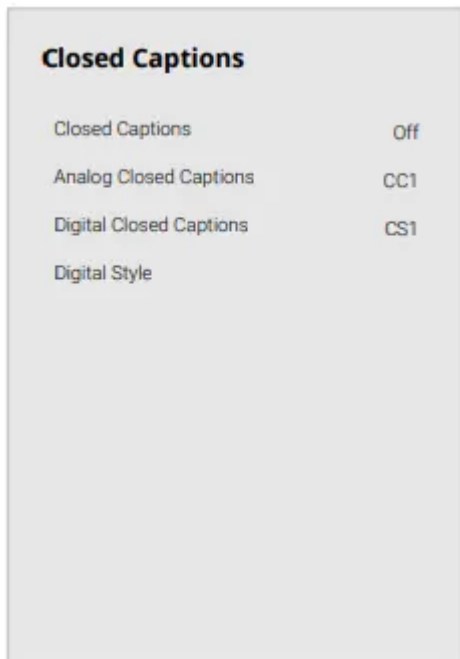

Changing the Appearance of Digital Closed Captions

Digital closed captions can be displayed according to your preference. See the diagram on the next page for an explanation of the parts of the closed caption area.

To change the appearance of digital closed captions:

Menu > Accessibility > Captions > Digital Style

1. Use the Left/Right Navigation buttons on the remote to select Custom. The Digital Style menu appears as shown.
2. Use the Up/Down Navigation buttons on the remote to highlight the setting you wish to change, then use the Left/Right Navigation buttons to change the settings (choose "As Broadcast" to keep default setting):

- Text Style — Change the font used for the closed captioning text
- Text Size — Make the text larger or smaller.
- Text Color — Change the color of the text.
- Text Opacity — Change the transparency of the text.
- Text Edges — Change the effects at the edges of the text, such as raising the edges or adding drop shadows.
- Text Edges Color — Change the color of the text edge effects.
- Background Color — Change the color of the background directly behind the text
- Background Opacity — Change the transparency of the background directly behind the text.
- Window Color — Change the color of the closed captioning box.

- Window Opacity — Change the opacity of the closed captioning box.


| Digital Style | |
|----------------------|--------------|
| Text Style | As Broadcast |
| Text Size | Large |
| Text Color | Blue |
| Text Opacity | As Broadcast |
| Text Edges | As Broadcast |
| Text Edges Color | As Broadcast |
| Background Color | As Broadcast |
| Background Opacity | As Broadcast |
| Window Color | As Broadcast |
| Window Opacity | As Broadcast |

Typical choices include:

- Opaque background, transparent window — Only a strip of background appears behind the text, expanding as the text appears. This is the typical "As Broadcast" mode.
- Opaque background and window in the same color — When text appears, the entire line fills with color at once.


In the example, the closed caption text is green, the background is black, and the window is red.



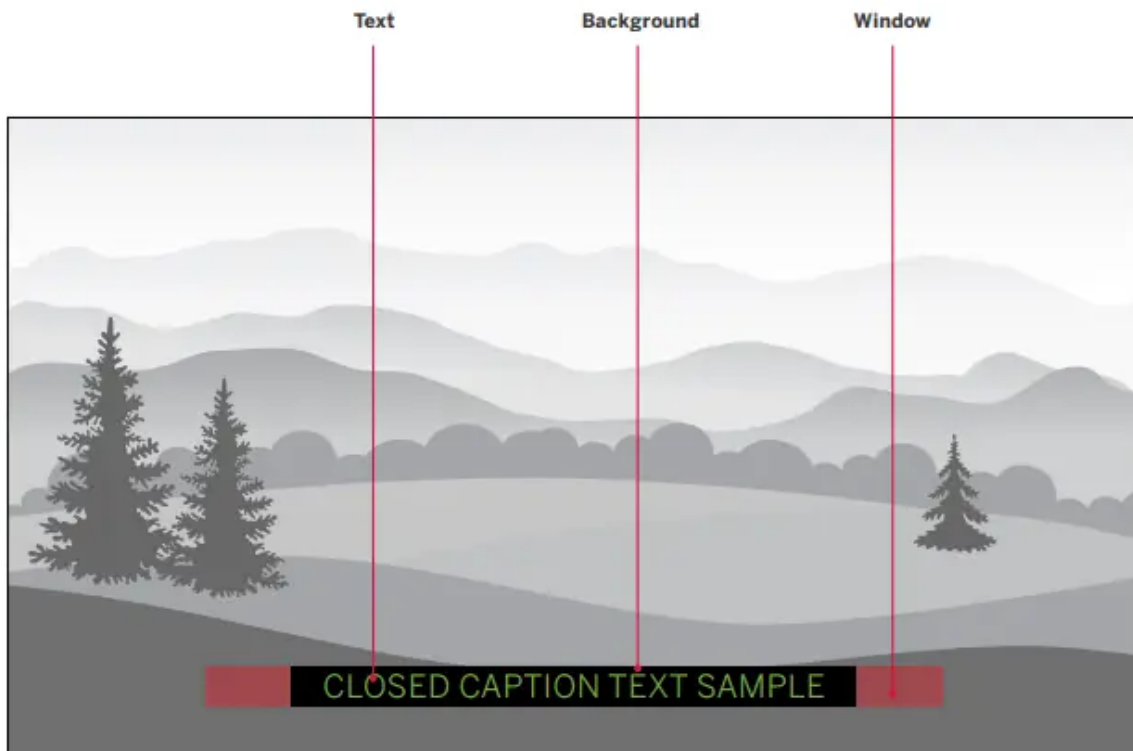

CHANGING THE SYSTEM SETTINGS

- Using the System menu, you can:
- Change the on-screen menu language
- Set the time zone and local settings
- Name the TV
- Name an input
- Hide inputs not in use
- Adjust the power mode settings
- Set the USB power mode
- Turn the power indicator on or off
- Set up timers
- Set a system PIN code
- Adjust CEC settings
- Manage paired devices
- Manage a voice remote control

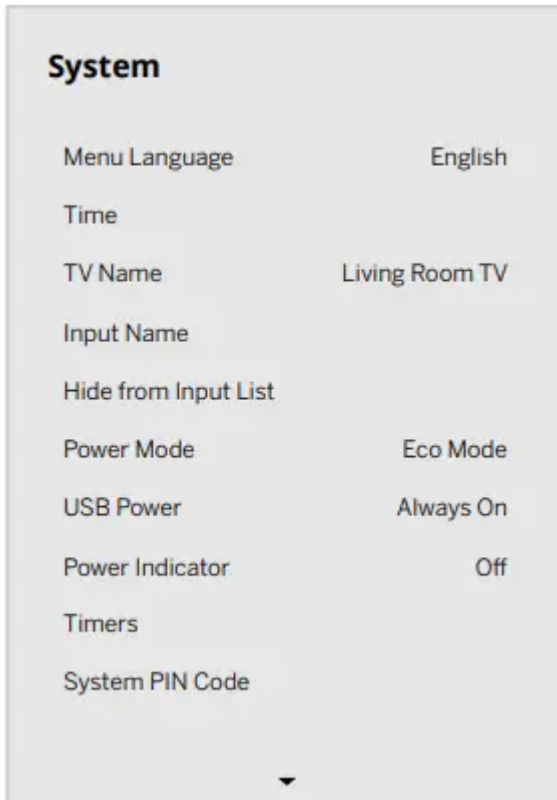


Changing the On-Screen Menu Language

Your TV can display the on-screen menu in different languages.

To change the on-screen menu language:

Menu > System > Menu Language

Highlight your preferred language (English, Español, or Français) and press OK.

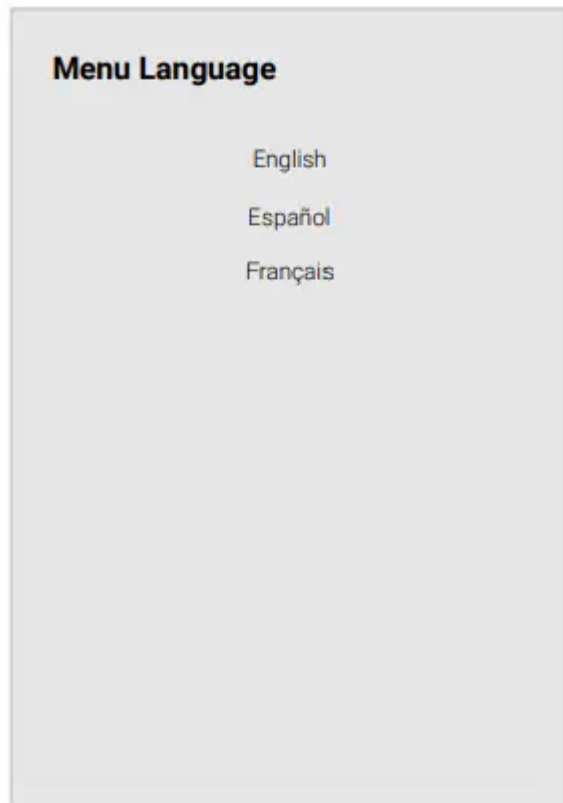

Setting the Time

To ensure the correct time is displayed when you press the INFO button, set the TV's time zone:

Menu > System > Time > Time Zone

To turn Daylight Saving Time on or of:

1. Highlight Daylight Saving Time and press OK. The Daylight Saving Time menu is displayed.
2. Choose On if it is currently Daylight Savings Time, Of if it is Standard Time, or Auto to have the system automatically detect Daylight Savings Settings.

To change Time Format:


1. Highlight Time Format and use the Left/Right Navigation buttons to change between a 12-hour format or 24-hour format.

Changing the TV Name

Naming your TV helps differentiate it from other cast devices you may have in your home

To edit your TV name:

Menu > System > TV Name > Enter a Name

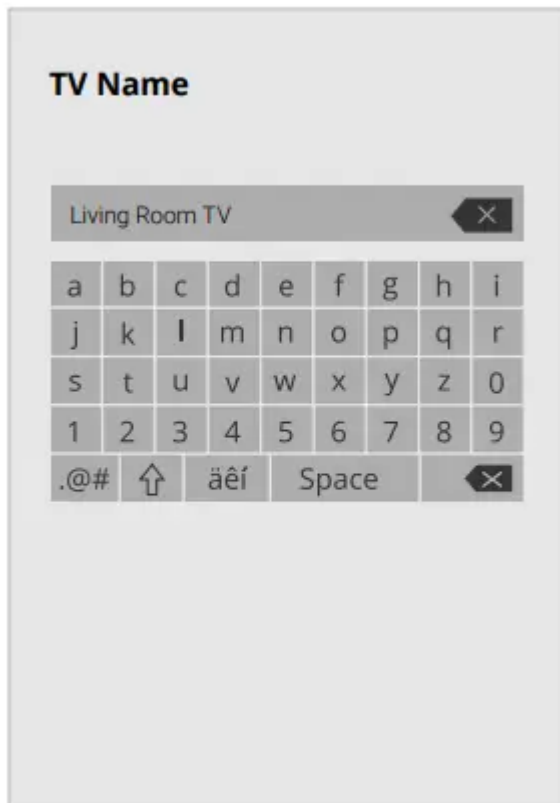

Renaming Devices on the Input Menu

You can rename the inputs to make them easier to recognize on the Input menu. For example, if you have a DVD player connected to the HDMI-1 input, you can rename that input to display “DVD Player.”

See Changing the Input Source on page 8

To change the name of an input:

Menu > System > Input Name

To enter a custom name:

- Highlight the Name Input row and press OK.
- Enter your custom label using the on-screen keyboard and press OK.

TIP: The current input you are on will be the input name you are changing. You cannot change every input (i.e. WatchFree+ or SmartCast inputs).

To Hide an Input from the List:

Menu > System > Hide from Input List

- Highlight the input name you would like to hide. Hidden inputs will not be displayed in the input list.
- Use the Left/Right Navigation buttons to toggle from visible and hidden.

Adjusting the Power Mode

Your TV is set to Eco Mode by default. When the TV is powered off, the Eco Mode setting uses less than 0.5W of power. Quick Start Mode enables your display to power on faster and also to turn on when powered from another device (such as when you are casting onto the TV)

WARNING: Please note that by changing this setting the energy consumptions required to operate this device will change.

To switch between Eco Mode and Quick Start Mode:

Menu > System > Power Mode

Highlight either Eco Mode or Quick Start Mode and press OK.

TIP: If you want to use a voice assistant to turn your TV on, make sure Quick Start Mode is turned on

Using the USB Power Feature

The USB port can be used to charge devices.

The two options for this feature are:

- Always On — Power is always available.
- Of When TV Of — Power is only available with the TV is on.



Turning the Power Indicator On or Off

The power indicator on the front of your TV normally does not glow when the TV is on. You can change this setting if you prefer the light to be on.

To turn the Power Indicator Light On or Of:


Menu > System > Power Indicator > Of/On

Setting Timers

When activated, the TV's timer will turn the TV off after a set period of time.

To setup a sleep timer:

Menu > System > Timers > Sleep Timer

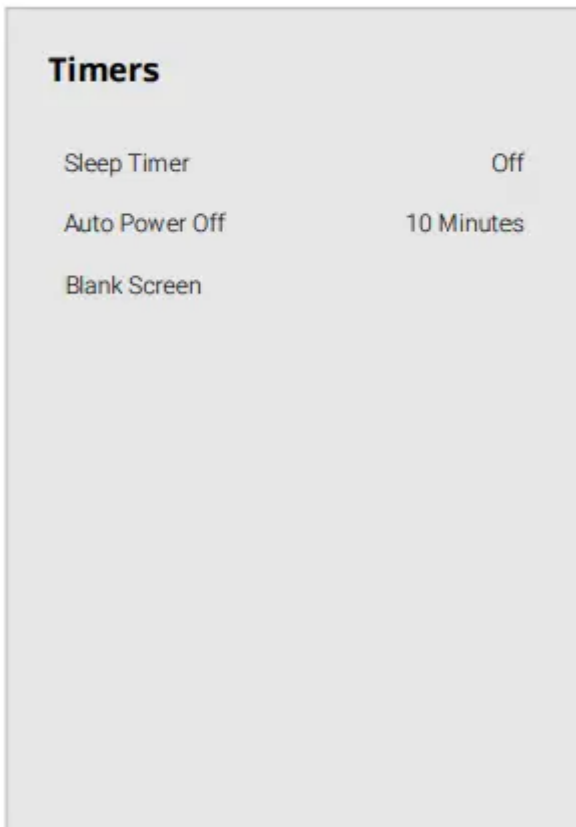

Use the Left/Right Navigation buttons on the remote to highlight the period of time after which you want the TV to go to sleep: 30, 60, 90, 120, or 180 minutes. If you don't want the sleep timer to activate, change the setting to Off.

Setting the Auto Power Of Feature

To help save energy, your TV is set by default to turn off after 10 minutes without a video or audio signal. This feature can be deactivated.

To set the Auto Power Of feature:

Menu > System > Timers > Auto Power Of > Of

Using the Blank Screen Feature



To help save LED life, your TV screen can turn on or off while audio is streaming.

To use the Blank Screen feature:

Menu > System > Timers > Blank Screen

To exit Blank Screen, press any key (except the volume and mute keys).

Setting a System PIN Code

You can set a system pin to lock content and picture modes, as well as prevent accidental system resets. The first time you select System PIN code, you will need to create a PIN.

To create a PIN:

Menu > System > System PIN Code > Enter Your PIN > Save



Adjusting the CEC Settings

The CEC function on your TV enables you to control devices connected to an HDMI input with the VIZIO TV remote, without any programming

Menu > System > CEC

Select a setting and then press OK.

- CEC — To use CEC, you must select Enable.
- Device Discovery — To determine if your device is connected and supports CEC, select Device Discovery and then press O



CEC Audio Setup

Connect your audio device to the HDMI-1 (HDMI eARC) input on the TV. On your audio device, select the HDMI ARC/eARC input

Using CEC, your VIZIO TV remote can control such features including (depending on specific device):

- Power On/Off
- Volume and mute
- Play and pause

WARNING: Not all HDMI devices support CEC. See your device's user manual for details.


Managing Mobile Devices

Your TV can be paired with a mobile device so you can easily control your TV across multiple devices.

To see a list of paired devices or unpair a device

Menu > System > Mobile Devices

Highlight a device name to delete it and press OK.

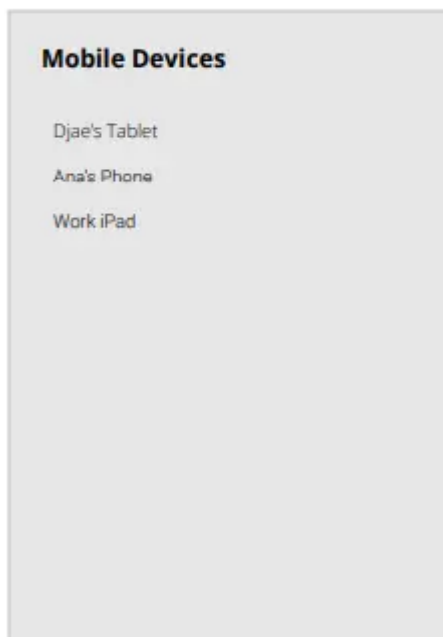



Voice Remote

Your TV can be controlled with a VIZIO Voice Remote.

To pair voice remote:

Menu > System > Voice Remote

Press and hold both the  MIC and  MUTE buttons for 5 seconds to launch pairing mode.

To use your successfully paired voice remote:


Press and hold the MIC  button while speaking a comma

USING THE ADMIN & PRIVACY MENU

You can use the TV's Admin & Privacy menu to restore the TV to its factory default settings as well as access other administrative settings.

Using the ADMIN & PRIVACY menu, you can:

- Force the system to power off and on
- View system information
- View a customer service support code
- Check for system updates
- Reset the TV to factory settings
- Enable or disable viewing data
- Personalize advertising choices
- View the VIZIO Privacy Policy
- Start or stop the store demo mode

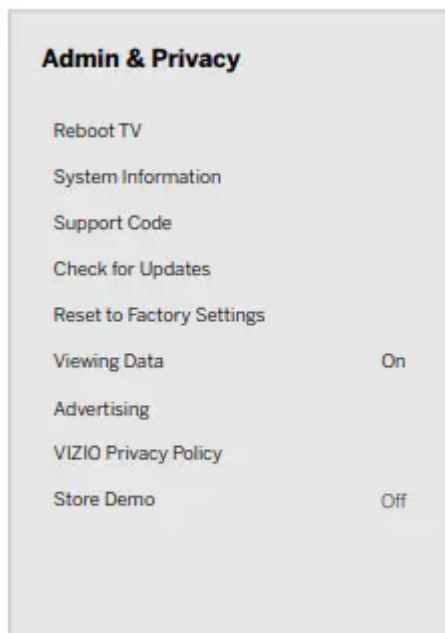

Performing a Reboot

A reboot forces the TV to turn off then on again.

To retrieve your reboot the TV:

Menu > Admin & Privacy > Reboot TV

Viewing System Information

To view technical data and status information about your TV and network connection:

Menu > Admin & Privacy > System Information

Accessing the Support Code

Retrieve a customer service support code/PIN or access basic TV information to assist in a customer service interaction.

To retrieve your support code:

Menu > Admin & Privacy > Support Code

Checking for System Updates

To check for a system update:

Menu > Admin & Privacy > Check for Updates

If an update is found, the TV will ask to confirm the update. If no update is found, the screen will note The TV is up-to-date.

Restoring the TV to Factory Default Settings

All of the on-screen menu settings can be reset to the factory defaults.

WARNING: If you restore the TV to the factory default settings, all change you have made to the settings will be lost. This includes any wireless or picture settings.

To restore the TV to its factory default settings:

Menu > Admin & Privacy > Reset to Factory Settings

1. If you set a system PIN code, enter it now.
2. The TV displays, "Select Reset to restore all TV settings to factory defaults."
3. Highlight Reset and press OK.
4. Wait for the TV to turn off. The TV will turn back on shortly afterward and the setup process will begin.

Viewing Data

To turn viewing data on or off:

Menu > Admin & Privacy > Viewing Data Use the Left/Right Navigation buttons to toggle from on or off

About Viewing Data

WHAT DATA DOES ACR TECHNOLOGY COLLECT?

When enabled, ACR technology will collect information about the audio and video programming content playing on this internet-connected display unit including broadcast television, advertisements and other commercially available content. We associate this Viewing Data with the IP address for the unit, and a unique device number we assign. You may change your Viewing Data settings at any time within the Settings Menu of your TV. Declining Viewing Data collection will not change the functionality of your device.

WHO DO WE SHARE VIEWING DATA WITH?

When enabled, we share Viewing Data with authorized data partners. We license Viewing Data to analytics companies, media companies, advertisers, ad agencies, and other ad tech companies who measure ad effectiveness or aid personalization of ads. Our authorized cloud service providers may also store this data on and solely on our behalf, and for no other purposes.

WHAT DO WE DO WITH VIEWING DATA?

VIZIO or its authorized data partners may combine Viewing Data with household demographic data, or other data about your digital actions, like smartphone location, web histories or offline purchases, in order to determine the effectiveness of a particular ad, or choose which ads are likely to be useful or timely, including during broadcast, cable, satellite, or internet based television programming. VIZIO and its authorized data partners also use the information to generate summary analysis and reports of how users engage with content on their TVs and other devices.

WHAT ELSE DOES VIEWING DATA SHARING MEAN FOR YOU?

Viewing Data is also used to help content publishers, broadcasters or content distribution services create or recommend more relevant entertainment based on summary insights. For example, if devices sharing your IP address suggest an interest in music, fitness, or sports related topics, advertisers might deliver tailored ads to this display unit or other devices associated with your IP address.

You can easily turn this feature On or Off in the ADMIN & PRIVACY menu. If you have trouble enabling or disabling Viewing Data, please contact VIZIO Customer Support by going to support.vizio.com and selecting Contact Us.

For more information, see vizio.com/viewingdata and review VIZIO's privacy policy at vizio.com/privacy.

Managing Advertising Settings

Your advertising choices can be personalized.

Limited Ad Tracking

When enabled, TV Ad ID will not be passed or used for personalized ads on this device.

To turn on or of:

Menu > Admin & Privacy > Advertising > Limited Ad Tracking

- Use the Left/Right Navigation buttons to toggle from on or off

Reset TV Advertiser ID

An Identifier for Advertising — can be reset to a new identifier at any time.

To reset the TV Advertiser ID:

Menu > Admin & Privacy > Advertising > Reset TV Advertiser ID > OK

Ad Replacement

Replaces Standard Ads with Personalized Ads in Linear TV.

To turn Ad Replacement on or of:

Menu > Admin & Privacy > Advertising > Ad Replacement

- Use the Left/Right Navigation buttons to toggle from on or off

View VIZIO Privacy Policy

To view VIZIO Privacy Policy:

Menu > Admin & Privacy > VIZIO Privacy Policy > OK


Store Demo

To set to Of, Demo 1, or Demo 2:

Menu > Admin & Privacy > Store Demo

USING THE INFO WINDOW

- Press the INFO button to display:
 - TV name
 - Current input or for tuner: current channel
 - Picture resolution
 - Picture aspect
 - Audio type
 - Network name
 - Time

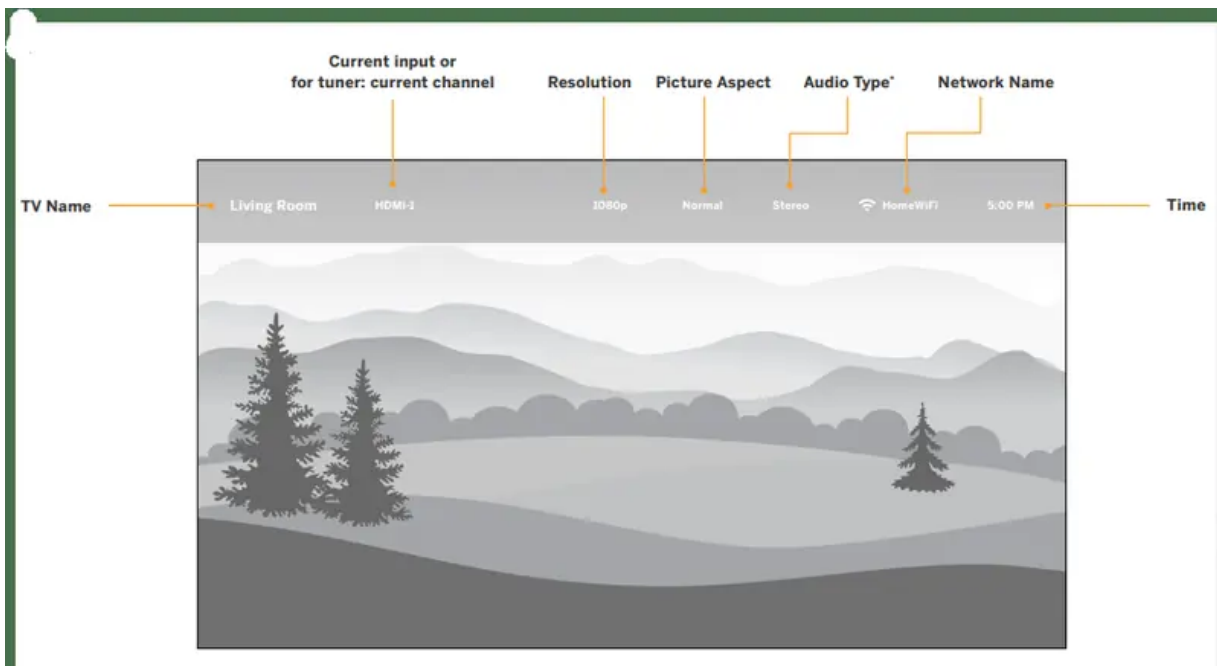


SmartCast Home™

What is SmartCast Home?

SmartCast Home lets you discover, stream, and control your content like never before! Access top apps, like Netflix, Disney+, and Hulu, by using the remote to easily browse and launch content directly from the home screen. SmartCast Home makes finding something to watch easy and fun.

How to Launch SmartCast Home

To begin streaming with SmartCast Home:

- Press the SmartCast Home button  on your remote.

—or—


- Select SmartCast from the list of inputs.

What you can do with SmartCast Home

- Stream high quality entertainment.
- Launch top tier apps directly from the home screen.
- Access free channels to watch without a subscription through WatchFree+.
- Rearrange apps on your home screen just the way you like it.
- Mirror your laptop or mobile device onto your TV through Apple Airplay or Chromecast built-in™.



- Works with Google Assistant, Siri, and Alexa-enabled devices for hands-free voice control.



Control your TV with the SmartCast Mobile™ App

Download the VIZIO SmartCast Mobile app and turn your smartphone into a remote to control and configure your TV.

With SmartCast Mobile, you can:

- Power on/off devices, play/pause content, and modify advanced settings, all from the palm of your hand.
- Control playback and TV settings using your voice.
- Easily enter text onto your TV/display from your mobile device using a full keyboard.
- Browse and discover movies, TV shows, music, live streams, and more, across multiple apps at once.
- Access a quick look at show ratings, synopsis, cast, crew, clips, and other details.




Scan to download.

Scan with your phone camera or QR reader.

vizio.com/smartcastapp



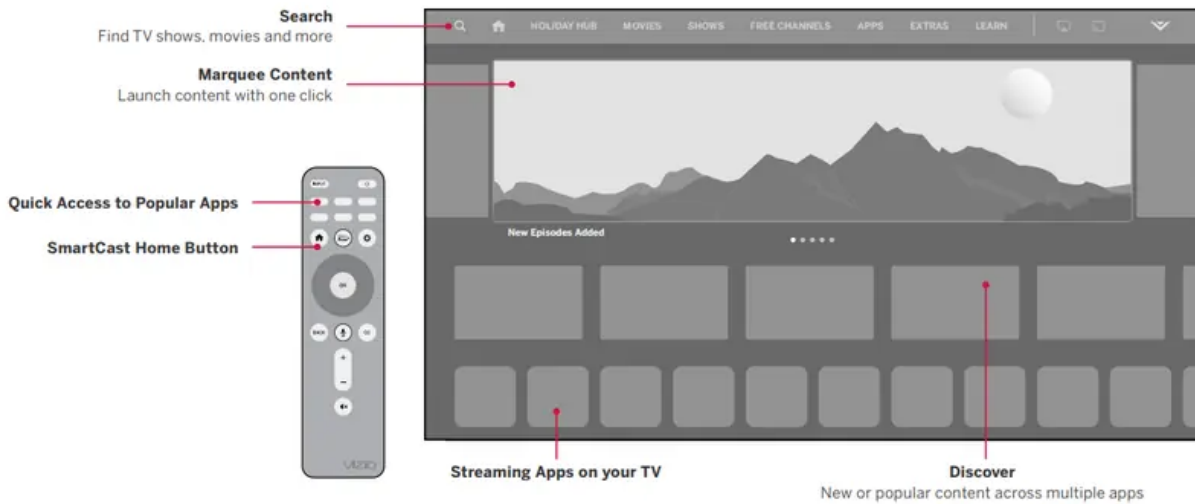

WatchFree+™

What is WatchFree+?

VIZIO WatchFree+ takes your cord-cutting entertainment experience one step further! With the simple press of a button, enjoy free streaming TV with hundreds of live TV channels to choose from – news, movies, sports, comedy, music and more. A built-in on-screen guide makes finding something to watch easier than ever.


And it's all FREE—no fees, no subscriptions, or logins.



What you can do with WatchFree+

- Stream hundreds of live TV channels absolutely free – news, movies, sports, comedy, music and more.
- Navigate through channels, organized by genre, with an intuitive on-screen guide.
- Watch the best of internet TV.
- No logins, subscriptions or transactions fees.

How to Launch WatchFree+


To launch and begin watching entertainment offered on WatchFree+:

- Press the WatchFree+  button on your remote.
- or—
- Select WatchFree+ from the list of inputs or app row.

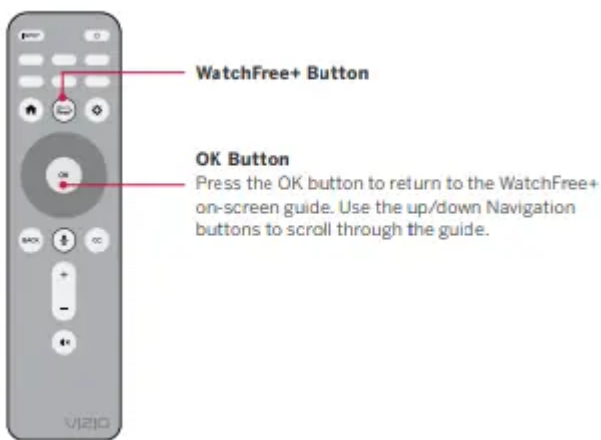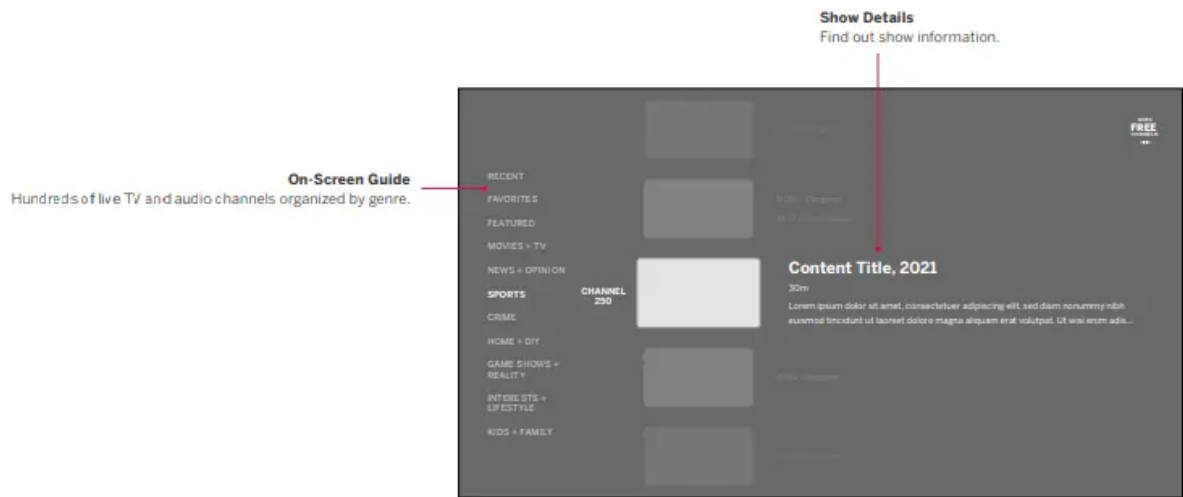

Playing USB Media

The USB Media Player allows you to connect a USB flash drive to your TV and play music, video, or photos.

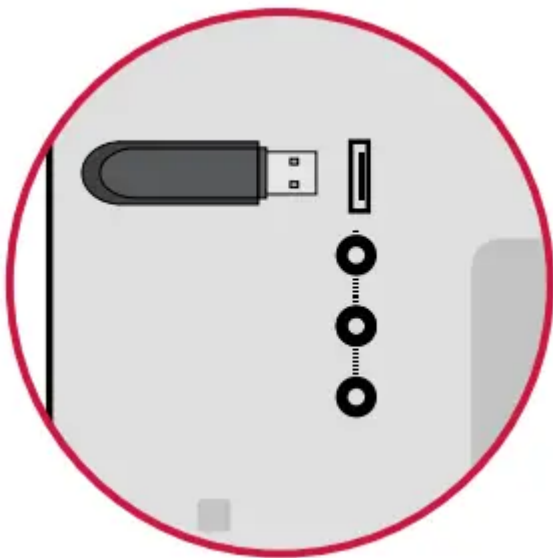

Preparing Your USB Drive to Play USB Media

To display USB media, you must first save your videos onto a USB flash drive:

- The USB flash drive must be formatted as FAT32.
- Files on the USB flash drive must end in a supported file extension (.mp3, .jpg, etc).
- The player is not designed to play media from external hard drives, MP3 players, cameras, or smartphones.

Displaying USB Media

To display your USB media:

Connect your USB flash drive to the USB port on the side of the TV.

2. The TV will recognize the USB. Use the Navigation Keys on the remote to select the content you want to play.

—or—

3. Select USB from the bottom streaming icons on the SmartCast Home™ page.

TIP: You can display your photos in Fullscreen. Select the photo, press OK, then highlight Fullscreen and press OK.

Removing the USB Drive from the TV

To safely remove your USB flash drive from the TV:

1. Turn the TV f.
2. Disconnect your USB flash drive from the USB port on the side of the TV.

WARNING: Do not remove the USB drive while the TV is on. Doing so may damage the drive.

Music

Back Button
Highlight this button and press **OK** to return to the previous screen.

Now Playing Information
Displays song title, album title, and other information.

Progress Bar
Displays the duration of the currently-playing song. The bar will lengthen as the song progresses.

Album Art
If included on the USB thumb drive and associated with your music, the album art will display here.

Connected Sources
Displays connected USB devices.

Current Folder
My Music

Playback Control

Toggle Music/Photos
Browse Photos

Sort by Album/Artist/Track
Sort: Artist: A - Z
View: Folders

View All or View Folders
Toggle between viewing all content and only viewing folders.

Page Information
If your USB thumb drive has more files than can be displayed on a single screen, the page number is displayed here.

Folder Contents/Playlist
This area displays the contents of the currently selected folder. You can browse among files using the **Arrow** and **OK** buttons on the remote.

| # | Track | Album | Artist | Duration |
|---|----------------|------------|------------|----------|
| 1 | Starry Summer | Summer | JCheesy | 2:42 |
| 2 | Summer Nights | Summer | DJ Sunset | 3:11 |
| 3 | Mango Dreams | Beach Mix | Ana Banana | 8:46 |
| 4 | Crystal Waters | Beach Mix | The Dash | 4:21 |
| 5 | Smooth Waves | Breezy Mix | Rio Steve | 7:58 |

Page 1 of 1

Video

Back Button
Highlight this button and press **OK** to return to the previous screen.

Connected Sources
Displays connected USB devices.

Current Folder
My Videos

Sort by Date or File Name
Sort: Date New-Old

View All or View Folders
Toggle between viewing all content and only viewing folders.

Play once or continuously
View: Folders
Once

Preview Window

Folder Contents/Playlist
This area displays the contents of the currently selected folder. You can browse among files using the **Arrow** and **OK** buttons on the remote.


Page Information
If your USB thumb drive has more files than can be displayed on a single screen, the page number is displayed here.

| # | File | Date | Duration |
|---|------------------------------|------|----------|
| 1 | Family Vacation - California | - | 00:23:43 |
| 2 | 28th Birthday Party | - | 00:38:18 |
| 3 | Korea 2019 | - | 00:41:08 |
| 4 | Sunny's Graduation | - | 00:25:32 |

Page 1 of 1



Photo

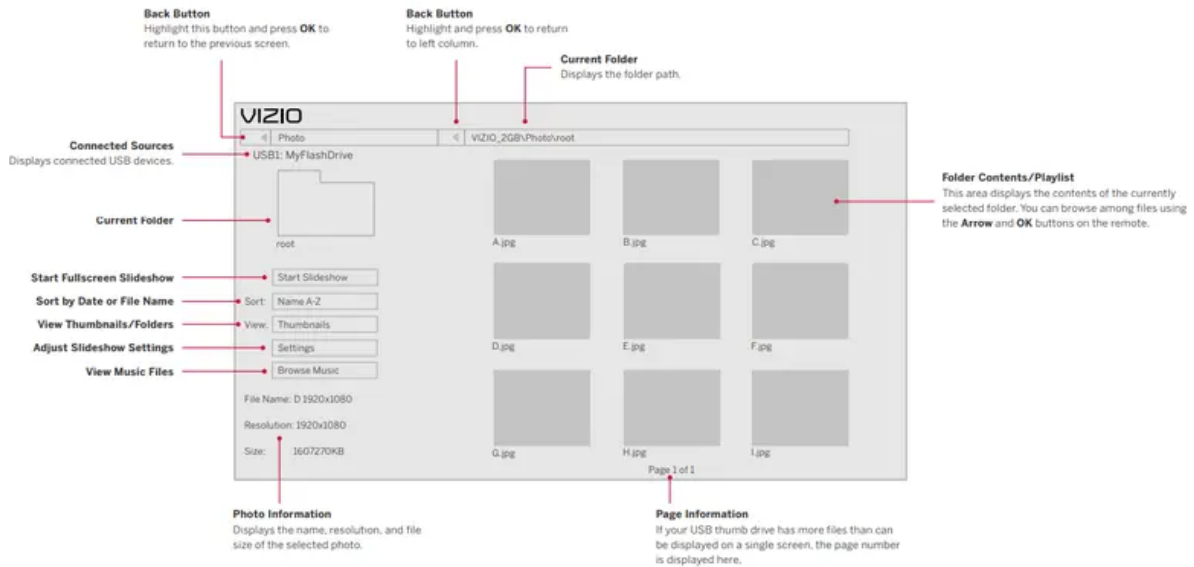

Product Registration and Technical Support

Get helpful tips and register your TV.

Scan with your phone camera or QR reader.



Customized Support

Get live assistance quickly with your information on hand.



News and Offers

Take advantage of the latest news and special offers from VIZIO.



Updates and Enhancements

Stay up-to-date with important product updates and notifications.

Help Topics

The remote is not responding.

- Make sure the batteries are properly inserted matching the - and + symbols.
- Replace the batteries with fresh ones.

The TV displays “No Signal.”

- Press **INPUT** button on the remote control to select a different input source.

- If you are using cable TV or antenna connected directly to the TV, scan for channels. See Scanning for TV Channels on page 16.

There is no power.

- Ensure the TV is plugged into a working electrical outlet.
- Ensure the power cable is securely attached to the TV.
- Press the Power/Standby button on the remote or on the back of the TV to turn the TV on.

The power is on, but there is no image on the screen.

- Ensure all cables are securely attached to the TV.
- Ensure all devices are connected correctly. Devices differ; see your device's user manual for details.
- Adjust Brightness, Contrast, or Backlight. See Adjusting the Picture Settings on page 8.
- Press the INPUT button on the remote to select a different input source.

The sound is fat or dialog is not audible.

- Turn off Volume Leveling. See Adjusting the Audio Settings on page 15.

Where do I find information on the accessibility features of this product and other VIZIO products?

- Please visit vizio.com/accessibility,
- Email us at: Accessibility@vizio.com, or
- Give us a call at 1-877-698-4746.

How do I stream apps like Netflix to my VIZIO SmartCast® TV?

- Popular apps are located on the SmartCast Home™ screen, so you can simply navigate to the app row on your SmartCast TV to start streaming.
- You can also use Apple AirPlay 2 or Chromecast built-in™ to stream content from your device directly to your SmartCast TV. For more information, please visit:
 - VIZIO.com/Apple
 - VIZIO.com/Google

The colors on the TV don't look right.

- Adjust the Color and Tint settings in the Picture menu. See Adjusting the Picture Settings on page 8.
- Select a pre-set picture mode. VIZIO recommends selecting Calibrated.
- Check all cables to ensure they are securely attached.

The image quality is not good.

- For the best image quality, view high-definition programs using digital sources. Connect your devices with HDMI cables.
- If you are using an antenna, the signal strength of the channel may be low. Ensure your antenna is connected securely to the TV and move the antenna around the room or close to a window for the best signal.

The picture is distorted.

- Move the TV away from electrical appliances, cars, and fluorescent lights.
- Ensure all cables are securely attached.

The TV image does not cover the entire screen.

- If you are using TV, AV, or Component with 480i input, go to Menu > Picture > Picture Aspect.

The TV has pixels (dots) that are always dark.

- Your HD TV is precision-manufactured using an extremely high level of technology. However, sometimes pixels may not display correctly. These types of occurrences are inherent to this type of product and do not constitute a defective product.

The buttons on the remote aren't working.

- Ensure you are only pressing one button at a time.
- Point the remote directly at the TV when pressing a button.
- Replace the remote batteries with new ones. See Replacing the Batteries on page 5.

There is no sound.

- Press Volume Up on the remote control.
- Press the MUTE button on the remote to ensure mute is off.
- Check the audio settings. See Adjusting the Audio Settings on page 15.
- Check the audio connections of external devices (Blu-ray player, game console, cable/satellite box) that are connected to the TV.
- If you are using an antenna, the signal strength of the channel may be low. Ensure your antenna is connected securely to the TV and move the antenna around the room or close to a window for the best signal.
- Set eARC to Off and use ARC mode.

I see "noise" or static on the screen.

- When your TV's digital capabilities exceed a digital broadcast signal, the signal is up-converted (improved) to match your TV's display capabilities. This upconverting can sometimes cause irregularities in the image.

- If you are using an antenna, the signal strength of the channel may be low. Ensure your antenna is connected securely to the TV and move the antenna around the room or close to a window for the best signal.

When I change input source, the TV image changes size.

- The TV remembers the viewing mode on each input source. If the viewing mode on the new input source differs from the one on the input source you switch from, the difference may be noticeable.
- See Changing the Picture Aspect Ratio on page 10.

How do I download the VIZIO SmartCast Mobile™ App?

- Make sure your phone or tablet is connected to a Wi-Fi network. Open a browser on your phone or tablet.
- Navigate to vizio.com/smartcastapp and follow the on-screen instructions to download the VIZIO SmartCast Mobile™ App.

How do I change the Inputs?

- Press the INPUT button on the back of the TV to cycle through the Inputs.
- Press the INPUT button on the basic remote to cycle through the Inputs.
- Make sure the VIZIO SmartCast Mobile™ app is installed on your phone or tablet. Open the VIZIO SmartCast Mobile app. Tap on the Device list and select your TV. Tap on the Input key and select the Input of your choice.

How do I connect to my Wi-Fi network?

- On your TV remote, press the MENU button then go to Network > Select your Wi-Fi name > Enter password. •
- Open the VIZIO SmartCast Mobile™ app on your phone or tablet. Tap on the Menu Tab > SmartCast Devices > Your TV/Device Name > Network
- Tap on the Settings icon > Network > Wireless Access Points. Select your Wi-Fi network from the list, enter the Wi-Fi password, and tap Connect.

How do I exit Demo Mode?

- Press and hold the INPUT button on the back of the TV to exit the demo mode.

How do I watch Cable/Antenna TV channels?

- If you subscribe to cable or satellite, simply connect an HDMI cable (not included) to the receiver.
- If you use external antennas to watch local broadcast channels, use a coaxial cable to connect.

Some of my Channels are missing.

- Press the MENU button on your TV remote and select the channels option. Then select Find Channels.
- Open the VIZIO SmartCast Mobile app on your phone or tablet.
- Click on: Menu Tab > SmartCast Devices > Your TV/Device Name > Channels > Find Channels.

How do I disable/enable Viewing Data?

- Press the MENU button on your remote and select ADMIN & PRIVACY. Then select Viewing Data to turn the feature on or off.

The television will not turn on using Alexa or Google Assistant.

- Ensure the television is in Quick Start Mode.
- Tap on Menu > System > Power Mode > Quick Start.

How do I know I am getting 4K resolution or HDR content such as Dolby Vision?

- As you are watching content on the television, press the INFO button on the remote or VIZIO SmartCast Mobile app. You will see the current resolution being displayed along with the version of video.
- HDR will show as a Dolby Vision icon, HDR10 or HLG.

Specifications

| | M4306-J04 | M5006-J01 | M5906-J01 | M6506-J09 | M7006-J03 | M7506-J03 |
|----------------------------|---|---|---|---|---|---|
| Size | 43" | 50" | 55" | 65" | 70" | 75" |
| Viewable Area | 42.5" | 49.5" | 54.5" | 64.5" | 69.5" | 74.5" |
| PRODUCT DIMENSIONS | | | | | | |
| Dimensions w/ Stand | 37.68" x 24.21" x 9.37" (957 x 655 x 237.9 mm) | 43.81" x 27.89" x 10" (1112.8 x 708.3 x 254 mm) | 48.35" x 30.48" x 10.9" (1228 x 774.1 x 277 mm) | 56.84" x 35.38" x 11.8" (1443.8 x 898.7 x 299.8 mm) | 61.1" x 38.2" x 13.1" (1552.0 x 969.5 x 332.1 mm) | 65.7" x 40.46" x 13.25" (1669.0 x 1027.8 x 336.6 mm) |
| Dimensions w/o Stand | 37.68" x 21.85" x 2.63" (957 x 555 x 66.7 mm) | 43.81" x 25.69" x 3.41" (1112.8 x 652.4 x 86.5 mm) | 48.35" x 28.07" x 3.19" (1228 x 713.1 x 80.9 mm) | 56.84" x 32.72" x 2.5" (1443.8 x 831.0 x 63.4 mm) | 61.1" x 35.4" x 2.9" (1552.0 x 898.5 x 73.9 mm) | 65.7" x 37.64" x 2.9" (1669.0 x 956.3 x 73.8 mm) |
| Weight w/ Stand | 16.7 lb (7.6 kg) | 25.79 lb (11.7 kg) | 29.74 lb (13.49 kg) | 42.33 lb (19.20 kg) | 55.12 lb (25.0 Kg) | 63.61 lb (28.85 kg) |
| Weight w/o Stand | 16.5 lb (7.5 kg) | 25.46 lb (11.55 kg) | 29.39 lb (13.33 kg) | 41.23 lb (18.70 kg) | 54.01 lb (24.5 Kg) | 62.38 lb (28.29 kg) |
| Mounting Screw Size | M4 | M6 x 14 mm | M6 x 14 mm | M6 | M6 x 12 mm | M6 x 12 mm |
| Hole Pattern | 200 mm x 100 mm | 200 mm x 200 mm | 300 mm x 200 mm | 400 mm x 200 mm | 400 mm x 200 mm | 400 mm x 200 mm |
| # of Screws (not included) | 4 | 4 | 4 | 4 | 4 | 4 |
| PICTURE QUALITY | | | | | | |
| Maximum Resolution | 3840 x 2160 (UHD) | 3840 x 2160 (UHD) | 3840 x 2160 (UHD) | 3840 x 2160 (UHD) | 3840 x 2160 (UHD) | 3840 x 2160 (UHD) |
| LCD Backlight | Full Array LED | Full Array LED | Full Array LED | Full Array LED | Full Array LED | Full Array LED |
| Dynamic Motion Rate | 120 | 120 | 120 | 120 | 120 | 120 |
| INPUTS / OUTPUTS | | | | | | |
| HDMI Inputs | 3 | 3 | 3 | 3 | 3 | 3 |
| Composite Video Inputs | 1 | 1 | 1 | 1 | 1 | 1 |
| Ethernet Input | 1 | 1 | 1 | 1 | 1 | 1 |
| RF Antenna Input | 1 | 1 | 1 | 1 | 1 | 1 |
| USB | 1 | 1 | 1 | 1 | 1 | 1 |
| Audio Output | HDMI eARC, Analog Stereo Out, Digital Optical | HDMI eARC, Analog Stereo Out, Digital Optical | HDMI eARC, Analog Stereo Out, Digital Optical | HDMI eARC, Analog Stereo Out, Digital Optical | HDMI eARC, Analog Stereo Out, Digital Optical | HDMI eARC, Analog Stereo Out, Digital Optical |
| OTHER | | | | | | |
| Remote Control Type | Voice Remote | Voice Remote | Voice Remote | Voice Remote | Voice Remote | Voice Remote |
| Power Consumption | 166W | 79.87W | 99W | 163W | 195W | 215W |
| Standby Power | <0.5W | <0.5W | <0.5W | <0.5W | <0.5W | <0.5W |
| Voltage | 120V | 120V | 120V | 120V | 120V | 120V |
| OSD Language | English, French, Spanish | English, French, Spanish | English, French, Spanish | English, French, Spanish | English, French, Spanish | English, French, Spanish |
| Certification | UL, FCC Class B, IC, HDMI (CEC, ARC), Dolby Audio, Dolby Vision | UL, FCC Class B, IC, HDMI (CEC, ARC), Dolby Audio, Dolby Vision | UL, FCC Class B, IC, HDMI (CEC, ARC), Dolby Audio, Dolby Vision | UL, FCC Class B, IC, HDMI (CEC, ARC), Dolby Audio, Dolby Vision | UL, FCC Class B, IC, HDMI (CEC, ARC), Dolby Audio, Dolby Vision | UL, FCC Class B, IC, HDMI (CEC, ARC), Dolby Audio, Dolby Vision |

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.

Document generated by [ManualsFile](#)

