

## Getting started

### Front and back views





## Assemble your device

Learn about your mobile device hardware, assembly procedures, and how to get started using your new device.

## Charge the battery

Your device is powered by a rechargeable Li-Ion battery.

**Warning:** Do not disassemble, modify, or repair your device. Placing objects, such as magnetic stripe cards, including credit cards, phone cards, passbooks, and boarding passes, next to the device or charger may cause damage from the charger or device's magnetic field.

The battery comes partially charged. You can use the device while charging.

1. Insert the USB cable into the USB charger port.
2. Connect the USB cable to the charging head, and then plug the charging head into a standard outlet.
3. Place the Watch onto the wireless charger dock.



**Caution:** Use only charging devices that are approved by Samsung. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your warranty and may cause damage.

While charging, the device and the charger may become hot. This does not affect the device's lifespan or performance and is in the device's normal range of operation.

The charger may stop charging if the battery becomes too hot.

If the device heats up while charging the battery:

1. Disconnect the charger from the device and close any running apps.
2. Wait for the device to cool down and then begin charging the device again.

**Note:** Prevent the USB charger port and the small end of the charger from coming into contact with conductive materials, such as liquids, dust, metal powders, and pencil leads.

### **Check the charge status**

When you connect the Watch and the wireless charger dock, the wireless charger dock's LED indicator flashes certain colors to indicate the battery level.

- **Red > Green > Orange:** Standby mode
- **Red:** Charging.

- **Green:** Fully charged
- **Orange:** Connected to a low-charger head

**Note:** When a wireless charger dock error occurs, the LED indicator flashes red. Disconnect the Watch from the wireless charger dock, and then reconnect. If the error occurs again, contact a Samsung Service Center for service support.

## Start using your device

The instructions below explain how to turn your device on or off.

To turn the device on:

- Press and hold the **Power** button until the device turns on.

To turn the device off:

1. Press and hold the **Power** button.
2. Tap **Power** off.

## Lock or unlock your device

Use the screen lock features to secure your device. Your Watch locks when you remove it from your wrist or when the screen times out while you are wearing it.

To unlock the Watch:

- Press the **Power** button or **Back** button.

The default Screen lock on your device is None.

To choose a secure screen lock, see Set a screen lock on page 90.

## Navigation

Please note that a touchscreen responds best to a light touch from the pad of your finger or a capacitive stylus. Using excessive force or a metallic object on the touchscreen may damage the tempered glass surface and void the warranty.

- **Tap**
  - Lightly tap the screen to launch an app, select a menu item, or press a button.
- **Double-tap**
  - Lightly tap an image twice to zoom in and out.
- **Touch and hold**
  - Touch and hold items to access edit mode or view available options.
- **Swipe**
  - Lightly drag your finger vertically or horizontally across the screen to view panels.


- **Drag**

- Touch and hold an item, and then move it to a new location.

## Status panel

To open the Status panel:

- On the Watch screen, swipe down from the top of the screen.

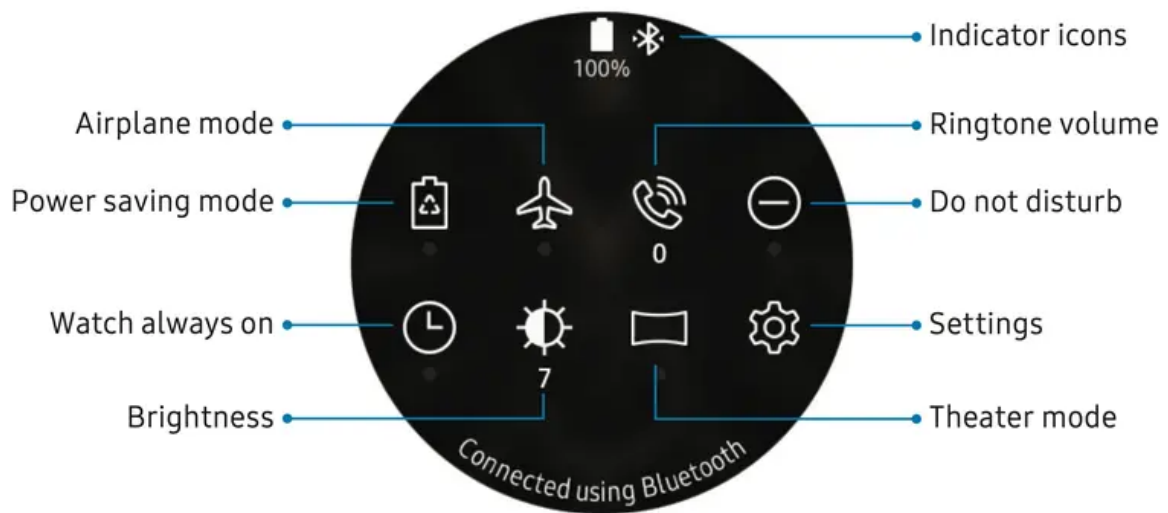

## Status Bar

Indicator icons display at the top of the screen in the Status bar.

Indicator icons



Battery full



Bluetooth connected



Bluetooth enabled but not connected



Bluetooth headset connected




Wi-Fi connected

## Power saving


Activate power saving mode to save battery power by limiting the Watch's functions.

1. On the Watch screen, swipe down from the top of the screen to open the status panel.

2. Tap **Power saving**, and then tap  **Ok** to confirm.


### **Airplane mode**

Airplane mode disconnects your device from all networks and turns off connectivity features, such as Bluetooth and Wi-Fi.

1. On the Watch screen, swipe down from the top of the screen to open the status panel.
2. Tap **Airplane mode**, and then tap  **Ok** to confirm.

### **Watch Always On**

Set the Watch to display a watch when the screen is turned off.

1. On the Watch screen, swipe down from the top of the screen to open the status panel.
2. Tap **Watch always on**, and then tap  **Ok** to confirm.

### **Notifications**

Stay up to date with events, notifications, and messages from your smartphone.

When you receive a notification, information about the notification, such as its type, is displayed on the screen while the Watch is vibrating.

1. Rotate the bezel left.
2. Tap the notification screen to view details.

### **View the notifications list**

To view a list of notifications from the same app:

1. From the Watch screen, rotate the bezel left to view notifications.
2. Tap the number at the bottom of the notification.

### **Clear all notifications**

To clear all notifications:

1. From the Watch screen, rotate the bezel left to view notifications.
2. Rotate the bezel to the end of the notifications screens, and then tap **Clear all**.

### **Block notifications**

To block notifications from an app:


1. From the Watch screen, rotate the bezel left to view notifications.
2. Tap a notification from the app that you want to block.
3. Tap the notification to view the details.

4. Tap  **More options** >  **Block notifications.**

## Notification settings

Change settings for the notification feature.

1.



From the Apps screen of the smartphone, tap  **Galaxy Wearable** > **Settings tab** > **Notifications.**


2. Tap On/Off to activate it, and then tap to select items:

- **Manage notifications:** Select apps on the smartphone to send notifications to the Watch.
- **Show only while wearing watch:** Show notifications on your Watch only while it is being worn.
- **Mute connected phone:** Mute notifications on your phone while receiving them on your Watch.
- **Auto show details:** Set the Watch to show details for notifications when they are received.
- **Notification indicator:** Show an indicator the watch face when there are unread notifications.
- **Turn on screen:** Set the Watch to turn on the screen when the notification is received.
- **Show while using phone:** Show notifications from your phone on your Watch while you are using your phone.
- **Smart relay:** Set the smartphone to display notification information from the Watch when you pick up the smartphone.

## Voice input


To use Voice input:


- Tap  Voice input and speak the message you want to enter. Tap Send when you are finished.
  - Tap  **More options** > **Input languages** to change the language. Voice input is not supported in some languages.

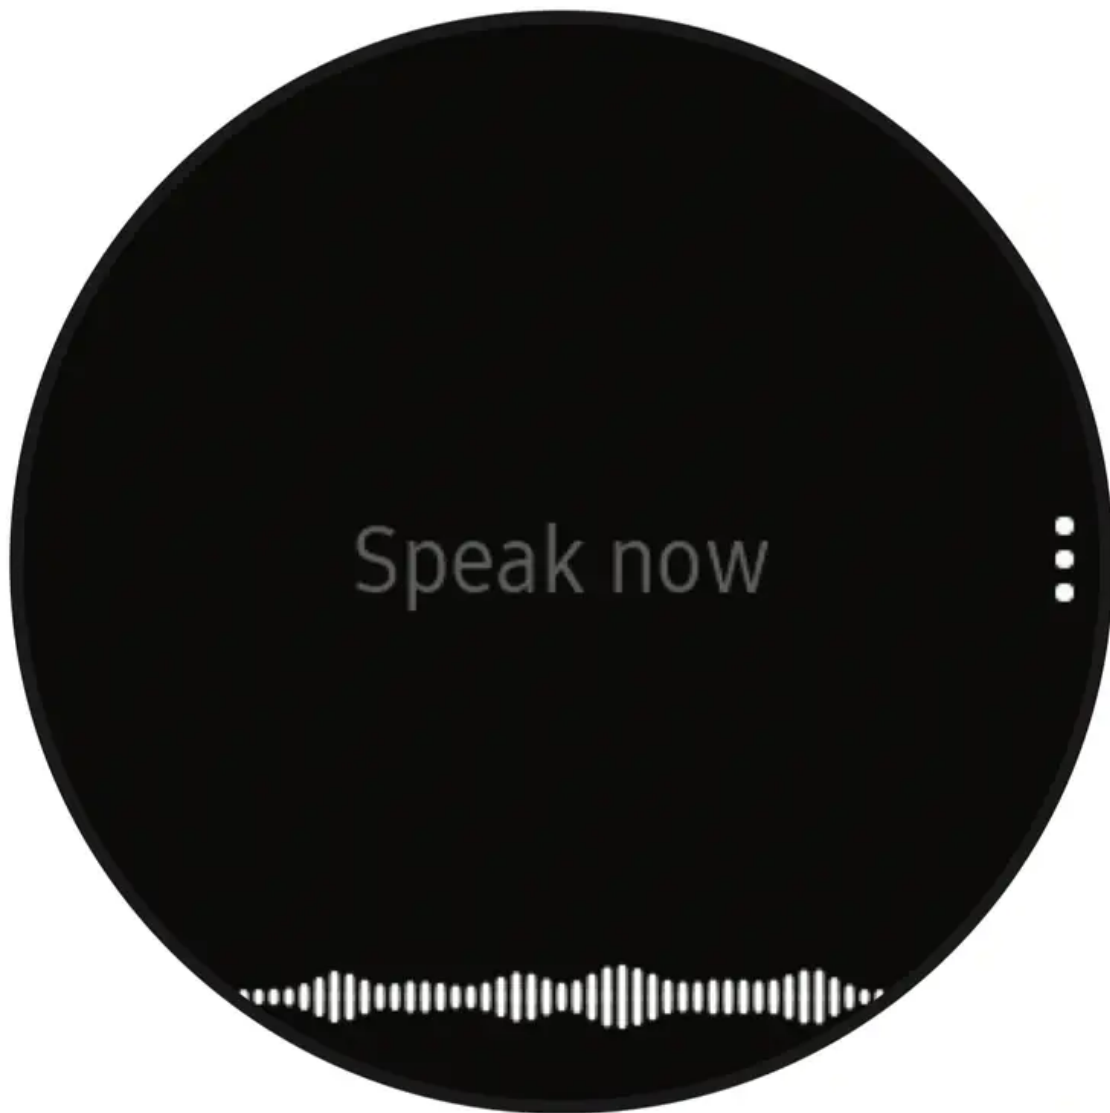

## Emojis

You can add emojis to your message.


1. Tap  **Emojis**, and select an emoji to include in your message.
2. To draw an image, tap **Doodle**.

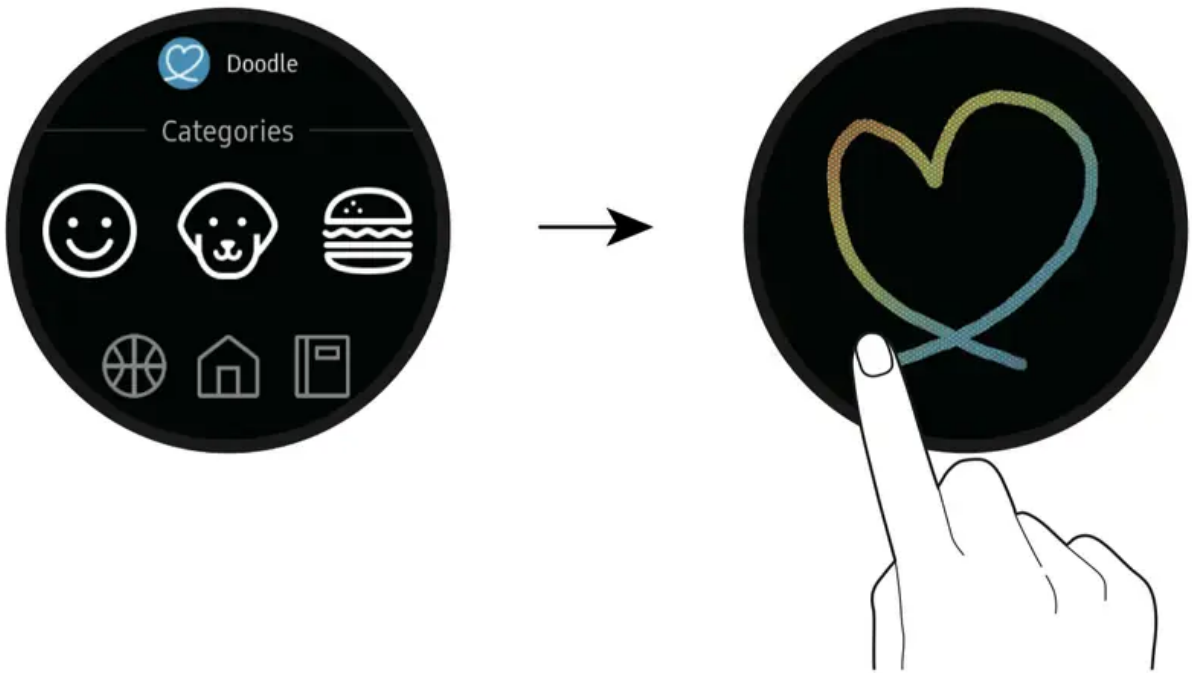


## Keyboard

Use the keyboard to enter your message. You can rotate the bezel to different input modes.

Handwriting mode

- Tap  **Keyboard**, and then use your finger to write text.

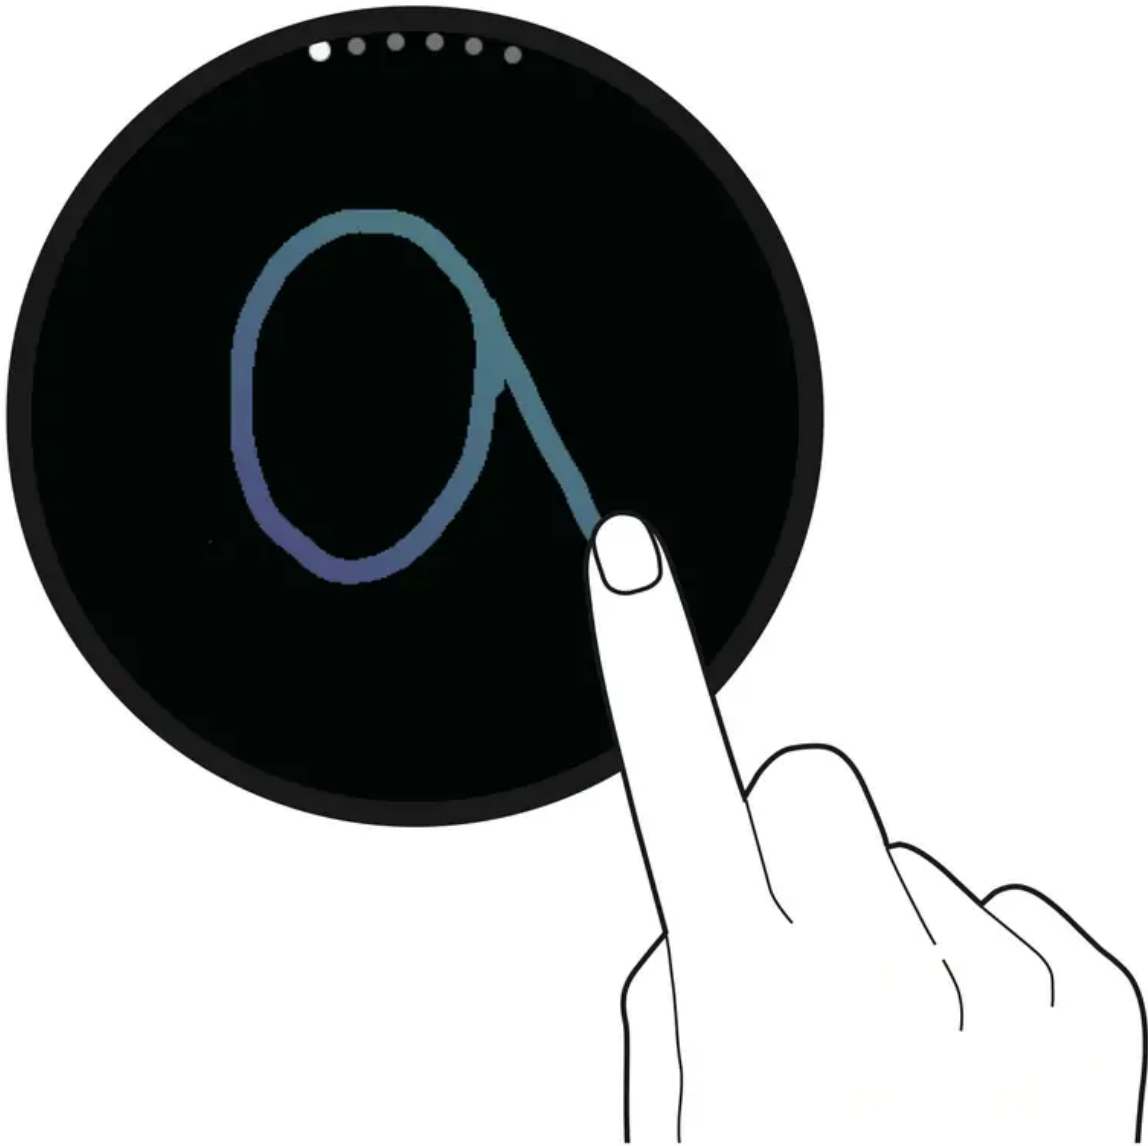

Enter characters


To enter characters:

1. Tap **Keyboard**, and then rotate the bezel to character mode.
2. Tap the corresponding key repeatedly until the desired character is displayed.
  - Rotate the bezel for numbers, punctuation, emojis, or voice input.



### Keyboard settings

Change the Samsung keyboard settings.



1. From the Apps screen, rotate the bezel and tap  **Settings**.
2. Tap **General > Input > Keyboard settings** and tap options to customize:
  - **English (US)**: Choose the keyboard layout.
  - **Select input languages**: Select languages for text input.
  - **Check for updates**: Set the Watch to check for and download the latest version of the Samsung keyboard.

- **Handwriting:** Enable handwriting mode.
  - **Auto capitalize:** Set the Watch to automatically capitalize the first character after a final punctuation mark, such as a period, question mark, or exclamation mark.
  - **Auto punctuate:** Set the Watch to insert a period when you double-tap the space bar.
- **Key-tap feedback:**
  - **Sound:** Set the Watch to play a sound when you tap a key.
  - **Vibration:** Set the Watch to vibrate when you tap a key.
- **Reset keyboard settings:** Reset the Samsung keyboard settings.
- **Smart typing:**
  - **Predictive text:** Activate predictive text mode to predict English words based on your input and display word suggestions.
- **Clear personalized data:** Clear word predictions and other data.

### Water lock mode

You can use Water lock mode to exercise in the water. While in Water lock mode the following features will be turned off:

- Touchscreen
- Wake-up gestures
- Watch always on


1. From the Apps screen, rotate the bezel and tap  **Settings**.
2. Tap **Advanced > Water lock mode**.
3. Tap **On/Off** to enable, and tap  **OK** to confirm.

### Exit water lock mode

- Press and hold the Home button to turn off the mode.


### Eject water

You can use the eject water features to help clear out water from your Watch.

1. From the Apps screen, rotate the bezel and tap  **Settings**.
2. Tap **Advanced > Water lock mode**.
3. Tap **Eject water** to make sounds to help eject water from the speaker.


## Theater mode

You can use Theater mode to silence your Watch during a movie. This will keep the screen off and the Watch silent.

1. From the Apps screen, rotate the bezel and tap  **Settings**.
2. Tap **Advanced > Theater mode**.
3. Tap **On/Off** to enable.
  - When enabled the theater mode symbol will display at the top of the screen.

## Goodnight mode

Goodnight mutes all alerts, except for alarms and system sounds. This keeps the screen off and the Watch silent while you sleep.

1. From the Apps screen, rotate the bezel and tap  **Settings**.
2. Tap **Advanced > Goodnight mode**.
3. Tap **On/Off** to enable.
  - When enabled the night mode symbol is displayed at the top of the screen.

# Apps

## Using apps

The Apps list displays all preloaded and downloaded apps. You can uninstall, disable, or hide apps from view.

## Access apps

The Apps screen displays icons for all apps.


1. From the Watch screen, press the **Home** button to go to the Apps screen.
2. To view other panels, rotate the bezel or swipe the screen to the left or right.

## Open apps

- On the Apps screen, tap an app icon to open the app.

## Auto open apps

Set an app to launch by rotating the bezel without tapping the app. When the bezel indicator icon hovers over an app, the app will be launched automatically.

1. From the Apps screen, rotate the bezel and tap  **Settings**.
2. Tap **Apps > Auto open apps**.

3. Tap **OK**.

## Recent apps

- From the Apps screen, rotate the bezel and tap Recent apps.

## Sort apps

Choose how to arrange the apps on the Apps screen.

1.

From the Apps screen, rotate the bezel and tap  **Settings**.

2. Tap **Apps > App order**, and choose an option:

- **Most recent first:** Recently used apps to appear first.
- **Custom:** Arrange the apps to your preference.
  - From the Apps screen, touch and hold an app, and then drag it to the desired location.

## Samsung apps


The following apps come pre-installed or downloaded over-the-air to your device.

### Messages

View messages and reply to or call the sender using the Watch.

#### Send messages

1.

From Apps, rotate the bezel and tap  **Messages**.

2.

Tap  **Compose**.

3. Add recipients and tap **Next**.

4. Enter text using one of the available methods.

- If you use Quick responses or emojis, the message is automatically sent to the recipients when you tap it.
- If you create a message using voice input or the keyboard, tap **Send** to send the message.

#### Edit Quick messages

Edit or add templates used for replying to messages.

1.

From **Apps** of the smartphone, tap **Apps**.



**Galaxy Wearable > Settings tab >**

2. Tap **Settings** next to Messages.

- To edit a message, select it and edit the text.

•


To create additional templates, tap



**Add.**

- To delete or rearrange messages, tap **Edit.**

## Phone

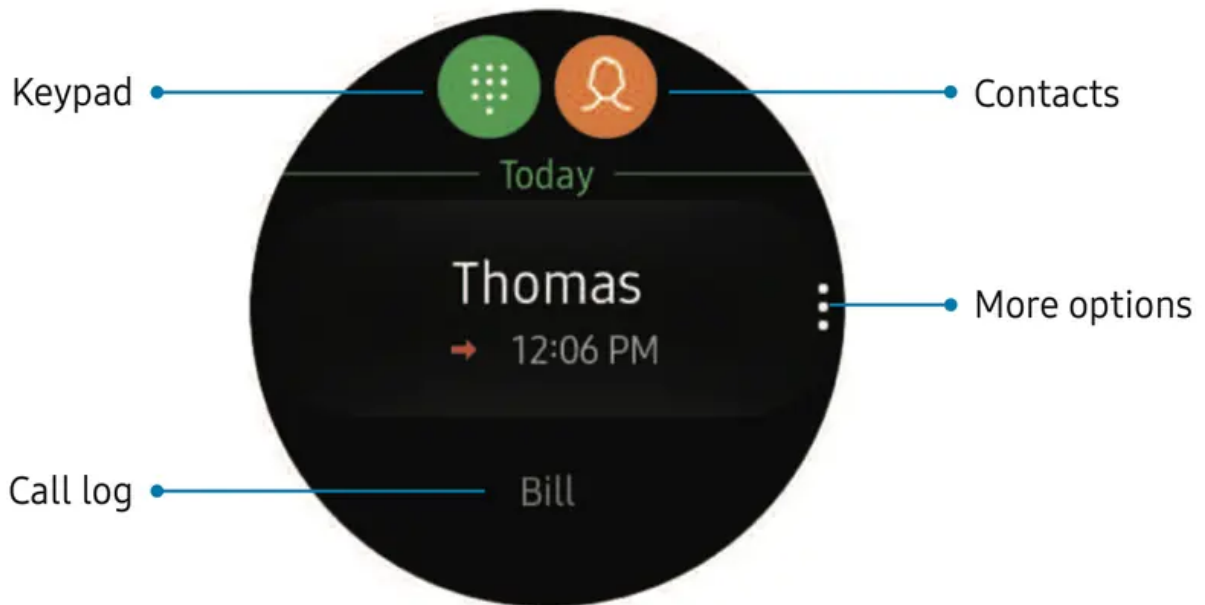

## Make calls

The call feature automatically launches on your smartphone.

1.

From the Apps screen, rotate the bezel and tap



**Phone.**

2. Use one of the following methods to make a call:

•



Tap



**Keypad**, enter a number using the keypad, and then tap





**Call.**

- Tap  **Contacts**, select a contact, and then tap  **Dial** or select a phone number.
- Scroll through the log list, and tap a log entry.


### Create a contact

You can search for a contact or scroll through the list to find one by name.




1. From the Apps screen, rotate the bezel and tap  **Contacts**.
2. Tap  **Add**, and then enter the contact information.
3. Tap **Save**.

### Steps

The Watch counts the number of steps you have taken and measures the distance traveled.


1. From the Apps screen, rotate the bezel and tap  **Samsung Health**.
2. Rotate the bezel and tap **Steps**.
3. Rotate the bezel and tap **View each date** to view a graph of your step count records.

To set your steps target:

1. From the Apps screen, rotate the bezel and tap  **Samsung Health**.
2. Rotate the bezel and tap the steps tracker.
3. Tap  **More options** >  **Settings**, and then tap **Step target**.
4. Rotate the bezel to set the target.
5. Tap **Done**.

### Floors

Record and track the number of floors you walk up.

1. From the Apps screen, rotate the bezel and tap  **Samsung Health**.

2. Rotate the bezel and tap **Floors**.
3. View a graph of your floor count records.

To set your floors target:

1.

From the Apps screen, rotate the bezel and tap



**Samsung Health.**

2. Rotate the bezel and tap **Floors**.

3.

Tap  **More options** >



**Settings**, and then tap **Floor target**.

4. Rotate the bezel to set the target.

5. Tap **Done**.

## Sleep

Automatically track your sleep patterns.

1.

From the Apps screen, rotate the bezel and tap



**Samsung Health.**

2. Rotate the bezel and tap **Sleep**.

3. Rotate the bezel to view your sleep data.

- To change sleep report notifications, tap **Notifications**, and then tap **On/Off**.

## Heart rate

Measure and record your heart rate. Take heart rate measurements when you are seated and relaxed.

1.

From the Apps screen, rotate the bezel and tap



**Samsung Health.**

2. Rotate the bezel and tap **Heart rate**.

3. Tap **Measure** to begin measuring your heart rate. After a moment, your current heart rate is displayed on the screen.

4. Tap **Tag** to select a status tag for your measured heart rate. The Watch displays information about your heart rate in relation to your selected tag.

## Find My Phone

If you misplace your smartphone, the Watch can help you find it.

1.

From **Apps**, rotate the bezel and tap



**Find My Phone.**

2. Select an option:

•



Tap

**Start**, and the smartphone emits sounds and turns on the screen.

•



Tap

**Stop** on the Watch to terminate the search, or tap



**Stop** on the smartphone.

### Find your Watch

You can also locate your Watch by making it light up and make sounds from the Galaxy Wearable app.

1.

From the Apps screen of the smartphone, tap



**Galaxy Wearable > Settings**

**tab > Find My Watch.**

2.



Tap

**Start**. The Watch vibrates and the screen turns on.

3.



Drag

**Stop** to the right on the Watch.


– or –



Tap



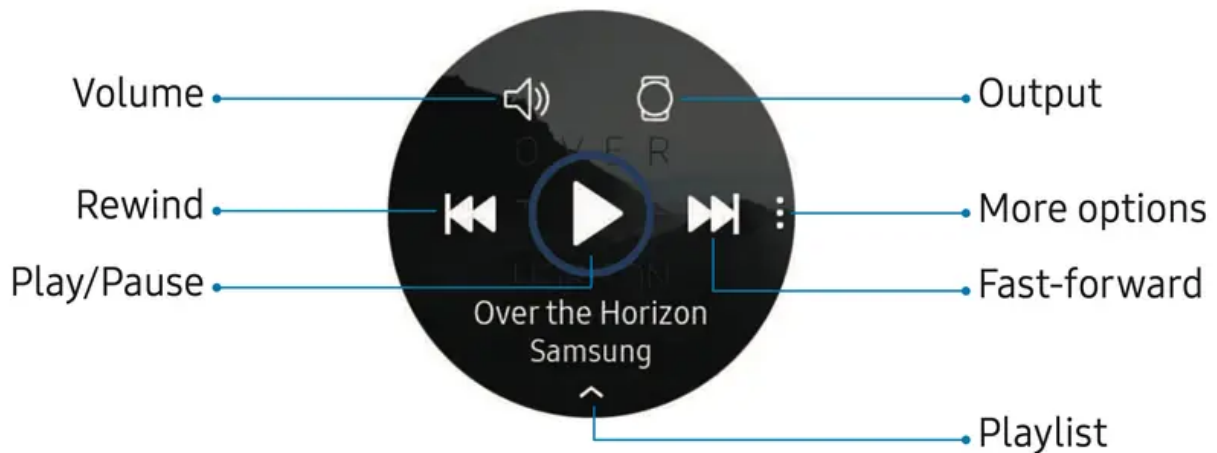

Stop on the smartphone.

## Music app






### Play music from the Watch

You can play music from the Watch through Bluetooth headphones (not included).

1. From the Apps screen, rotate the bezel and tap  **Music**.
2. Tap the output until the  **Watch** icon is displayed.
3. Tap  **More options** for the following options: **Shuffle**: Enable or disable shuffle. **Repeat**: Tap to repeat all songs, tap again to repeat once, and tap again to turn off repeat.
4. Tap  **Play music** to play music on your Watch.
5. Swipe up from the bottom of the screen to open the library screen, where you can view the current song, playlist, and queue music.

### Play music on your smartphone

When you select a smartphone to play music from, you can control playback of the music with your Watch. The music plays on your smartphone.

1. From the Apps screen, rotate the bezel and tap  **Music**.
2. Tap the output until the  **Phone** icon is displayed.
3. Tap  **Play music** to play music on your smartphone.

4. The music plays on your smartphone and the Watch displays the music controller screen.


## Settings

### Connections

Manage connections between your device and a variety of networks and other devices.

### Bluetooth


Use Bluetooth to connect the Watch to a smartphone and a headset (not included).

1. From the Apps screen, rotate the bezel and tap  **Settings**.
2. Tap **Connections > Bluetooth**.
  - **Bluetooth**: Turn the Bluetooth feature on or off.
  - **BT headset**: Search for Bluetooth headsets and connect them to the Watch.

**Note:** The headset can only be used for playing music on the Watch.


### Mobile networks

Customize your mobile networks.

1. From the Apps screen, rotate the bezel and tap  **Settings**.
2. Tap **Connections > Mobile networks**.
  - **Mobile networks**: Enable or disable using mobile data.
  - **Mobile data**: Enable mobile data.
  - **Data roaming**: Enable data roaming.
  - **Network operators**: Choose a network operator.
  - **Access Point Names**: Select and APN.


### Wi-Fi

Activate the Wi-Fi feature to connect to a Wi-Fi network.

1. From the Apps screen, rotate the bezel and tap  **Settings**.
2. Tap **Connections > Wi-Fi**.
3. Tap **Wi-Fi** again, and then tap **Auto**, **Always on**, or **Always off**.


### Connect to a Wi-Fi network

This feature is available when the Watch is not connected to the smartphone through Bluetooth.

1. From the Apps screen, rotate the bezel and tap  **Settings**.
2. Tap **Connections > Wi-Fi**.
3. Tap **Wi-Fi networks > Scan**.
4. Select a network from the Wi-Fi networks list. Networks that require a password display a lock icon.
5. Tap **Connect**.

**Note:** Once the Watch connects to a Wi-Fi network, the Watch reconnects to that network each time it is available without requiring a password. To prevent the Watch connecting to the network automatically, select the network, and then tap **Forget**.

## Data usage


1. From the Apps screen, rotate the bezel and tap  **Settings**.
2. Tap **Connections > Data usage** and tap an option:
  - **Mobile data**
  - **Data limit**
  - **Data usage cycle**
  - **Start date**
  - **Usage details**

## Sounds and vibration

Configure the sounds and vibrations used to indicate notifications, screen touches, and other interactions.


### Sound mode

Switch between sound modes, while preserving the individual sound settings you have made.

1. From the Apps screen, rotate the bezel and tap  **Settings**.
2. Tap **Sounds and vibration > Sound mode**, and then choose a mode:
  - **Sound:** Enable sounds for notifications and alerts.
  - **Vibrate:** Use vibration only for notifications and alerts.
  - **Mute:** Set your device to make no sounds.

### Volume

Set volume levels.


1. From the Apps screen, rotate the bezel and tap  **Settings**.
2. Tap **Sounds and vibration > Volume**.
  - Swipe the screen from right to left to see the volume levels for Ringtone, Media, Notifications, and System.
  - Rotate the bezel to change the volume level for each category.

## Display

Configure your display's brightness, screen timeout delay, and other settings.


### Watch faces

Change the style settings.

1. From the Apps screen, rotate the bezel and tap  **Settings**.
2. Tap **Watch faces**. The following options are available:
  - **Watch faces:** Select a watch type.
  - **Watch always on:** Set the Watch to display a watch when the screen is turned off.
  - **Watch face order:** Set a sort order.
  - **Hourly chime:** Hear a sound and feel a vibration at the start of each hour.
  - **Notification indicator:** Enable or disable the notification indicator.
  - **Status indicator:** Indicators are icons that show the current status of your Watch on the watch face.


### Adjust screen brightness

Manually adjust the brightness of the display.

1. From the Apps screen, rotate the bezel and tap  **Settings**.
2. Tap **Display** and select an option:
  - **Brightness:** Manually adjust the brightness of the display.
  - **Auto low brightness:** Set the Watch to automatically adjust the brightness depending on ambient light conditions.

### Date and time

You can set the date and time manually.

1. From the Apps screen, rotate the bezel and tap  **Settings**.

2. Tap **General > Date and time.**


- **Automatic:** Use the network to set date and time.
- **Set date:** Set the date manually.
- **Set time:** Set the time manually.
- **Select time zone:** Select the time zone manually.

**Note:** The Date and time options are available when your Watch is not connected to your mobile device.

## Lock screen and security

### Set a screen lock

It is recommended that you secure your device using a Screen lock.


1. From the Apps screen, rotate the bezel and tap  **Settings.**
2. Tap **Security > Lock.**
3. Tap **Type** to select a screen lock type:
  - **Pattern:** Create a pattern that you draw on the screen to unlock your device. This option provides medium security.
  - **PIN:** Set a PIN to use for unlocking the device when it removed from your wrist and the screen is turned off.
  - **None:** Do not lock the screen.
4. Tap **Help** to view help information for using the screen lock feature.

## Device maintenance

View the status of your device's battery, storage, and memory. You can also automatically optimize your device's system resources.

### Date and time

You can set the date and time manually.

1. From the Apps screen, rotate the bezel and tap  **Settings.**
2. Tap **General > Date and time.**
  - **Automatic:** Use the network to set date and time.
  - **Set date:** Set the date manually.
  - **Set time:** Set the time manually.
  - **Select time zone:** Select the time zone manually.

**Note:** The Date and time options are available when your Watch is not connected to your mobile device.



## Power saving mode

Activate Power saving mode to save battery power by limiting the Watch's functions.

To save battery power, Power saving mode:

- Uses a grayscale Home screen
- Turns off all functions except calls, messages, and notifications
- Turns off Wi-Fi and mobile networks (if applicable)
- Limits performance

To enable Power saving mode:



1. From the Apps screen, rotate the bezel and tap  **Settings > Battery** .
2. Tap Power saving, and then tap  **OK**.

To disable Power saving mode:

- From the Home screen, tap Off, and then tap  **OK**

## Watch only mode

Activate Watch only mode to save battery power by limiting the Watch's functions to only showing the time.



1. From the Apps screen, rotate the bezel and tap  **Settings > Battery** .
2. Tap Watch only, and then tap  **OK**.

To disable Watch only mode:

- Touch and hold the **Power** button for three seconds.

## Reset the Watch

Reset settings to their factory default values and delete all data.

1. From the Apps screen, rotate the bezel and tap  **Settings**.
2. Tap **General > Reset**.
3. Tap  **OK**.

## Watch status

Access information about the Watch.

1.



From the Apps screen of the smartphone, tap  
tab > **About watch.**

**Galaxy Wearable > Settings**

2. Tap an option below:

- **Update watch software:** Update the Watch to the latest software.
- **Back up and restore:** Back up the stored data on the Watch or restore backup data.
- **Legal information:** View the legal information for the Watch.
- **Unknown sources:** Set the Watch to allow the installation of apps from unknown sources.
- **Device name:** Change the Watch's name.
- **Device information:** View identification codes for your Watch.

### **Warning**

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.