


Getting to Know Your TV

FRONT PANEL



Remote Sensor and Power Indicator

REAR PANEL

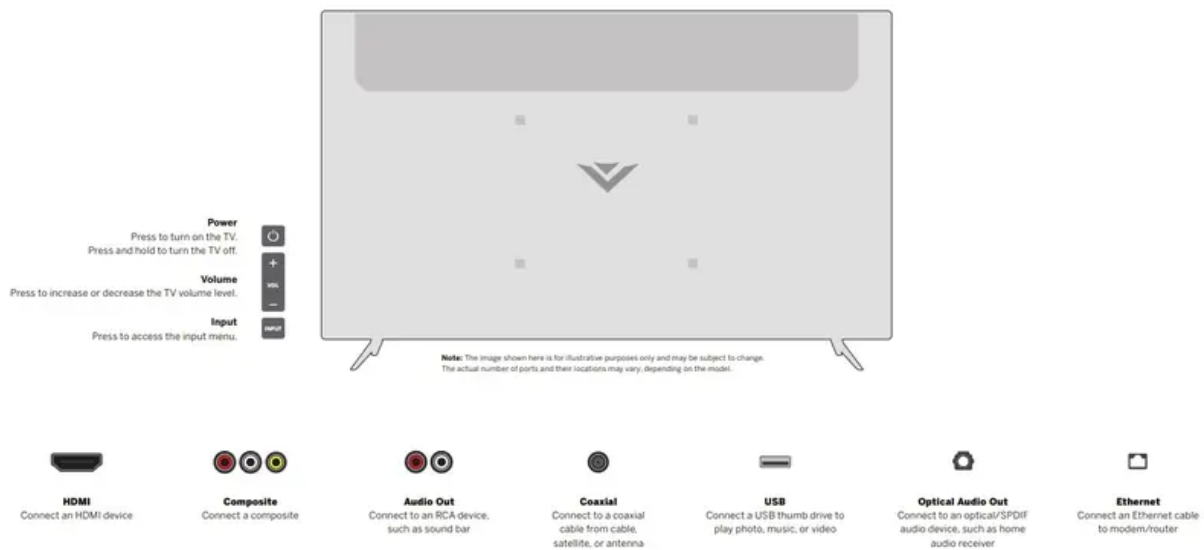

Connecting a device — AUDIO & VIDEO CABLE TYPES




HDMI CABLE



COAXIAL CABLE



COMPOSITE (AV) CABLE

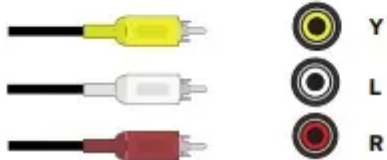

Your TV can be used to display output from most devices.


1. Verify that your device has a video port that matches an available port on the TV (HDMI, Composite, etc.).
2. Connect the appropriate cable (not included) to the TV and the device.
3. Turn the TV and your device on.
4. Set the TV's input to match the connection you used (HDMI-1, HDMI-2, etc.).

Connecting a device — AUDIO CABLE TYPES

HDMI CABLE



COMPONENT AND/OR COMPOSITE CABLE



OPTICAL/SPDIF CABLE



Your TV can be output sound to an audio device, such as a receiver or sound bar.


1. Verify that your device has an audio port that matches an available port on the TV (optical, RCA, etc).
2. Connect the appropriate cable (not included) to the TV and the device.
3. Turn the TV and your device on.

WALL-MOUNTING THE TV

- First you will need a wall mount. Consult the provided table below to find the appropriate mount for your TV.
- Be sure the mount you choose is capable of supporting the weight of the TV.


To install your TV on a wall:

1. Disconnect any cables connected to your TV.
2. Place the TV face-down on a clean, flat, stable surface. Be sure the surface is clear of debris that can scratch or damage the TV.
3. If attached, remove the stands by loosening and removing the screws.
4. Attach your TV and wall mount to the wall by carefully following the instructions that came with your mount. Use only with a UL-listed wall mount bracket rated for the weight/load of your TV.

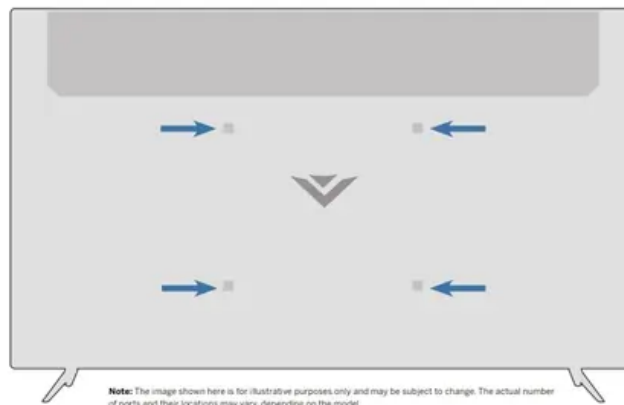


	V435-H1	V435-H11	V555-H1	V555-H11	V585-H1	V585-H11	V705-H1
Screw Size:	M5	M6	M5	M6	M5	M6	M8
Hole Depth:	14 mm	14 mm	14 mm	14 mm	14 mm	14 mm	14 mm
Hole Pattern:	200 x 200 mm	200 x 200 mm	300 x 200 mm	300 x 200 mm	300 x 200 mm	300 x 200 mm	400 x 200 mm
Weight w/o Stand:	15.65 lb (7.1 kg)	15.65 lb (7.1 kg)	29.83 lb (13.53 kg)	29.83 lb (13.53 kg)	31.75 lb (14.4 kg)	31.75 lb (14.4 kg)	51.37 lb (23.3 kg)

USING THE REMOTE

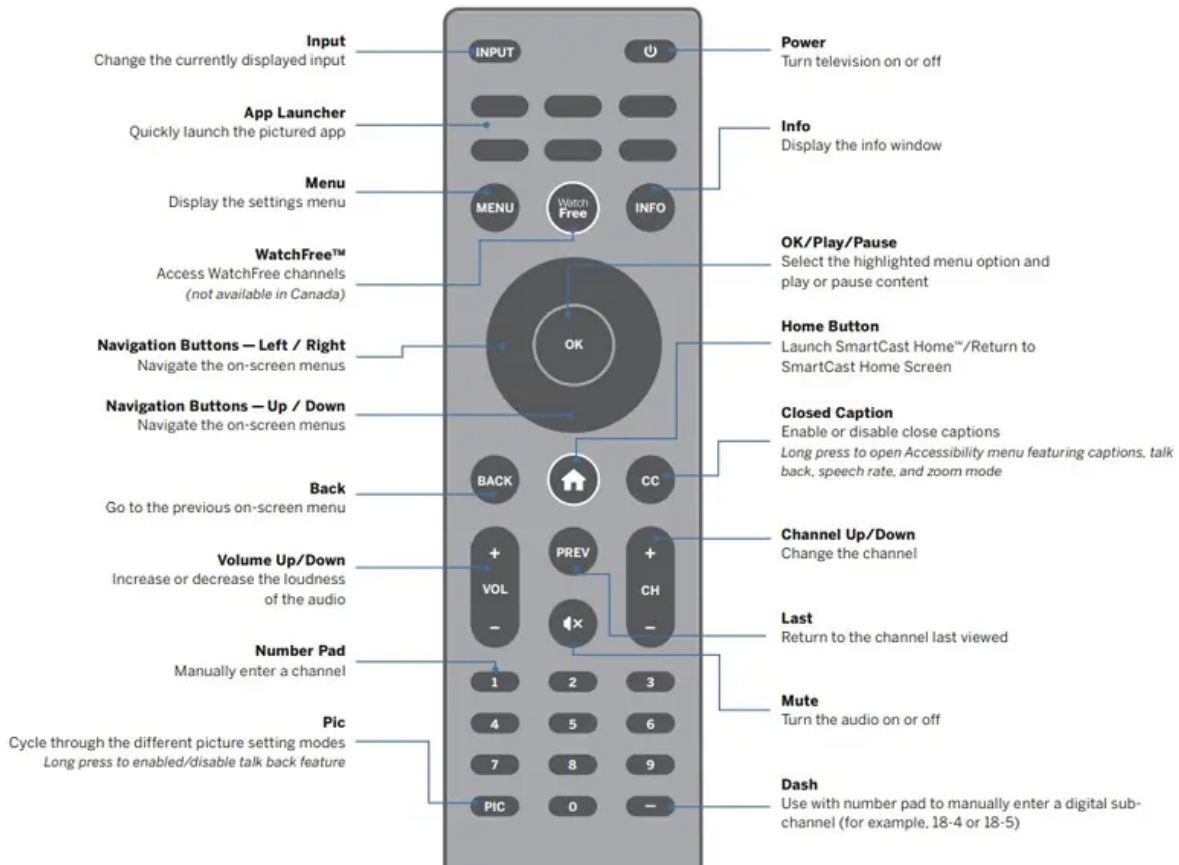

Replacing the Batteries

1. Push the bottom of the battery compartment and lift battery cover to open.
2. Insert two batteries into the remote control. Make sure that the (+) and (-) symbols on the batteries match the (+) and (-) symbols inside the battery compartment.
3. Replace the battery cover and click to close.

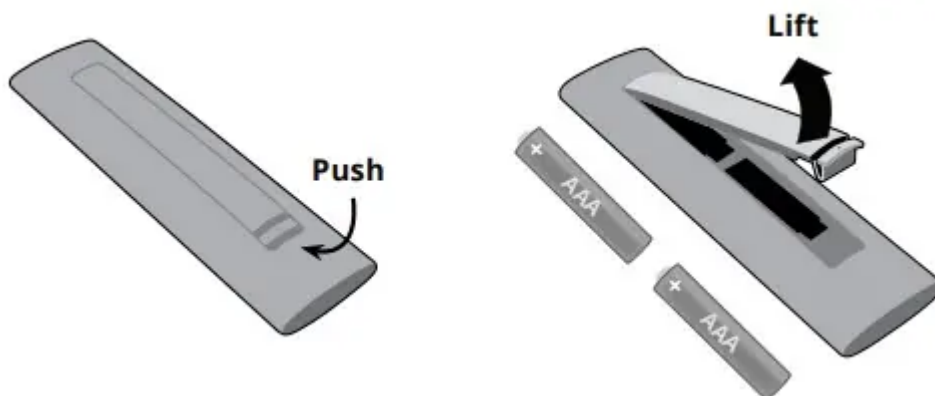


Completing the First-Time Setup


Before you begin the first-time setup:

- Your TV should be installed and the power cord should be connected to an electrical outlet.
- If you have a wireless network, have the network password ready.
- If you are connecting to your network with an Ethernet cable, connect it to the Ethernet port on the TV.


The first time you turn on the TV, the on-screen instructions will guide you through each of the steps necessary to get your TV ready for use:

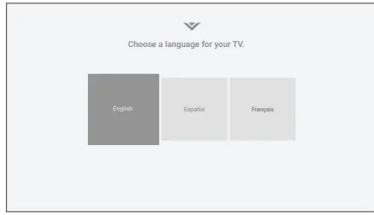


1. Choose your language. Pressing the CC button will enable TTS (text-to-speech) functionality.

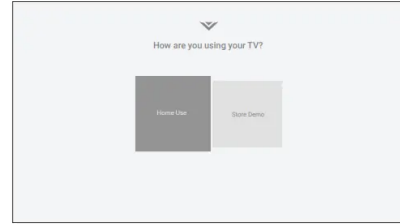


2. Choose home use.

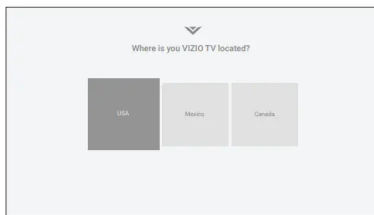

3. Choose your country.

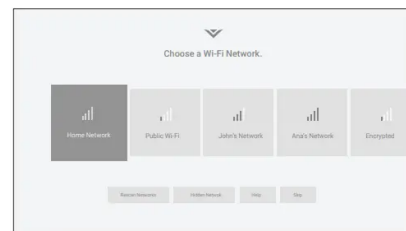


4. Choose your Wi-Fi network and enter the password.

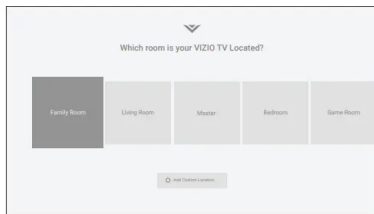


5. Name your TV.



6. Scan for channels.

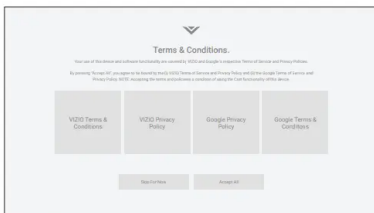

7. Accept the Terms & Conditions.

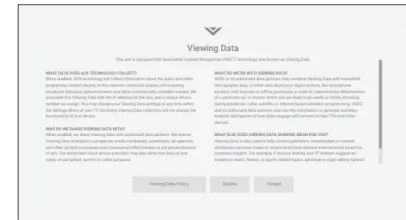

8. View and accept VIZIO Viewing Data Policy.



Using the On-Screen Menu

NAVIGATING THE ON-SCREEN MENU

To open the on-screen menu:


1. Press the MENU button on the remote.
2. Use the Navigation buttons to highlight a menu option, and press the OK button to select that option.

CHANGING THE INPUT SOURCE

External devices, such as DVD players, Blu-ray players, and video game consoles, can be connected to your TV. To use one of these devices with your TV, you must first change the input source using the input menu.

To change the input sources:

1. Press the INPUT button on the remote. The input menu is displayed.
2. Use the Navigation buttons or the INPUT button on the remote to highlight the input you wish to view. The corresponding inputs are named on the back of your TV.
3. Press OK or release the INPUT button. The selected input is displayed.

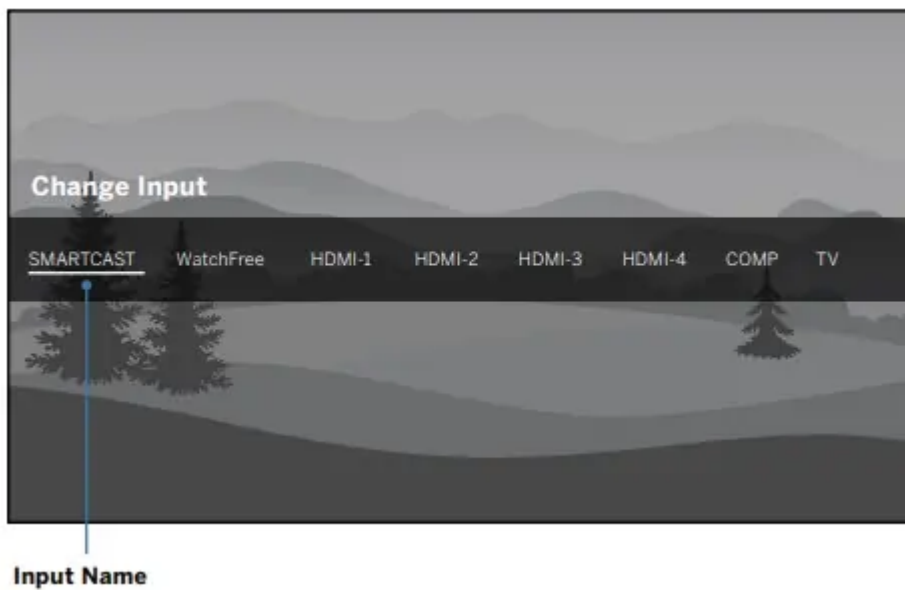

ADJUSTING THE PICTURE SETTINGS

Your TV can be adjusted to suit your preferences and viewing conditions.

To adjust the picture mode settings:


Menu > Picture > Picture Mode

1. Use the Navigation buttons on the remote to highlight Picture Mode, then use the Left/Right Navigation buttons to change the picture mode:

- Vivid — Sets the picture settings to values that produce a brighter, more vivid picture.
- Bright — Sets the picture settings to values ideal for watching TV in a brightly-lit room.
- Calibrated — Sets the picture settings to the default settings.
- Calibrated Dark — Sets the picture settings to values ideal for watching TV in a dark room.
- Game — Reduces throughput delays and optimizes the picture settings for displaying game console output. Also the preferred picture mode for computer mode.
- Sports — Sets the picture settings to values ideal for watching sport events with motion control setting.

2. To manually change each of the picture settings, use the Up/Down Navigation buttons on the remote to highlight that picture setting, then use the Left/Right Navigation buttons to adjust the setting:

- Backlight (SDR content) or Tone Mapping (HDR content) — Adjusts the LED brightness to affect the overall brilliance of the picture.
- Brightness — Adjusts the black level of the picture. When this setting is too low, the picture may be too dark to distinguish details. When this setting is too high, the picture may appear faded or washed out.
- Contrast — Adjusts the white level of the picture. When this setting is too low, the picture may appear dark. When this setting is too high, the picture may appear faded or washed out. If the setting is too high or too low, detail may be difficult to distinguish in dark or bright areas of the picture.
- Color — Adjusts the intensity of the picture colors.
- Tint — Adjusts the hue of the picture. This setting is useful in adjusting the flesh tones in the picture. If flesh appears too orange, reduce the level of color before adjusting tint.
- Sharpness — Adjusts the edge sharpness of picture elements. It can be used to sharpen non-HD (high definition) content; however, it will not produce detail that does not otherwise exist.

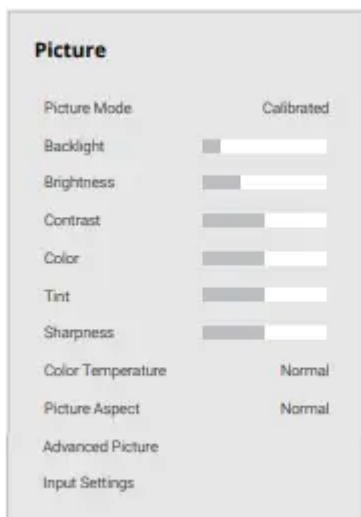

Changing the Picture Aspect Ratio


To change the screen aspect ratio: Menu > Picture > Picture Aspect

Use the Navigation buttons to highlight the aspect ratio you wish to view.

Your TV can display images in different modes: Normal, Panoramic, Wide, Zoom, and Stretch.

- Normal (default) — No change to aspect ratio.
- Panoramic* — Stretches a 4:3 image to fill 16:9 screen with an algorithm so the center doesn't look stretched.
- Wide — Stretches a 4:3 aspect ratio to fill 16:9 screen. If a 16:9 image, adds black bars to top and bottom.
- Zoom — Expands image both horizontally and vertically by 14%.
- Stretch* — When the 16:9 signal is a 4:3 image with black bars left and right, stretches to fill the screen.

Some programs have black bars on the top or sides of the screen so that the picture keeps its original shape. Examples include widescreen movies and older TV programs.

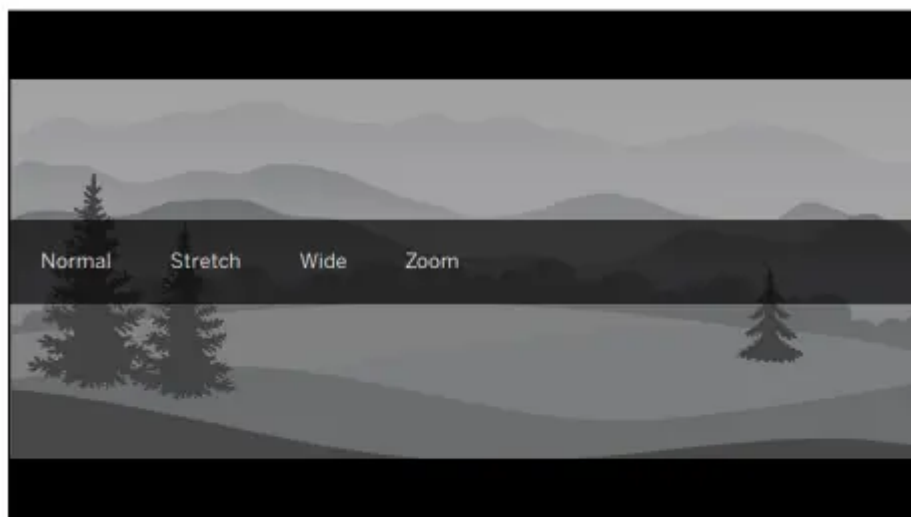

Adjusting the Color Tuner Settings

The Color Tuner settings allow you to adjust the color management system, 20 point white balance, turn color channels off for testing, and display SMPTE, flat, ramp, and uniformity analyzer test patterns.

To access the color tuner table:

Menu > Picture > Advanced Picture > Color Calibration > Color Tuner

To turn color channels off and on:

1. Use the Navigation buttons on the remote to highlight Red, Green, or Blue.
2. Press the OK button to turn the color channel off or on. An X appears over a color channel that has been turned off.
3. Only two color channels can be turned off at the same time.

To adjust the color management system/20 point white balance settings:

1. Use the Navigation buttons on the remote to highlight the Hue, Saturation, Brightness, Offset, or Gain of the color you wish to adjust. Press the OK button.
2. Use the Left/Right Navigation buttons to adjust the value. When you are finished press the OK button to save the setting.

	Red	Green	Blue	Cyan	Magenta	Yellow
Hue	0	0	0	0	25	-14
Saturation	-1	5	-4	0	-2	0
Brightness	-24	0	-22	0	0	0
Offset	0	0	0			
Gain	0	0	0			

To adjust the 20 Point White Balance settings:

3. From the Color Tuner table, use the Navigation buttons to highlight the top bar and then press the Left/Right Navigation buttons until the 20 POINT WHITE BALANCE menu is displayed.

	Gain	Red	Green	Blue
	5%	0	0	0

4. Use the Navigation buttons on the remote to highlight the Gain and Color values you wish to adjust. Press the OK button and use the Left/Right Navigation buttons to adjust the value. When you are finished, press the OK button to save the setting.

Help Topics

The remote is not responding .

- Make sure the batteries are properly inserted matching the - and + symbols.
- Replace the batteries with fresh ones

The TV displays “No Signal .”

- Press INPUT button on the remote control to select a different input source.
- If you are using cable TV or antenna connected directly to the TV, scan for channels.
See Scanning for TV Channels

There is no power .

- Ensure the TV is plugged into a working electrical outlet.
- Ensure the power cable is securely attached to the TV.
- Press the Power/Standby button on the remote or on the back of the TV to turn the TV on.

The power is on, but there is no image on the screen .

- Ensure all cables are securely attached to the TV.
- Ensure all devices are connected correctly. Devices differ; see your device’s user manual for details.
- Adjust Brightness, Contrast, or Backlight. See Adjusting the Picture Settings.
- Press the INPUT button on the remote to select a different input source.

The sound is flat or dialog is not audible .

- Turn off Volume Leveling. See Adjusting the Audio Setting

Where do I find information on the accessibility features of this product and other VIZIO products?

- Please visit vizio website
- Email for us or
- Give us a call at 1-877-698-4746.

How do I stream apps like Netflix to my VIZIO SmartCast® TV?

- Popular apps are located on the SmartCast Home™ screen, so you can simply navigate to the app row on your SmartCast TV to start streaming.
- You can also use Apple AirPlay 2 or Chromecast built-in™ to stream content from your device directly to your SmartCast TV

The colors on the TV don’t look right .

- Adjust the Color and Tint settings in the Picture menu. See Adjusting the Picture Settings

- Select a pre-set picture mode. VIZIO recommends selecting Calibrated.
- Check all cables to ensure they are securely attached.

The image quality is not good .

- For the best image quality, view high-definition programs using digital sources. Connect your devices with HDMI cables.
- If you are using an antenna, the signal strength of the channel may be low. Ensure your antenna is connected securely to the TV and move the antenna around the room or close to a window for the best signal.

The picture is distorted .

- Move the TV away from electrical appliances, cars, and fluorescent lights.
- Ensure all cables are securely attached.

The TV image does not cover the entire screen .

- If you are using TV, AV, or Component with 480i input, go to Menu > Picture > Picture Aspect.

The TV has pixels (dots) that are always dark .

- Your HD TV is precision-manufactured using an extremely high level of technology. However, sometimes pixels may not display correctly. These types of occurrences are inherent to this type of product and do not constitute a defective product.

The buttons on the remote aren't working .

- Ensure you are only pressing one button at a time.
- Point the remote directly at the TV when pressing a button.
- Replace the remote batteries with new ones. See Replacing the Batteries

There is no sound .

- Press Volume Up on the remote control.
- Press the MUTE button on the remote to ensure mute is off.
- Check the audio settings. See Adjusting the Audio Settings
- Check the audio connections of external devices (Blu-ray player, game console, cable/satellite box) that are connected to the TV.
- If you are using an antenna, the signal strength of the channel may be low. Ensure your antenna is connected securely to the TV and move the antenna around the room or close to a window for the best signal.
- Set eARC to Off and use ARC mode.

I see “noise” or static on the screen .

- When your TV’s digital capabilities exceed a digital broadcast signal, the signal is up-converted (improved) to match your TV’s display capabilities. This upconverting can sometimes cause irregularities in the image.
- If you are using an antenna, the signal strength of the channel may be low. Ensure your antenna is connected securely to the TV and move the antenna around the room or close to a window for the best signal.

When I change input source, the TV image changes size .

- The TV remembers the viewing mode on each input source. If the viewing mode on the new input source differs from the one on the input source you switch from, the difference may be noticeable.
- See Changing the Picture Aspect Ratio

How do I download the VIZIO SmartCast Mobile™ App?

- Make sure your phone or tablet is connected to a Wi-Fi network. Open a browser on your phone or tablet.
- Navigate to vizio.smartcastapp.com website and follow the on-screen instructions to download the VIZIO SmartCast Mobile™ App.

How do I change the Inputs?

- Press the INPUT button on the back of the TV to cycle through the Inputs.
- Press the INPUT button on the basic remote to cycle through the Inputs.
- Make sure the VIZIO SmartCast Mobile™ app is installed on your phone or tablet. Open the VIZIO SmartCast Mobile app. Tap on the Device list and select your TV. Tap on the Input key and select the Input of your choice

How do I connect to my Wi-Fi network?

- On your TV remote, press the MENU button then go to Network > Select your Wi-Fi name > Enter password.
- Open the VIZIO SmartCast Mobile™ app on your phone or tablet. Tap on the Menu Tab > SmartCast Devices > Your TV/Device Name > Network
- Tap on the Settings icon > Network > Wireless Access Points. Select your Wi-Fi network from the list, enter the Wi-Fi password, and tap Connect.

How do I exit Demo Mode?

- Press and hold the INPUT button on the back of the TV to exit the demo mode.

How do I watch Cable/Antenna TV channels?

- If you subscribe to cable or satellite, simply connect an HDMI cable (not included) to the receiver.

- If you use external antennas to watch local broadcast channels, use a coaxial cable to connect.

Some of my Channels are missing .

- Press the MENU button on your TV remote and select the channels option. Then select Find Channels.
- Open the VIZIO SmartCast Mobile app on your phone or tablet.
- Click on: Menu Tab > SmartCast Devices > Your TV/Device Name > Channels > Find Channels.

How do I disable/enable Viewing Data?

- Press the MENU button on your remote and select ADMIN & PRIVACY. Then select Viewing Data to turn the feature on or off.

The television will not turn on using Alexa or Google Assistant .

- Ensure the television is in Quick Start Mode.
- Tap on Menu > System > Power Mode > Quick Start.

How do I know I am getting 4K resolution or HDR content such as Dolby Vision?

- As you are watching content on the television, press the INFO button on the remote or VIZIO SmartCast Mobile app. You will see the current resolution being displayed along with the version of video.
- HDR will show as a Dolby Vision icon, HDR10 or HLG.

Specifications

	V435-H3	V435-H1	V558-H1	V558-H11
Size	43"	43"	55"	55"
Viewable Area	42.5"	42.5"	54.5"	54.5"
PRODUCT DIMENSIONS				
Dimensions w/ Stand	38.31" x 24.52" x 8.35" (973.2 x 622.8 x 212 mm)	38.31" x 24.52" x 8.35" (973.2 x 622.8 x 212 mm)	49.06" x 30.87" x 10.24" (1246.20 x 784.10 x 260.10 mm)	49.06" x 30.87" x 10.24" (1246.20 x 784.10 x 260.10 mm)
Dimensions w/o Stand	38.31" x 22.35" x 3.31" (973.2 x 567.8 x 84 mm)	38.31" x 22.35" x 3.31" (973.2 x 567.8 x 84 mm)	49.06" x 28.47" x 3.39" (1246.20 x 723.10 x 86.30 mm)	49.06" x 28.47" x 3.39" (1246.20 x 723.10 x 86.30 mm)
Weight w/ Stand	15.87 lb (7.2 kg)	15.87 lb (7.2 kg)	30.29 lb (13.74 kg)	30.29 lb (13.74 kg)
Weight w/o Stand	15.65 lb (7.1 kg)	15.65 lb (7.1 kg)	29.83 lb (13.53 kg)	29.83 lb (13.53 kg)
Mounting Screw Size	M6	M6	M6	M6
Hole Pattern	200 mm x 200 mm	200 mm x 200 mm	300 mm x 200 mm	300 mm x 200 mm
PICTURE QUALITY				
Maximum Resolution	3840 x 2160 (UHD)	3840 x 2160 (UHD)	3840 x 2160 (UHD)	3840 x 2160 (UHD)
LCD Backlight	Full Array LED	Full Array LED	Full Array LED	Full Array LED
Dynamic Motion Rate	120	120	120	120
INPUTS / OUTPUTS				
HDMI Inputs	3	3	3	3
Composite Video Input	1	1	1	1
Ethernet Input	1	1	1	1
RF Antenna Input	1	1	1	1
USB	1	1	1	1
Audio Output	HDMI ARC, Analog Stereo Out, Digital Optical	HDMI ARC, Analog Stereo Out, Digital Optical	HDMI ARC, Analog Stereo Out, Digital Optical	HDMI ARC, Analog Stereo Out, Digital Optical
OTHER				
Remote Control Type	IR Remote	IR Remote	IR Remote	IR Remote
Power Consumption	80.42 W	80.42 W	99.35 W	99.35 W
Standby Power	<0.5W	<0.5W	<0.5W	<0.5W
Voltage	120V	120V	120V	120V
OSD Language	English, French, Spanish	English, French, Spanish	English, French, Spanish	English, French, Spanish
Certification	UL, cUL, FCC Class B, BETS-7/ICES-003 Class B, IC, HDMI (CEC, ARC) Dolby Audio, Dolby Vision	UL, cUL, FCC Class B, BETS-7/ICES-003 Class B, IC, HDMI (CEC, ARC) Dolby Audio, Dolby Vision	UL, cUL, FCC Class B, BETS-7/ICES-003 Class B, IC, HDMI (CEC, ARC) Dolby Audio, Dolby Vision	UL, cUL, FCC Class B, BETS-7/ICES-003 Class B, IC, HDMI (CEC, ARC) Dolby Audio, Dolby Vision

	V585-H1	V585-H11	V705-H1
Size	58"	58"	70"
Viewable Area	57.5"	57.5"	69.5"
PRODUCT DIMENSIONS			
Dimensions w/ Stand	51.38" x 32.43" x 10.24" (1305.08 x 823.6 x 260.1 mm)	51.38" x 32.43" x 10.24" (1305.08 x 823.6 x 260.1 mm)	62.54" x 37.76" x 13.04" (1588.6 x 959 x 331.2mm)
Dimensions w/o Stand	51.38" x 30.02" x 3.39" (1305.08 x 762.6 x 86.2 mm)	51.38" x 30.02" x 3.39" (1305.08 x 762.6 x 86.2 mm)	62.54" x 35.04" x 3.46" (1588.6 x 890 x 87.9mm)
Weight w/ Stand	32.19 lb (14.6 kg)	32.19 lb (14.6 kg)	52.48 lb (23.8 kg)
Weight w/o Stand	31.75 lb (14.4 kg)	31.75 lb (14.4 kg)	51.37 lb (23.3 kg)
Mounting Screw Size	M6	M6	M8
Hole Pattern	300 mm x 200 mm	300 mm x 200 mm	400 mm x 200 mm
PICTURE QUALITY			
Maximum Resolution	3840 x 2160 (UHD)	3840 x 2160 (UHD)	3840 x 2160 (UHD)
LCD Backlight	Full Array LED	Full Array LED	Full Array LED
Dynamic Motion Rate	120	120	120
INPUTS / OUTPUTS			
HDMI Inputs	3	3	3
Composite Video Input	1	1	1
Ethernet Input	1	1	1
RF Antenna Input	1	1	1
USB	1	1	1
Audio Output	HDMI ARC, Analog Stereo Out, Digital Optical	HDMI ARC, Analog Stereo Out, Digital Optical	HDMI ARC, Analog Stereo Out, Digital Optical
OTHER			
Remote Control Type	IR Remote	IR Remote	IR Remote
Power Consumption	93.3 W	93.3 W	118.64 W
Standby Power	<0.5W	<0.5W	<0.5W
Voltage	120V	120V	120V
OSD Language	English, French, Spanish	English, French, Spanish	English, French, Spanish
Certification	UL, cUL, FCC Class B, BETS-7/ICES-003 Class B, IC, HDMI (CEC, ARC) Dolby Audio, Dolby Vision	UL, cUL, FCC Class B, BETS-7/ICES-003 Class B, IC, HDMI (CEC, ARC) Dolby Audio, Dolby Vision	UL, cUL, FCC Class B, BETS-7/ICES-003 Class B, IC, HDMI (CEC, ARC) Dolby Audio, Dolby Vision

Warning

This content is compiled from multiple sources and is provided for reference purposes only. It may not be complete or fully applicable to all situations. If you are unable to resolve your issue, please contact the product manufacturer or an authorized service provider for official support.