PHILIPS

CD Soundmachine

TAZ7200



User manual

Register your product and get support at:

www.philips.com/support

Contents

1 Important 3
Safety 3
Notice 3
Trademarks 3

2 Your CD soundmachine 4
What's in the box 4
Overview of the main unit 4
Overview of the remote control 5

3 Get started 6
Connect power 6
Turn on/Standby 7

4 Play from CD 7
Play a CD 7
Use CD menu 7
Program tracks 7

5 Play from tape 8
Play a tape 8
Use tape menu 8

6 Listen to the radio 8
Listen to FM radio 8

7 Play from Bluetooth® 9
Play from classic Bluetooth 9
Use BT menu 9

8 Play from Auracast ™ 10
Auracast receiver 10
Use Auracast menu 10
Auracast broadcast 10
Disconnect Auracast broadcast 10

9 Play from USB 11
Use USB menu 11

10 Listen to an external device 11
Use AUDIO IN menu 11

11 Other features 12
Set the sleep timer 12
Connect with headphones 12
Factory reset 12

12 Philips Entertainment App 12
App download 12
Pair the App with your CD soundmcachine 12
Play music and adjust the sound 13
Switch sources 13
General settings 13
Virtual remote control 14
User guide 14
Software upgrade 14


13 Product specification 14

14 Troubleshooting 15

1 Important

Safety

Read and understand all instructions before you use this CD soundmachine system.
If damage is caused by failure to follow the instructions, the warranty does not apply.

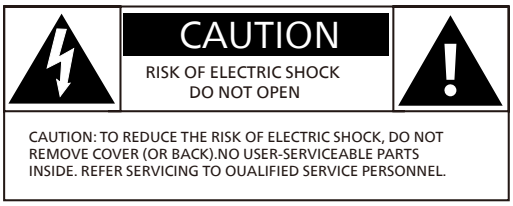

This 'bolt of lightning' indicates uninsulated material within the device may cause an electrical shock. For the safety of everyone in your household, please do not remove the covering.
The ‘exclamation mark’ calls attention to features for which you should read the enclosed literature closely to problems.
WARNING: To reduce the risk of fire or electric shock, the device should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on the device.
CAUTION: To prevent electric shock fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)

Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never look into the laser beam inside this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.

- Make sure that there is enough free space around the product for ventilation.
- Only use attachments/accessories specifed by the manufacturer.
- Battery usage CAUTION -to prevent battery leakage which may result in bodily injury, property damage, or damage to the product:
  - Install the battery correctly, + and - as marked on the product.
  - The battery (packed or installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
  - Remove the battery when the product is not used for a long time.
- The product shall not be exposed to dripping or splashing.
- Do no place any source of danger on the product (e.g. liquid filled objects. lit candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Please use the product safely in an environment with temperature between 0°C and 40°C.

Notice

Any changes or modifcations made to this device that are not expressly approved by MMD Hong Kong Holding Limited may void the user's authority to operate the equipment.

Compliance

Hereby, TP Vision Europe B.V. declares that this product is in compliance with the essential requirements and other relevant provisions of RED Directive 2014/53/EU and UK Radio Equipment Regulations SI 2017 No 1206. You can find the Declaration of Conformity on www.philips.com/support.

Care of the environment

Disposal of your old product and battery

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

This symbol on a product means that the product is covered by European Directive 2012/19/EU.

This symbol means that the product contains batteries covered by European Regulation (EU) 2023/1542 which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

Removing the disposable batteries
To remove the disposable batteries, see battery installation section.

Environmental information
All unnecessary packaging has been omitted. Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove the discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfiber cloth to clean the product.

This apparatus includes this label:



Note

- The type plate is located on the back of the product.

Trademarks

AURACAST

The Auracast™ word mark and logos are trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license. Other trade marks and trade names are those of their respective owners.

Bluetooth®

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license.

Be responsible
Respect copyrights

The making of unauthorized copies of copy-protected material, including computer programs, flies, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

FCC and IC statement

FCC information

The device complies with the FCC rules, Part 15. Operation is subject to the following two conditions:

① This device may not cause harmful interference, and.

② This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with radiation exposure limits set forth for an uncontrolled envi-ronment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experien-ced radio/TV technician for help.

IC-Canada: CAN ICES-(B)/NMB-(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Avis d'Industrie Canada: CAN ICES-(B)/NMB-(B)

L'émetteur/récepteur exempt de licence contenu dans le present appareil est conforme aux CNR d'Innovation, Sciences et Développement économ-ique Canada applicables aux appareils radio exempts de licence. L'exploit-ation est autorisée aux deux conditions suivantes :
1. L'appareil ne doit pas produire debrouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Après examen de ce matériel aux conformité ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité and compliance d'ac-quérir les informations correspondantes. La distance minimale du corps à utiliser le dispositif est de 20cm.

Radiation Exposure Statement: The product comply with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. Déclaration d'exposi tion aux radiations: Le produit est conforme aux limites d'exposi tion pour les appareils portables RF pour les Etats-Unis et le Canada établies pour un environnement non contrtlé.

2 Your CD soundmachine

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/support.

Introduction

With this CD soundmachine, you can:

- Listen to FM radio;
- Enjoy audio from discs, Bluetooth, and other external audio devices.


What's in the box

Check and identify the contents of your package:


- Main unit ×1
- Power cord ×1
- Remote control (with one AAA battery) ×1
- Quick Start Guide ×1
- Safety sheet ×1
- Warranty card ×1




Main unit



Power cord




Remote control (with one AAA battery)

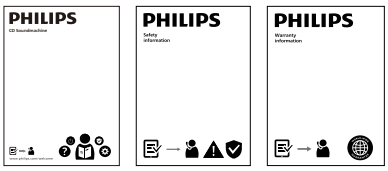


Quick Start Guide / Safety sheet / Warranty card

- Power cord quantity and plug type vary by region.
- Images, illustrations and drawings shown on this user manual are for reference only.
- Actual product may vary in appearance.

Overview of the main unit

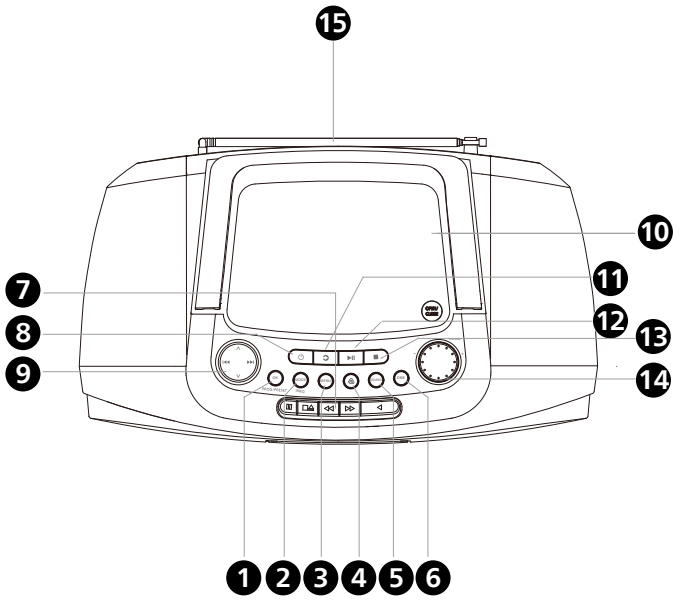

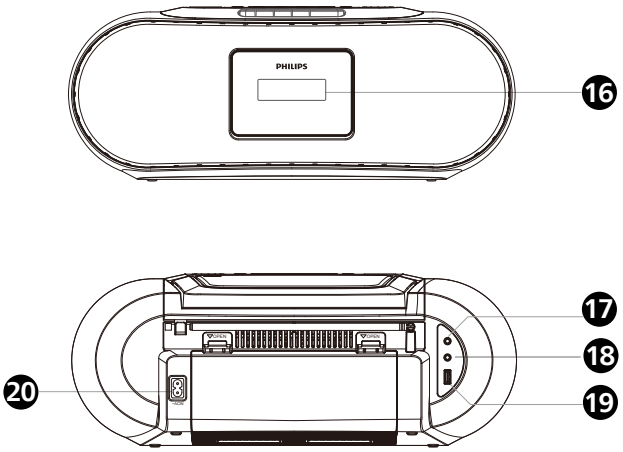

① **OK/PROG/PRESET**
- Confirm your selection on the menu.
- Program tracks or preset radio stations.

② **MODE/INFO**
- Short press: Switch playback mode in CD/USB mode.
- Short press: Switch between mono and stereo in FM mode.
- Long press: Display information.

③ **MENU**
- Access source menu setting.

④
- Press to switch to Auracast receiver mode.
- In Auracast receiver mode, press to rescan Auracast broadcast channel.
- In Auracast receiver mode, long press for 8 seconds to clear the encrypted information.
- Long press for more than 3 seconds to activate/deactivate Auracast broadcast mode.

⑤ **SOUND**
- Select a preset sound effect.

⑥ **DBB**
- Turn Dynamic Bass Boost 1/2/OFF.

⑦ **Tape controls**

⏸
- Pause tape playback.

⏹⏏
- Stop the tape play or open the tape door.

◀◀ / ▶▶
- Fast rewind or fast forward.

◀
- Start tape play.

⑧ ⏻
- AC power: Short press to turn on or to standby.
- Battery operated: Short press to power off/long press to power on.

⑨ ⏮ / ⏭
- Tune to an FM radio station in radio source, fine tune (increase/decrease) frequency.
- In CD/USB/Bluetooth mode, play the previous or next track.
- In CD/USB mode, long press to fast forward or fast backward.
- In Auracast mode, switch to the previous/next unencrypted broadcast.

∧ / ∨
- In the menu, scroll menu options up or down.
- In USB/CD (MP3) mode, switch to the previous or next album.
- In the FM mode, switch to the previous/next preset radio station.

⑩ **Disc tray**
- Disc compartment.

⑪
- Press to select source.

⑫ ⏯
- Start and pause play.

⑬ ⏹
- Stop the play.

⑭ − / +
- Decrease/Increase the volume.

⑮ **Antenna**
- FM antenna.

⑯ **Display panel**
- Display current status.


⑰
- Headphones jack.

⑱
- Audio-in socket.

⑲
- USB port.

⑳ **AC IN**
- Insert power cable plug to AC IN socket.

Overview of the remote control

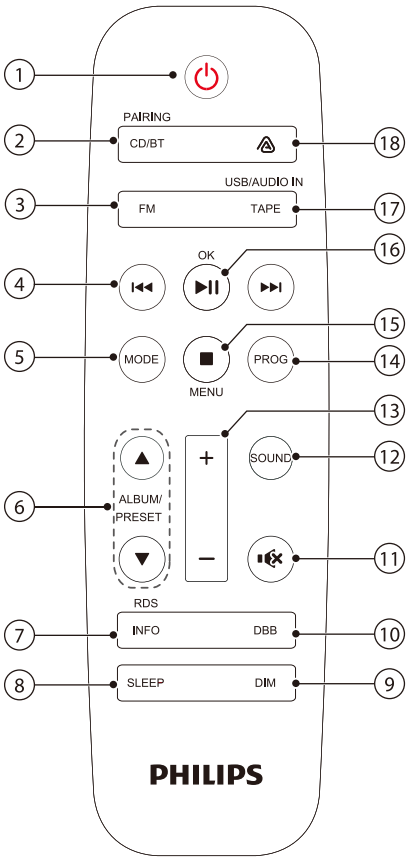

① ⏻
- Switch this product on or to standby.

② **CD/BT PAIRING**
- Select CD source.
- Select Bluetooth source.
- In BT mode, press and hold for 3 seconds to disconnect; press and hold for 8 seconds to clear Bluetooth pairing history.

③ **FM**
- Select FM source.

④ **⏮ / ⏭**
- Tune to an FM radio station in radio source, fine tune (increase/decrease) frequency.
- In CD/USB/BT mode, play the previous or next track.
- In CD/USB mode, long press to fast forward or fast backward.
- In Auracast mode, switch to the previous/next unencrypted broadcast.

⑤ **MODE**
- Short press: Switch playback mode in CD/USB mode.
- Short press: Switch between mono and stereo in FM mode.

⑥ **ALBUM/PRESET ▲/▼**
- In the menu, scroll menu options up or down.
- In USB/CD (MP3) mode, switch to the previous or next album.
- In the FM mode, switch to the previous/next preset radio station.

⑦ **INFO/RDS**
- During playback, display the play information.
- For selected FM radio stations, display RDS information (if available).

⑧ **SLEEP**
- Set sleep timer.

⑨ **DIM**
- Adjust the display brightness.

⑩ **DBB**
- Turn Dynamic Bass Boost 1/2/OFF.

⑪ 🔇
- Mute or unmute.

⑫ **SOUND**
- Select a preset sound effect.

⑬ **+/- (volume)**
- Adjust volume.

⑭ **PROG**
- Program tracks.
- Program FM radio stations.

⑮ **■/MENU**
- Stop play or erase a program.
- Long press to enter the menu; short press to exit the menu.

⑯ **▶❚❚/OK**
- Start or pause play.
- Confirm your selection on the menu.

⑰ **TAPE/USB/AUDIO IN**
- Switch between TAPE/USB/AUDIO IN sources.

⑱
- Press to switch to Auracast receiver mode.
- In Auracast receiver mode, press to rescan Auracast broadcast channel.
- In Auracast receiver mode, long press for 8 seconds to clear the encrypted information.
- Long press for more than 3 seconds to activate/deactivate Auracast broadcast mode.

3 Get started

Caution
- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

Connect power


The unit can be powered by either AC power or batteries.

Option 1: AC power

Warning
- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Risk of electric shock! When you disconnect the AC power, always pull the plug from the socket. Never pull the cord.

Connect the AC power cord to the wall socket.


Note
- To conserve energy, press the ⏻ button after use to switch the unit to standby mode or cut off power to the main unit.

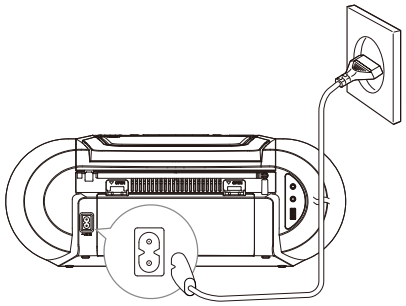

Option 2: Battery power

Caution
- Batteries contain chemical substances, so they should be disposed of properly.

1 Open the battery compartment at the back of the unit.
2 Insert 6 batteries (type: 1.5V R20/UM2/C CELL) with correct polarity (+/-) as indicated.
3 Close the battery compartment.

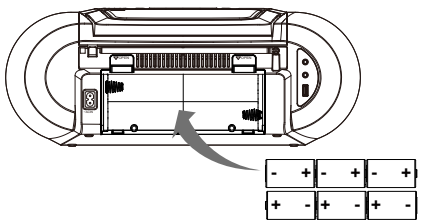

Note
- The batteries are not supplied. Please purchase separately.

Turn on/Standby

AC power: Short press to turn on and switch to last source, or to standby.
Battery operated: Short press to power off/long press to power on and switch to last source.

Note

- When powered by battery, after you press the ⏻ button on the remote control to power off the device, you can only turn it on by long-pressing the ⏻ button on the main unit panel.

Switch to standby mode

- The product switches to standby mode automatically when there is no audio detected for over 15 minutes.
- Press ⏻ button to wake up the product from standby mode.

4 Play from CD

Play a CD


Note

- You cannot play CDs encoded with copyright protection technologies.

You can play commercially available audio CDs:

- CD-Recordables (CD-R)
- CD-Rewritables (CD-RW)
- CD-MP3 discs

1 Press the button on the main unit to switch to CD source, or press the **CD/BT** button on the remote control to switch to CD source.
   ↳ **[CD]** displays on the screen.
2 Open the CD compartment.
3 Insert a CD with the printed side facing up and close the CD lid gently.
   ↳ Your CD soundmachine starts to play automatically.
   - To select a track, press ⏮ / ⏭ .
   - To pause CD play, press ⏯ .
   - To resume CD play, press ⏯ again.
   - To stop CD play, press ⏹ .
   - To fast forward or rewind, long press ⏮ / ⏭ .

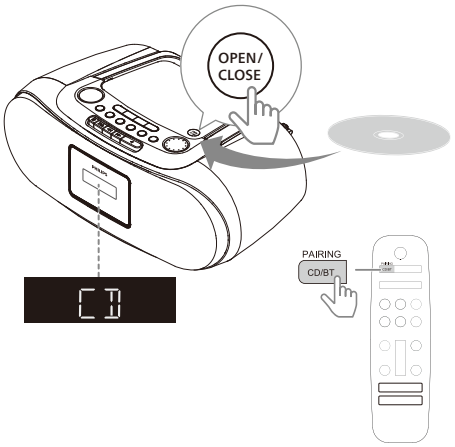

Use CD menu

1 In CD mode, press the **MENU** button to enter the menu settings.
2 Press the ∧ ∨ buttons on the main panel or the ▲ ▼ buttons on the remote control.
   - **[SLEEP]**: Set sleep timer (OFF/15/30/60/90/120min).
   - **[DIM]**: Adjust the display brightness (HIGH/MED/LOW/OFF).
   - **[SYSTEM]**: Access system settings.

Program tracks

In CD mode, you can program a maximum of 20 tracks in CD disc.

1 Press ⏹ to stop playback.
2 Press **PROG** to activate the program mode.
   ↳ **[P01 T01]** displays on the screen.
3 Press ⏮ / ⏭ to select a track number, then press **PROG** to confirm.
4 Repeat Step 3 to program more tracks.
5 Press ⏯ to play the programmed tracks.
   ↳ During play, **[PROG]** (program) is displayed.
   - To erase the program, press ⏹ twice.

Note

- Press the ⏹ button to exit the program mode in program status. When the number of program tracks reaches 20, a **[FULL]** message will be displayed.

5 Play from tape

Play a tape

1 Press the ⏻ button on the main unit to switch to tape source, or press the **TAPE/USB/AUDIO IN** button on the remote control to switch to tape source.
↳ **[TAPE]** displays on the screen.


2 Press ■⏏ on the main unit to open the tape door.

3 Load the tape with the open side upward and close the tape door.

4 Press ◀ on the main unit to start play.
- To pause play, press ❚❚ on the main unit .
- To fast rewind or fast forward, press ◀◀ / ▶▶ on the main unit .
- To stop play, press ■⏏ .

Note

- Tape playback will stop automatically when playback reaches the end.

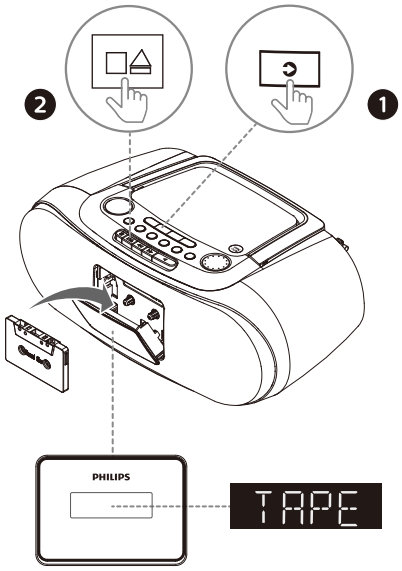

Use tape menu

1 In tape mode, press the **MENU** button to enter the menu settings.

2 Press the ∧ ∨ buttons on the main panel or the ▲▼ buttons on the remote control.
- **[SLEEP]**: Set sleep timer (OFF/15/30/60/90/120min).
- **[DIM]**: Adjust the display brightness (HIGH/MED/LOW/OFF).
- **[SYSTEM]**: Access system settings.

6 Listen to the radio

With this product, you can listen to FM radio.

Note

- Position the antenna as far as possible from TV, or other radiation sources.
- For optimal reception, fully extend and adjust the position of the antenna.

Listen to FM radio

Tune to an FM radio station

1 Press the ⏻ button on the main unit to switch to FM source, or press the **FM** button on the remote control to switch to FM source.
↳ **[FM]** displays on the screen.

2 Press and hold ⏮ / ⏭ for three seconds.
↳ The radio tunes to a station with strong reception automatically.

3 Repeat Step 2 to tune to more stations.

To tune to a radio station with weak signal:
Press ⏮ / ⏭ repeatedly until you find optimal reception.

Store FM radio stations automatically

Note

- You can store a maximum of 30 FM radio stations.

1 Press the ⏻ button on the main unit to switch to FM source, or press the **FM** button on the remote control to switch to FM source.
↳ **[FM]** displays on the screen.

2 Press and hold **PROG/PRESET** for three seconds.
↳ All available radio stations are stored automatically, then the first stored radio station is broadcast when 30 preset radio radio stations are stored.

Store FM radio stations manually

1 Press the ⏻ button on the main unit to switch to FM source, or press the **FM** button on the remote control to switch to FM source.
↳ **[FM]** displays on the screen.

2 Press **PROG/PRESET** to activate program mode.
↳ **[P01]** is displayed.

3 Press ∧ ∨ to allocate a number from 1-30 to this radio station, and then press **PROG** to confirm.

4 Repeat steps 1-3 to program more stations.

Note

- To overwrite a programmed station, store another station in its place.

Select a preset FM radio station

In FM mode, press ∧ ∨ to select a preset number.

- While listening to FM radio, you can switch between stereo and mono by pressing the **MODE** button.

Use FM menu

1 In FM mode, press the **MENU** button to enter the menu settings.

2 Press the ⏶ ⏷ buttons on the main panel or the ▲ ▼ buttons on the remote control.

- **[SCAN SET]**: Access the scan setting.
- **[SLEEP]**: Set sleep timer (OFF/15/30/60/90/120min).
- **[DIM]**: Adjust the display brightness (HIGH/MED/LOW/OFF).
- **[SYSTEM]**: Access system settings.

Display RDS information

RDS (Radio Data System) is a service that allows FM stations to show additional information.

1 Tune to a FM radio station.


2 Press **INFO** button repeatedly to display various RDS information (if available) such as station name, program type, time, etc.

7 Play from Bluetooth®

Play from classic Bluetooth

Note

- Compatibility with all Bluetooth devices is not guaranteed.
- Any obstacle between the unit and the device can reduce the operational range.
- The effective operation range between this unit and your Bluetooth enabled device is approximately 10 meters (30 feet).
- The unit can memorize up to 8 previously connected Bluetooth devices.

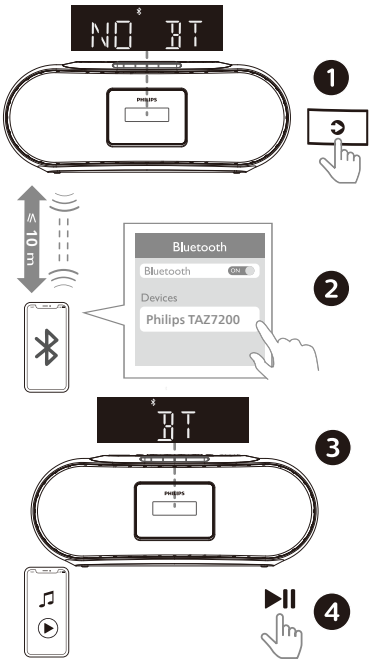

1 Press the ⮌ button on the main unit to switch to Bluetooth source, or press the **CD/BT** button on the remote control to switch to Bluetooth source.

↳ **[NO BT]** (Bluetooth) is displayed.

2 On your device that supports Advanced Audio Distribution Profile. (A2DP), enable Bluetooth and search for Bluetooth devices that can be paired (refer to the user manual of the device). Select **'Philips TAZ7200'** on your Bluetooth enabled device.

3 After successful pairing and connection, **[BT]** is displayed and you will hear the prompt sound from the unit.

4 Play audio on the connected device.

↳ Audio streams from your Bluetooth enabled device to this product.

To disconnect the Bluetooth-enabled device:

- Deactivate Bluetooth on your device.
- Press and hold ⮌ on the product for 3 seconds to enter pairing mode.

Use BT menu

1 In BT mode, press the **MENU** button to enter the menu settings.

2 Press the ⏶ ⏷ buttons on the main panel or the ▲ ▼ buttons on the remote control.

- **[BT PAIR]**: Access the pair state.
- **[SLEEP]**: Set sleep timer (OFF/15/30/60/90/120min).
- **[DIM]**: Adjust the display brightness (HIGH/MED/LOW/OFF).
- **[SYSTEM]**: Access system settings.

8 Play from Auracast ™


Auracast™ can be used either as a transmitter or a receiver. You can broadcast your music to this product or any other Auracast-compatible products.

Auracast receiver

1 You can stream the audio from your Auracast enabled device to this product:
↳ Enable Auracast broadcast on your device that supports Auracast.

2 Press to select the Auracast source, or press button on the main unit to switch to Auracast source.
- **[AURACAST RECEIVER]** is displayed.

3 If you are using the Auracast source for the first time, the product will automatically perform a comprehensive scan.
- **[SCANNING]** is displayed.
- The product will automatically search for nearby Auracast broadcasts and connect to the unencrypted broadcast with the strongest signal.
- After successful connection, Auracast source name is displayed.
- If Auracast broadcast is not found within 20 seconds, it will enter idle mode .

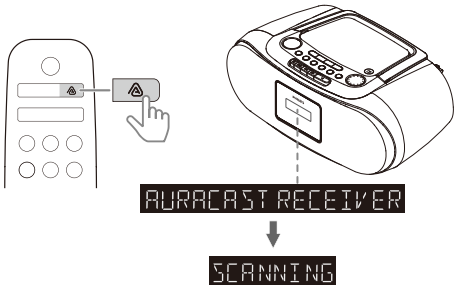

Note

- Only unencrypted broadcast is selected and encrypted broadcast is skipped.

To disconnect Auracast, you can:

- Switch the product to another source.
- Deactivate Auracast broadcast on your device if this product is receiving the Auracast broadcast from your device.

Manually scan Auracast broadcast

In Auracast receiver mode, press to rescan Auracast broadcast channels.

Select Auracast broadcast

Press ⏮ / ⏭ to select an Auracast broadcast.
↳ If the encrypted Auracast broadcast comes from your mobile device, go to the Auracast list in the APP and enter the same password used when setting up the Auracast broadcast on your mobile device.

Use Auracast menu

1 In Auracast mode, press the **MENU** button to enter the menu settings.

2 Press the ∧ ∨ buttons on the main panel or the ▲ ▼ buttons on the remote control.
- **[SLEEP]**: Set sleep timer (OFF/15/30/60/90/120min).
- **[DIM]**: Adjust the display brightness (HIGH/MED/LOW/OFF).
- **[SYSTEM]**: Access system settings.

Auracast broadcast

Note

- Auracast receiver and Auracast broadcast cannot be turned on simultaneously. If you try to turn on Auracast broadcast in Auracast receiver mode, you will not be able to switch successfully. Vice versa.

1 In CD/Bluetooth/FM/TAPE/USB/Audio in source, press and hold the button for 3 seconds or select **General Settings** on Philips Entertainment(→Auracast broadcast) to enter into Auracast broadcast.

2 On Philips Entertainment App, enter General Settings, select **Public** (unencrypted broadcast) or **Personal** (encrypted broadcast) from Auracast broadcaster.
- When an unencrypted broadcast is selected, the Auracast icon will be displayed on both the main unit screen and the APP interface.
- When an encrypted broadcast is selected, the main unit displays both the Auracast icon and lock icon, while only the Auracast icon will be shown on the APP interface.

3 You can broadcast to any number of Auracast enabled products. Follow the instruction of those Auracast enabled products to enable Auracast connection.

4 If Auracast broadcast channel is encrypted, Auracast recceiver products are required to enter the password in order to listen to it.

5 Press the button to switch between CD/Bluetooth/FM/TAPE/USB /Audio in to play different audio sources.

Disconnect Auracast broadcast

- Press and hold the button for 3 seconds. Exit Auracast broadcast from your CD soundmachine.

9 Play from USB

Note


- Make sure that the USB device contains playable audio content.
- Support FAT16/FAT32 file format. Support ≤128G.

1 Press the ⏻ button on the main unit to switch to USB source, or press the USB/AUDIO IN/TAPE button on the remote control to switch to USB source.
↳ **[USB]** is displayed.

2 Insert a USB device into the port.

3 Play starts automatically. If not , press ▶II .

- To select a track, press I◀◀ / ▶▶I .
- To pause USB play, press ▶II .
- To resume USB play, press ▶II again.
- To stop USB play, press ■ .
- To fast forward or rewind, long press I◀◀ / ▶▶I .

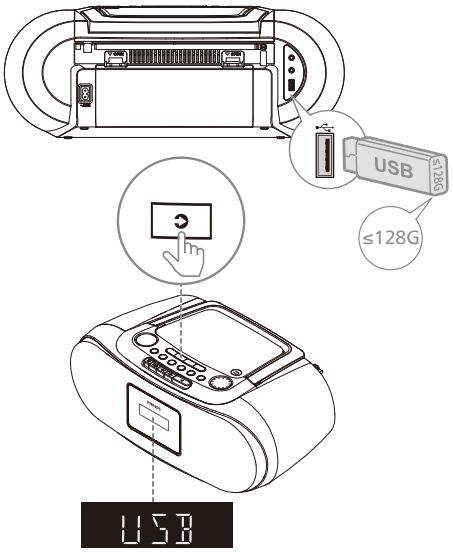

Use USB menu

1 In USB mode, press the **MENU** button to enter the menu settings.

2 Press the ∧ ∨ buttons on the main panel or the ▲▼ buttons on the remote control.

- **[SLEEP]**: Set sleep timer (OFF/15/30/60/90/120min).
- **[DIM]**: Adjust the display brightness (HIGH/MED/LOW/OFF).
- **[SYSTEM]**: Access system settings.

Program tracks

In USB mode, you can program a maximum of 99 tracks in USB.

1 Press ■ to stop playback.

2 Press **PROG** to activate the program mode.
↳ **[P01 T01]** displays on the screen.

3 Press I◀◀ / ▶▶I to select a track number, then press **PROG** to confirm.

4 Repeat Step 3 to program more tracks.

5 Press ▶II to play the programmed tracks.
↳ During play, **PROG** (program) is displayed.
- To erase the program, press ■ twice.

Note

- Press the ■ button to exit the program mode in program status. When the number of program tracks reaches 99, a **FULL** message will be displayed.

10 Listen to an external device

You can listen to an external device through this unit with an audio cable.


1 Press the ⏻ button on the main unit to switch to AUDIO IN source, or press the USB/AUDIO IN/TAPE button on the remote control to switch to AUDIO IN source (3.5mm, not supplied).
↳ **[AUDIO IN]** displays on the screen.

2 Connect the audio cable to:
- The socket on the unit ;
- The headphone jack on the external device.

3 Play audio on the external device (see the device's user manual).

Note

- The AUDIO IN socket is not for headphones.

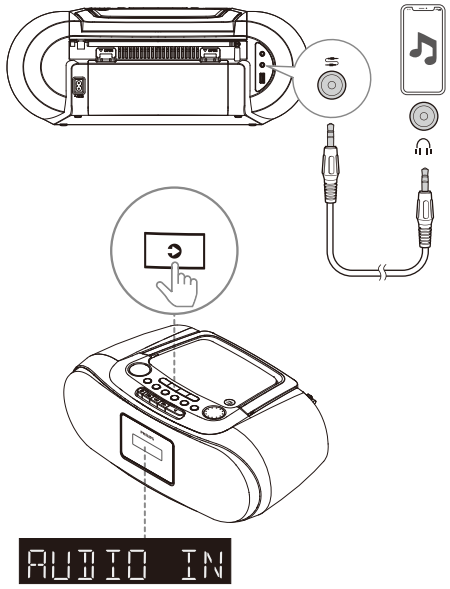

Use AUDIO IN menu

1 In AUDIO IN mode, press the **MENU** button to enter the menu settings.

2 Press the ∧ ∨ buttons on the main panel or the ▲▼ buttons on the remote control.

- **[SLEEP]**: Set sleep timer (OFF/15/30/60/90/120min).
- **[DIM]**: Adjust the display brightness (HIGH/MED/LOW/OFF).
- **[SYSTEM]**: Access system settings.

11 Other features

Set the sleep timer

This CD soundmachine can switch to standby automatically after a set period of time.


- When the CD soundmachine is turned on, press the **SLEEP** button repeatedly to select minutes (OFF/15/30/60/90/120min).
  ↳ When sleep timer is activated, the SLEEP icon will be displayed.

To deactivate sleep timer

- Press **SLEEP** repeatedly until **[OFF]** (sleep off) is displayed.
  ↳ When sleep timer is deactivated, the SLEEP icon will disappear.

Connect with headphones

To listen via wired headphones, connect the headphones to the jack 🎧.

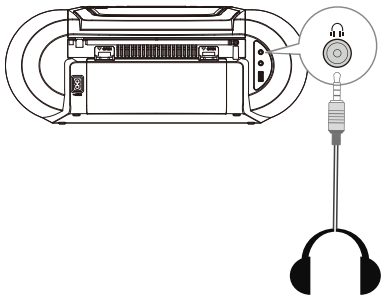

Factory reset

Reset device to default setting:

After the unit is powered on, set to AUDIO IN source with volume level 2, then press and hold the ▶II button on the main unit panel for 5 seconds. Once restored to factory default settings, the device will restart.

12 Philips Entertainment App

App download


Scan the QR code and press "Download" button, or search "Philips Entertainment" in the Apple App Store or Google Play to download the App.




philips.to/entapp

The Philips Entertainment App puts you in charge of the music you are listening to. You can use your smart device to easily choose the sound style you want, switch between sources, and more.

Pair the App with your CD soundmachine

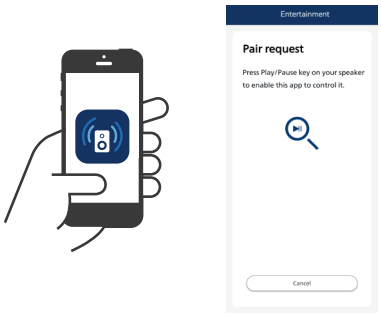

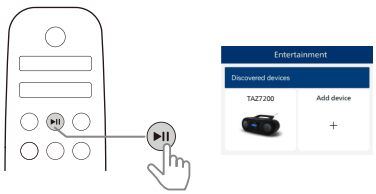

1 Launch the Philips Entertainment App on your mobile device.


2 Make sure Bluetooth is enabled on your mobile device.

3 If you connect the Philips Entertainment App with your CD soundmachine for the first time, you are asked to pair the App with your CD soundmachine.

4 Press ▶II button on your CD soundmachine to enable the App to discover and control it.

Play music and adjust the sound

Press the icon to enter sound control.

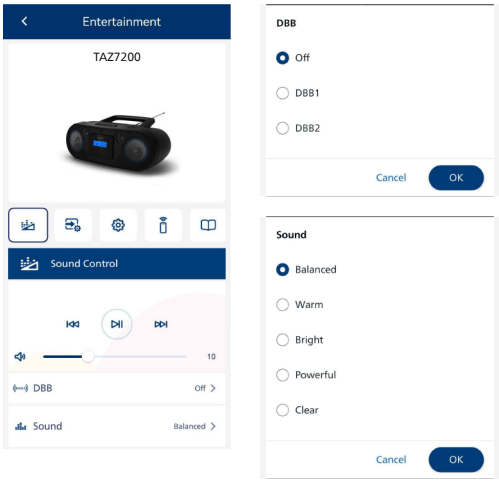

You can control the music playback on the App by pressing the ⏯, ⏮, ⏭ buttons, and adjust the volume by dragging the control bar.
You can also tap [DBB] to turn dynamic Bass Boost 1/2/OFF. Press [Sound] to select from the predefined sound modes to suit your music: Balanced/Warm/Bright/Powerful/Clear.


Switch sources

Press the icon to enter Source control.




Click [Source] to select from various sources: CD/Bluetooth/Auracast™ receiver/FM/USB Direct/TAPE/Audio in.

Listen to unencrypted Auracast™ broadcast

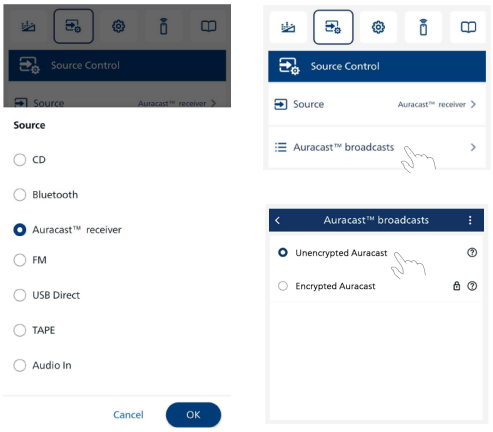

1 Click [Source] and select the [Auracast™ receiver] source.
2 Click [Auracast™ broadcasts] to enter the Auracast™ broadcast list.
3 When an unencrypted playback source is selected, the main unit will search and connect to it.


Listen to encrypted Auracast™ broadcast

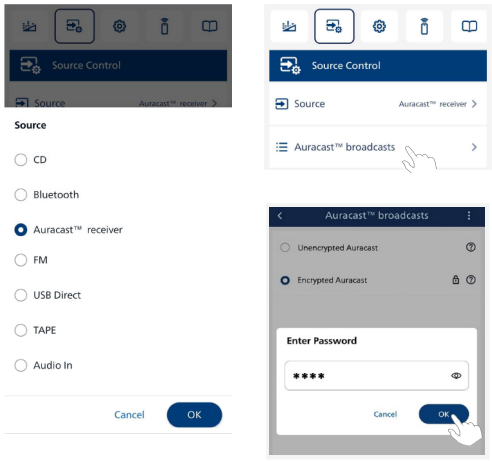

1 Click [Source] and select the [Auracast™ receiver] source.
2 Click [Auracast™ broadcasts] to enter the Auracast™ broadcast list.
3 When an encrypted playback source is selected, you will be asked to input a password.
   ↳ If the encrypted Auracast broadcast is from your mobile device, enter the same password that you input when setting up the Auracast™ broadcast from your mobile device.

General settings


Press the icon to enter General settings.

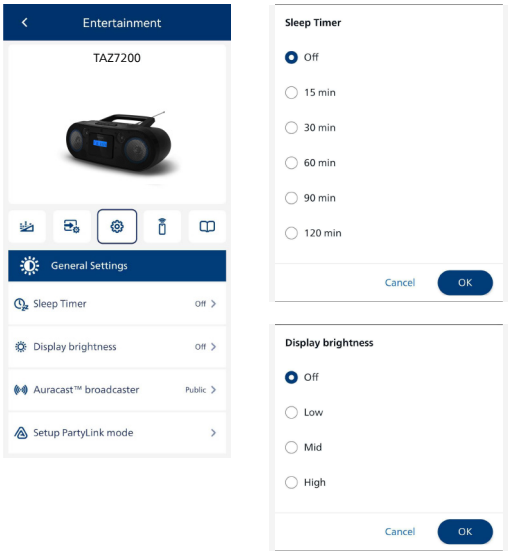

- Click [Sleep Timer] to set the sleep duration (OFF/15/30/60/90/120 minutes).
- Click [Display brightness] to set the display brightness level (OFF/LOW/MID/HIGH).
- Click [Auracast™ broadcaster] to set this main unit as an Auracast transmitter and allow other Aurcast-enabled devices to receive its Auracast broadcast.
  ↳ Select [Public]: Other devices can receive the broadcast from this main unit without a password.
  ↳ Select [Personal]: You need to set a password. Other devices will be required for the password to receive the broadcast from this main unit.
- Click [Setup Partylink mode] and follow the prompts to connect your main unit with other Auracast™-compatible main units.


Virtual remote control

Swipe the menu icons to the left until you find the icon. Press it to enter the virtual remote control interface. You can use the virtual remote control for music playback and adjust any settings of the main unit.

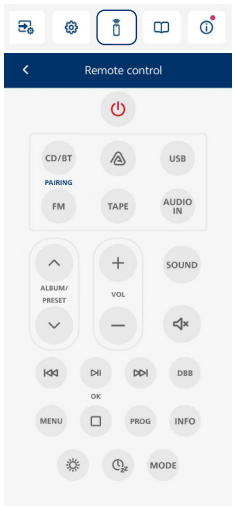


User guide

Swipe the menu icons to the left until you find the icon. Press it to check the user manual and quick start guide for more information about using this main unit.

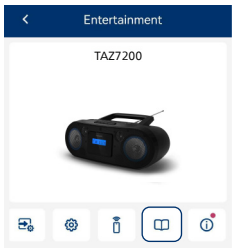

Software upgrade

To get the best features and support, update your product with the latest software version.
The software of this product can be upgraded to the latest version via the Philips Entertainment App.
If the upgrade is released, you'll see a red number popping up on the icon of the App. Click into it and you'll find the [Download & Upgrade] icon can be pressed to proceed automatically.
Once this product is connected to the Philips Entertainment App, it can receive over-the-air software update. Always upgrade to the latest software version to improve the performance of this product.

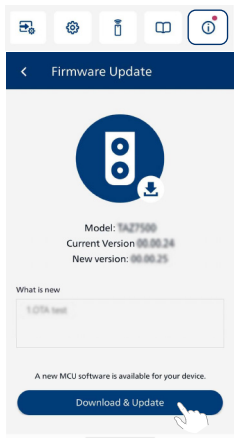

13 Product specification

Note

- Product information is subject to change without prior notice.

Bluetooth

Bluetooth profiles	A2DP, AVRCP
Bluetooth version	V 6.0
Bluetooth frequency range/Transmitter power (EIRP)	2402 ~ 2480MHz, < 9dBm

CD soundmachine

Power	100-240V~, 50/60 Hz (AC Input)
Rated output power	Total 12W (RMS)
Acoustic frequency response	125Hz-20kHz
Main unit driver	2 x 4" full range, 8Ω
Operation power consumption	6 W
Standby power consumption	< 0.5W (Display off)
AUDIO IN input level	700mV
Tuner frequency range	FM 87.5-108MHz
Dimensions (W x H x D)	435 x168 x 253 mm
Weight	3 kg

Supported audio formats

USB playback	Type A, USB Direct 2.0, MSC file format, FAT16/32

Disc

Laser Type	semiconductor
Disc Diameter	12cm/8cm
Support Disc	CD-DA, CD-R, CD-RW, CD-MP3
Audio DAC	24Bits/44.1kHz
Total Harmonic Distortion	< 1%
S/N Ratio	> 55 dBA

Battery life

- Playback of CD Approx. 28 hours
- Playback of FM reception Approx. 106 hours

  Measured per Philips standards: Brightness (Medium), Volume (16), Philips battery R20/UM2/C CELL, the actual battery life may vary depending on the circumstances of the unit or operating conditions.

USB play ability information

Extension	Codec	Sample Rate	Bitrate
.mp3	MPEG 1 Layer 1	32~48 kHz	48~320 kbps
	MPEG 1 Layer 2	32~48 kHz	48~320 kbps
	MPEG 1 Layer 3	32~48 kHz	48~320 kbps
.wma	WMA	16~48 kHz	48~192 kbps
			64~161 kbps VBR

Compatible USB devices:

- USB flash memory (USB2.0 or USB1.1)
- USB flash players (USB2.0 or USB1.1)
- Memory cards (requires an additional card reader to work with this unit)

Supported USB formats:

- USB or memory fle format: FAT16, FAT32 (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320 kbps
- WMA bit rate (data rate): 48-192 kbps/64-161 kbps VBR
- Directory nesting up to a maximum of 8 levels
- Number of albums/folders: maximum 99
  Number of tracks/titles: maximum 999
  File name in Unicode UTF8 (maximum length: 32 bytes)

Unsupported USB formats:

- Empty albums: an empty album is an album that does not contain MP3 files, and will not be shown in the display.
- Unsupported file formats will be skipped. For example, Word files (. doc) or MP3 files with the extension (.dif) will be ignored and will not be played.
- WMA, AAC, WAV, PCM audio files: DRM protected WMA files. (Note: only support some wav audio files.)
- WMA files in lossless format.

Supported MP3 discformats

- IS09660, Joliet
- Maximum title number: 128
  (depending on file name length)
- Maximum album number: 99
- Supported sampling frequencies: 44.1 kHz, 48 kHz
- Supported Bit-rates: 48~256(kbps), variable bit rates

14 Troubleshooting

Warning

- Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.
If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips webpage (www.philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

No power

- Make sure that the AC power cord of the device is connected properly.
- Make sure that there is power at the AC outlet.
- As a power-saving feature, the system switches off automatically 15 minutes after track play reaches the end and no control is operated.

No sound or poor sound

- Adjust the volume.
- Check that the product is connected correctly.
- Check if the stripped wires are clamped.

No reponse from the unit

- Disconnect and reconnect the AC power plug, then turn on the unit again.
- As a power-saving feature, the system switches off automatically 15 minutes after track play reaches the end and no control is operated.

No disc detected

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

Cannot display some files in USB device

- The number of folders or files in the USB device has exceeded a certain limit. This phenomenon is not a malfunction.
- The formats of these files are not supported.

USB device not supported

- The USB device is incompatible with the unit. Try another one.

Poor radio reception

- Increase the distance between the unit and your TV or other radiation sources.
- Fully extend the radio antenna.
- Connect an outdoor radio antenna. You may purchase a replacement antenna cable with a L-shape plug on one end.
- Connect the L-shape plug to this product, and fit the plug on the other end into your wall socket.

Music playback is unavailable on this unit even after successful Bluetooth connection.

- The device cannot be used to play music through this unit wirelessly.

The audio quality is poor after connection with a Bluetooth -enabled device.

- The Bluetooth reception is poor. Move the device closer to this unit or remove any obstacle between them.

Bluetooth cannot be connected with this unit.

- The device does not support the profiles required for this unit.
- The Bluetooth function of the device is not enabled. Refer to the user manual of the device to find out how to enable the function.
- This unit is not in pairing mode.
- This unit is already connected with another Bluetooth-enabled device. Disconnect that device and then try again.

The paired mobile device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to this unit or remove any obstacle between them.
- Some mobile phones may connect and disconnect constantly when you make or end calls. This does not indicate any malfunction of this unit.



Specifications are subject to change without notice.
2026 © Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.

TAZ7200_37_UM_V1.0