
Product Manual

Aroma Diffuser

Please read the function introduction based on the product model.

☑ **A-T530**

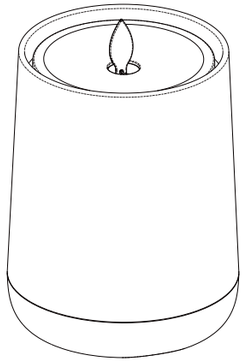

Download the App

Scent Home

WARNING

Read all the instructions before using the product.

【DANGER】

1. Use in environments between -10°C and 50°C only. Operation outside this range may damage the product and cause safety hazards. For use below 2000m altitude only.
2. Use only the specified rated voltage. Otherwise, safety risks may occur.
3. Do not expose the battery pack or appliance to fire or excessive temperature.

【WARNING】

1. Use only the recommended vaporizing medium. Other substances may produce toxic gases or pose a fire risk.
2. Use only with the supplied power adapter.
3. Use only the safe ultra-low voltage specified by the appliance to prevent malfunction.
4. If the supply cord is damaged, replace it with a special cord or assembly available from the manufacturer or service agent only.
5. Rechargeable batteries may only be replaced by qualified personnel (dry batteries excepted).
6. Do not tamper with original operating devices or functions.

【CAUTION】

1. Not intended for persons with reduced physical, sensory, or mental capabilities, or lack of experience/knowledge (including children), unless supervised.
2. Children should be supervised to ensure they do not play with the appliance.
3. When the battery reaches the end of its service life, recycle and dispose of it properly in accordance with local regulations.


This product is intended for sale and application in a business environment.
RED Article 10 (2)
-This product can be used across EU member states
RED Article 10 (10)

The RF distance between body and product is 20cm
Frequency Range: 2402-2480MHz
Max.RF Output Power: -1.92 dBm for EU



Specification

【	Model	】 A-T530
【	Size	】 Ø102*144mm
【	Bottle	】 15ml
【	Power	】 4.3W
【	Input	】 5V ⎓ 1A
【	Coverage	】 20㎡ / 60m³/2118ft³
【	N.W.	】 460g
【	Material	】 PCTG+PP

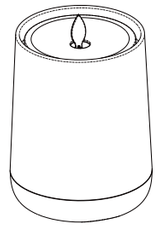

CONTENTS

Bottle



Charging cable


Atomizer coil



Manual

【Verification Note】
After receiving the product, please check the above list. If any items are missing, contact the distributor.

Function Description

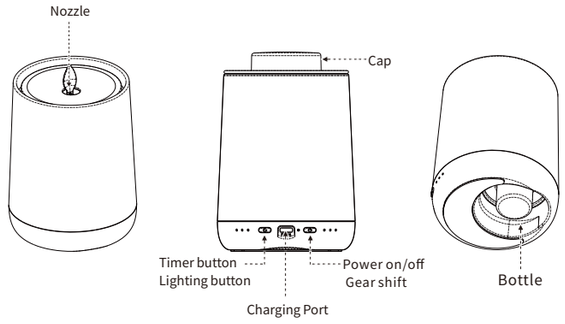


How to Add Essential Oil

Fragrance Oil Refill Steps


⚠ **ENSURE THE DEVICE IS POWERED OFF BEFORE REFILLING.**

1

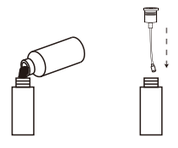

Add an appropriate amount of essential oil to the bottle, and then install the atomizing core component.

2

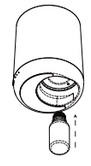


Reinsert the essential oil bottle into the machine and rotate it counterclockwise upward.

3



For the first use, you need to press and hold the power button for 3 seconds to activate the lid function.

4

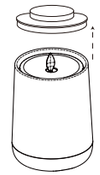

Open the cover, and the device is ready for normal use.

Function Settings

Power on
Power-on defaults to automatic start up. If the cover is closed, only the candle light will activate according to the previous memory setting. If the lid is opened, the candle lamp will light up and all other settings will resume their last saved state.

Power on/off & Gear shift
Power on/off
Long press for 1.5 seconds to turn on/off the device.
(The device cannot be powered on when the cover is closed.)

Beep machine: One long beep.
Indicator lights: The indicator lights for the atomization mode and the timing mode will light up according to the corresponding mode. The candle light will be set according to the last shutdown settings.
Gearshift
When the device is powered on, press the cycle switch briefly to alternate between the atomization settings (G1 → G2 → G3 → Custom setting → G1... and repeat this cycle).
Beep machine: One short beep
Indicator lights: When the indicator light for the atomization gear is on or off.
Factory data reset
Long press for 3 seconds to restore factory settings. This function is effective both when turning on and off the device. (By simultaneously holding down the "Timer" button and the "Gear" button for 3 s, you can also restore the factory settings.)
Beep machine: Three long beep.
Indicator lights: The atomization position indicator light, the timing position indicator light and the ambient light will operate according to the atomization position and timing position set at the factory. The candle light will be on.

Timer button & Lighting button
Switch the timing
When the device is powered on, press the button briefly to cycle through the different timing settings. (1H → 3H → 6H → Repeat indefinitely → 1H... This cycle repeats)
Beep machine: One short beep
Indicator lights: The corresponding timing gear indicator light is on or off, while the infinite loop gear has no indicator light.

Candle light on/off
Long press for 3 seconds to switch between candle light on/off, and it will still work even when the lid is closed.
Beep machine: One short beep

Cop
Open the lid
When powered on, the candle light turns on with one long beep. When the cover is closed, the device turns off and the candle light goes out. The cover detection has the highest priority. Even if the device is powered off, the mist function will work when the cover is opened.
Indicator lights: The atomization gear indicator light and the timing gear indicator light turn on according to the gear position, and the candle light is on. All lights turn off when the device is powered down.

How to Connect the App to the Device

Steps

【Download the App】

Open the Google Play Store or App Store, search for the "Scent Home" app, and download it. If you're unable to find it, scan the QR code on the first page of the product manual to download.

APP download

Scent Home

【Add Device & Log In (Make sure the machine is powered on): For Bluetooth】
1. Enable Bluetooth on your phone.
2. Open the app, register an account, and login.

Bluetooth version



Click the "Bluetooth Connect Mode" button.




Select the machine model to connect to.




Select the corresponding machine ID, enter the initial password "8888", and click "Confirm".

App Operation Guide


Standard Mode

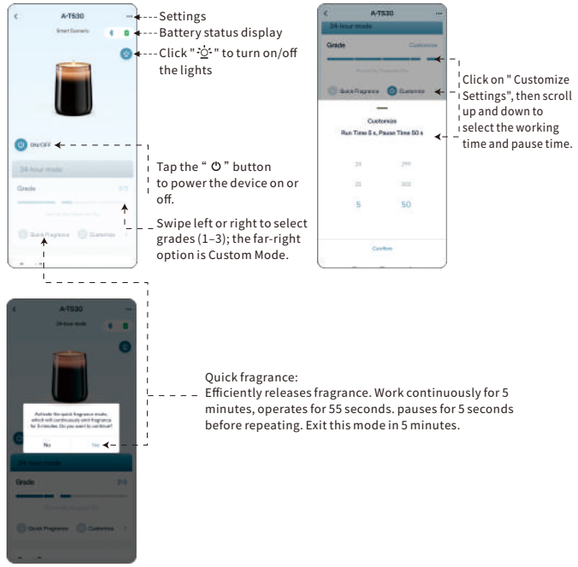

Scenario Usage Guide

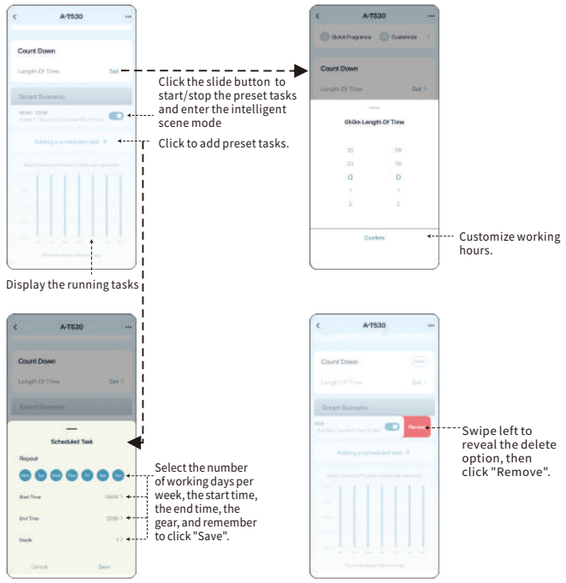

Change Password(Bluetooth version only)

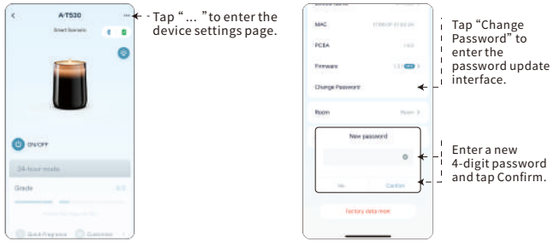

【Note】

If you forget the password, press and hold the reset button on the device to restore factory settings. Then enter the default password "8888" to re-add the device. The app is continuously updated and improved, so the interface and functions may vary depending on the version. Please refer to the actual interface for details.

Grade and Working Period

Grade	Work time(s)	Stop time(s)	Consumption(g/h)
G1	7	70	0.09
G2	10	70	0.13
G3	15	60	0.2
Customized	5-25s	50-300s	/

【Note】

1. The above data is for reference only. If customers use essential oils with different viscosities, the oil consumption will vary;

2. For the best diffusion effect, it's recommended to use essential oils with a viscosity below 30mPa.s. And the optimal working temperature is 25℃.

Troubleshooting

Before requesting repair, please troubleshoot the issue by following the instructions below.

Issue	Possible Causes	Solutions
Device not working	Power supply disconnected	Check the power connection and ensure the plug is firmly inserted.
No mist or weak mist	The atomizing core is clogged.	Clean the atomizing core with a professional cleaner to remove internal residue or replace it with a new one. (Recommended cleaning every 1 month.)
	The liquid tube is not securely attached	Check and tighten the loose parts.
	The gasket between diffuser head and bottle may be loose or damaged.	Secure the bottle properly or replace the gasket if damaged.
Oil leakage	The bottle is not properly secured.	Check and tighten the loose parts.
	The gasket between diffuser head and bottle may be loose or damaged.	Secure the bottle properly or replace the gasket if damaged.
Liquid spray	The atomizing core is clogged.	Clean the atomizing core with a professional cleaner to remove internal residue or replace it with a new one. (Recommended cleaning every 1 month.)
	The device is tilted.	Ensure the device remains upright during use.
	The essential oil level is too high.	Do not overfill the bottle- Keep the essential oil level below 90% capacity.
Unusual noise	The air pump is not secured.	Inspect and re-secure the pump if loose.
	The essential oil level is too high.	Do not overfill the bottle- Keep the essential oil level below 90% capacity.

Cleaning & Maintenance

⚠ **DISCONNECT POWER BEFORE CLEANING!**


Cleaning and Maintenance

When to Clean the Device.
Cleaning is required in the following situations:
1. When changing to a different essential oil.
2. When mist output weakens.

Tip: We recommend regular cleaning-about once a month

Cleaning Steps

You will need: Alcohol

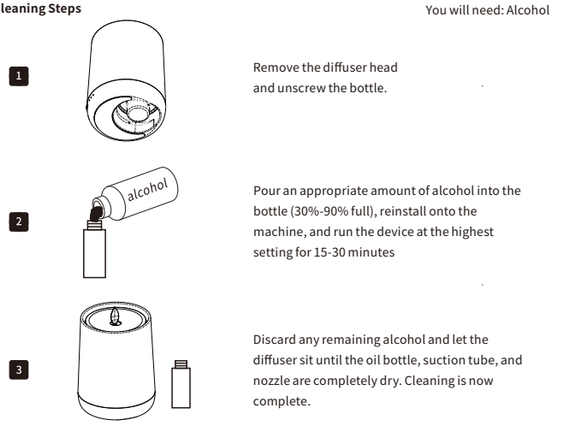

【Caution】Do not use gasoline, acetone, or corrosive solvents.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
Not applicable

RF Exposure
This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

ISED Statement

English:This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada' s licence-exempt RSS(s). Operation is subject to the following two conditions:
1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.
The digital apparatus complies with Canadian CAN ICES‐3 (B)/NMB‐3(B).

French: Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux RSS exemptés de licence d'Innovation, Sciences et Développement économique Canada.
L'exploitation est soumise aux deux conditions suivantes :
1. Cet appareil ne doit pas provoquer d'interférences.
2. Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.
l'appareil numérique du ciem conforme canadien peut ‐ 3 (b) / nmb ‐ 3 (b).

This device meets the exemption from the routine evaluation limits in section 6.3 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.
cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 6.3 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.
Cet équipement est conforme aux limites d'exposition aux rayonnements du Canada établies pour un environnement non contrôlé.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

SAVE THESE INSTRUCTIONS WARNING