


尺寸:85*65mm

日


取扱説明書
—Product description—

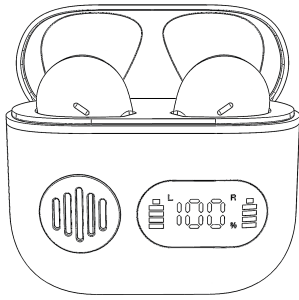


YYK-750

質問があれば遠慮なく連絡してください
after-service@kinganda.cn

各部の名称

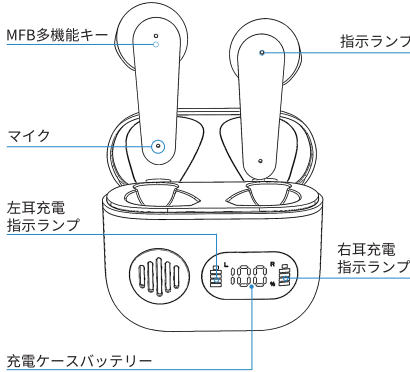


ペア概略図

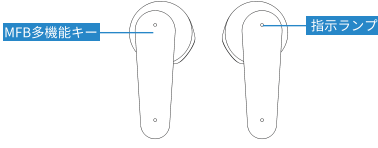

イヤホンを充電ケースから取り出すと、イヤホンは自動的にオンになります。または、左右のイヤホンのMFBボタンを3秒間押し続けてオンにします。赤と青のランプが交互に点滅します(この時点でペアリング状態になります)。接続を待ちます。

多機能ボタン

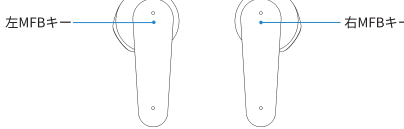

再生/一時停止	左耳または右耳MFBキーをダブルクリックする
前の曲	左耳MFBキーを1秒長押しする
次の曲	右耳MFBキーを1秒長押しする
音量+	音楽再生中に左耳MFBボタンを3回クリックすると1段階上げる
音量-	音楽再生中に右耳MFBボタンを3回クリックすると1段階下げる
電話に出る	左耳または右耳MFBキーをダブルクリックする
電話を切る	左耳または右耳MFBキーをダブルクリックする
通話拒否	左または右耳MFBキーを1秒長押しする
通話キャンセル	左または右耳MFBキーをダブルクリックする
Siri呼び出し	左または右耳MFBキーを3回クリックする(音楽を再生してない時)
Siriオフ	左または右耳MFBキーをダブルクリックする

電源オン/オフ

1. イヤホンを充電ケースから取り出すと、自動的に電源がオンになります。または左右のMFBボタンを3秒間押し続けると、イヤホンの電源がオンになります。
2. イヤホンを使用しないときは、充電ケースに戻すと、自動的に電源が切れます。

ペアリングの方法

1. 充電ケースから左右イヤホンを取り出して、電源を入れます。
2. イヤホンは赤、青が交互に点滅してペアリングモードに入ります。
3. 携帯電話/タブレットの設定をオンにする→Bluetoothをオンにする→検索→YYK-750を選ぶ→接続→音楽を再生します。

パソコン/ノートパソコンのペアリング方法

コンピュータの設定を開く→デバイス→Bluetoothと他のデバイス→Bluetoothをオンにする→Bluetoothやその他のデバイスを追加する→Bluetoothデバイスを検索する→YYK-750をクリックする→ペアリング→音楽を再生します。
注意:コンピュータにBluetoothがない場合は、Bluetoothアダプタを挿入し、Bluetoothドライバをダウンロードしてから正常に使用してください。

リセット方法

充電ケースにイヤホン2個を収納します。まず、左イヤホンを取り出し、MFBボタンをダブルクリックして2秒間長押し(赤と青が交互に点滅してスイッチオフ)、充電ケースに入れます。右イヤホンを取り出し、MFBボタンをダブルクリックして2秒間長押し(赤と青が交互に点滅してスイッチオフ)、充電ケースに入れます(左右イヤホンのリセットが完了する)。左右イヤホンを取り出すと、2つのイヤホンは自動的にペアリングされます。


ヘッドセットの充電方法

1. 充電ケースにイヤホンを入れ、イヤホンは自動的にオフになり、その後充電を開始します。充電ケースのLEDディスプレイが充電中の電圧を表示し、充電ケースがイヤホンを充電していることが示されます。
2. イヤホンが完全に充電されると、赤いランプが消えます。

製品仕様

バージョン	V5.3+EDR
Bluetoothサポート	A2DP,AVRCP,HFP,HSP,EDR
通信距離	≥10m
周波数帯域	2.402GHz-2.480GHz
ホーンインピーダンス	13MM 32Ω
スタンバイ時間	120h
通話時間	5-6h
音楽再生時間	5-6h
イヤホンバッテリー容量	40mAh
充電ケースバッテリー容量	500mAh
イヤホン充電時間	約1h
充電ケース充電時間	約1h
商品重量	33g


スマホの伝送距離

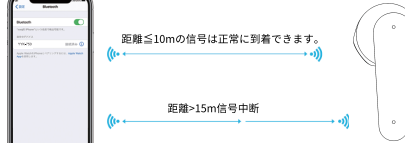

携帯電話の伝送距離については下図のようになります。

防水仕様

日常生活防水(汗、雨、洗濯、シャワーなど、水を除く) 水中では携帯電話 水中では携帯電話のBluetooth信号を送信できませんので、ご注意ください。

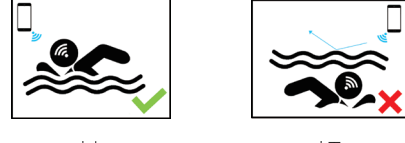

注意


1. 故障や火災の原因になりますので、分解・組立はしないでください。
2. 腐食性のある液体との接触は、製品を損傷する可能性があるため避けてください。
3. 摂氏10度以下、摂氏60度以上の極端な温度には置かないでください。
4. お子様やペットの手の届かないところに保管してください。
5. イヤホンを便利なものに接触させないでください。そうしないと、簡単に傷がつきます。
6. 故障や感電を避けるため、使用の中での使用は避けてください。
7. 1ヶ月以上使用しない場合は、正常に利用するために定期的な充電とメンテナンスを行ってください。
8. Bluetoothイヤホンの信号は水中では送信できないため、水泳やダイビングをすると信号が切断されたり中断されたりします。
Bluetoothの検索ができない、Bluetoothに接続できないのは何故ですか?
1. Bluetoothの距離は10mです。障害物がないことを確認してください。携帯電話はイヤホンの近くにある必要があります。
2. 他の電話またはデバイスがイヤホンに接続されている場合、まずその接続を解除してください。
3. Bluetooth デバイスを再起動し、イヤホンのリセットをお試しください。
イヤホンから音が出ない、音楽が途切れているのはなぜですか?
1. 携帯電話のネットワークが正常かどうか、インターネットの速度が遅いかどうか、音楽のロードされているかどうか、を確認してください。
2. Bluetoothの距離は10mです。障害物がないことを確認してください。携帯電話はイヤホンの近くにある必要があります。
3. 周囲の環境の干渉や磁場が強くなると、Bluetooth信号伝送に影響を与えます。
4. 携帯電話のBluetoothを開き、本機のペアリング名をクリックし、ペアリングの記録を削除し、Bluetoothを検索し、再度ペアリングします。
5. 電話を再起動するか、イヤホンをリセットすることができます。
何故イヤホンの電源が自動的に切れるのですか?
イヤホンの電圧が十分であることを確認してください。また、イヤホンが10分間Bluetoothから切断されると、自動的に電源が切れます。イヤホンを充電ケースに入れてから、再度取り出すだけで自動的に電源が入ります。

安全に関する注意事項

高品質イヤホン、長寿命のために、以下の説明を参考にしてください。
1. 高温、高温、腐食性の環境から本製品を遠ざけてください。
2. 製品をぶついたり、落としたり、曲げたり、壊したりしないでください。
3. イヤホンや充電ケースは分解しないでください。
4. 本製品が過充電されないようにしてください。これはイヤホンの寿命を減らす可能性があります。
5. 不快感や痛みを感じる場合は、使用を中止してください。
6. 規制対象メーカーが認定したDC5V-1Aアダプターを使用してください。イヤホンの充電と充電ケースの充電とともに電池の性能が低下しますが、これはすべての充電式電子機器に共通する現象です。
製品仕様
1.イヤホン*2
2.充電ケース*1
3.Type-C充電ケーブル*1
4.説明書*1

英


User Manual
—Product description—

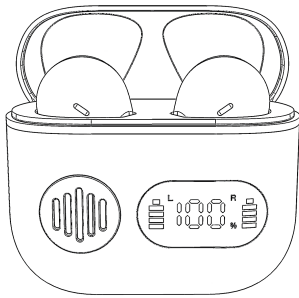


YYK-750

If you have a question that is not listed here, please do not hesitate to contact us by email.
Customer Service Department email:
after-service@kinganda.cn

Product Photo

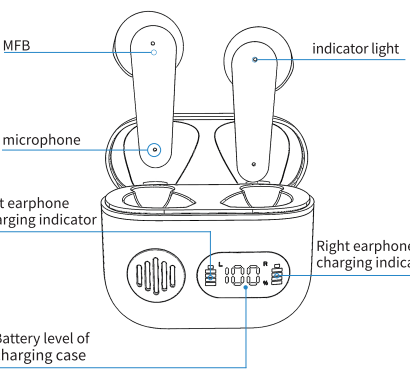

Wireless Pairing

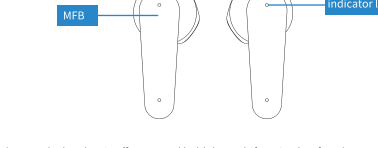


Make sure the headset is off, press and hold the multifunction key for about 3 seconds until the blue light comes on once. Then the red and blue lights flash alternately (at this time it enters the pairing state) and waits for the connection.



Turn on the Wireless function of the user's mobile phone (or other Wireless devices), and search or scan. At this time, the mobile phone will search all the Wireless devices nearby, and click the Headset Name YYK-750, and enter the password 0000 (most mobile phones do not need a password at present). After successful pairing and connection, the headset indicator light goes off, indicating that the pairing connection is successful. At this time, you can make mobile phone calls and listen to songs.

MFB Button

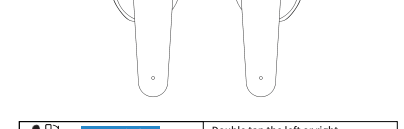

Pause / play	Double tap the left or right MFB button
Last Song	Press and hold the left ear MFB button for 1 second
Next Song	Press and hold the right ear MFB button for 1 second
volume+	In the state of playing music, triple-click the left ear MFB to add 1 grid
volume-	In the state of playing a song, triple-click the right ear MFB to reduce 1 grid
Answer	Double tap the left or right MFB button
Hang up	Double tap the left or right MFB button
Refuse to answer	Press and hold the left or right ear MFB button for 1 second
Cancel call	Double tap the left or right MFB button
Call Siri	Triple tap the left or right ear MFB button (When not playing music)
Close Siri	Double tap the left or right MFB button

ON/OFF switch

1. When the headset is taken out of the charging compartment, the headset will automatically turn on, or press and hold the left and right ear MFB keys for 3 seconds to turn on.
2. After use, put the earbuds in to the charging bin, and it will turn off automatically.

How to pair

1. Take the earbuds out of the charging bin and it will start work automatically.
2. The red and blue lights will flash alternately (entering pairing mode)
3. Access the Settings of mobile phone/tablet -- Wireless -- Search -- YYK-750 -- Pair/Connect -- Play music.

Pair with PC/Laptop

Turn on the computer Settings-Devices-Wireless and Other Devices-Initiate Wireless -Add Wireless or Other Devices- Search Wireless- YYK-750 - Pair/Connect- Play music. Notes: If the computer has not Wireless function, please insert a Wireless adaptor, and download a Wireless driver for normal functioning.

How to reset?

When the headset is off, Double-click MFB button and press and hold for 2 seconds. Put the headset into the charging compartment, and the headset will automatically turn off and start charging. After taking out the headset, the headset will turn on automatically, and the reset is completed.

How to recharge the headphones

1. put the headset in the charging bin, the headset will be automatically turned off and then charged.
The display lights up to show the current power of the charging chamber, indicating that the charging chamber is charging the headset.
2. When the headset is fully charged, the red light of the headset indicator will be off.

Product specification


Version	V5.3+EDR
Wireless support	A2DP,AVRCP,HFP,HSP,EDR
Communication range	≥10m
Frequency band	2.402GHz-2.480GHz
Electrical impedance	13MM 32Ω
Standby time	120h
Call time	5-6h
Music playing time	5-6h
Earbuds battery capacity	40mAh
Host battery capacity	500mAh
Charging bin recharging time	About 1h
Charging time of headset	About 1h
Weight	33g

How to recharge the charging bin

1. Please use a mobile phone adapter to recharge the charging bin. You may charge via a Type-C cable connected to a computer, or other charger with a Type-C interface.
2. The digital display of the charging bin will indicate the recharging process, and 100 battery level means fully recharged.


Mobile phone transmission range

The transmission distance of the mobile phone is shown in the following chart

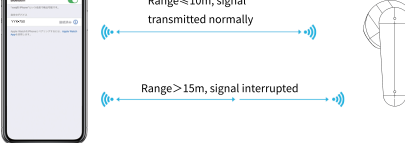

Waterproof specification

Waterproof in daily activities (including sweating, raining, face-washing and showering, except swimming in water, etc.)
* Note that the Wireless signal of mobile phones can't be transmitted in water.

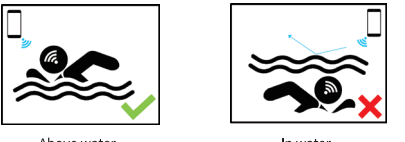

Attention

1. Please avoid disassemble/reassemble the product in case of failure or fire accident.
2. Please keep away from corrosive liquids to prevent the product from damage.
3. Please avoid exposure to extreme temperatures below 10°C, or above 60°C.
4. Please keep beyond the reach of kids or pets.
5. Please mind contact with sharp objects to avoid scratch.
6. Please avoid use in thundering and raining days to prevent damage or electrical shock.
7. In the case of non-use for above a month, please charge regularly for maintenance.
8. As the Wireless signal cannot transmit in water, it is not suitable for swimming for diving.
Why cannot I detect Wireless?
Why Wireless pairing failure?
1. The Wireless rang is 10m; please ensure no obstacles and place the mobile phone close to the earbuds.
2. If the earbuds are connected to other mobile phone or devices, please disconnect first.
3. Please reboot the Wireless device and reset the earbuds.
Why do the earbuds produce no sound?
Or, why does the music playing stop?
1. Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.
2. To ensure proper connection, press the earbuds to fully connect the charging points to the charging bin.
3. The earbud charging points might be stained with dust or sweat. When place them into the charging bin for recharging, please clean with alcohol or cloth.
4. Please do not overcharge for a long time, which will shorten the service life.
5. In the case of feeling any discomfort or pain, please stop using the product.
6. Please use certified DC 5V-1A adaptor from manufacturer under the supervision of regulatory authorities. Repeated charging and discharging will impair the battery performance over time, which is normal for all rechargeable electronic products.
Why do the earbuds turn off automatically?
Please ensure sufficient battery level. In addition, the earbuds will automatically disconnect Wireless for 10mins. Place the earbuds back to the charging bin and they will restart after recollecting.

Why cannot I recharge the charging case

1. Please ensure the charging cable or mobile phone charger is in a good state and with proper connection.
2. To ensure proper connection, press the earbuds to fully connect the charging points to the charging bin.
3. The earbud charging points might be stained with dust or sweat. When place them into the charging bin for recharging, please clean with alcohol or cloth.
4. Please do not overcharge for a long time, which will shorten the service life.
5. In the case of feeling any discomfort or pain, please stop using the product.
6. Please use certified DC 5V-1A adaptor from manufacturer under the supervision of regulatory authorities. Repeated charging and discharging will impair the battery performance over time, which is normal for all rechargeable electronic products.

Safety Precautions

To guarantee the service life of the quality earbuds, please refer to the instructions as follows:
1. Please keep away from high temperature, high humidity and corrosive environment.
2. Please avoid bumping, falling, bending, soaking, and etc.
3. Please do not disassemble the earbuds or charging bin.
4. Please do not overcharge for a long time, which will shorten the service life.
5. In the case of feeling any discomfort or pain, please stop using the product.
6. Please use certified DC 5V-1A adaptor from manufacturer under the supervision of regulatory authorities. Repeated charging and discharging will impair the battery performance over time, which is normal for all rechargeable electronic products.

Packing Contents

1. headphones*2
2. Charger *1
3. Type-C charging cable *1
4. User Manual *1

UK REP

EATOTEST CONSULTING LTD
Suite 11, First Floor, May Road Business
Centre, Taft's Well, Cardiff, Wales, CF15 7QR
contact@eatmaster.com

CE FC