
2-Door Mini Refrigerator

Instruction Manual

BX-SM01



HJ-Customer-Service@outlook.com

(909)637-7665 | (909)637-7593

EST 9:00AM--17:00PM

Please read the following instructions carefully before using your refrigerator.

1. Don't put hot food inside the refrigerator.
2. Wrap all food items with a plastic protective film to avoid dehydration and lose food flavor.
3. Immediately close the refrigerator door after each use.
4. If you don't use the refrigerator for a long period of time, disconnect the unit, clean the inside parts, put the refrigerator in a dry area and leave the door slightly open.

I. GENERAL

The refrigerator is extensively used in places such as hotels, offices, houses and student dormitories. It is mostly suitable for refrigerating and preserving food such as fruits and beverages. It enjoys the advantages of small size and lightweight, high efficiency and low energy consumption.

II. UNPACKING, REPACKING, AND MOVING

1. Unpacking:

Just cut off the packing band, and then pull the carton up.

2. Repacking:


Remember to put the original foam pads back in place.

3. Moving:

Make sure the refrigerator trays are in upright positions when moving it.
Do not tilt the refrigerator more than 45 degrees from the upright position.
Never lay the refrigerator on its side or upside down.
Do not apply force to any external parts such as the pipes, condenser, or door.
When moving the refrigerator, it must be well-packed and secured for long-distance transportation to avoid damage from impacts or strong shocks.

III. INSTALLATION PROTECTION FROM HEAT AND MOISTURE


Do not install your refrigerator in any location where heavy moisture is present or where the area is not properly insulated. This refrigerator is not designed to operate in a temperature setting below 42° F. When the ambient temperature is too low, the compressor stops working. Open the heat compensation button as shown in the diagram to allow the refrigerator to run normally. Location for the refrigerator should be on a hard surface and away from direct sunlight and heat source,e. g., radiators, baseboard heaters, cooking appliances, etc.

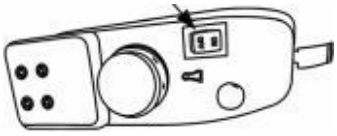

DOOR ALIGNMENT

1.Remove the top hinge cover.
2. Loosen the top hinge screws using a Phillips-head screwdriver.
3. Adjust the door or insert a spacer in between, and then tighten the screws.
4. The top clearance of the refrigerator should not be less than 30 cm. The distance between the sides, back, and the wall should also be no less than 10 cm to ensure proper door operation and heat dissipation. The refrigerator should be placed on a flat and sturdy surface. If the refrigerator is unstable, adjust the leveling foot accordingly.



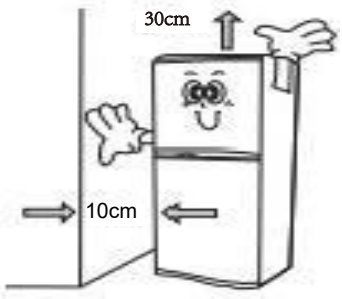

IV: OPERATION

1. Before the refrigerator is plugged in, check the following:
- Each screw must be well fixed.
- Wall outlet must be properly connected.
- Be sure that everything is in normal condition and the refrigerator can be plugged in.
- Please place the machine upright 4 hours before plugging in.

2. When operating for the first time.

Before loading food, run the refrigerator without any load until it automatically stops at the desired temperature. This usually takes 2 or 3 hours.Then set the thermostat to the required setting and place foods in.

3. Temperature control.

The refrigerator temperature can be adjusted by turning the thermostat knob. The closer the knob is set to position "7", the lower the temperature becomes. A medium setting is the most suitable for general operation. Set the thermostat to position "7" only when ice cubes are needed or frozen foods are stored in the freezing compartment.

The refrigerator's temperature will vary depending on the quantity of food stored and how often the door is opened. In order to maintain good cooling efficiency and save energy, we recommend not storing too much food and avoiding frequent door opening.

CAUTION: when the thermostat has been turned clockwise to "7" position, don't attempt to turn it further, otherwise it will be damaged.

4. Ice cubes making.

After filling the ice tray with drinkable water till about 80% of its volume, put it into the freezing compartment and then set the thermostat to "7". It takes about 3 hours to make ice cubes.

V. DEFROSTING

Defrost the freezing compartment whenever the layer of frost or ice on the evaporator reaches 3-4 mm. When defrosting, remove all food and ice cube trays. Put the drip tray in place to collect melted water.

To start defrosting, set the thermostat to position "0" and keep the door open. After the frost or ice has melted, discard it and dry the interior of the refrigerator. The refrigerator can then be restarted by turning its thermostat to the desired setting.

CAUTION: Never use any sharp of metallic instruments (e.g., knives)to remove frost or ice from the evaporator, as this will damage it. A punctured evaporator will cause serious problems.

VI. CLEANING AND MAINTENANCE

Before cleaning the refrigerator, disconnect the power supply and remove all food items, shelves, and trays. Clean the interior using a solution of two tablespoons of baking soda per liter of warm water. Wipe with clean water afterward.

Do not use acids, chemical thinners, gasoline, benzene, or similar substances to clean any parts of the refrigerator. Do not use boiling water or benzene on plastic components, as this may cause deformation or damage.

Overloading the refrigerator or using oversized containers may hinder air circulation. It is recommended to utilize approximately 70% of the available storage volume.

Do not store volatile or flammable substances such as ether, gasoline, liquefied petroleum gas, or adhesives, as these may pose a fire or explosion hazard due to electric sparks.

VII. SAFETY INSTURCTION

Before plugging in the refrigerator, ensure that your household power supply matches the rated voltage and frequency indicated on the rating label (usually located on the back of the unit).

Always plug the refrigerator into a properly ventilated outlet. Overloaded circuits may overheat and pose a fire hazard.

Do not splash water on the refrigerator, as this may cause electrical leakage or malfunction.

If the power cord is damaged, have it replaced immediately by a qualified technician.

The manufacturer is not liable for any accidents resulting from improper use.

Note: Specifications are subject to change without notice.

Warning:

1. Do not use electrical appliances inside the refrigerator compartments unless recommended by the manufacturer.
2. The refrigerant and insulation materials used require special disposal procedures. Contact a qualified service agent for proper disposal.
3. Do not use mechanical devices or other unauthorized methods to accelerate the defrosting process.
4. Do not damage the refrigerant circuit.
5. This appliance is not intended for use by individuals with reduced physical, sensory, or mental capabilities, unless under supervision or properly instructed by a person responsible for their safety.
6. Children must be supervised to prevent them from playing with the appliance.

VIII. AFTER-SALES SERVICE

If you encounter any issues with this product, please contact our after-sales service.

Note: A dated proof of purchase, along with the model and serial number, is required for warranty service.

Ⅸ.TROUBLESHOOTIN

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Refrigerator does not work.	A. Refrigerator is not switched on. B. Unit is not plugged in or is loose. C. A household fuse has blown or circuit breaker has tripped. D. Wall power socket is defective.	A. Turn on the temperaturecontrol dial. It may be in the OFF or "0" position. B. Plug in the refrigerator properly. C. Replace the household fuse or reset circuit breaker. D. Have the wall socket inspected by a qualified electrician.
The food is too cold.	A. Temperature is not properly adjusted.	A. Set the temperature control dial to a warmer setting.
The food is too warm.	A. Temperature is not properly adjusted. B. Door was open for an extended period. C. A large quantity of warm food was placed in the refrigerator within the last 24 hours. D. The refrigerator is near a heat source.	A. Set the temperature control dial to a cooler setting. B. Open the door only when necessary,and check the door gasket for proper sealing. C. Set the temperature control dial to a colder setting temporarily. D. Refer to the "Temperature Control" section for further guidance.
Heavy build-up of frost, possibly also on the door seal . NOTE: This is normal during high humidity periods. Frequent door openings will also cause heavy frost build-up.	Door seal is not airtight. (possibly after door reversal)	Carefully warm the leaking sections of the door gasket with a hair dryer(on a cool setting). At the same time, shape the warmed gasket by hand to ensure it sits correctly and seals properly.
Popping or cracking sounds when compressor comes on.	/	A. No action needed. This is a normal sound of coolant flowing through the condenser coils.
Refrigerator door does not shut properly.	A. The refrigerator door is not properly aligned. B. Possible blockage from food containers, shelves, bins, etc.	A. Re-align the refrigerator door. Refer to the "Door Alignment" section. B. Ensure nothing is blocking the door.
Refrigerator has an odor.	A. Foods not properly sealed. B. Interior needs cleaning.	A. Remove any spoiled or unsealed food items. B. Clean the interior of the refrigerator thoroughly with a mild detergent.

LIMITED WARRANTY

For questions or concerns about this product, please contact our customer service.

We warrant to the original purchaser that this product is free from defects in material, parts, and workmanship under normal use for a period of **one (1) year** from the date of purchase.

This warranty does not cover the following:

1. Damage or defacement to the exterior or appearance of the product caused by mishandling, accidents, or unauthorized modifications.
2. Products with altered, removed, or unreadable serial numbers.
3. Damage caused by power surges, misuse of the AC power cord, or connection to an improper power source.
4. Damage resulting from misuse, accidents, or natural disasters.
5. Repairs made by unauthorized service providers, use of non-genuine parts, or parts from unauthorized sources.
6. Units transferred from the original purchaser.
7. Products purchased as refurbished, "like new," second-hand, or under "as-is" or "final sale" conditions.
8. Products used for commercial or rental purposes.
9. Products not used for ordinary household purposes or not used in accordance with the instructions.
10. Damage resulting from improper installation.
11. Damage to glass parts and other accessories included with the product.
12. Loss of food or other contents due to product failure or delay in service, repair, or replacement.

We shall not be liable for any incidental or consequential damages resulting from the breach of any express or implied warranty, except where prohibited by applicable law. Any implied warranties, including those of merchantability or fitness for a particular purpose, are limited to the duration of this limited warranty.


Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. In such cases, these limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary by state or country.

Please make sure to provide the date of purchase, model number, and a brief description of the issue. Our after-sales service will contact you.

We do not warrant that the appliance will function properly under all environmental conditions and make no warranty or representation, either implied or expressed, regarding its quality, performance, merchantability, or fitness for any purpose other than that specified in this user manual.

While we have made every effort to ensure the accuracy of this user manual, we disclaim any liability for inaccuracies or omissions that may be present. The information contained in this manual is subject to change without notice and does not constitute a commitment by the manufacturer.

The manufacturer reserves the right to improve this user manual and/or the products described herein at any time without prior notice. If you identify any information in this manual that is inaccurate, misleading, or incomplete, please contact our after-sales service department promptly.



Technical Support

(909)637-7665 | (909)637-7593

Other Info

HJ-Customer-Service@outlook.com

Thank you for choosing this product. We strive to provide you with the best quality products and service in the industry. Should you have any issues, please don't hesitate to contact us.