EPSON
EXCEED YOUR VISION

Epson® SureColor® S60600L/S80600L User's Guide

Contents

Epson SureColor S60600L/S80600L User's Guide 7

Introduction to Your Printer 8

Notations Used in the Documentation 8

Printer Part Locations 8

Product Parts - Front 9

Product Parts - Right Side 10

Product Parts - Inside 11

Product Parts - Back 12

Product Parts - Ink Unit 13

Product Parts - Control Panel 14

Consumables and Replacement Parts 18

Printer Usage Guidelines 19

Using Your Printer 20

Handling Ink and Cleaning Packs 21

Handling Media 23

Storing Your Printer 23

Media Handling 25

Media Handling Precautions 25

Loading Media 26

Using the Auto Take-up Reel 40

About the Auto Take-up Reel 40

Attaching the Take-up Roll Core to the Auto Take-up Reel 41

Take Up with the Printable-Side-In 45

Take Up with the Printable-Side-Out 48

Viewing and Changing Media Settings 51

Removing Printed Media 52

Printing the Amount of Media Remaining 53

Cutting Media 53

Removing Media From the Auto Take-up Reel 56

Daily Tasks to Perform Before You Print 58

Saving Sets of Media Settings 59
Tasks You Can Perform While Printing 62
Checking Consumable Status During Printing 63
Adjusting Heating and Drying During Printing 63
Correcting Banding Issues During Printing 63
Printable Area and Media Size Checking 64
Print Start Positions 66
Adjusting Media Feed and Head Alignment 69
Using the Control Panel Menus 73
Accessing the Printer's Menus 73
Media Setup Menu Settings 73
Printer Setup Menu Settings 78
Maintenance Menu Settings 80
Printer Status Menu Settings 82
Other Settings Menu Settings 82
Maintenance 84
When to Maintain Your Product 84
Preparing for Maintenance 87
Maintenance Supplies 88
Maintenance Precautions 89
Performing Regular Cleaning 90
Cleaning the Platen Heater and Media Edge Plates 91
Using Ink Cleaner 92
Moving the Print Head for Maintenance 93
Cleaning Around the Print Head 94
Cleaning the Anti-drying Caps and Flushing Pad 96
Shaking and Replacing Ink Packs 103
Shaking the Ink Packs 103
Replacing the Ink Packs 105
Changing the Color Mode 109
Replacing the Waste Ink Bottle 109
Replacing the Maintenance Parts 112
Replacing the Media Edge Plates 118

Print Head Maintenance 124
Checking for Clogged Print Head Nozzles 125
Cleaning the Print Head Nozzles 126
Performing Pre-storage Maintenance 127
Cleaning Inside the Front Cover 128
Cleaning the Pressure Rollers 129
Applying Carriage Rod Grease 131
Used Parts Disposal Guidelines 136
Moving or Transporting the Product 138
Prepare to Move the Product 138
Setting Up the Product After Moving 140
Solving Problems 141
Uninstall Your Product Software 141
Uninstalling Product Software - Windows 141
Uninstalling Product Software - Mac 142
Product Status Messages 143
Solving Printer Problems 145
Printer Does Not Turn On 146
LCD Screen Shuts Off 146
After Heater Shuts Off 146
Forgot the Administrator Password 147
Red Light Shines Inside the Printer 147
Solving Printing Problems 147
Nothing Prints 147
Cannot Print Over a Network 148
Print Head Moves But Nothing Prints 148
Printing Continues After Media Roll Empties 148
Removing Jammed Media 149
Solving Print Quality Problems 152
Nozzle Check Pattern Prints Incorrectly 152
Overall Print Quality Is Poor 152
Image Is Not Positioned Correctly On the Media 153
Where to Get Help 153

Technical Specifications **155**
Epson Control Dashboard System Requirements 155
Printing Specifications 156
Paper Specifications 157
Ink Pack Specifications 158
Electrical Specifications 159
Environmental Specifications 160
Dimension Specifications 160
Interface Specifications 161
Network Interface Specifications 161
Safety and Approvals Specifications 161
Notices **162**
Important Safety Instructions 162
General Product Safety Instructions 162
Ink Pack Safety Instructions 164
Software License Terms 165
FCC Compliance Statement 172
Binding Arbitration and Class Waiver 173
Trademarks 177
Copyright Notice 177
A Note Concerning Responsible Use of Copyrighted Materials 178
Copyright Attribution 178

Epson SureColor S60600L/S80600L User's Guide

Welcome to the Epson SureColor S60600L/S80600L *User's Guide*.

For a printable PDF copy of this guide, click here.

Introduction to Your Printer

Refer to these sections to learn more about your printer and this manual.

Notations Used in the Documentation
Printer Part Locations
Consumables and Replacement Parts
Printer Usage Guidelines

Notations Used in the Documentation

Follow the guidelines in these notations as you read your documentation:

- **Warnings** must be followed carefully to avoid bodily injury.
- **Cautions** must be observed to avoid damage to your equipment.
- **Notes** contain important information about your printer.
- **Tips** contain additional printing information.

Parent topic: Introduction to Your Printer


Printer Part Locations

Check the printer part illustrations to learn about the parts on your printer.

Product Parts - Front
Product Parts - Right Side
Product Parts - Inside
Product Parts - Back
Product Parts - Ink Unit
Product Parts - Control Panel

Parent topic: Introduction to Your Printer

Product Parts - Front

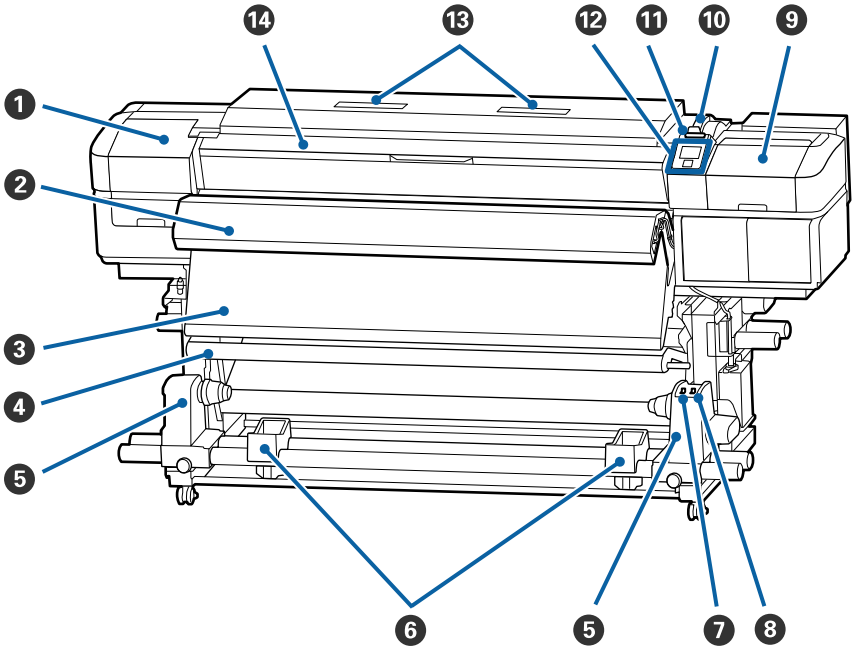


1 Left maintenance cover
2 Print drying system (included with SC-S60600L and optional for SC-S80600L)
3 After heater
4 Tension bar
5 Take-up reel roll core holder
6 Take-up reel support
7 Take-up reel **Auto** switch
8 Take-up reel **Manual** switch
9 Right maintenance cover
10 Media loading lever
11 Alert light

12 Control panel
13 Air filters
14 Front cover

Parent topic: Printer Part Locations

Product Parts - Right Side

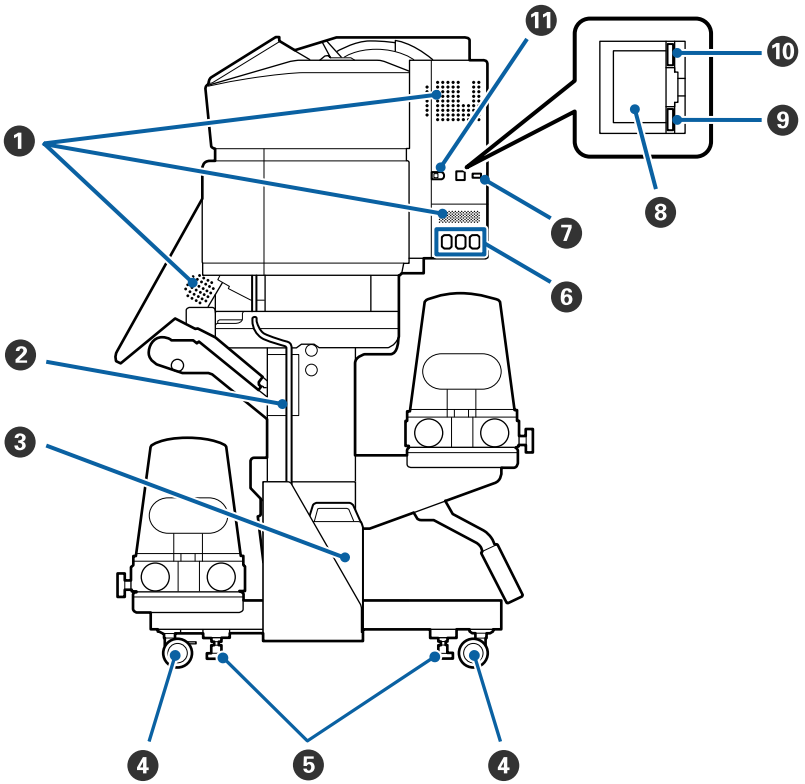


1 Airflow vents
2 Waste ink tube
3 Waste ink bottle

4 Casters
5 Stand fixing screws
6 AC inlets
7 Ink unit port
8 LAN port
9 Data light
10 Status light
11 USB port

Parent topic: Printer Part Locations

Product Parts - Inside

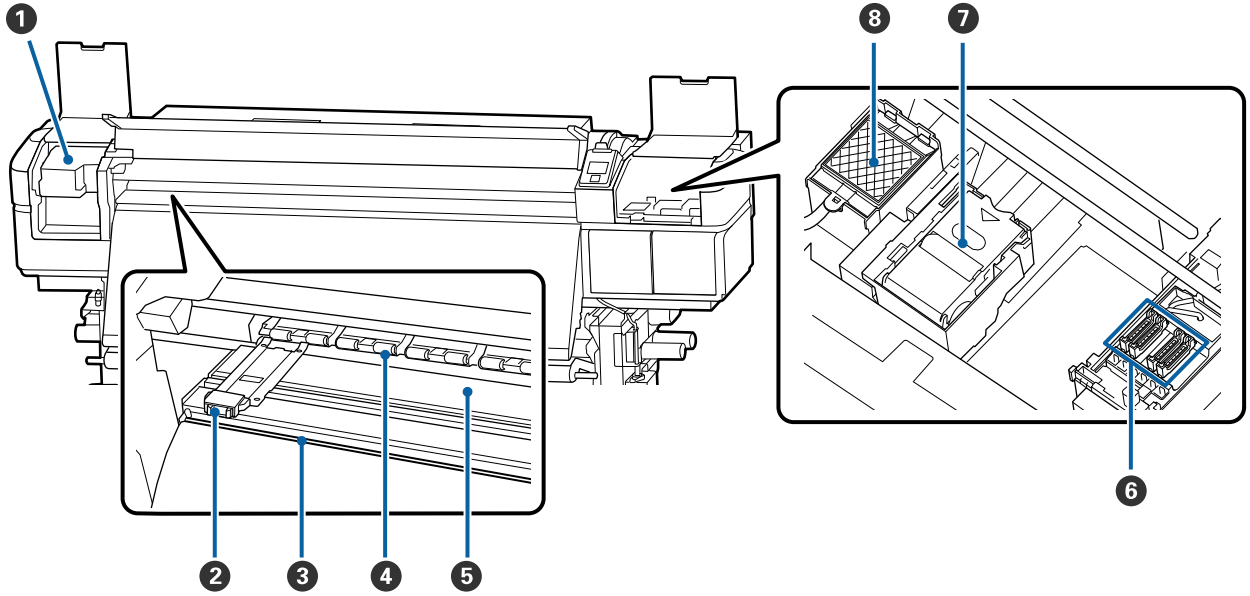


1 Print heads
2 Media edge plates

3 Cutter groove
4 Pressure rollers
5 Platen heater
6 Anti-drying caps
7 Wiper unit
8 Flushing pad

Parent topic: Printer Part Locations

Product Parts - Back

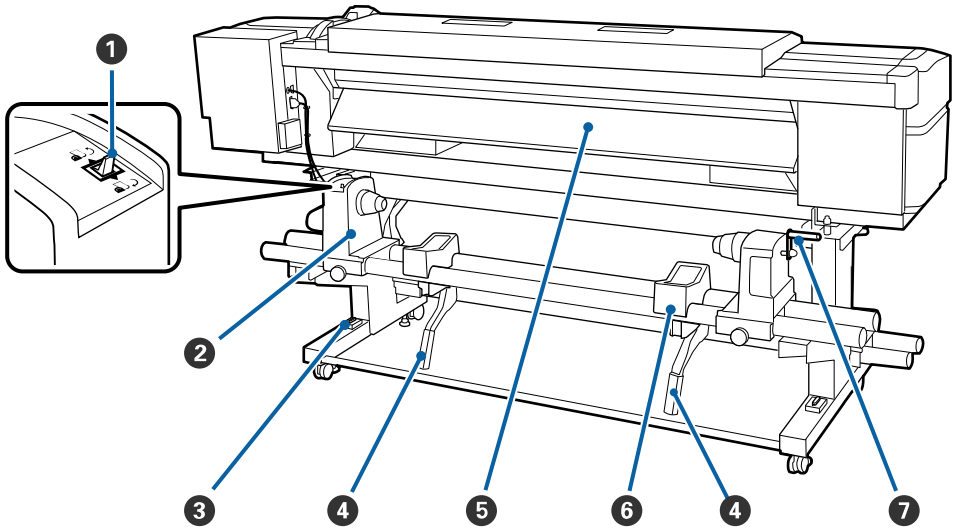


1 Drive switch (used to feed and rewind media during loading and replacement)
2 Roll holder
3 Level gauge
4 Lift levers
5 Pre-heater

6 Roll support

7 Roll holder handle

Parent topic: Printer Part Locations

Product Parts - Ink Unit

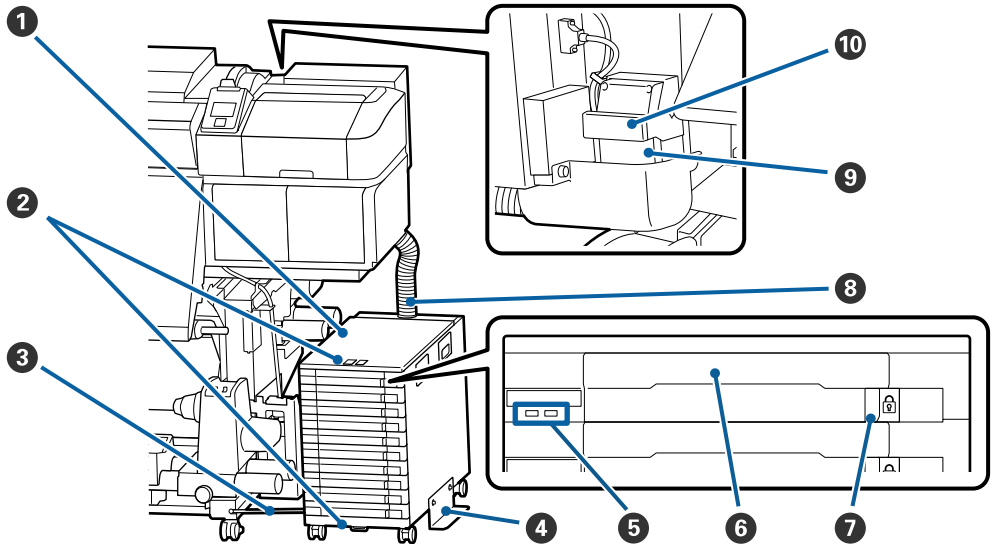

1 Ink unit

2 Security cable attachment points

3 Fixing wire

4 Ink unit overturn prevention plate

5 Ink status lights

6 Ink tray

7 Lock switch


8 Ink tube

9 Ink tube connector

10 Connector lock levers

Parent topic: Printer Part Locations

Product Parts - Control Panel

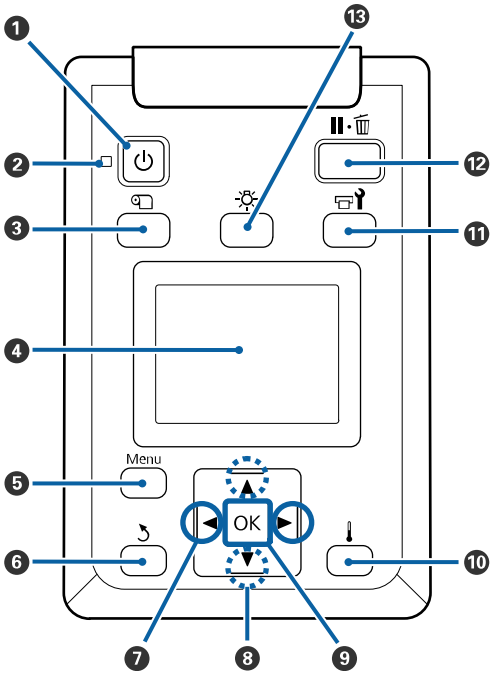

1 ⏻ power button

2 ⏻ power light

3 media setup button

4 LCD screen

5 **Menu** button

6 ↩ back button

7 Left and right arrow buttons

8 Up and down arrow buttons

9 **OK** button


10 heat/dry menu button

11 maintenance button

12 pause/cancel button

13 front cover light button

LCD Screen Display

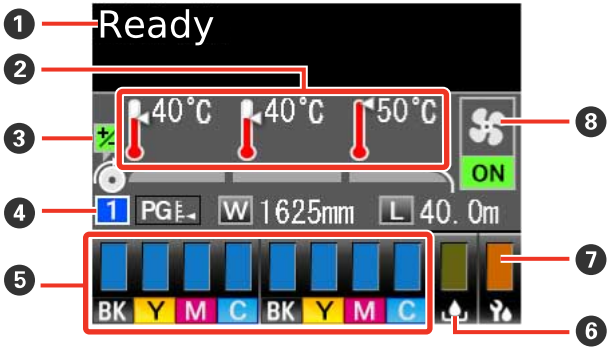

1	Printer status and error messages
2	Heater temperature status : Heater is at the selected temperature : Heater has not yet reached the selected temperature
3	Feed adjustment information, if you have entered a value during printing

4	Media information Displays the number for the selected media, the platen gap setting, the media width, and media remaining : Platen gap is 1.6 : Platen gap is 2.0 : Platen gap is 2.5
5	Ink pack status Displays the printer status and approximate level of ink remaining : Ready to print : Ink is low; make sure you have a replacement ink pack handy : Ink pack is expended; replace the ink pack : Ink tray is not latched; slide the lock switch to the left to latch it : No ink pack installed; install an ink pack and lock the ink tray : An error occurred; follow the instructions on the LCD screen to clear the error : A cleaning pack is installed
6	Waste ink bottle status Displays the approximate amount of space remaining in the waste ink bottle : No error : Waste ink bottle is almost full; prepare a new waste ink bottle : Waste ink bottle is full; replace the waste ink bottle

7	Wiper unit status Displays the remaining amount of life for the wiper unit : No error : Wiper unit is nearing end of life; prepare a new wiper unit : Wiper unit is at end of life; replace the wiper unit : Wiper unit not installed or installed incorrectly
8	Print drying system status Displays the status of the print drying system (optional for SC-S80600L) No icon: Print drying system not installed or installed incorrectly : Drying fan is on : Drying fan is off

Parent topic: Printer Part Locations

Related references

Product Status Messages

Related tasks

Replacing the Waste Ink Bottle

Replacing the Maintenance Parts

Related topics

Shaking and Replacing Ink Packs

Consumables and Replacement Parts

You can purchase genuine Epson ink, paper, and accessories from an Epson authorized reseller. To find the nearest reseller, visit proimaging.epson.com (U.S.) or proimaging.epson.ca (Canada), select your product series and product, and click the **Where to Buy** button. Or call 800-GO-EPSON (800-463-7766) in the U.S. or 800-807-7766 in Canada.

Note: Availability of accessories varies by country.

Note: This printer is designed for use with Epson ink packs only, not third-party ink packs or ink. Other brands of ink supplies are not compatible and, if described as compatible, may not function properly or continuously.

The included initial ink packs are designed for reliable printer setup and cannot be used as replacement ink packs or resold. After setup, the remaining ink is available for printing. Yields are based on ISO 24711 in default mode, printing continuously. Yields vary due to print images, settings, and temperatures. Printing infrequently or primarily with one color reduces yields. All ink packs must be installed with ink for printing and printer maintenance. For print quality, some ink remains in replaced ink packs.

SureColor S60600L ink packs

Slot	Ink color	Part number
BK	Black	T45L120
C	Cyan	T45L220
M	Magenta	T45L320
Y	Yellow	T45L420

SureColor S80600L ink packs

Slot	Ink color	Part number
BK	Black	T45L120
C	Cyan	T45L220
M	Magenta	T45L320
Y	Yellow	T45L420
LC	Light Cyan	T45L520

Slot	Ink color	Part number
LM	Light Magenta	T45L620
LK	Light Black	T45L720
OR	Orange	T45L820
R	Red	T45L920
WH	White	T45LA20
MS	Metallic Silver	T45LB20

Option or part	Part number
Cleaning pack	C13T44A500
Maintenance parts kit; includes wiper unit, flushing pad, air filters, and gloves	C13S210093
Ink cleaner	C13T699300
Waste ink bottle	C13S210071
Cleaning sticks	C13S090013
Clean room wiper (not available in some countries)	C13S090016
Print drying system (optional for the SC-S80600L)	C12C932381
Media edge plates	C12C932411
1-year extended Epson Preferred Plus Silver service plan	EPPS5070SB1
1-year extended Epson Preferred Plus Gold service plan	EPPS5070GB1
1-year extended Epson Preferred Plus Platinum service plan	EPPS5070PB1

Parent topic: Introduction to Your Printer

Printer Usage Guidelines

Follow the guidelines in these sections as you use your printer, consumables, and print media.

Using Your Printer
Handling Ink and Cleaning Packs
Handling Media
Storing Your Printer

Parent topic: Introduction to Your Printer

Using Your Printer

Follow these guidelines as you use your printer:

- Operate the printer only within the specified operating temperature and humidity range for your product and your media.
- Check to make sure you maintain the specified humidity range, especially in dry areas or air conditioned environments.
- Keep the printer out of direct sunlight.
- Do not install the printer next to heat sources or directly in the path of exhaust from a ventilator or air conditioner. Failure to observe this precaution could result in the print head nozzles drying out and clogging.
- Make sure the product work space is kept free of dust or lint that could damage your product or clog the print head nozzles.
- Use the product in a sufficiently ventilated area.
- Perform maintenance operations according to usage frequency or at the recommended intervals. Failure to perform regular maintenance could reduce print quality or damage the print head.
- Do not bend or pull on the waste ink tube. Otherwise ink may leak inside or outside the printer.
- Be sure that the waste ink bottle is installed whenever the printer is turned on.
- If an error occurs and the printer is turned off without first resolving the error, the print head may not be in the home position, which may cause the print head to dry out. In this case, turn on the power and wait until the carriage is in the home position.
- When the printer is on, do not disconnect the power cable or cut the power at the circuit breaker. The print head may not be in the home position. In this case, turn on the power and wait a while until the print head is in the home position.

Note: To keep the print head in the optimum operating condition, ink is used in maintenance operations such as head cleaning in addition to printing.

Parent topic: Printer Usage Guidelines

Related references

When to Maintain Your Product

Environmental Specifications


Handling Ink and Cleaning Packs

Follow these guidelines as you handle the ink and cleaning packs:

Note: Make sure the ink unit is securely attached to the printer using screws and fixing wire as described in this guide, or the ink tube may be damaged when you move the ink unit. Do not remove the ink tube connector after it is connected, or ink may leak.

- Extra ink is required to charge the print head nozzles the first time the printer is used. Be sure to have replacement ink packs ready.
- Store ink packs at room temperature and away from direct sunlight.
- To ensure print quality, use ink packs before the expiration date printed on the packaging or within 6 months of installing them.
- Allow ink and cleaning packs that have been stored at low temperatures for an extended period of time to return to room temperature over a period of four hours before use.
- Do not touch the IC chips on the ink packs.
- The IC chip on each ink pack stores information, such as ink levels, to allow the ink pack to be used after being removed and re-installed.
- Install ink packs into all the trays in the ink unit or the printer cannot print.
- Do not leave the printer without ink packs installed in all the trays, even when the printer is not in use. The ink in the printer may dry out.
- If you remove an ink pack before it is empty, wipe off any ink from the ink supply port using a cleaning stick in the maintenance kit. If ink dries on the supply port, the ink pack may leak when it is reinstalled.

Also make sure that the supply port is free of dust when storing ink packs (the port does not need to be capped since there is a valve inside). Do not put tape over the supply port.

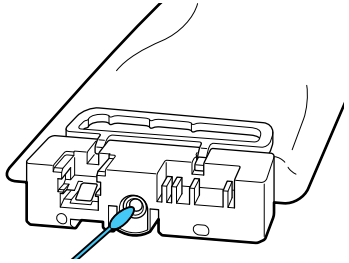

- Removed ink packs may have ink around the ink supply port, so be careful not to stain any surfaces with ink.
- Do not dismantle or remodel ink packs. You may not be able to print properly.
- Do not drop ink packs or subject them to impacts. It may cause ink to leak.
- Be sure to remove ink packs installed in the printer and thoroughly shake them once every three weeks as described in this guide.
- If you are using the White or Metallic Silver ink packs, follow these additional guidelines to prevent sedimentation:
  - Leave the printer turned on so it can automatically circulate the ink. If you plan on leaving the printer turned off for more than a week, perform pre-storage maintenance first.
  - Remove and shake the White or Metallic Silver ink packs daily.
  - Lay ink packs on their side when storing them.
  - When printing multiple copies of a large print job, the printer may perform automatic ink circulation in between copies which can cause your printouts to differ in color. To avoid this, it is recommended that you perform **Ink Circulation** from the Maintenance menu before you start printing.
  - If your printouts contain uneven tint, perform **Ink Refresh** from the Maintenance menu.

Note: To maintain the quality of the print head, the printer stops printing before ink packs are completely expended. The ink packs may contain recycled materials; this does not affect printer functions or performance.

Parent topic: Printer Usage Guidelines

Related references

Maintenance Menu Settings

Related tasks

Shaking the Ink Packs

Handling Media

Follow these guidelines as you handle or store media:

- Read and follow the guidelines provided with each type of media.
- Keep the media in its packaging until just before loading the roll in the product.
- Do not fold the media or otherwise damage its printable surface.
- Do not touch the printable surface. This prevents oil from your hands from causing print quality problems.
- When handling media, hold it by both edges, preferably while wearing cotton gloves.
- Do not carry media with the surface pressed against your clothing.
- Keep the media dry and avoid storage locations subject to direct sunlight, excessive heat, and high humidity.
- Retain the media packaging materials so you can use it to store unused media.
- After printing, do not touch, rub, or scratch the printed surface to avoid removing the ink.
- Dry printed media completely before folding or stacking it, or the printed surface may be damaged.
- Keep printed media out of direct sunlight.
- Display and store printed media as instructed in the media documentation.
- When you are not printing on media, remove it from the printer and place it in its original packaging to prevent deterioration.

Parent topic: Printer Usage Guidelines

Related topics

Removing Printed Media

Storing Your Printer

Follow these guidelines if you need to store your printer for a long period:

- If the printer is not going to be used for an extended period of time with the power off, wash the print heads with cleaning packs (not included) and perform pre-storage maintenance. If you are unable to

wash the print heads with cleaning packs and perform pre-storage maintenance, turn on the printer at least once every seven days to automatically clean the print head and prevent the nozzles from clogging.

- Remove any loaded media before storing the printer to prevent the pressure rollers from causing creases in the media, which may cause jams or damage to the print head.
- Make sure that the print head is in the home position before storing the printer. If it is left away from the home position for a long time, the print quality may decline.
- Close all the covers on the printer to prevent dust and debris from getting in. If the printer will be not be used for an extended period of time, protect it with an anti-static cloth or other cover. The print head nozzles can become clogged if fine dust gets on the print head, and you may not be able to print properly.
- Store the printer on a level surface; do not store it on angle, on its end, or upside down.

Parent topic: Printer Usage Guidelines

Related references

Where to Get Help

Related topics

Removing Printed Media

Media Handling

See these sections to load and handle media on your product.


Media Handling Precautions
Loading Media
Using the Auto Take-up Reel
Viewing and Changing Media Settings
Removing Printed Media
Daily Tasks to Perform Before You Print
Saving Sets of Media Settings
Tasks You Can Perform While Printing
Printable Area and Media Size Checking
Print Start Positions
Adjusting Media Feed and Head Alignment

Media Handling Precautions


Follow these guidelines as you load media in your product and remove printed media.

- Be careful when you touch the after heater and media edge plates; they may be hot and could burn you.
- Take care not to trap your fingers when opening and closing the front cover.
- Do not rub your hands along the edges of the media; the sharp edges could cut you.
- Media is very heavy, so use at least two people to carry the rolls.
- Load media just before printing on it to avoid creases from the pressure rollers; creases may cause jams or cause the media to rub against the print head.

- Do not place unwrapped media directly on the floor or press it against your clothing to avoid damaging the media surface.

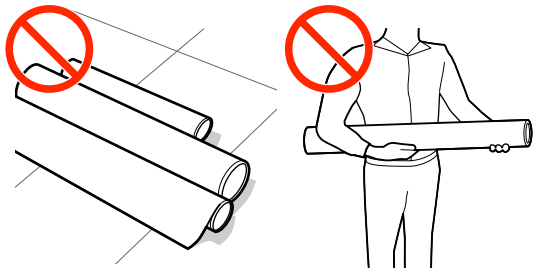

- Place unused media is its original packaging for storage.
- Do not load media if the edges are uneven on the roll; this could cause feeding problems. Rewind the media on the roll or use a different roll.

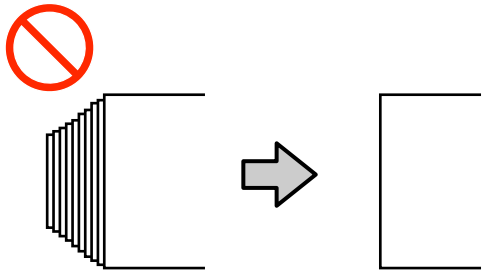

Parent topic: Media Handling


Loading Media

Before loading media in your printer, review and follow the media handling guidelines for the best results. To remove media, follow the steps in this section in reverse.


Caution: Wait until just before printing to load media. This avoids creases in the media that may be caused by the pressure rollers. Creased, wavy, or curled media could cause it to jam inside the printer or contact the print head.

1. Press the ⏻ power button and wait until you see this message on the LCD screen: **Load media**.


2. Open the front cover and raise the media loading lever.

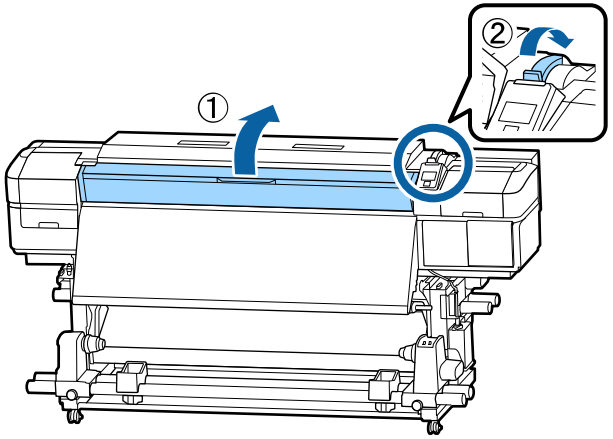


3. Grasp the tabs on the media edge plates and slide them out of the way.

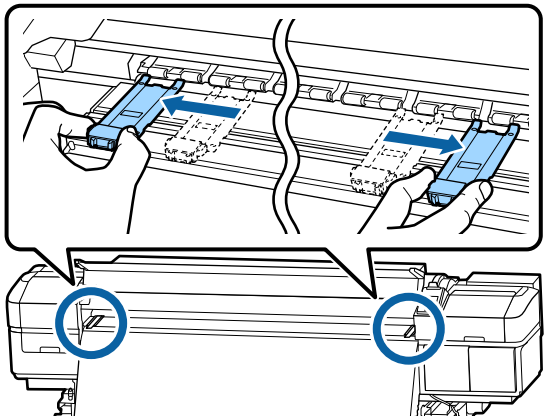


4. On the back of the product, loosen the knob for the right roll holder and slide out the roll holder wider than your media width.

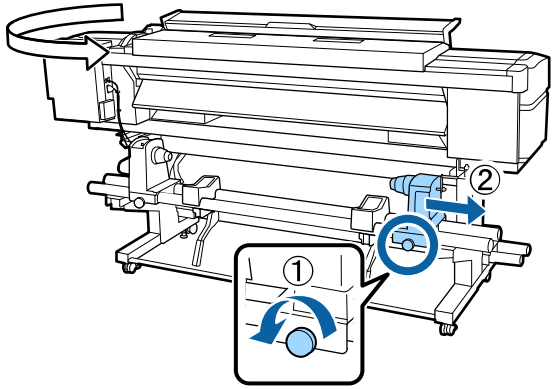


Note: If the right roll holder handle shaft is not visible, rotate the handle counterclockwise until it stops or the media cannot load properly.

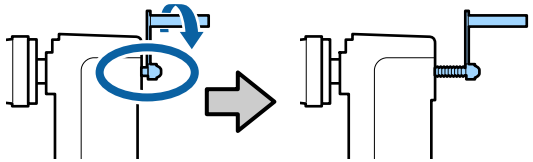


5. Slide the left roll holder to the core size for the media you are loading.

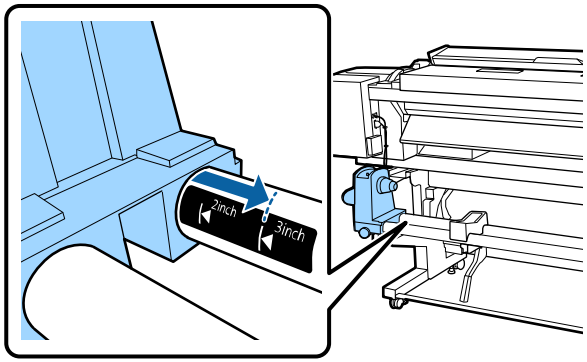

6. Fully tighten the knob on the left roll holder.

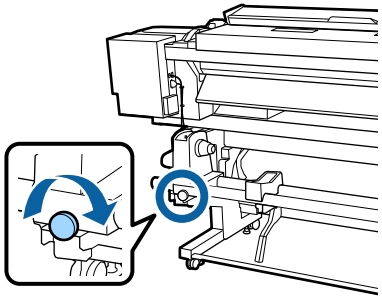


7. Place your media on the roll supports.

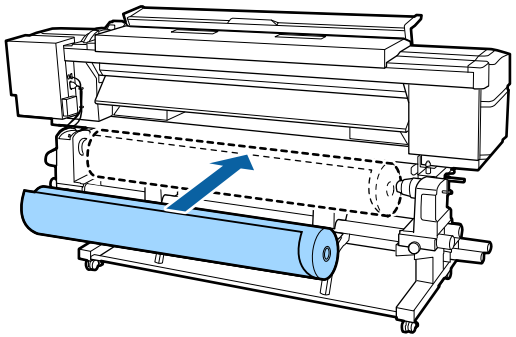


Note: Load the roll based on the printable side of your media.


Printable side out

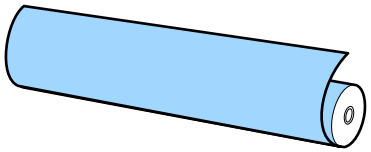


Printable side in

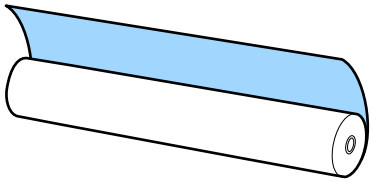

8. On the left side of the product, raise the lift lever to lift the media into position.

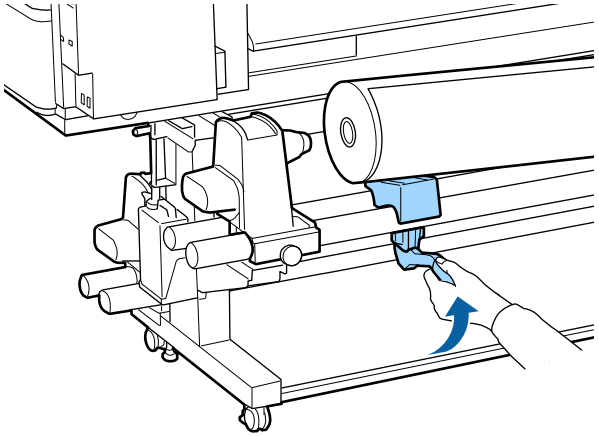


9. Firmly insert the roll media onto the left roll holder, then lower the lift lever.

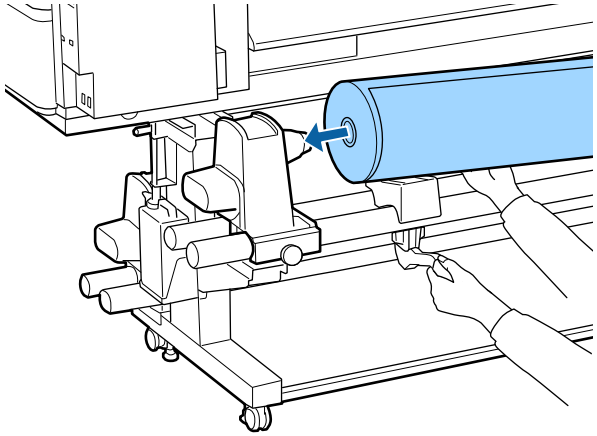


Note: If the outer diameter of the roll media is less than 5.5 inches (140 mm), you need to manually lift the roll media onto the roll holder.


10. On the right side of the product, raise the lift lever to lift the media into position.

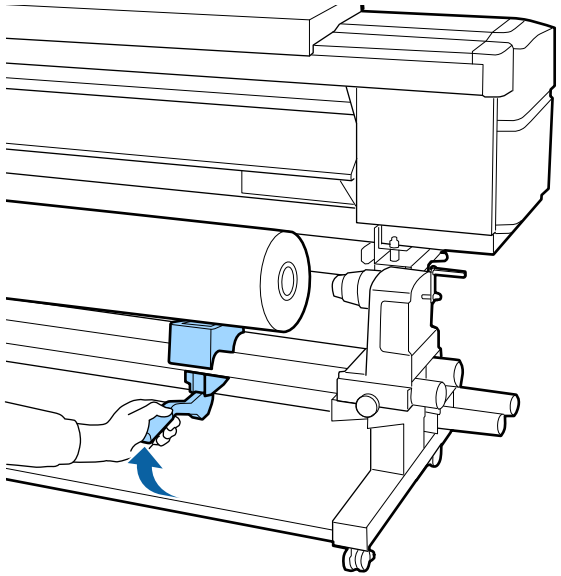

11. Push the right roll holder into the roll media, then lower the lift lever.

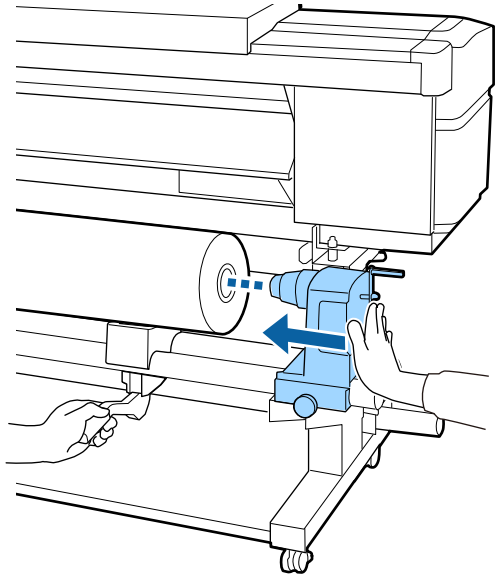


12. Push the center of the roll holder twice to securely insert it into the roll core.

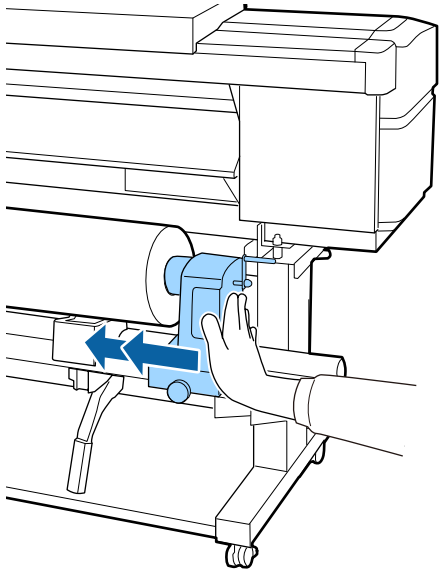


Note: Make sure the roll holder is fully inserted into the roll core or media may not feed correctly and slip during printing, or cause banding in your printouts.


13. Fully tighten the knob on the roll holder.

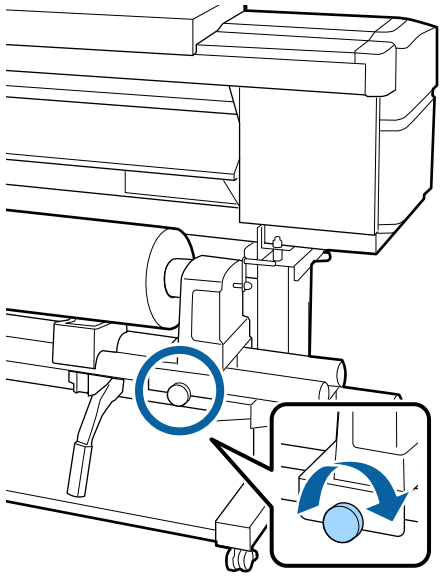


14. Rotate the roll holder handle clockwise until part A shown here is hidden from view, then stop turning the handle.

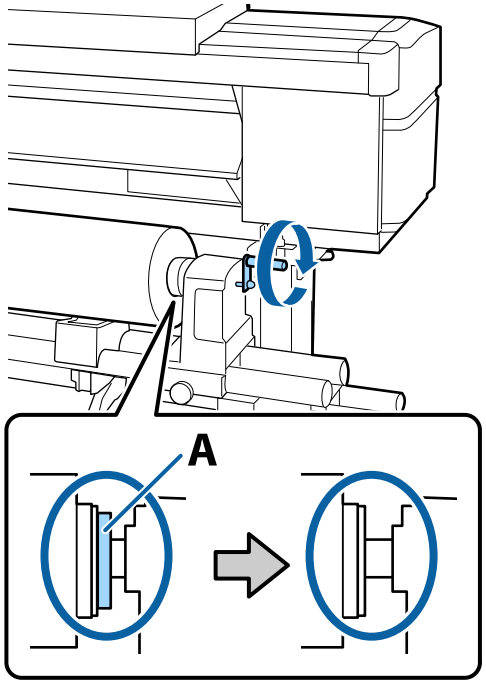


15. Insert your media approximately 12 inches (30 cm) into the opening shown here and lower the media loading lever.

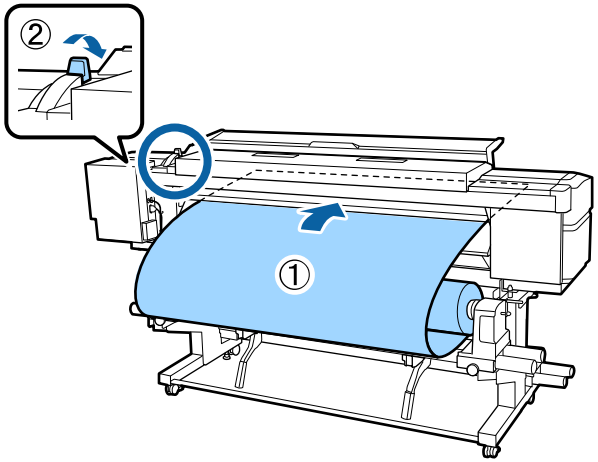


16. At the front of the printer, hold the media in the center and raise the media loading lever.

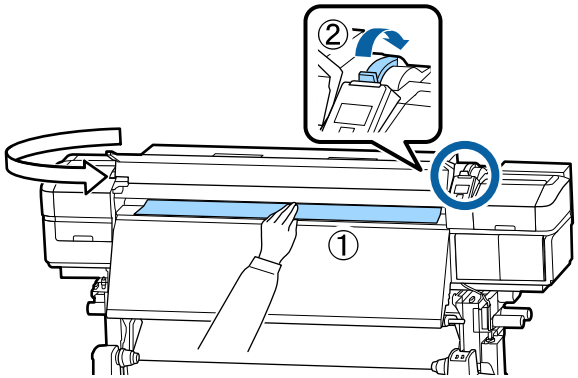


17. Pull the media straight out until it is aligned with the bottom edge of the label on the after heater.

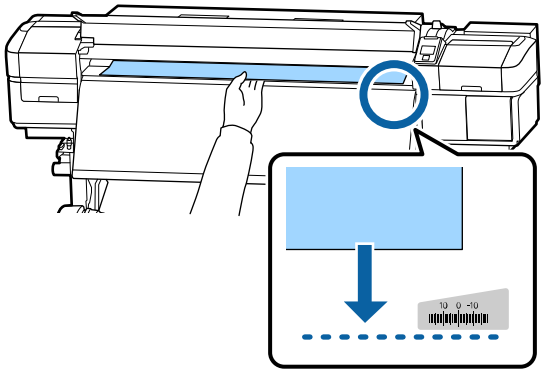


Note: Do not use two hands to pull the media to avoid skewing its position.

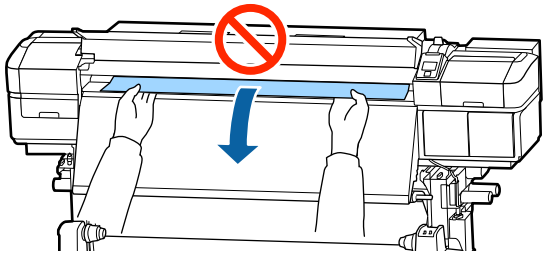


18. At the back of the printer, lower the media loading lever to hold the media in place.

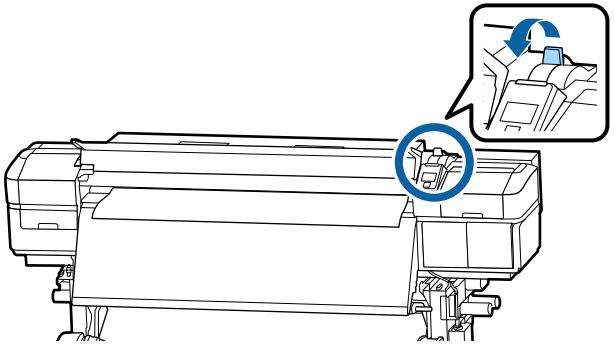

19. Lightly tap both ends of the media and check if there is a difference in tension between the left and right sides. If there is a difference in tension, raise the media loading lever, adjust the looseness of the media, and lower the media loading lever.

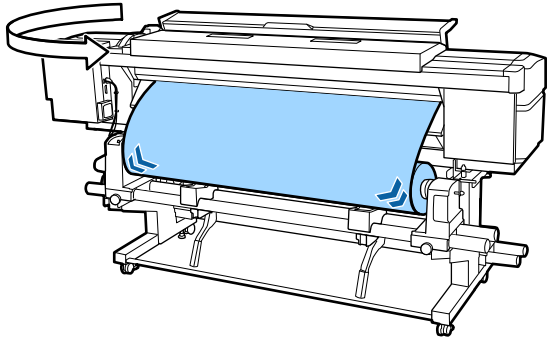


20. Slide the media edge plates against the media and adjust them so that the round holes shown here are centered over the edges of the media.

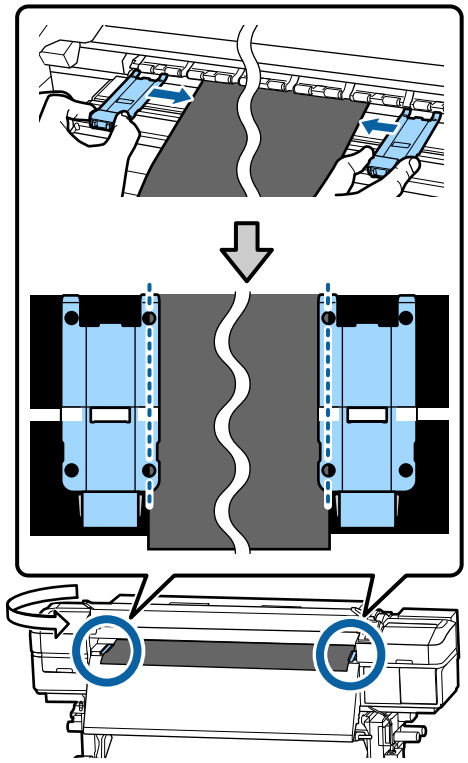

Caution: If your media is more than 0.02 inch (0.4 mm) thick, leave the media edge plates on the sides of the product or they could damage the print head.

Note: Make sure to correctly position the media edge plates as shown here or your printouts may contain banding, uneven tint, or stripes. Do not use the media edge plates if the sides of your printouts are smudged or torn.

21. Close the front cover.

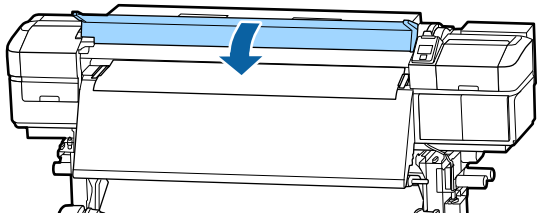

Parent topic: Media Handling

Related references

Media Handling Precautions

Using the Auto Take-up Reel

See these sections to use the auto take-up reel with your product.

About the Auto Take-up Reel

Attaching the Take-up Roll Core to the Auto Take-up Reel

Take Up with the Printable-Side-In


Take Up with the Printable-Side-Out

Parent topic: Media Handling

About the Auto Take-up Reel

The auto take-up reel automatically rolls up printed media as you print.

You can use the auto take-up reel for media with the printable side out or printable side in.

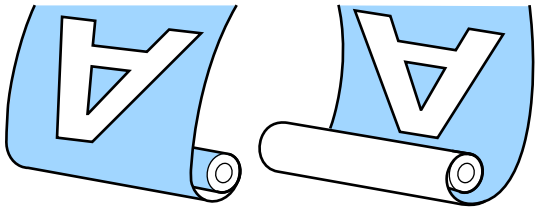

It is best to do the following when using the auto take-up reel:


- Use a take-up roll core that is longer than the width of your media so the media is taken up without protruding from the core.
- Use the supplied paper tape or any commercially available tape to attach your media to the roll core.

Parent topic: Using the Auto Take-up Reel

Attaching the Take-up Roll Core to the Auto Take-up Reel


Use a take-up roll core that is longer than the width of your media so the media is taken up without protruding from the core.

1. Press and hold the down arrow button until the edge of the loaded media reaches the center of the after heater.

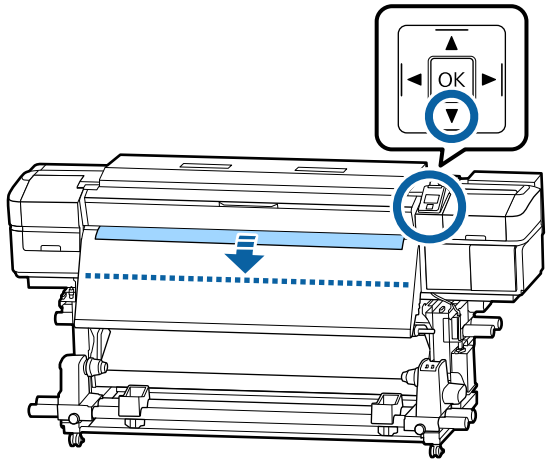


Note: Always press the down arrow button to feed media. If you pull the media with your hand, it may twist during take-up.


2. Loosen the roll core holder knobs on the auto take-up reel and slide the core holders apart. Then center the roll supports between the roll core holders.

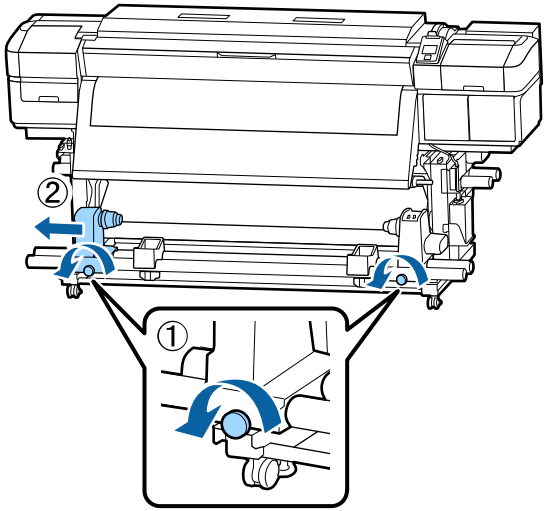


3. Align the right roll core holder with the right edge of the media and tighten the knob.

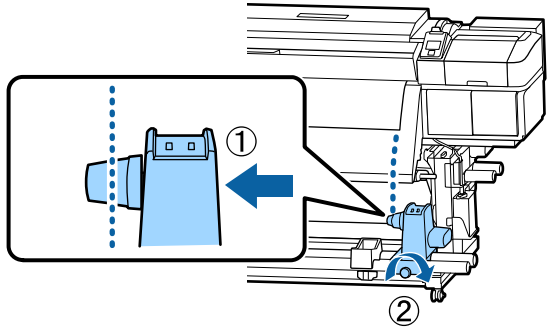

4. Insert the roll core into the right roll core holder.

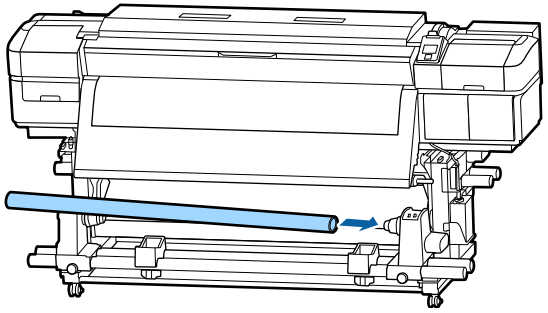


5. Push in the left roll holder until part A is fully inserted into the roll core, then tighten the knob.

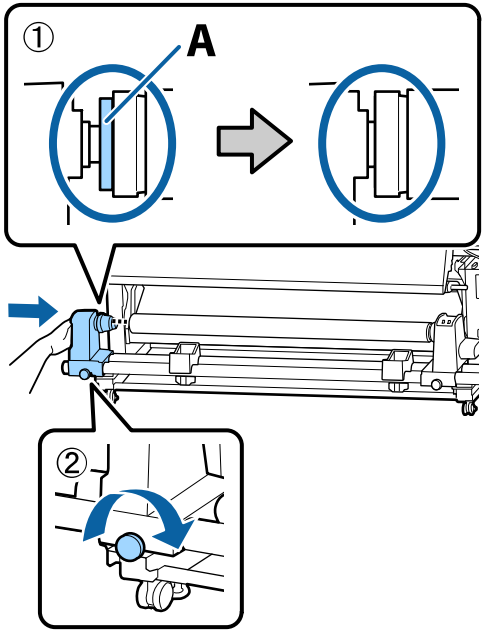

Caution: Once part A is hidden, do not push the roll holder any further or you may damage the roll core holder.

6. Trim the left and right corners of the media, leaving a straight section at the center about 4 to 8 inches (10 to 20 cm) wide.

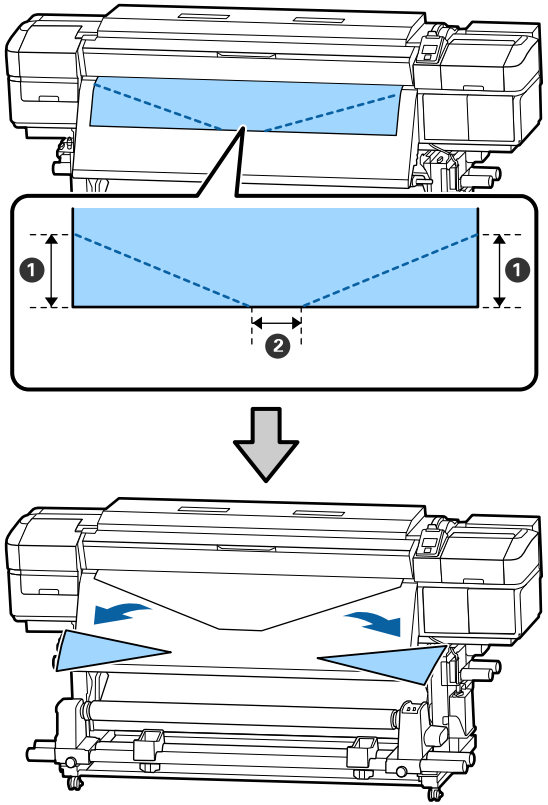

1 10 inches (25 cm)

2 4 to 8 inches (10 to 20 cm)

Parent topic: Using the Auto Take-up Reel


Related tasks

Take Up with the Printable-Side-In


Take Up with the Printable-Side-Out

Take Up with the Printable-Side-In

After attaching the roll core on the auto take-up reel, follow these steps to take up media with the printable side in.

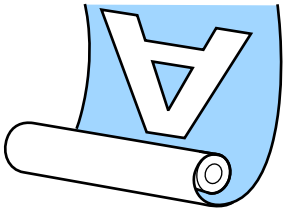


1. Cut a strip about 27.6 inches (70 cm) long from the included paper tape and attach one end to the center of the media using adhesive tape.

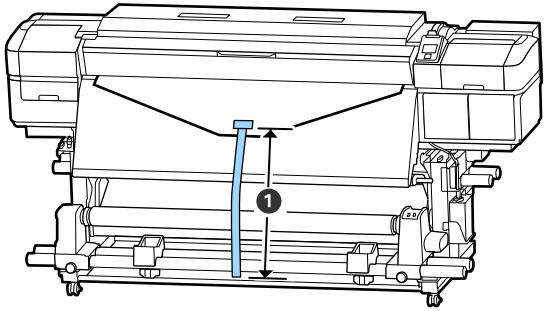


1 27.6 inches (70 cm)

Note: You can also use commercially available tape or strips cut from media to attach your media to the roll core. The paper tape or cut media strip should be about 0.8 to 1 inch (20 to 25 mm) wide and 27.6 inches (70 cm) long.


2. Pull the other end of the tape straight down behind the roll core and attach it using adhesive tape as shown.

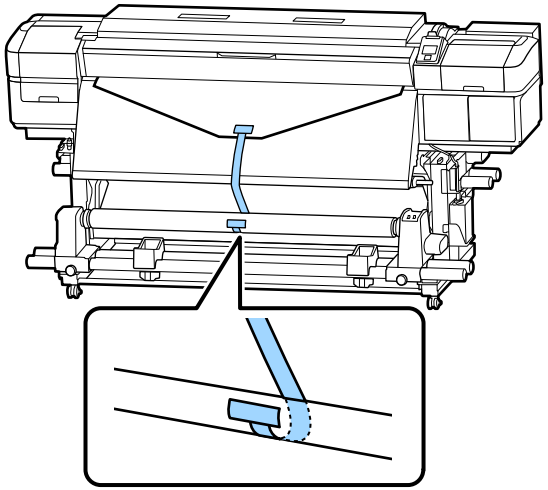

3. Set the **Auto** switch to the position.

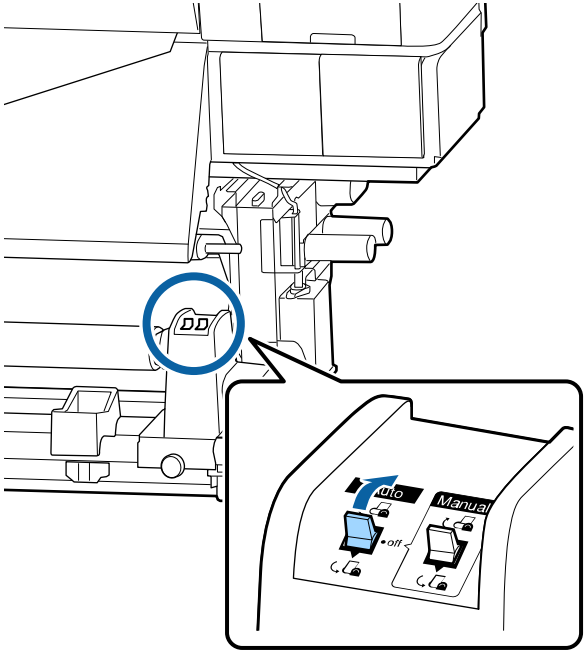

4. Lower the tension bar until it lightly touches the paper tape.

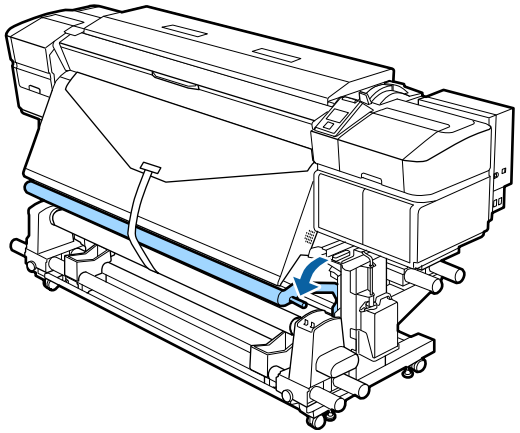


Note: Make sure the media is taut; otherwise it may not be taken up correctly.


Parent topic: Using the Auto Take-up Reel

Take Up with the Printable-Side-Out

After attaching the roll core on the auto take-up reel, follow these steps to take up media with the printable side out.

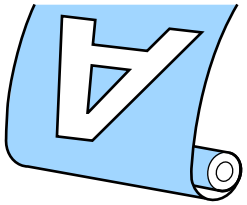


1. Cut a strip about 27.6 inches (70 cm) long from the included paper tape and attach one end to the center of the media using adhesive tape.

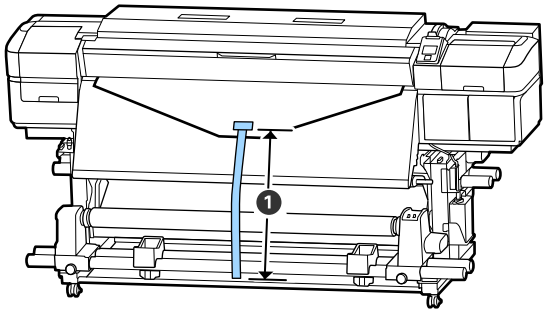


1 27.6 inches (70 cm)

Note: You can also use commercially available tape or strips cut from media to attach your media to the roll core. The paper tape or cut media strip should be about 0.8 to 1 inch (20 to 25 mm) wide and 27.6 inches (70 cm) long.


2. Pull the other end of the tape straight down over the roll core and attach it using adhesive tape as shown.

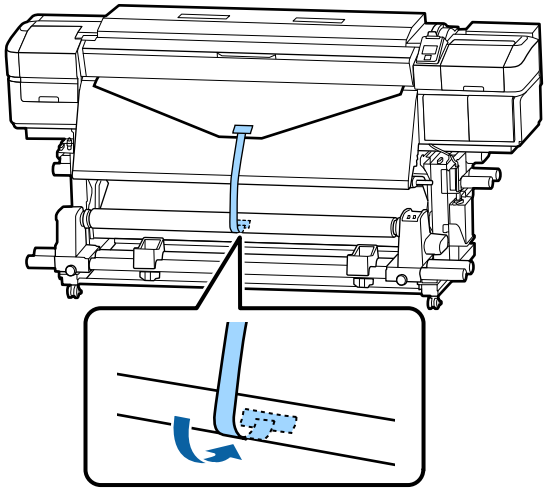

3. Set the **Auto** switch to the position.

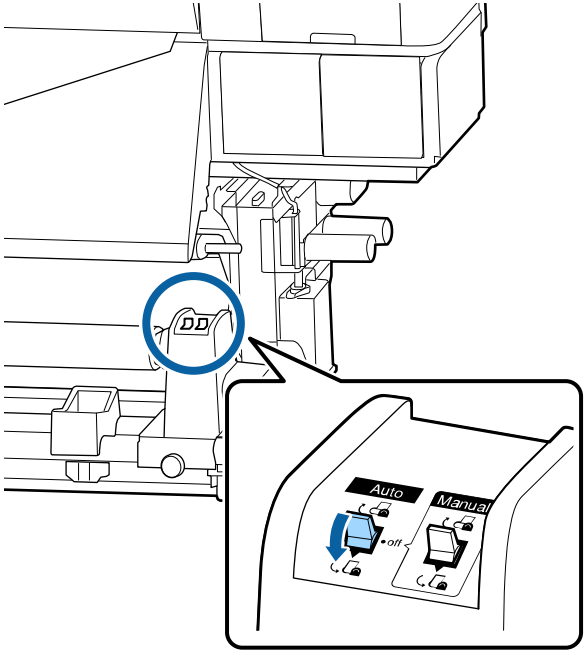

4. Lower the tension bar until it lightly touches the paper tape.

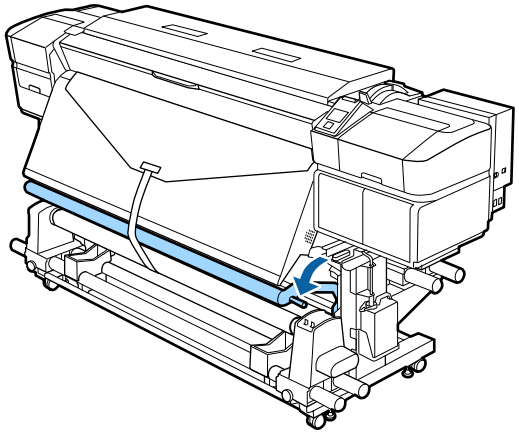


Note: Make sure the media is taut; otherwise it may not be taken up correctly.

Parent topic: Using the Auto Take-up Reel


Viewing and Changing Media Settings

After you load media in your product, you can select your saved media settings on the product control panel.


1. Press the up or down button to select the media setting number for the media you loaded and press the **OK** button.

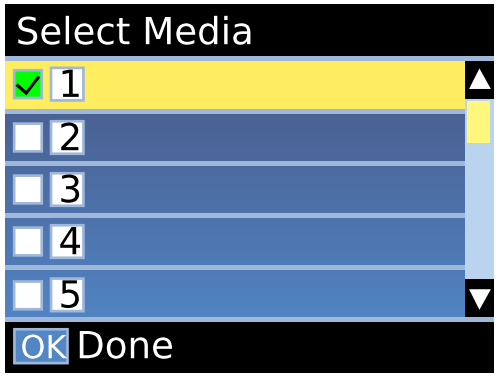

2. Press the up or down button to select the roll type you loaded and press the **OK** button.

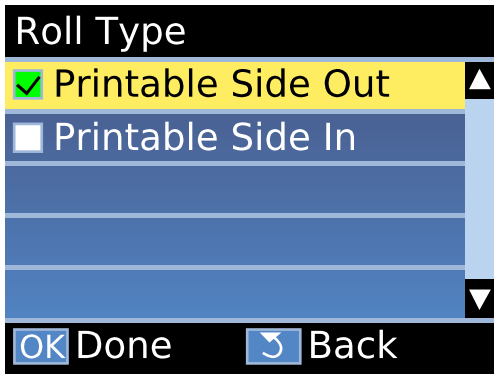

3. Press the up or down button to select the length of the roll you loaded and press the **OK** button.

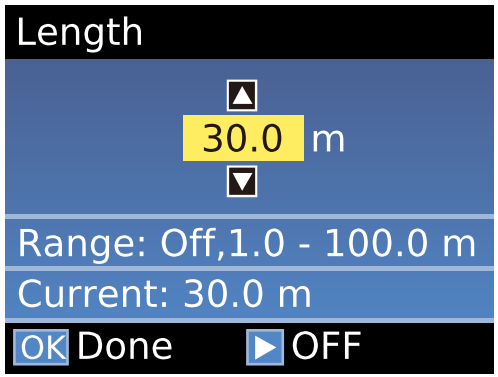

If you turned on the **Remaining Setting** setting, you see a prompt to enter the length of the current media.

Parent topic: Media Handling

Related references

Media Setup Menu Settings

Related tasks

Saving Sets of Media Settings

Removing Printed Media

See these sections to remove the printed roll from your product.

Printing the Amount of Media Remaining

Cutting Media

Removing Media From the Auto Take-up Reel

Parent topic: Media Handling

Related references

Used Parts Disposal Guidelines

Printing the Amount of Media Remaining

After you print, you can print the amount of media remaining on the leading edge of the remaining roll. This lets you enter the number the next time you load the media for the most accurate accounting of the media remaining on each roll

Note: You must have turned on the **Remaining Setup** setting on the product control panel to calculate the amount of media remaining.

1. Make sure your product is ready to print.
2. Press the media setup button, select **Media Remaining** in the displayed menu, and press the **OK** button.
3. Select **Print Remaining Length** and press the **OK** button.
4. Press the **OK** button to print the amount of media remaining.

Parent topic: Removing Printed Media

Related references

Media Setup Menu Settings


Cutting Media

When you finish printing, use a commercially available cutter to cut the media.

Warning: Be careful not to cut yourself when using cutters or other sharp blades. Also be careful touching areas near the after heater since the after heater may be hot and you could be burned.

1. Press the media setup button.


2. Select **Feed To Cut Position** and press the **OK** button.

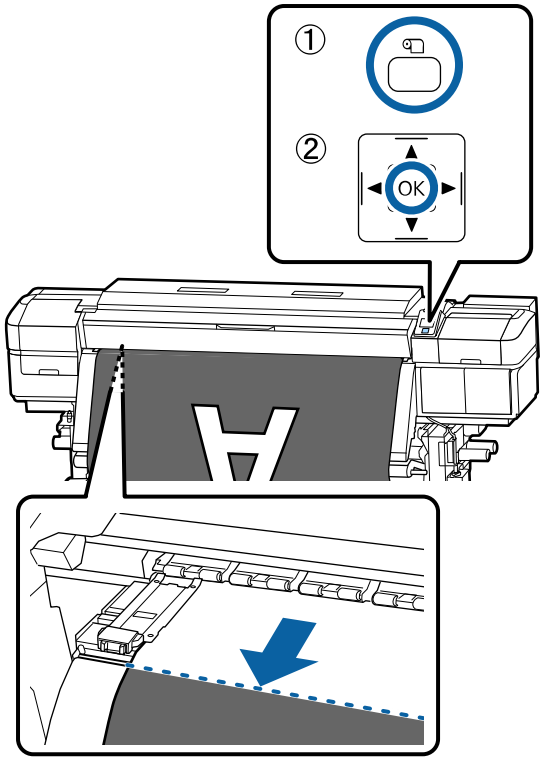


The printer feeds the media to the cutting position (cutter groove).

Note: If you printed the amount of media remaining onto your media, press the up arrow button to rewind the media as necessary to keep this information with the unprinted roll.

3. If you are using the auto take-up reel, raise the tension bar.

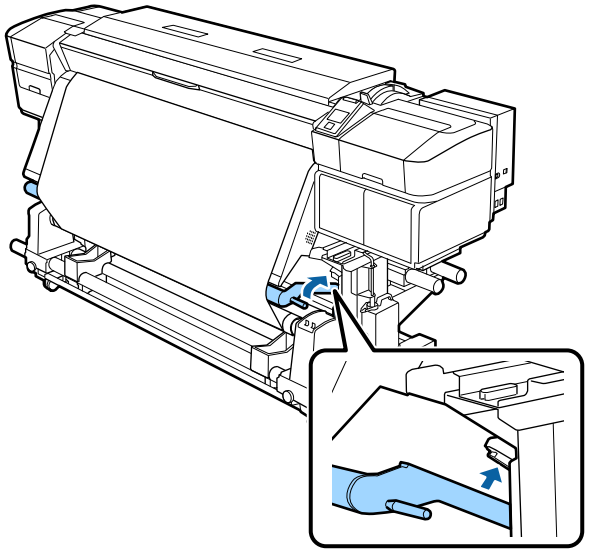


4. Use your cutting tool to cut the media along the cutting groove.

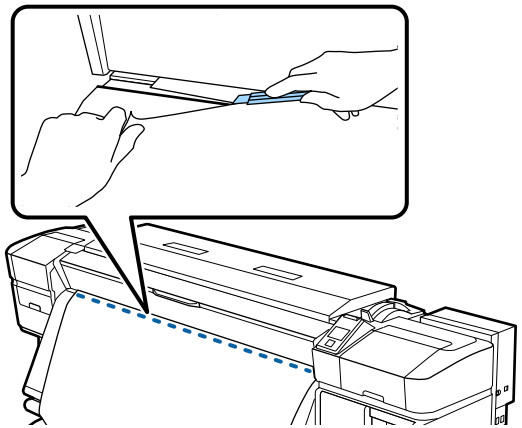

Warning: Do not place your fingers in the path of the cutting tool to avoid injuring yourself.

5. Do one of the following:
   - If you are not using the auto take-up reel, skip the remaining step.
   - If you are using the auto take-up reel, go to the next step.
6. Set the **Auto** switch to **off**, then set the **Manual** switch to take up the cut media onto the take-up reel, depending on the printable side of the media:
   - Move the switch to the position for printable-side-out media.
   - Move the switch to the position for printable-side-in media.

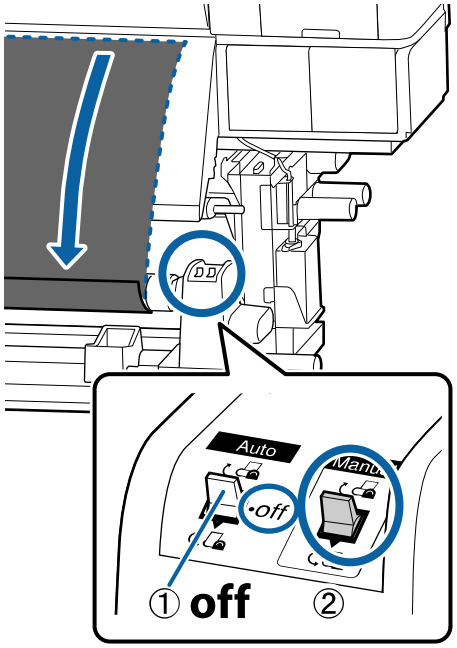


Parent topic: Removing Printed Media


Removing Media From the Auto Take-up Reel

After printing on media loaded on the auto take-up reel, follow these steps to remove it.


1. While supporting the left side of the media roll, loosen the left roll core holder knob and remove the roll core holder from the roll.

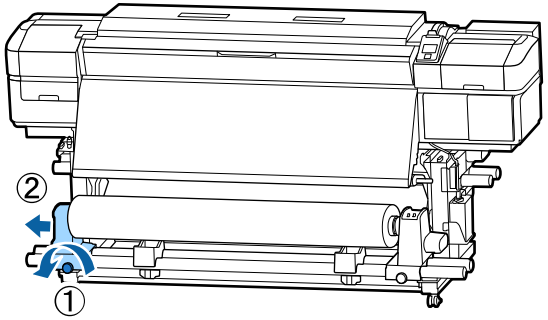


2. Lower the media roll onto the roll support.

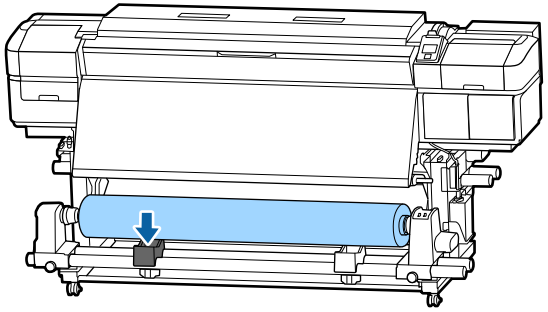

3. While supporting the right side of the media roll, loosen the right roll core holder knob and remove the roll core holder from the roll.

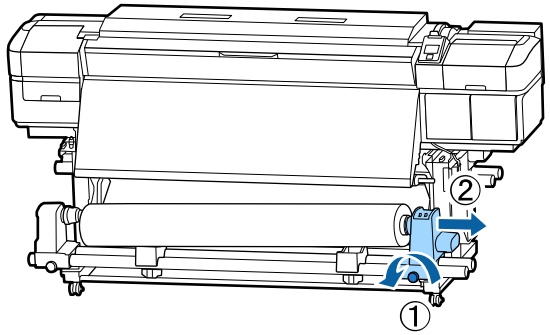

4. Lower the media roll onto the roll support.

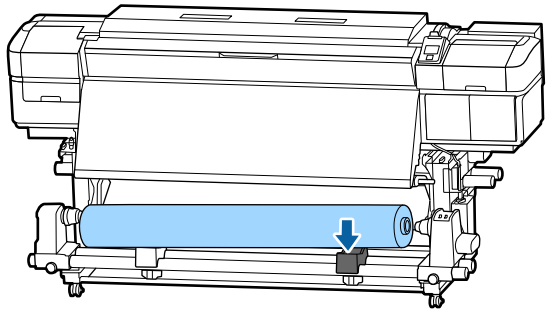

Parent topic: Removing Printed Media

Daily Tasks to Perform Before You Print

Perform these tasks before you start to print each day:

- **Check the amount of ink remaining**: If an ink pack is expended while printing, you can resume printing once the expended ink pack is replaced. However, you may notice a color difference in your printouts if you switch ink packs in the middle of a print job. For large print jobs, we recommend that you replace the low ink packs before printing for optimal output. The low ink packs you removed can be reinserted and used at a later date.

- **Shake the White or Metallic Silver ink pack** (SC-S80600L only): If you selected **10 Color Mode (WH)** or **10 Color Mode (MS)** for the **Change Color Mode** setting in the Maintenance menu, be sure to remove and shake the White or Metallic Silver ink pack to prevent sedimentation.
- **Print a nozzle check pattern**: Print a nozzle check pattern to check for clogged nozzles. If any nozzles are clogged, clean the print head.

Parent topic: Media Handling

Related concepts

Print Head Maintenance

Related references

Printer Status Menu Settings

Maintenance Menu Settings

Related tasks

Shaking the Ink Packs

Saving Sets of Media Settings

You can use the product's control panel to store numbered sets of media settings for each media type you use. This lets you quickly select all the necessary settings whenever you print on that media type.

Note: You can also use the Epson Edge Dashboard to save media settings. (You can download the Epson Edge Dashboard from the Epson support website.)

1. Press the **Menu** button.

   You see the Media Setup menu on the product LCD screen.
2. Select **Media Setup** and press the **OK** button.
3. Press the up or down button to select **Easy Media Setup** and press the **OK** button.
4. Press the up or down button to select the desired media number and press the **OK** button.


   Note: If you select a number with settings already saved to it, the existing settings are overwritten.
5. Enter a name for the media setting and press the **OK** button.
6. Press the up or down button to select the media type you loaded and press the **OK** button.

   Note: If you select **Textile**, you need approximately 30.3 inches (770 mm) of media to print the first adjustment pattern (feed adjustment).


7. Do one of the following:
   - If you want the product to automatically perform feed adjustment and head alignment, select **Auto**, press the **OK** button, and skip the remaining steps.

     Note: This option is not available when **Film**, **Canvas**, **Textile**, or **Paper/Others** is selected for the **Media Type** setting.


   - If you want to manually perform feed adjustment and head alignment, select **Manual**, press the **OK** button, and continue with the next step.
8. Do one of the following depending on the adjustment pattern that prints:
   - If you see a pattern similar to the following, check the pattern for group A and B and identify the pattern with the least amount of overlap or gap for each group. Press the up or down arrow button to select the value for the pattern you identified from group A (for example, **0.0%**) and press the **OK** button. Press the up or down arrow button to select the value for the pattern you identified from group B and press the **OK** button.

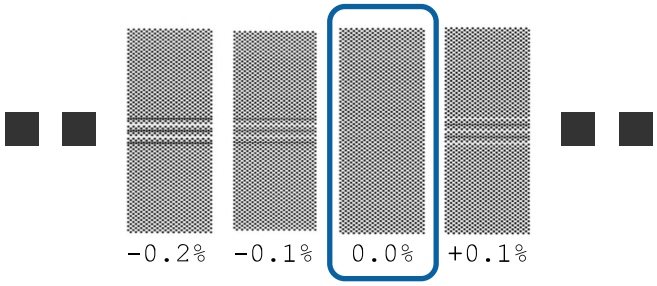

Note: If you cannot decide between two patterns, select a value halfway between the two patterns. For example, select **–0.05%** if your adjustment pattern looked like the following:

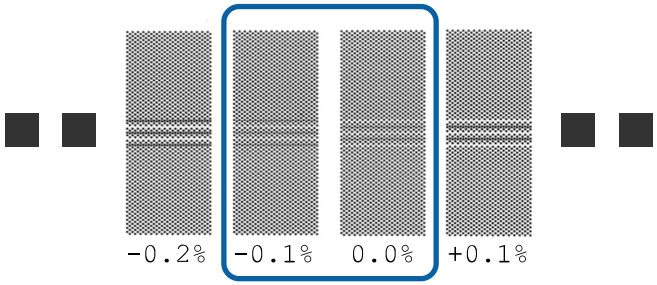


- If you see a pattern similar to the following, measure the distance between the **+** symbols in millimeters. Select the distance you measured on the control panel and press the **OK** button.

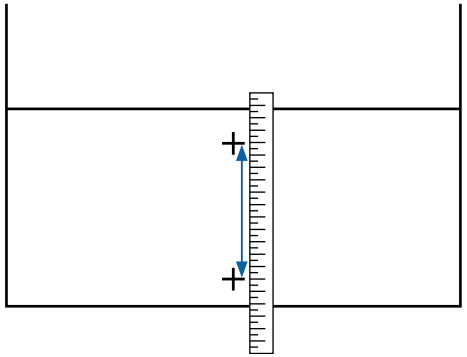

The product prints a new adjustment pattern.

9. Check the printed patterns and identify the pattern with the least amount of gap between the lines in each group.

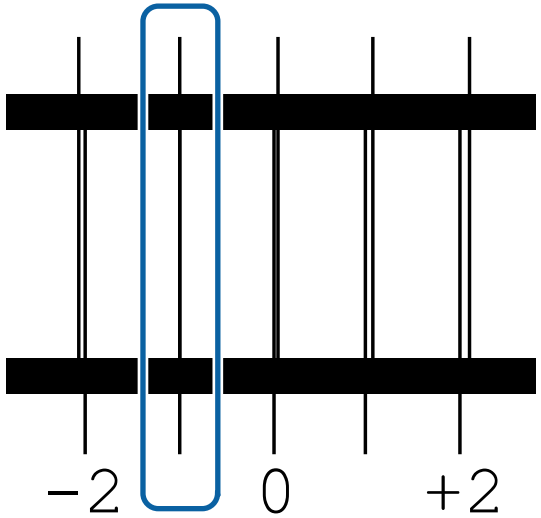

10. Press the up or down arrow button to select the value you identified in the previous step (for example, **-1**) and press the **OK** button. Repeat for each group.

Parent topic: Media Handling

Related references

Media Setup Menu Settings

Related tasks

Loading Media

Tasks You Can Perform While Printing

See these sections for tasks you can perform while printing.

Checking Consumable Status During Printing
Adjusting Heating and Drying During Printing
Correcting Banding Issues During Printing

Parent topic: Media Handling

Checking Consumable Status During Printing

You can check the status of your printer's consumables (remaining ink level, waste ink bottle level, and remaining wiper unit life) during printing.

1. During printing, press the **Menu** button.
2. Press the up or down arrow button to select **Printer Status** and press the **OK** button.
3. Press the up or down arrow button to select the consumable for which you want to check the status and press the **OK** button.
4. Press the **OK** button when you are done.

Parent topic: Tasks You Can Perform While Printing

Adjusting Heating and Drying During Printing

You can adjust the heating and drying settings during printing.

Note: If the room temperature is too low and you send a print job with high ink density or a small number of print passes, the print job may pause while the heater warms up.

1. During printing, press the heat/dry menu button.
2. Press the up or down arrow button to select one of the following settings and press the **OK** button:
   - **Heater Temperature**: Press the left or right arrow button to select a heater, and press the up or down arrow button to set the temperature.
   - **Additional Dryer**: Press the up or down arrow button to select and change the settings.
3. Press the **OK** button when you are done.

Parent topic: Tasks You Can Perform While Printing

Correcting Banding Issues During Printing

You can correct banding issues during printing.

1. During printing, press the media setup button.

   You see the current feed adjustment value on the LCD screen.
2. Do one of the following:
   - If black bands (dark stripes) appear in your printouts, press the up arrow button to increase the feed amount.

- If white bands (pale stripes) appear in your printouts, press the down arrow button to decrease the feed amount.

3. Check your printout for banding and repeat these steps as necessary.


Parent topic: Tasks You Can Perform While Printing

Printable Area and Media Size Checking

The left and right edges of media recognized by your product vary depending on the **Media Size Check** setting.

- When the **Media Size Check** setting is turned on, your product automatically detects the left and right edges of the media within 0.2 inch (5 mm), as long as the media edge plates are attached correctly.
- When the **Media Size Check** setting is turned off, your product uses the longest scale on the after heater label shown here as the standard position for the right edge of the media. The left edge of the media is determined to be 64 inches (1626 mm) from the standard position for the right edge, no matter the width of the loaded media. The printable area ranges for the media are described in the table here.

  Note: If you turn off the **Media Size Check** setting, printing may occur outside the edges of your media, causing ink to stain the product. Make sure your print data width does not exceed the loaded media width. When you load media to the left of the right side reference position, adjust the **Print Start Position** setting on the product control panel to match the position where the media is loaded.

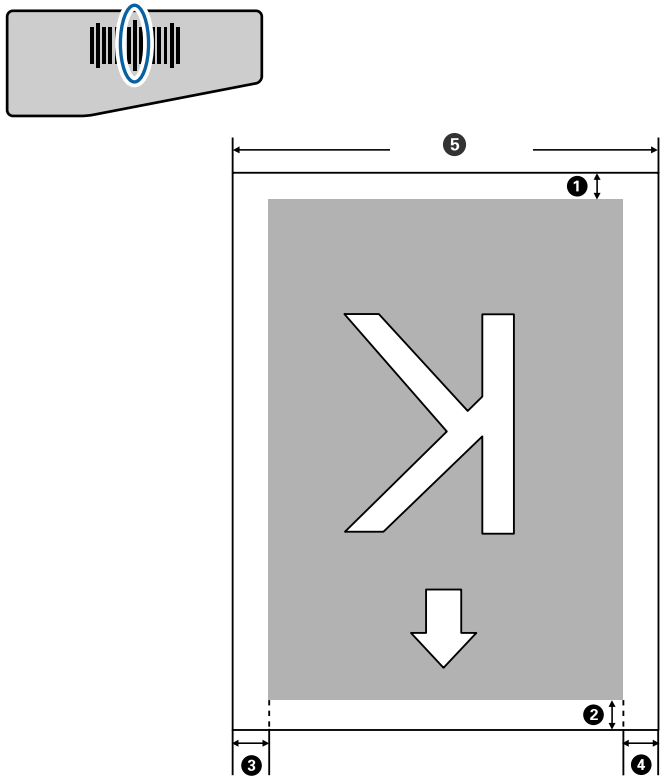

1	Bottom margin[1] You can configure this margin in the RIP software from 0.2 inch (5 mm) to 0.7 inch (17 mm); if you set it below 0.2 inch (5 mm) or above 0.7 inch (17 mm), it is changed to 0.2 inch (5 mm) and 0.7 inch (17 mm) respectively to maintain feeding accuracy.
2	Top margin[1] You can configure this margin in the RIP software to 0.2 inch (5 mm) and above; if you set it below 0.2 inch (5 mm), it is changed to 0.2 inch (5 mm) to maintain feeding accuracy. The margin differs depending on how far the media was pulled during loading.
3	Left margin[2], [3] You select this margin as the **Side Margin(Left)** setting on the product control panel. The default setting is 0.2 inch (5 mm), but you can select from 0.12 inch (3 mm) to 0.98 inch (25 mm).

4	Right margin[2], [3] You select this margin as the total of the values for the **Print Start Position** (default setting is 0) and **Side Margin(Right)** (default setting is 0.2 inch [5 mm]) settings on the product control panel. You can select from 0.12 inch (3 mm) to 32.5 inches (825 mm).
5	Media width 11.8 to 64 inches (300 mm to 1626 mm); if **Media Size Check** is off, the product assumes this is 64 inches (1626 mm) regardless of the actual width.

[1] The configured margin and the actual print results may differ depending on the RIP software you use. Contact the RIP manufacturer for more information.

[2] Depending on the RIP software, you may be able to use it to set these margins. Contact the RIP manufacturer for more information.

[3] When using the media edge plates, leave margins of at least 0.4 inch (10 mm) to avoid printing over the plates. If the total of the print data width and the left and right margins exceeds the printable area, a portion of the print data will not print.

Parent topic: Media Handling

Related references

Printer Setup Menu Settings


Print Start Positions

The print start positions determine where printing begins on the right and top sides of your media.

Right Side Print Start Position

The print start position for the right side of the media is dependent on the **Media Size Check** setting from the Printer Setup menu.

- When the **Media Size Check** setting is turned on, the print start position is approximately 0.4 inch (10 mm) from the right edge of the media when using the media edge plates, and 0.2 inch (5 mm) when not using the media edge plates.

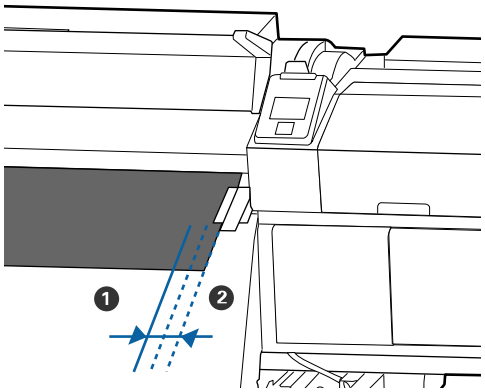


1 0.2 inch (5 mm)

2 0.2 inch (5 mm)


Note: You can adjust the print start position by changing the **Print Start Position** or **Side Margin (Right)** settings in the **Printer Setup** menu.

- When the **Media Size Check** setting is turned off, the print start position is indicated on the after heater.

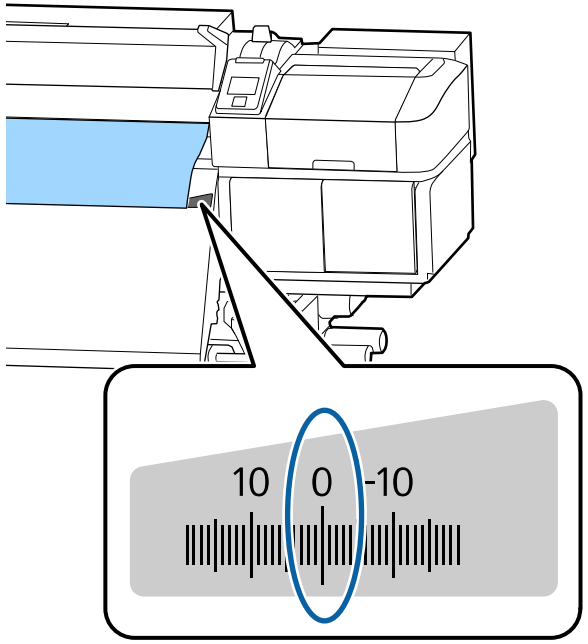

Top Print Start Position

The print start position of the leading edge of your media is approximately 3.6 inches (92 mm) from the cutter groove toward the inside of the printer as shown.

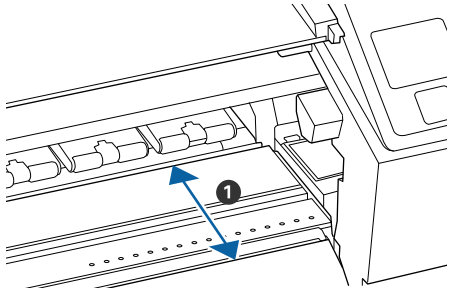

1 3.6 inches (92 mm)

Parent topic: Media Handling

Related references

Printer Setup Menu Settings

Adjusting Media Feed and Head Alignment

You can perform media feed and head alignment adjustments using the **Media Adjust** setting in the Media Setup menu. Use this setting only after trying both of the following to correct printout issues first:

- Select **Auto** for the **Media Adjust** setting during Easy Media Setup
- Adjust the Advanced Settings in the Media Setup menu

1. Set up your printer to use the same media type and print conditions you use for printing.
2. Press the **Menu** button.
3. Select **Media Setup** and press the **OK** button.
4. Press the up or down arrow button to select **Customize Settings** and press the **OK** button.
5. Press the up or down arrow button to select **Media Adjust** and press the **OK** button.
6. Do one of the following:
   - If you want the product to automatically perform feed adjustment and head alignment, select **Auto**, press the **OK** button, and skip the remaining steps.

     Note: You need approximately 10.6 inches (270 mm) of media to print the test pattern. This option is not available when **Film**, **Canvas**, **Textile**, or **Paper/Others** is selected for the **Media Type** setting.


   - If you want to manually perform feed adjustments and head alignment, select **Manual**, press the **OK** button, and continue with the next step.
7. To correct banding in your printouts, select **Feed Adjustment** and press the **OK** button.
8. Select one of the following:
   - **Standard**: Select this option for most media.

     Note: You need approximately 5.1 inches (130 mm) of media to print the test pattern. This option is not available when **Textile** is selected for the **Media Type** setting.


- **500mm Pattern**: Select this option when printing on uneven media (such as canvas) or on media that bleeds through easily (such as cloth) and accurate print adjustments are required.

  Note: You need approximately 30.3 inches (770 mm) of media to print the test pattern.


9. Press the **OK** button and wait for the adjustment pattern to finish printing.
10. Do one of the following depending on the type of adjustment pattern printed:
    - **Standard**: Check the pattern for group A and B and identify the pattern with the least amount of overlap or gap for each group. Press the up or down arrow button to select the value for the pattern you identified from group A (for example, **–0.0%**) and press the **OK** button. Press the up or down arrow button to select the value for the pattern you identified from group B and press the **OK** button.

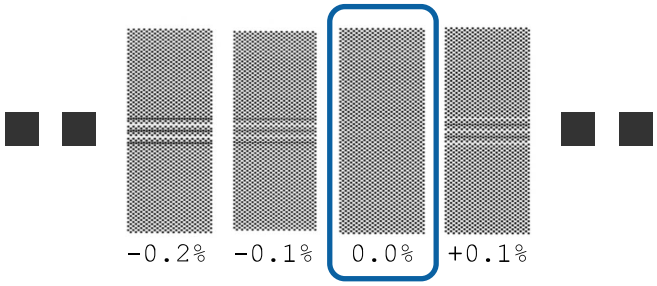

Note: If you cannot decide between two patterns, select a value halfway between the two patterns. For example, select **–0.05%** if your adjustment pattern looked like the following:

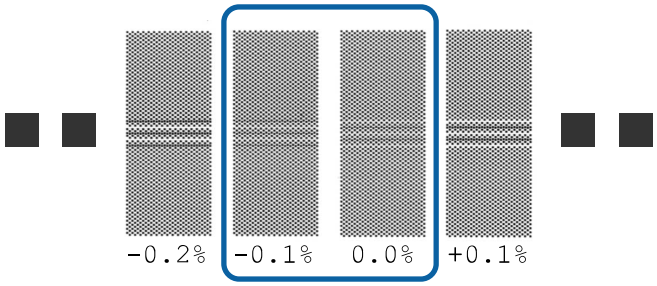

- **500mm Pattern**: Measure the distance between the **+** symbols in millimeters. Select the distance you measured on the control panel and press the **OK** button.

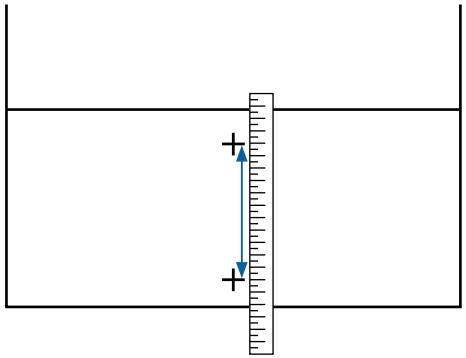


The home screen is displayed when feed adjustment is complete.

11. Press the **Menu** button and select **Media Setup** > **Customize Settings** > **Media Adjust** > **Manual** > **Head Alignment**.
12. Press the **OK** button to print the adjustment pattern.

    Wait for the pattern to finish printing.

13. Check the printed patterns and identify the pattern with the least amount of gap between the lines in each group.

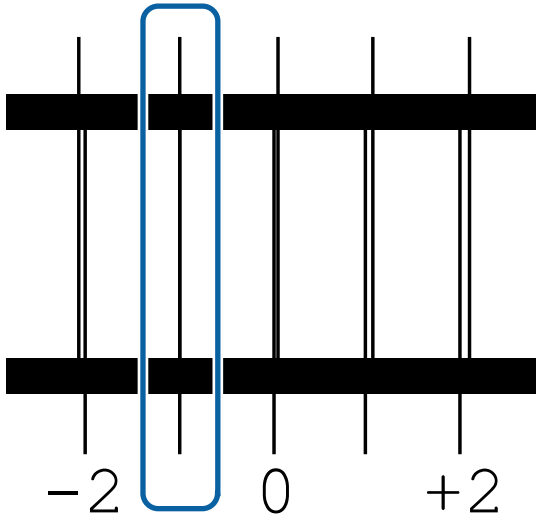

14. Press the up or down arrow button to select the value you identified in the previous step (for example, **–1**) and press the **OK** button. Repeat for each group.
15. Press the up or down arrow button to select the number of the media settings you selected for the currently loaded media. Then press the **OK** button.

    The Media Setup screen is displayed when head alignment is complete.

Parent topic: Media Handling

Using the Control Panel Menus

Follow the instructions in these sections to access the printer menu system and select settings.

Accessing the Printer's Menus
Media Setup Menu Settings
Printer Setup Menu Settings
Maintenance Menu Settings
Printer Status Menu Settings
Other Settings Menu Settings

Accessing the Printer's Menus

You can use the printer menus to adjust the settings that control how your product works.

1. Press the **Menu** button on the control panel.

   You see the menus on the LCD screen.
2. Press the up or down arrow button to scroll through the menus.

   Note: Press the ↺ back button to go back.
3. To change settings in the highlighted menu, press the **OK** button.
4. Press the up or down arrow button to move through the settings. Press the right or left arrow button to position the cursor when entering data on the screen.
5. To select a setting, press the **OK** button.
6. When you finish changing settings on a menu, press the ⏸/🗑 pause/cancel button to return to the main screen.

Parent topic: Using the Control Panel Menus

Media Setup Menu Settings

Settings on the Media Setup menu let you customize various adjustments for media types. You can access the menu directly by pressing the media setup button.

Caution: Follow the instructions in the topic links below the tables to use these menu settings correctly.

Setting	Options	Description
Feed To Cut Position	—	Sends the end of your printout to the cutting groove.
Easy Media Setup	—	Set and save a variety of settings quickly and easily based on the loaded media type.
Media Remaining	**Print Remaining Length**	Prints the amount of media remaining on the current roll.
	Length	Enter the total roll length, from 3 to 328 ft (1 to 100 m).
	Remaining Alert	Enter the length at which the printer will alert you, from 4 to 50 ft (1 to 15 m).
Customize Settings	**Current Settings**	Changes settings for the currently selected media; see the next table.
	1 to **30**	Changes settings for a saved media set; see the next table.
Select Media	**1** to **30**	Select a set of saved media settings to use for printing.

Customize Settings options

Setting	Options	Description
Setting Name	—	Enter a name up to 22 characters for the saved media settings.
Media Type	**Adhesive Vinyl**	Select the media type you loaded.
	Banner	
	Film	
	Canvas	
	Textile	
	Paper/Others	

Setting	Options	Description
Media Adjust	**Auto**	Performs media feed and head alignment adjustments. Use this setting only after trying the following to correct printout issues first: • Select **Auto** for the **Media Adjust** setting during Easy Media Setup • Adjust the Advanced Settings **Auto** is not displayed when **Film**, **Canvas**, **Textile**, or **Paper/Others** is selected as the **Media Type** setting.
	Manual	
Advanced Settings	—	See the next table.
Restore Settings	**Yes**	Returns all settings for the selected custom paper to their default values.
	No	

Advanced Settings options

Setting	Option	Description
Platen Gap	**1.6**	Adjusts the gap between the media and the print head. Select **1.6** (default) for most media. Select **2.0** if your printouts are scratched or smudged. Select **2.5** if printouts are still scratched or smudged after selecting **2.0**. **Caution:** Choosing a larger **Platen Gap** setting than necessary can cause ink stains inside the printer, reduce print quality, or shorten product life.
	2.0	
	2.5	

Setting	Option	Description
Heating & Drying	**Heater Temperature**	Adjusts the temperature for the pre-heater, platen heater, and after heater.
	Drying Time Per Pass	Adjusts the time the print head pauses after each pass. Increase the drying time if the your printouts are blurry.
	After Heater Feed	Feeds media to the after heater after printing. Select **Mode 1** if you plan to cut the media before the next job starts; the portion fed for drying will not be rewound before the next job starts. Select **Mode 2** if you plan to print multiple jobs consecutively; the portion fed for drying will be rewound before the next jobs starts. When cutting media using Mode 2, press and hold the up arrow button to rewind the end of your printout to the cutter grove before cutting.
	Additional Dryer	Enable or disable the print drying system if it is installed.
Media Tension	**Lv1**	Increase the media tension if creases appear in your printouts.
	Lv2	
	Lv3	
	Lv4	
Media Suction	**1** to **10**	Reduce the media suction if you are using thin or soft media and it feeds incorrectly, or your printouts are grainy or out of focus.
Head Movement	**Data Width**	Sets the range of print head movement. Select **Data Width** to increase the print speed by restricting movement to the printed area. Select **Printer Full Width** if you want more even print results.
	Printer Full Width	

Setting	Option	Description
Multi Strike Printing	**Off** **1** to **8**	Select the number of times each line is printed. You may need to increase this setting when performing high-density printing using backlight films.
Feed Speed Limiter	**On** **Off**	Select **Off** for most situations to maintain print speeds. Select **On** if you are using thin media and it sticks, wrinkles, or tears easily during printing.
Pressure Roller Load	**Low** **Medium** **High**	Select **High** for most situations. Select **Medium** or **Low** if you notice wrinkling around the pressure rollers, stains from the print head striking the media, or stains from the roller sticking to the media.
Remove Skew	**On** **Off**	Lets you enable paper skew reduction. Select **On** for most situations. Select **Off** if your media shows traces from the rollers due to skew correction.
Take-Up	**Standard** **Strength tension**	Select **Standard** for most situations. Select **Strength tension** if the media cannot be taken up correctly because of problems such as waving or static. If the problem persists, use a low static media.
Periodic CL Cycle	**Auto** **Manual**	Select **Auto** to have the printer automatically perform head cleaning based on your selected media settings. Select **Manual** if you want to perform head cleaning based on a set length or number of pages printed.

Parent topic: Using the Control Panel Menus

Related tasks

Loading Media
Saving Sets of Media Settings

Printer Setup Menu Settings

The Printer Setup menu lets you control margin settings, automatic cleaning cycles, and other aspects of your product's operation.

Caution: Follow the instructions in the topic links below the table to use these menu settings correctly.

Setting	Options	Description
Margin Setting	**Side Margin(Right)**	Selects the width of the right margin; click the link below to the printable area section for more information.
	Side Margin(Left)	Selects the width of the left margin; click the link below to the printable area section for more information.
Print Start Position	0.00 to 32.00 inches (0 to 800 mm)	Sets an additional margin on the right side of the media; click the link below to the print start position section for more information.
Media Check	**Media Size Check**	Automatically detects the edges of the media. Leave this setting **On** unless the printer displays a **Media Size Error** when media is loaded correctly.
	Media End Check	Automatically detects the end of the media. Leave this setting **On** unless the printer displays **Media Out** when media is loaded correctly.
	Media Skew Check	Stops printing and displays an error when skewed media is detected. Leave this setting **On** to avoid jams caused by skewed media.
Media End Option	**Continue**	If you are replacing media during printing, select **Continue** to continue printing after replacing the media, or **Stop Printing** to cancel the print job.
	Stop Printing	

Setting	Options	Description
Btw Pages Nozzle Check	**Off**	Turns off automatic nozzle checks.
	Print Pattern	Selects how often (based on the number of pages selected) to print a nozzle check pattern. You can then visually check the printed pattern to determine if the print head needs cleaning.
	Auto Nozzle Check	Automatically runs a nozzle check and cleans the print head if necessary based on the number of pages you selected.
Lamp Setting	**Auto**	Selects whether to turn on the light inside the front cover automatically or by using the ☼ front cover light button.
	Manual	
Head Mode	**2 Head Mode**	Selects the print head to use. If you select **2 Head Mode**, you can continue printing if one of the print heads becomes clogged.
	Head1	
	Head2	
Sleep Mode	**15 to 240 minutes**	Selects the interval before the printer, heaters, and print drying system (if installed) enters sleep mode. The default is 15 minutes.
Restore Settings	**Yes**	Returns all items in the Printer Setup menu to their default settings.
	No	

Note: Auto Nozzle Check is unavailable if your printout contains White or Metallic Silver ink (SC-S80600L only), the media you loaded is transparent, you selected **2.5** for the **Platen Gap** setting in the Setup menu, or your printer is exposed to direct sunlight or other ambient light sources.

Parent topic: Using the Control Panel Menus

Related references

Printable Area and Media Size Checking
Print Start Positions

Related tasks

Checking for Clogged Print Head Nozzles

Cleaning the Print Head Nozzles

Maintenance Menu Settings

The Maintenance menu lets you run nozzle checks, cleaning cycles, and other maintenance operations. You can access the menu directly by pressing the maintenance button.

Caution: Follow the instructions in the topic links below the table to use these menu settings correctly.

Setting	Options	Description
Nozzle Check	**Print At Right**	Prints a nozzle check pattern in the specified location on the media.
	Print At Center	
	Print At Left	
Cleaning	**Cleaning (Light)**	Cleans the print head. Select the lightest cleaning level first. If nozzles are still clogged, select a heavier cleaning level.
	Cleaning (Medium)	
	Cleaning (Heavy)	
Head Maintenance	**Auto Head Maintenance**	Select **Regular Cleaning** if you see the message to perform head maintenance on the LCD screen. Select **Auto Head Maintenance** if the nozzles are still clogged.
	Regular Cleaning	
Replace Ink Bottle	—	Select if you need to replace the waste ink bottle before a message appears telling you to replace it on the LCD screen.
Replace Parts	—	Select if you need to replace parts before a message appears telling you to replace it on the LCD screen.

Setting	Options	Description
Other maintenance	**Ink Circulation** (SC-S80600L only)	The printer automatically circulates the White and Metallic Silver ink to help prevent sedimentation. However, when printing multiple copies of a large print job, you may notice a difference in color in your printouts if the ink is circulated in between copies. To avoid this problem, select **Ink Circulation** before printing.
	Ink Refresh (SC-S80600L only)	Select this option if your printouts have an uneven tint.
	Head Washing	Select this option if the nozzles are still clogged after performing all other print head cleaning options. Cleaning packs (not included) are required to use this feature.
	Pre-Storage Maint.	Select this option if you plan to turn off the printer and not use it for an extended period of time; click the link to the pre-storage maintenance section below for more information.
	Change Color Mode (SC-S80600L only)	Select **10 Color (WH)** to use White ink, **10 Color (MS)** to use Metallic Silver ink, or **9 Color** if you plan on not using either White or Metallic Silver ink for an extended period of time; click the link to the change color mode section below for more information.
	Grease Carriage Rod	Lets you apply grease to the carriage rod; click the link to the carriage rod grease section below for more information.

Parent topic: Using the Control Panel Menus

Related tasks

Checking for Clogged Print Head Nozzles
Cleaning the Print Head Nozzles
Replacing the Waste Ink Bottle
Replacing the Maintenance Parts

Performing Pre-storage Maintenance
Changing the Color Mode
Applying Carriage Rod Grease

Printer Status Menu Settings

The Printer Status menu lets you track printer usage and firmware version.

Setting	Options	Description
Level	**Ink**	Displays the remaining amount or life of the selected item.
	Waste ink bottle	
	Wiper Unit	
Firmware Version	—	Displays the printer's firmware version.

Parent topic: Using the Control Panel Menus

Other Settings Menu Settings

The Other Settings menu specifies network, language, and other settings for the product.

Setting	Options	Description
Network Setup	**IP Address Setting**	Determines whether IP addresses are obtained automatically through DHCP or manually. Select **Panel** to enter an IP address, subnet mask, and default gateway address manually.
	Print Status Sheet	Prints the current network status and settings.
	Restore Settings	Returns all items in the Network Setup menu to their default settings.

Setting	Options	Description
Preferences	**Date And Time**	Sets the product's built-in clock. The time and date are used in logs and status sheets.
	Language	Selects the language displayed on the LCD screen.
	Units	Selects the unit of length and temperature displayed on the LCD screen.
Alert Sound Setting	**On**	Enables the alert sound when an error occurs.
	On Continuous	
	Off	
Print Completion Sound	**On**	Enables the alert sound when printing is complete.
	Off	
Alert Lamp Setting	**On**	Enables the alert light when an error occurs.
	Off	
Reset All Settings	**Yes**	Returns all items on the Other Settings menu (except for **Preferences**) to their default settings.
	No	

Parent topic: Using the Control Panel Menus

Maintenance

See the instructions in these sections to maintain your printer for optimum results.


When to Maintain Your Product
Preparing for Maintenance
Performing Regular Cleaning
Shaking and Replacing Ink Packs
Changing the Color Mode
Replacing the Waste Ink Bottle
Replacing the Maintenance Parts
Replacing the Media Edge Plates
Print Head Maintenance
Performing Pre-storage Maintenance
Cleaning Inside the Front Cover
Cleaning the Pressure Rollers
Applying Carriage Rod Grease
Used Parts Disposal Guidelines

When to Maintain Your Product

See the guidelines here to determine when to perform maintenance operations on your product, or replace or refill consumables. If you need to perform an operation, use the links at the end of this topic.


Note: You can set up certain maintenance operations to run automatically using settings on your product control panel.

Cleaning Schedule

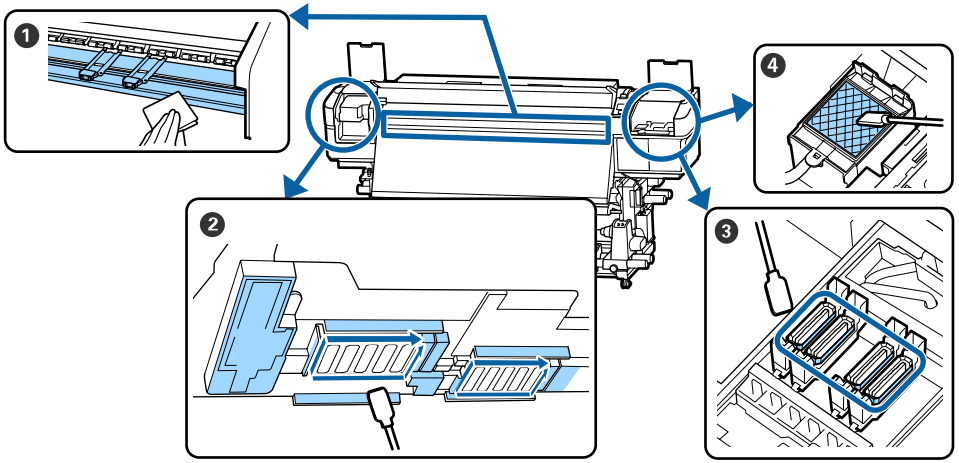

Number	Area to clean	Frequency
1	Platen heater and media edge plates	Daily
2	Around the print head	Once a month or when you see a message on the LCD screen to perform head maintenance
3	Around anti-drying caps	
4	Around flushing pad	Once a month or as needed

Consumables and Parts Replacement Schedule

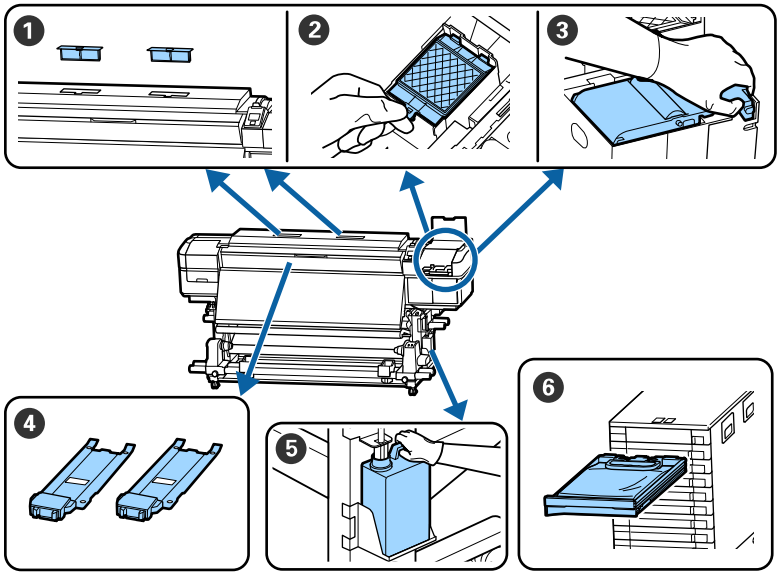

Number	Part to replace	Frequency
1	Air filters	When you see a message on the LCD screen to replace the part
2	Flushing pad	
3	Wiper unit	
4	Media edge plates	If the plates are deformed or damaged
5	Waste ink bottle	When you see a message on the LCD screen to replace the part
6	Ink pack	When you see an ink low or expended message on the LCD screen

Other Maintenance Schedules

Procedure	Frequency
Remove and shake ink packs	Once every 3 weeks; daily for the White and Metallic Silver ink packs (SC-S80600L only)
Check for clogged nozzles	Each time you print or as needed

Procedure	Frequency
Clean print head	When any clogs are found after a nozzle check
Pre-storage maintenance	When you will turn off the printer and not use it for a long time
Change color mode (SC-S80600L only)	When switching between White and Metallic Silver ink packs or when you no longer need to use either ink type
Clean pressure rollers	If dirt from the rollers adheres to your printout
Clean inside the front cover	If it is hard to see inside the printer
Apply grease to the carriage rod	When a greasing message is displayed on the LCD screen

Parent topic: Maintenance

Related concepts

Print Head Maintenance

Related tasks

Cleaning the Platen Heater and Media Edge Plates
Cleaning Around the Print Head
Cleaning the Anti-drying Caps and Flushing Pad
Replacing the Waste Ink Bottle
Replacing the Maintenance Parts
Replacing the Media Edge Plates
Performing Pre-storage Maintenance
Changing the Color Mode
Cleaning the Pressure Rollers
Cleaning Inside the Front Cover
Applying Carriage Rod Grease

Related topics

Shaking and Replacing Ink Packs

Preparing for Maintenance

Before you perform any maintenance procedures, see these sections to prepare for maintenance.

Maintenance Supplies

Maintenance Precautions

Parent topic: Maintenance


Maintenance Supplies

Before performing any maintenance tasks or replacing ink, make sure you have the maintenance supplies listed here.

Protective eyewear
Obtain commercially available eyewear to protect your eyes from ink and ink cleaner.

Mask
Obtain a commercially available mask to protect your mouth and nose from ink and ink cleaner.

Maintenance Kit
Use the maintenance kit that came with your product for general cleaning. The kit contains the following items:

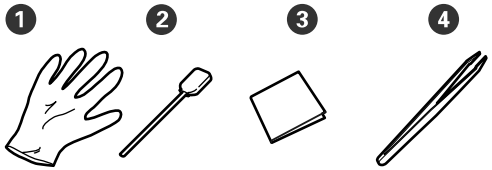

Number	Part	Quantity
1	Gloves	12
2	Cleaning sticks	20
3	Wipes	100
4	Tweezers	1


Ink cleaner
Use the ink cleaner that came with your product to wipe ink stains.

Metal tray
Use the metal tray that came with your product to hold cleaning tools and consumables you remove from the product.

Soft cloth
Obtain a commercially available static-free, lint-free soft cloth to clean inside the printer.

Grease Kit

Use the grease kit that came with your product to apply grease to the carriage rods.

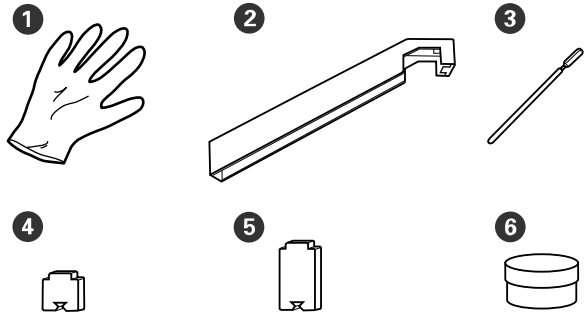

Number	Part	Quantity
1	Gloves	16
2	Grease tool	1
3	Cleaning stick	8
4	Pad A	16
5	Pad B	16
6	Grease	2

Parent topic: Preparing for Maintenance

Maintenance Precautions

Follow these precautions as you maintain your product:

- Remove loaded media from the product before performing any maintenance tasks.
- Touch a metal object to discharge any static electricity before performing any maintenance tasks.
- Never touch the belts, cables, circuit boards, or other parts not covered in the maintenance task steps or you could adversely affect the print quality or damage your product.
- Use only the cleaning sticks included in the product maintenance kit to clean your product to avoid damaging the print head.
- Do not reuse cleaning sticks.

- Do not touch the ends of the cleaning sticks to prevent oil from your hands from damaging the print head.
- Do not use alcohol or water to clean the nozzle surface, caps, or wiper or you may damage your product.
- Store ink packs, secondary carriage rod grease, and waste ink out of the reach of children.
- Wear protective eyewear, gloves, and a mask when performing maintenance tasks.
- Wash your hands after performing maintenance.
- Gargle with water after replacing the waste ink bottle or using the ink cleaner.

Warning: If ink, waste ink, ink cleaner, or grease contacts your skin, or gets into your eyes or mouth, immediately do the following:

- Thoroughly wash the substance from your skin with soapy water. If your skin becomes irritated or discolored, contact a doctor.
- Immediately rinse the substance from your eyes with water to avoid bloodshot eyes or mild inflammation. If you experience eye problems, contact a doctor.
- If a substance gets in your mouth, contact a doctor immediately.
- If you swallow a substance, do not induce vomiting and contact a doctor immediately. Inducing vomiting may cause material to get in your windpipe and cause injury.

Parent topic: Preparing for Maintenance

Related references

Maintenance Supplies

Performing Regular Cleaning

Clean your product regularly to ensure the best print quality as described in these sections.

Note: If you see a message on the LCD to perform head maintenance, clean your product as soon as possible.

Cleaning the Platen Heater and Media Edge Plates
Using Ink Cleaner
Moving the Print Head for Maintenance
Cleaning Around the Print Head
Cleaning the Anti-drying Caps and Flushing Pad

Parent topic: Maintenance

Cleaning the Platen Heater and Media Edge Plates


Carefully follow the steps here to clean the platen heater and media edge plates to remove ink, paper particles, and lint daily.

Warning: The heaters and media edge plates may be hot; take care not to burn yourself.

Caution:


- If ink remains on these parts, it could transfer to your printouts. Continued use of your product with ink, paper particles, or lint on these surfaces could damage the print heads or clog the nozzles.
- Do not use the ink cleaner to clean these parts.

1. Turn off the product, wait for the LCD screen to turn off, and unplug both power cables. If the optional drying system is installed, also unplug its power cable.
2. Wait for one minute, then open the front cover.
3. Dampen a soft cloth with water and wring it out thoroughly.
4. Use the damp cloth to clean the platen heater and inside the platen grooves.

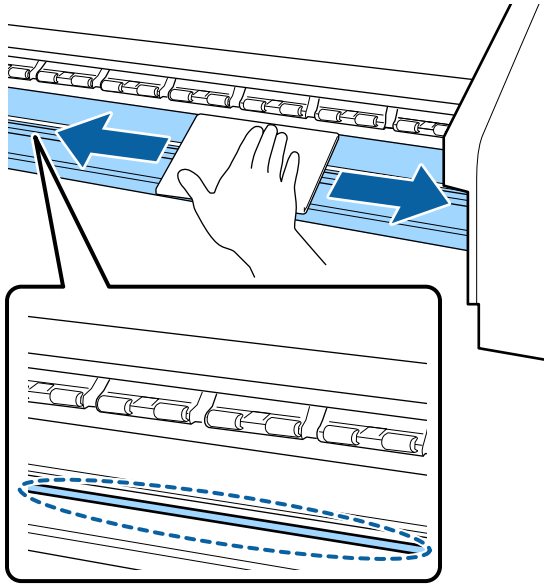

5. Use the damp cloth to clean the media edge plates.

   Note: If you are using media that contains glue, dampen the cloth with a mild detergent, wring it out thoroughly, and use it to clean the media edge plates. Remove the plates and clean both sides if necessary.

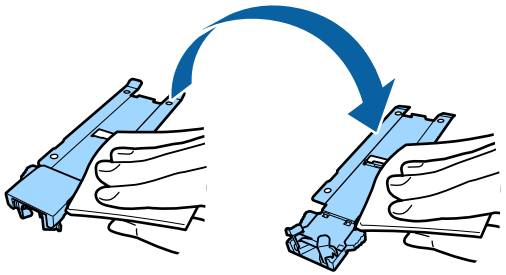

6. Plug in the power cords and turn the product back on.

Parent topic: Performing Regular Cleaning

Using Ink Cleaner

Use the ink cleaner and cup that came in the maintenance kit to clean only when instructed to. Whenever you use the ink cleaner, follow the steps here.


Caution: Using ink cleaner on any other parts of your product could damage the product.

Be sure to do the following:

- Store ink cleaner at room temperature and out of direct sunlight.
- Use fresh ink cleaner with a fresh cleaning stick each time; do not reuse them.
- Dispose of used cleaning sticks and ink cleaner according to the used parts disposal guidelines; see the link below.

1. Place the cup on a tray and pour approximately 0.3 ounce (10 ml) of ink cleaner into the cup.
2. Recap the ink cleaner bottle.

3. Dip a fresh cleaning stick into the ink cleaner and let any excess cleaning solution drip into the cup.

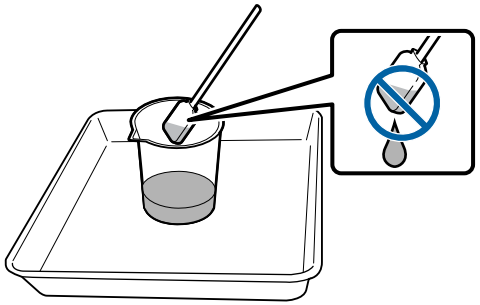

Parent topic: Performing Regular Cleaning

Related references

Used Parts Disposal Guidelines

Moving the Print Head for Maintenance

Certain maintenance tasks require that you move the print head as described here before performing the task.

Caution: Always move the print head as described here. Do not move the print head manually or you may cause your product to malfunction.

1. Press the maintenance button on the control panel.

   You see the Maintenance menu.
2. Press the up or down arrow button on the control panel to select **Head Maintenance** and press the **OK** button.
3. Press the up or down arrow button to select **Regular Cleaning** and press the **OK** button.
4. Press the **OK** button again.

   A confirmation message is displayed when the print head has moved into the maintenance position.

5. Perform your maintenance task as necessary.

   Note: After 10 minutes, an alarm sounds to warn you that the print head is still in the maintenance position. Press the **OK** button to continue cleaning. The alarm sounds again at 10 minute intervals if the print head is not in the home position.

Parent topic: Performing Regular Cleaning

Related references

Maintenance Menu Settings


Cleaning Around the Print Head

Clean around the print head to remove any ink, lint, or dust that could affect print quality.


1. Move the print head into the maintenance position.

   Caution: Always move the print head using the control panel. Do not move the print head manually or you may cause your product to malfunction.

2. Open the left maintenance cover.

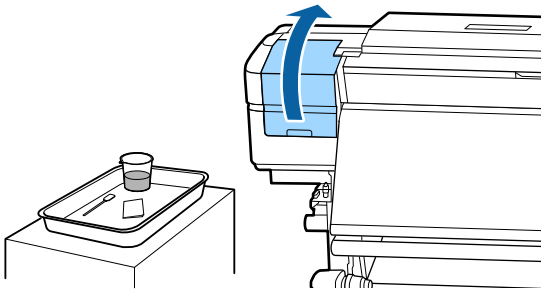


3. Dampen a new cleaning stick with ink cleaner and use it to clean the area shown here.

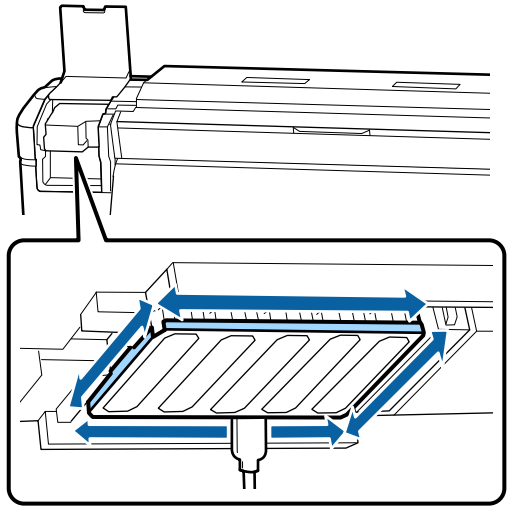


Note: Use a soft cloth to remove any clots of ink that form after using a cleaning stick.

4. Dampen a new cleaning stick with ink cleaner and use it to clean the areas shown here.

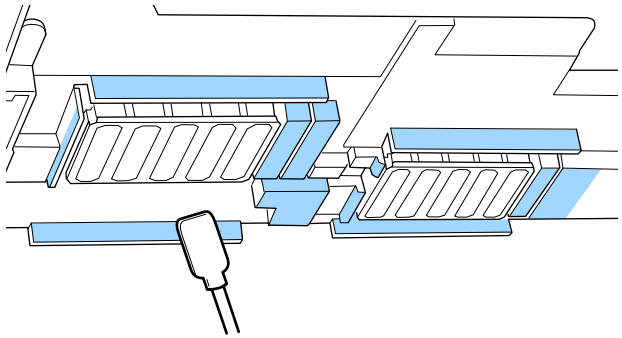

5. Dampen a new cleaning stick with ink cleaner and use it to clean the areas shown here.

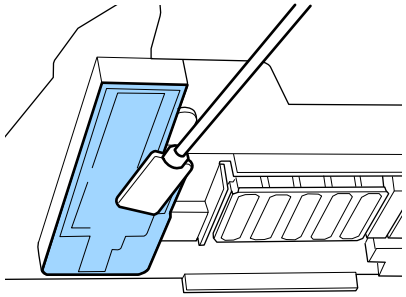

6. Close the left maintenance cover.

Parent topic: Performing Regular Cleaning

Related references


Maintenance Menu Settings

Used Parts Disposal Guidelines

Cleaning the Anti-drying Caps and Flushing Pad


Clean the anti-drying caps and flushing pad to remove any ink that may affect print quality.

1. Open the right maintenance cover.

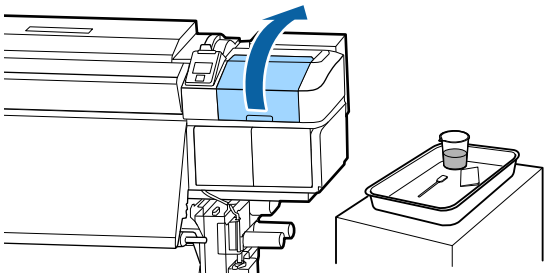


2. Dampen a new cleaning stick with ink cleaner.


3. Hold the cleaning stick flat against the top edges of an anti-drying cap and wipe in the direction shown. Clean the top edges of each cap.

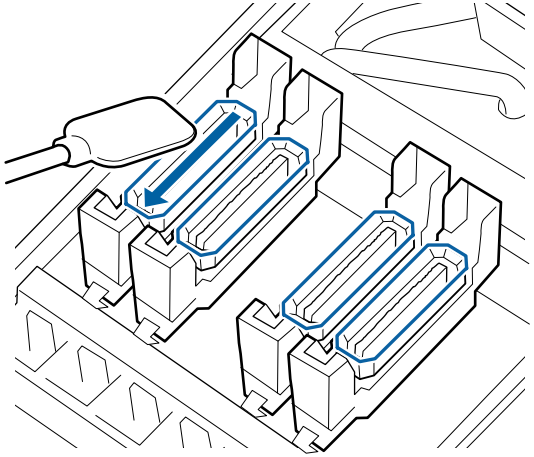


Caution: Do not press too hard against the edges of the caps or touch the inner side of the caps to avoid damaging them and preventing the print head from capping correctly.

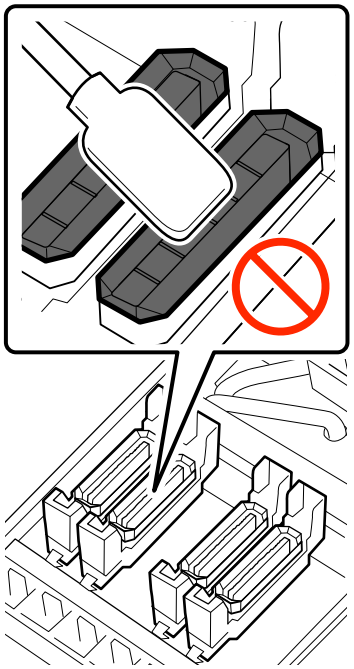


4. Use the flat side of the cleaning stick to clean the outside of each cap.

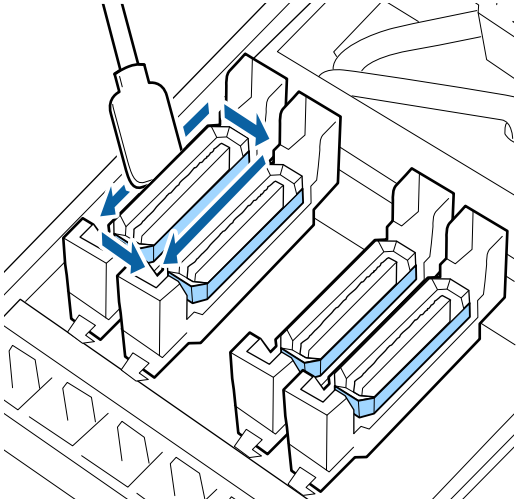


5. If the guides require cleaning, dampen a new cleaning stick with ink cleaner and use it to clean the areas shown.

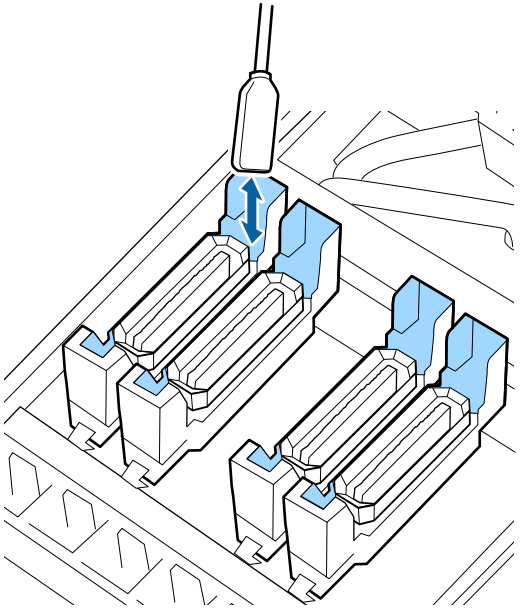


6. If a film of ink remains after cleaning with the cleaning stick, use tweezers to remove it.

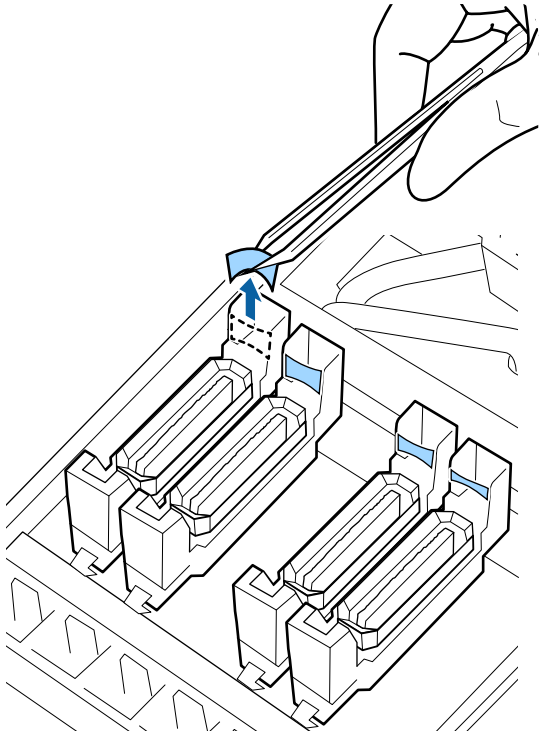

7. Remove any lint or dust from the inside of the caps using the tip of a cleaning stick or tweezers.

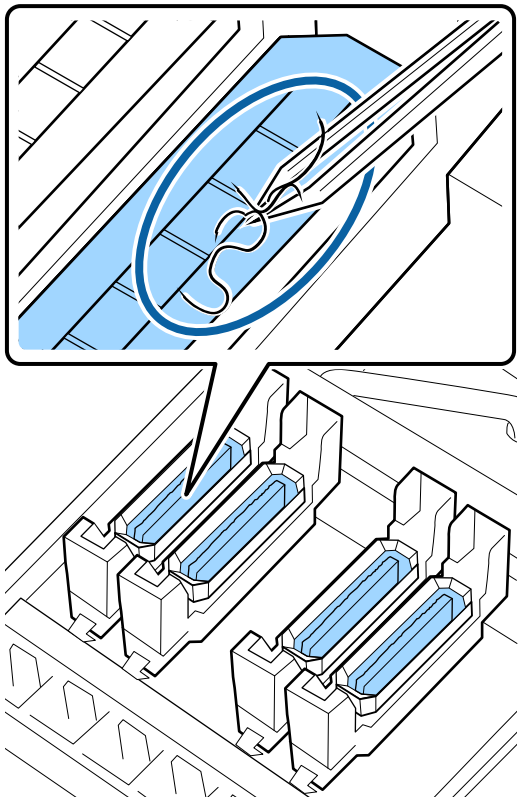

8. Wipe off any lint or dust from the flushing pad using the tip of a cleaning stick.

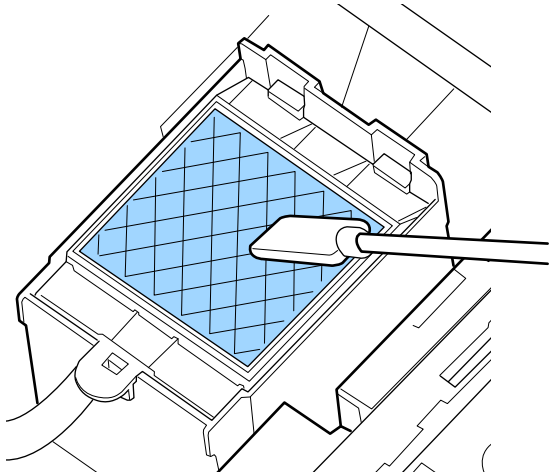

9. Close the maintenance cover and press the **OK** button.

Parent topic: Performing Regular Cleaning

Related references

Used Parts Disposal Guidelines

Shaking and Replacing Ink Packs

See these sections to shake and replace the ink packs.

Shaking the Ink Packs

Replacing the Ink Packs

Parent topic: Maintenance


Shaking the Ink Packs

You must remove the ink packs installed in the ink unit and thoroughly shake them once every three weeks to maintain print quality. You must shake the White and Metallic Silver ink packs (SC-S80600L only) daily.

Caution: Be careful handling the ink packs as there may be ink around the ink supply port.


Warning: If ink gets on your skin, wash it thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. If ink gets into your mouth, spit it out and see a doctor right away. Keep ink packs out of the reach of children.

1. Make sure the product is turned on.
2. Slide the lock switch as shown to unlock the ink tray and pull the tray straight out of the ink unit. (A flashing blue light indicates that an ink pack needs to be shaken.)

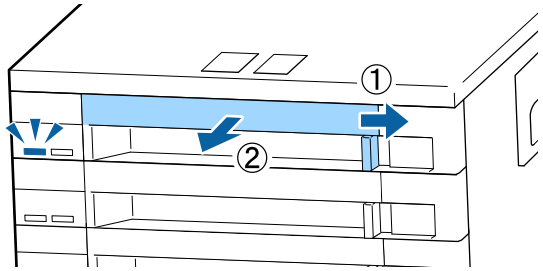


Caution: Place your hand on the bottom of the tray while removing it. If you use only one hand, the weight of the tray may cause it to fall and damage the ink pack.

3. Tilt the ink tray back and forth horizontally and gently shake it about 5 times within 5 seconds. If you are shaking an Orange, White, or Metallic Silver ink pack, shake it about 25 times within 25 seconds.

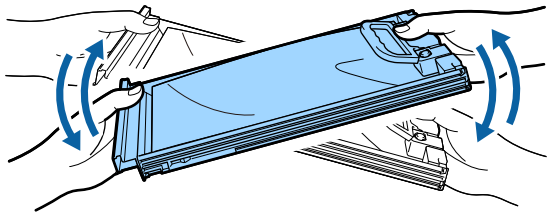

Caution: Do not shake the ink tray with too much force or the ink may leak.

4. Insert the ink tray back into its slot in the ink unit, and slide the lock switch as shown to lock the ink tray.

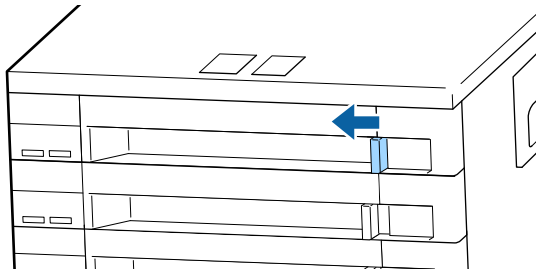

5. Repeat these steps for any other ink packs that need shaking.

Parent topic: Shaking and Replacing Ink Packs

Related references

Handling Ink and Cleaning Packs

Ink Pack Safety Instructions

Replacing the Ink Packs

Make sure you have your replacement ink packs handy before you begin. You must install new ink packs immediately after removing the old ones.


Note: Replace all expended ink packs. You cannot print if any of the ink packs are expended or any ink trays are empty. You can replace an expended ink pack during printing, however, colors may look different depending on how the ink dries. To avoid this, replace the ink pack before printing. You can still use the removed ink pack for future prints until it is expended.

Note: This printer is designed for use with Epson ink packs only, not third-party ink packs or ink. Other brands of ink supplies are not compatible and, if described as compatible, may not function properly or continuously.


The included initial ink packs are designed for reliable printer setup and cannot be used as replacement ink packs or resold. After setup, the remaining ink is available for printing. Yields are based on ISO 24711 in default mode, printing continuously. Yields vary due to print images, settings, and temperatures. Printing infrequently or primarily with one color reduces yields. All ink packs must be installed with ink for printing and printer maintenance. For print quality, some ink remains in replaced ink packs.

Caution: Leave your old ink packs in the ink unit until you are ready to replace them to prevent the print head nozzles from drying out. Do not open ink packs until you are ready to install the ink. If you see a message to replace the White or Metallic Silver ink packs (SC-S80600L), replace the ink pack immediately or you could damage the print head.

1. Make sure the product is turned on.
2. Slide the lock switch as shown to unlock the tray for the ink pack that needs replacing and pull the tray straight out of the ink unit.

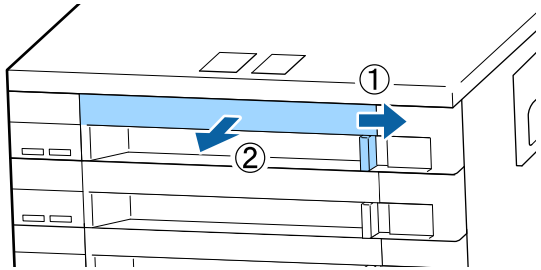


3. Lift the ink pack handle as shown and remove the ink pack from the tray.

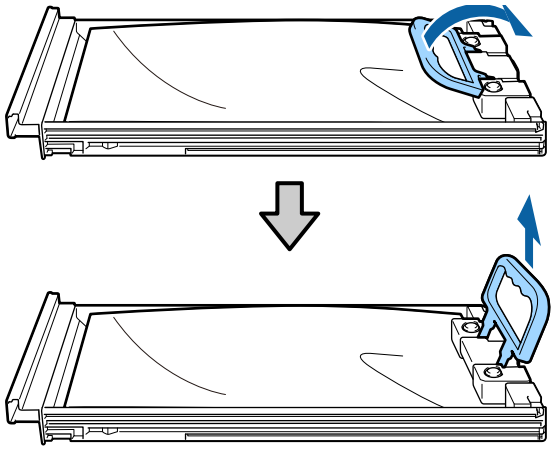


Caution: Be careful handling the ink pack as there may be ink around the ink supply port.

Warning: If ink gets on your skin, wash it thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. If ink gets into your mouth, spit it out and see a doctor right away. Keep ink packs out of the reach of children.


4. Place the new ink pack in the tray as shown and lower the handle.

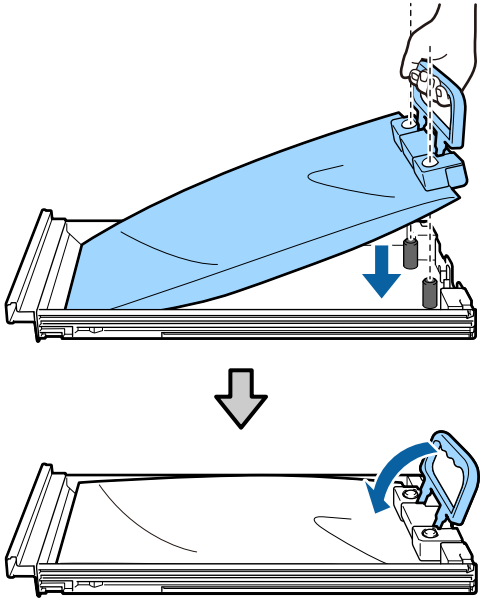


5. Gently shake the tray about 5 times within 5 seconds. If you are replacing an Orange, White, or Metallic Silver ink pack, shake it about 25 times within 25 seconds.

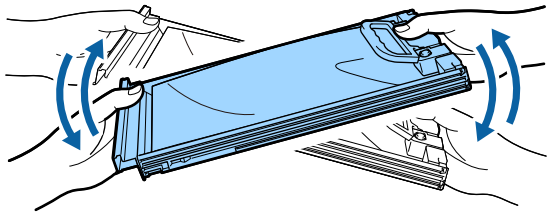

6. Make sure the labels on the ink pack and ink unit match, then insert the tray into the slot.

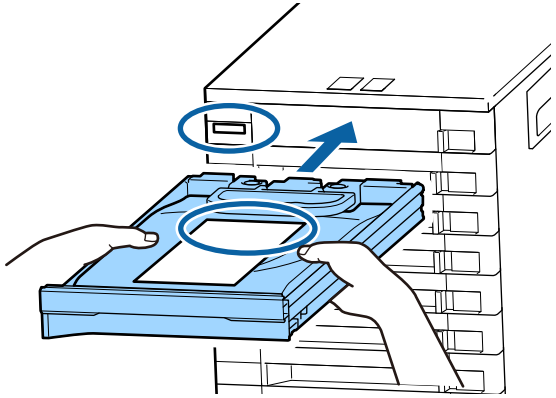

7. Slide the lock switch as shown to lock the tray.

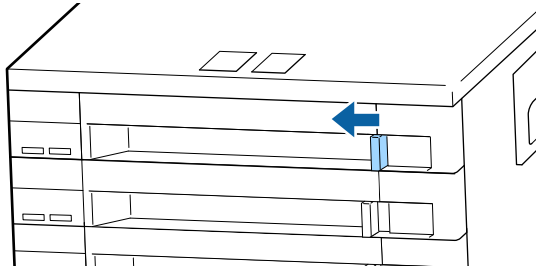

8. Repeat these steps for any other ink packs that need replacing.

   Note: Dispose of used ink packs carefully. Do not take the used ink pack apart or try to refill it.

Parent topic: Shaking and Replacing Ink Packs

Related references

Consumables and Replacement Parts
Handling Ink and Cleaning Packs
Ink Pack Safety Instructions
Used Parts Disposal Guidelines

Changing the Color Mode

You need to change the printer's color mode when switching between the White or Metallic Silver ink packs (SC-S80600L). It takes approximately one hour to change color modes. You need a cleaning pack when switching between the White and Metallic Silver ink packs, or when switching to 9 Color Mode. (You do not need a cleaning pack when switching from 9 Color Mode to either of the other two color modes.)

To save on ink, switch to 9 Color Mode if you do not plan on using the White or Metallic Silver ink packs for 20 or more days.

Note: You may not be able to switch color modes if the cleaning pack, or the White or Metallic Silver ink packs, are low. Have new packs handy before switching color modes.

1. Press the maintenance button.

   You see the Maintenance menu on the product LCD screen.
2. Press the up or down arrow button to select **Other maintenance** and press the **OK** button.
3. Press the up or down arrow button to select **Change Color Mode** and press the **OK** button.
4. Press the up or down arrow button to select a color mode and press the **OK** button.
5. Follow the instructions on the LCD screen to change the color mode.

Parent topic: Maintenance

Related references

Consumables and Replacement Parts
Handling Ink and Cleaning Packs
Ink Pack Safety Instructions
Maintenance Menu Settings

Replacing the Waste Ink Bottle


When you see a message telling you to prepare an empty waste ink bottle on the LCD screen, the waste ink bottle is nearly full. Make sure you have a new waste ink bottle handy.

When you see a message telling you to replace the waste ink bottle, the waste ink bottle is full and needs to be replaced.

Note: You can also replace the waste ink bottle at any time by selecting **Replace Ink Bottle** from the Maintenance menu.

Caution: Replacing the waste ink bottle during printing or cleaning could cause waste ink to leak. When replacing the waste ink bottle, always wear the gloves included in the maintenance kit. Leave the waste ink in the bottle for disposal and do not transfer it to another container. Dispose of the waste ink bottle according to the used parts disposal guidelines; see the link below.

1. Lift up the waste ink bottle and remove it from the holder.

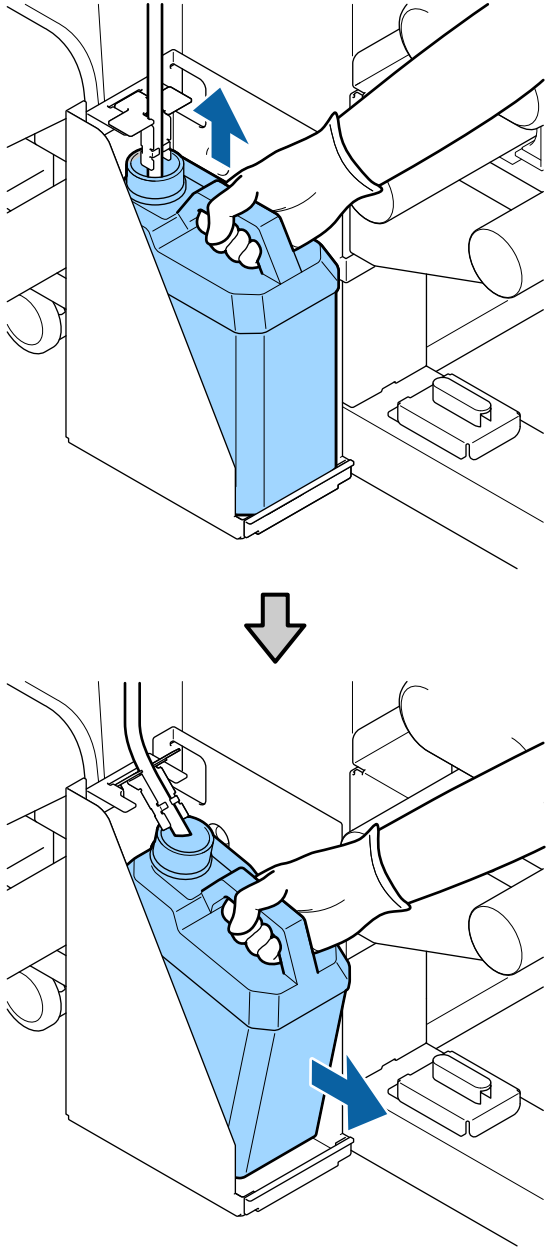

2. Tightly seal the used waste ink tank bottle.
3. Insert the waste ink tube into the new waste ink bottle and place the bottle in the holder.

   Note: Be sure the waste ink tube is inserted in the waste ink bottle or waste ink could spill onto your product. Store the cap from the new waste ink bottle for later use.

4. Press the **OK** button on the product control panel.
5. Press the **OK** button again to reset the waste ink counter.

Parent topic: Maintenance

Related references

Consumables and Replacement Parts
Handling Ink and Cleaning Packs
Used Parts Disposal Guidelines
Maintenance Menu Settings
Maintenance Precautions

Replacing the Maintenance Parts

When you see a message telling you that maintenance parts are nearing the end of their life, you need to replace the maintenance parts soon. Make sure you have a new maintenance parts kit handy.

When you see a message telling you to replace the maintenance parts, you need to replace the maintenance parts to continue printing.

Replace all the maintenance parts at the same time.


Note: You can also replace the maintenance parts at any time by selecting **Replace Parts** from the Maintenance menu.

Caution: Make sure you select **Replace Parts** or wait for the message to replace the maintenance parts to appear on the LCD screen before replacing the maintenance parts; otherwise the product's maintenance counter will not reset.


The maintenance parts kit includes the following items:

- 1 wiper unit
- 1 flushing pad
- 2 air filters

1. If you see a message to replace the maintenance parts, press the **OK** button.
2. After the print head moves to the left side of the printer, open the right maintenance cover.

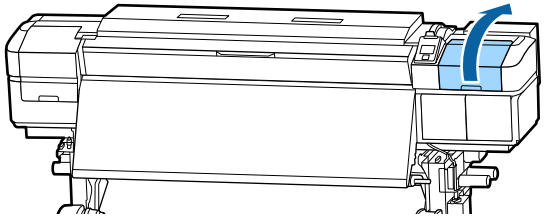


3. Put on the gloves included with the printer.
4. Place your fingers in the groove on the back of the wiper unit and tilt it forward slightly.

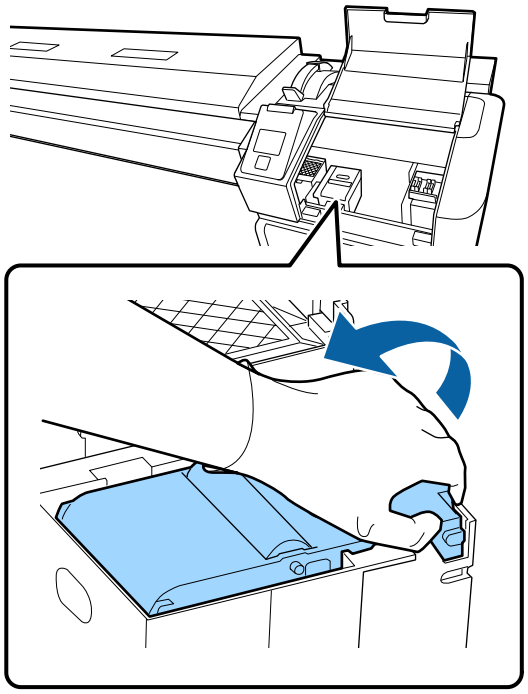


5. Unwrap the new wiper unit.


6. Grasp the sides of the wiper unit and pull it straight out.

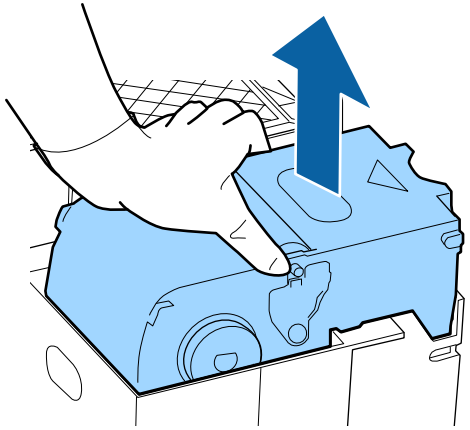

7. Use the packaging from the new wiper unit to wrap the used wiper unit.

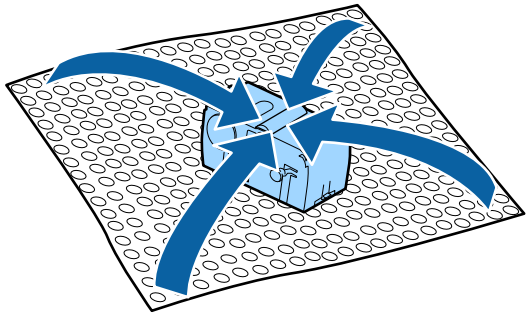


8. Place the new wiper unit in the printer as shown and press it down until it clicks into place.

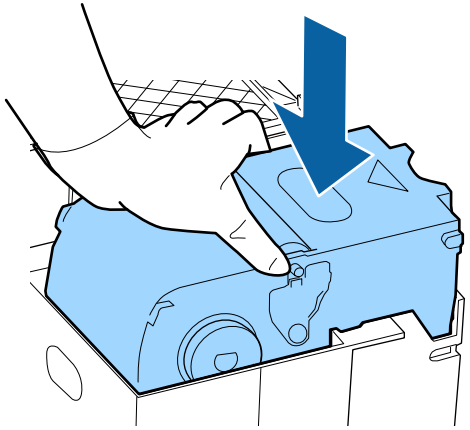


9. Press the **OK** button.

10. Lift the tab on the bottom of the flushing pad, remove the flushing pad, and place it on the metal tray.

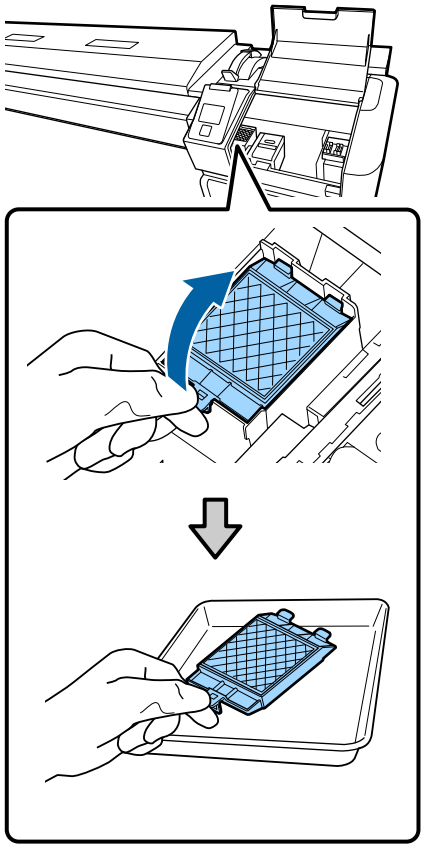


Caution: Do not place the flushing pad on the product.

11. Insert the new flushing pad into the slots on the product and press the tab down until it clicks into place.

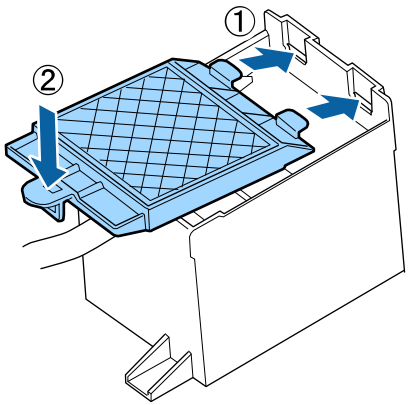


12. Press the **OK** button.
13. Remove the new air filters from their packaging.
14. Grasp the installed air filters and lift them straight out of the product.

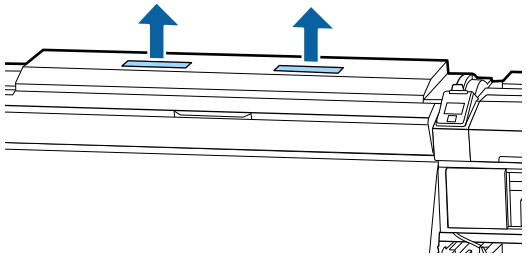

15. Use the packaging from the new air filters to wrap the used air filters.

16. Insert the new air filters as shown.

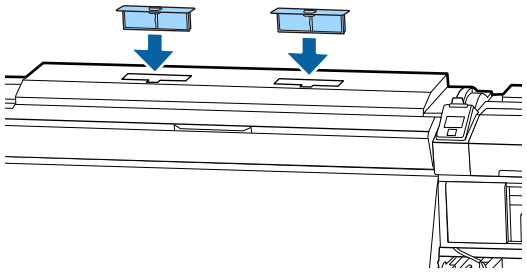

17. Press **OK** button.
18. Close the maintenance cover and press the **OK** button.

    You see a confirmation screen.
19. Select **Yes** and press the **OK** button.

Note: Dispose of used parts according to the used parts disposal guidelines; see the link below.

Parent topic: Maintenance

Related references

Consumables and Replacement Parts
Maintenance Precautions
Maintenance Menu Settings
Used Parts Disposal Guidelines


Replacing the Media Edge Plates

If the media edge plates that came with your product become damaged or deformed, you need to replace them.


Caution: Continued use of damaged or deformed media edge plates may damage the print heads.

1. Remove any media loaded in the product.
2. Turn off the product, wait for the LCD screen to turn off, and unplug both power cables. If the optional drying system is installed, also unplug its power cable.

3. Wait for one minute, then open the left maintenance cover and the front cover.

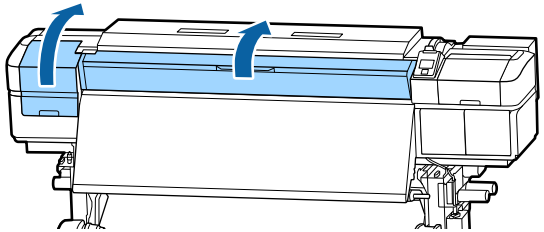


4. Grasp the tabs on the media edge plates and slide them to the left edge of the platen.

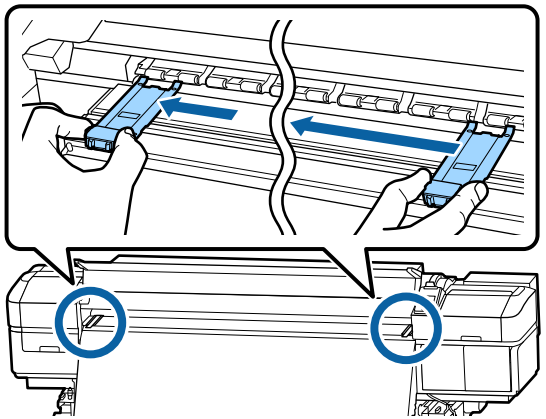


Caution: Do not remove the media edge plates on the right edge of the platen or they could drop into the product and cause it to malfunction.


5. Remove the left media edge plate, then remove the right media edge plate in the same manner.

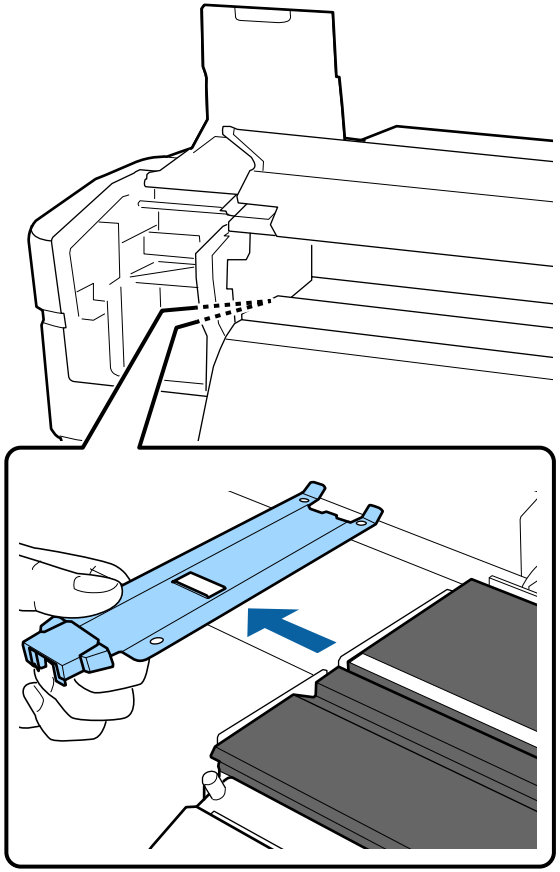

6. Align the white line on a new media edge plate with the edge of the platen as shown.

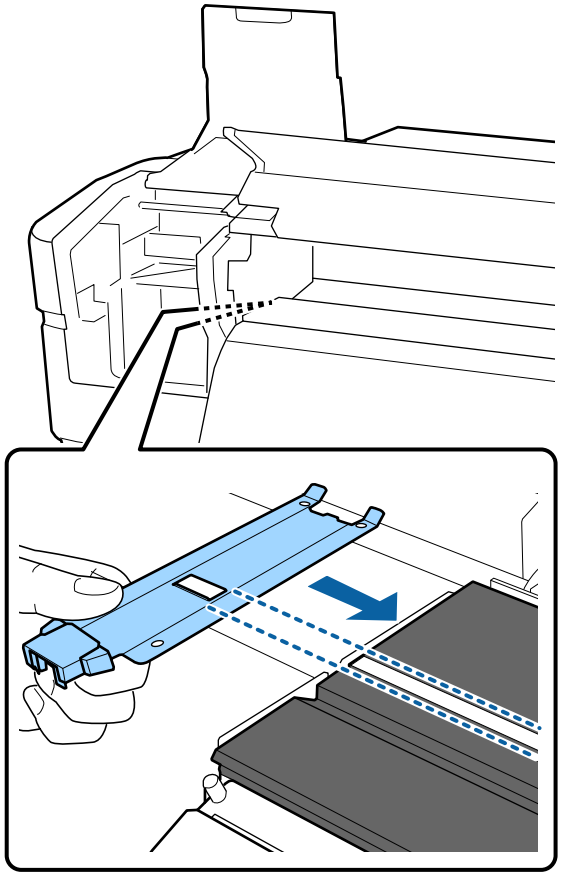


7. While pressing the tip of the media edge plate against the platen, attach the hooks to the front corner of the platen.

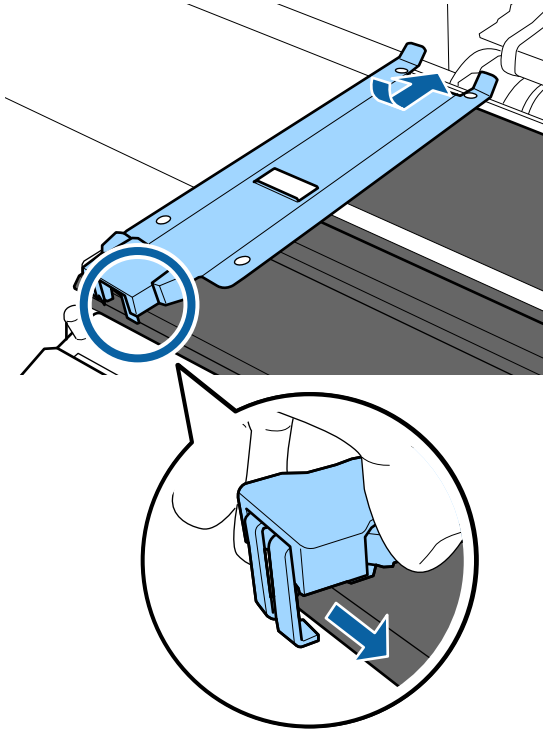

8. Confirm that the three hooked sections of the media edge plate are securely attached as shown here, with no gap between the plate and the platen.
   - The latch at the top (1) should hook onto the corner of the platen.
   - The latch at the rear of the square hole (2) should rest in the groove on the platen.


- The latch at the rear of the tab (3) should hook onto the front corner of the platen.

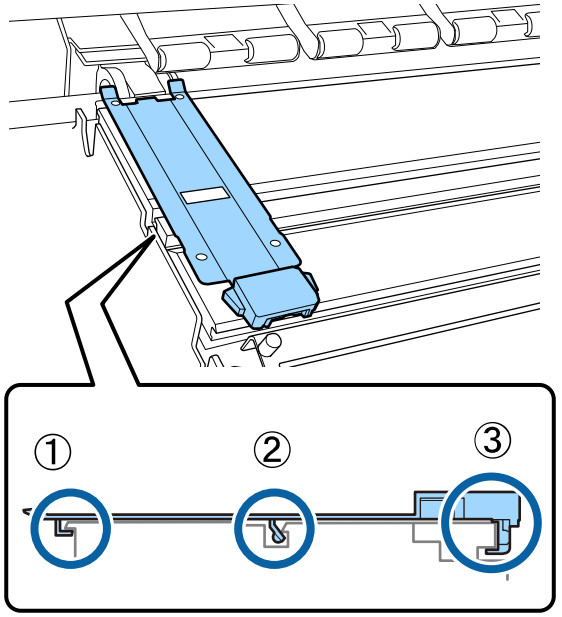

Caution: If the media edge plates are not attached correctly, repeat these steps to reattach them or the print head may be damaged.

9. Repeat the previous steps to align and attach the other media edge plate, confirming that it is attached correctly.

10. Grasp the tabs on the media edge plates and slide them to the left and right edges of the platen. Release the tabs when they are in position.

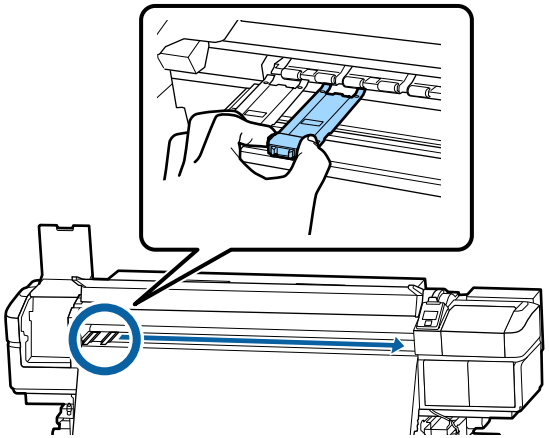

11. Close the left maintenance cover and the front cover.
12. Plug in the power cords and turn the product back on.

Parent topic: Maintenance

Related references

Consumables and Replacement Parts

Maintenance Precautions

Related topics

Removing Printed Media

Print Head Maintenance

Print head maintenance ensures the best print quality.

Perform the following maintenance as necessary:

- **Nozzle Check**: Check for clogged nozzles before each print job or if you have not used the printer for an extended period of time. Inspect the printed check pattern and clean the print head if you notice faint or missing areas.
- **Cleaning**: Clean the print head if you notice faint areas or gaps in your printouts.

Checking for Clogged Print Head Nozzles

Cleaning the Print Head Nozzles

Parent topic: Maintenance

Checking for Clogged Print Head Nozzles

To maintain optimum print quality, perform a nozzle check before printing. This lets you visually inspect the printed check pattern and clean the nozzles, if necessary. There are two ways to check the nozzles:

- Set up the product to automatically print a check pattern. You can select how often the product performs a nozzle check in the Printer Setup menu.
- Manually run a nozzle check from the product control panel, as described here.

1. Press the maintenance button.


   You see the Maintenance menu on the product LCD screen.

2. Select **Nozzle Check**, select the print position for the check pattern, and press the **OK** button.


   The product prints a nozzle check pattern.

3. Check the printed pattern to see if there are gaps in the lines.

   Nozzles are clean

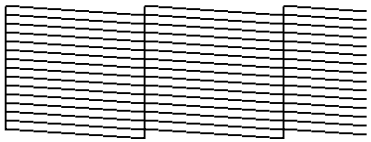   Nozzles need cleaning

4. If there are no gaps, the print head is clean and you can continue printing.

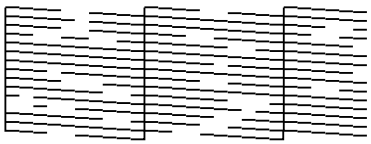   If there are gaps or the pattern is faint, clean the print head.

Parent topic: Print Head Maintenance

Related references

Maintenance Precautions
Printer Setup Menu Settings
Maintenance Menu Settings

Related tasks

Loading Media
Cleaning the Print Head Nozzles

Cleaning the Print Head Nozzles

If printouts are faint or have gaps, you should clean the print head to clear the clogged nozzles. Clean the print head only if print quality declines or image colors are incorrect. You can clean the print head when printing is paused, if necessary, but the colors in your printout may change when you resume printing.

Note: You can also set up the product to automatically clean the print head at selected intervals using the **Periodical CL Cycle** setting in the Customize Settings menu or the **Auto Nozzle Check** setting in the Printer Setup menu.

You can select from three levels of head cleaning:

- **Cleaning (Light)**: Use this cleaning level first.
- **Cleaning (Medium)**: Use this cleaning level if you cannot clear the clogged nozzles after cleaning with the light level.
- **Cleaning (Heavy)**: Use this cleaning level if you cannot clear the clogged nozzles after cleaning with the medium level.

Note: If colors are faint or missing even after cleaning the print head, manually clean around the print head inside the product.

1. Press the maintenance button.

   You see the Maintenance menu on the product LCD screen.

   Note: To clean while printing, press the pause/cancel button to pause printing.

2. Press the up or down arrow button to select **Cleaning** and press the **OK** button.
3. Press the up or down arrow button to select the cleaning level and press the **OK** button.

4. Press the up or down arrow button to choose one of the following cleaning options:
   - **All Nozzles**: Select this option when you see faint printing or gaps in all rows of nozzles in the check pattern. Go to step 6.
   - **Head1/Head2**: Select this option when you see faint printing or gaps in only one of the print heads in the check pattern. Go to step 6.
   - **Selected Nozzles**: Select this option when you see faint printing or gaps in only certain rows of nozzles in the check pattern. You can select to clean multiple nozzle rows, if necessary. Go to step 5.
5. To select the nozzle rows for cleaning, press the up or down arrow button to highlight the row number and press the **OK** button. Repeat for each row you want to clean.
6. Select **Execute With Selection** and press the **OK** button.

   Print head cleaning starts. A confirmation message is displayed when cleaning is complete.

   Note: If you paused printing to clean the print head, printing resumes when cleaning is finished.
7. Print a nozzle check pattern or check your printout to confirm that the nozzles are cleared.

Parent topic: Print Head Maintenance

Related references

Maintenance Precautions
Printer Setup Menu Settings
Maintenance Menu Settings

Related tasks

Checking for Clogged Print Head Nozzles

Performing Pre-storage Maintenance

Perform pre-storage maintenance if you are going to turn off the product and not use it for a long time. This prevents the print head nozzles from becoming permanently clogged.

Perform pre-storage maintenance if the product will not be used for the following intervals:

- SC-S60600L: 1 month or more (8 cleaning packs required)
- SC-S80600L: a week or more for White (WH) and Metallic Silver (MS) ink packs (2 cleaning packs required); two weeks or more for all ink packs (10 cleaning packs required)

Note: If you performed pre-storage maintenance for the White and Metallic Silver ink packs and later need to do it for all the colors, install a White or Metallic Silver ink pack first, then perform pre-storage maintenance again (SC-S80600L).

1. Press the maintenance button.

   You see the Maintenance menu on the product LCD screen.
2. Press the up or down arrow button to select **Pre-Storage Maint** and press the **OK** button.
3. Select one of the following and press the **OK** button:
   - **All Nozzles**
   - **WH** (for White ink packs; SC-S80600L)
   - **MS** (for Metalllic Silver ink packs; SC-S80600L)
4. Follow the on-screen instructions to replace the ink packs with the cleaning packs.

When you are ready to use the product again, turn it on and follow the on-screen instructions.

Note: If you re-install used ink packs that are low on ink, you may need additional ink packs to finish charging the ink system.

Parent topic: Maintenance

Related references


Maintenance Precautions
Consumables and Replacement Parts
Maintenance Menu Settings

Cleaning Inside the Front Cover

You can clean the inside of the front cover if it becomes dirty.

1. Turn off the product, wait for the LCD screen to turn off, and unplug both power cables. If the optional drying system is installed, also unplug its power cable.
2. Wait for one minute, then open the front cover.

3. Wipe any lint or dust from the inside of the front cover using a damp, soft cloth.

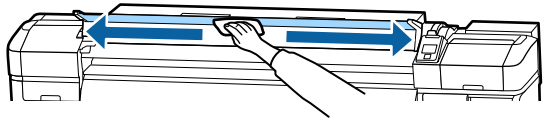

4. Close the front cover.
5. Plug in the power cords and turn the product back on.

Parent topic: Maintenance


Related references

Maintenance Precautions

Cleaning the Pressure Rollers


Clean the pressure rollers if they become dirty. If ink remains on the rollers, it could transfer to your printouts.

1. Turn off the product, wait for the LCD screen to turn off, and unplug both power cables. If the optional drying system is installed, also unplug its power cable.
2. Wait for one minute, then open the front cover and raise the media loading lever.

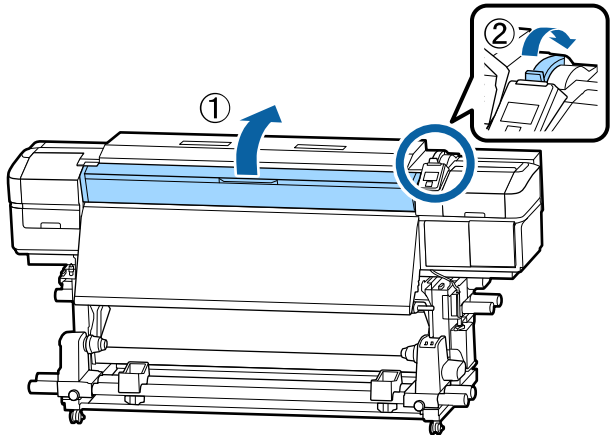


3. Dampen a soft cloth with water and wring it out thoroughly.


4. Wrap the damp cloth around your finger as shown.

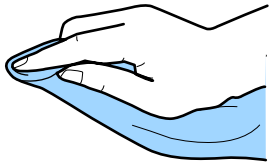

5. Use the cloth to clean the pressure rollers.

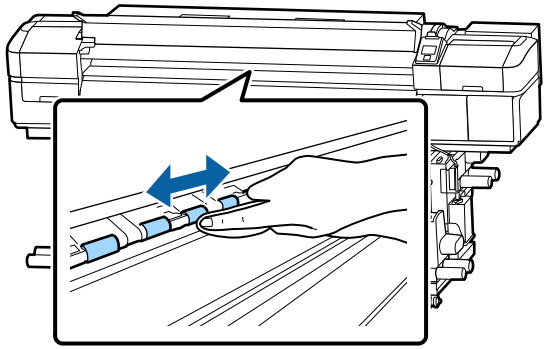

Caution: Be sure not to touch the carriage rod (B) or an error may occur during printing.

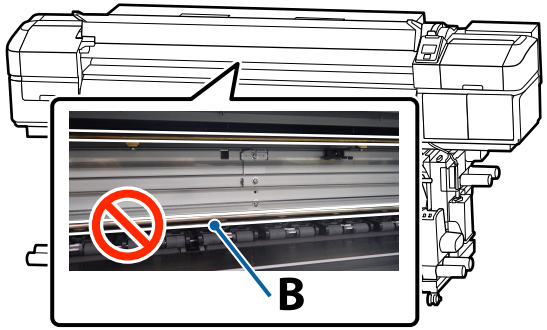

6. Close the front cover.
7. Plug in the power cords and turn the product back on.


Parent topic: Maintenance

Related references


Maintenance Precautions

Applying Carriage Rod Grease

When you see a message to apply carriage rod grease on the product control panel, you need to apply grease to carriage rods A and B using the grease and tools that came with your product. Use a new grease pad when applying grease to the carriage rods.

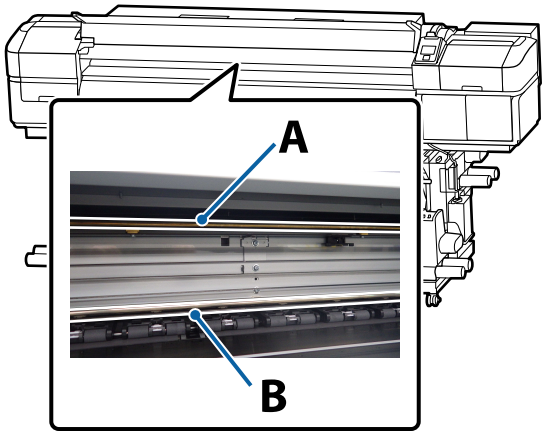

1. To grease carriage rod A, locate the grease tool and pad A that came with your product.

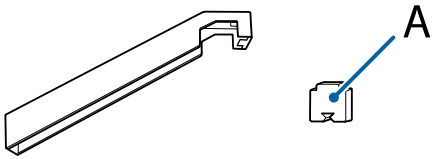


2. Press the maintenance button on the product LCD screen.


   You see the Maintenance menu.
3. Press the up button to select **Other maintenance** and press the **OK** button.
4. Press the up button to select **Grease Carriage Rod** and press the **OK** button.

You see the message **Grease kit is needed. Continue?**.

5. Press the up button to select **Yes** and press the **OK** button.
6. Firmly insert the tab on pad A into the slot on the grease tool and rotate the pad onto the tool.

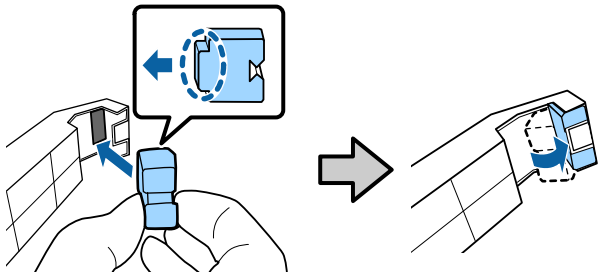

7. Open the front cover.
8. Hold the grease tool against the back of carriage rod A and smoothly slide it back and forth across the carriage rod to wipe off any stains.

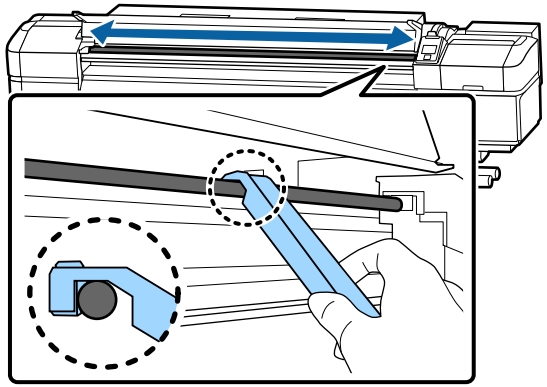


9. Remove the stained pad from the grease tool.
10. Attach a fresh pad A to the grease tool.


11. Use one of the cleaning sticks to stir the grease in the container approximately 10 times. Then wipe the tip of the cleaning stick on the edge of the container to remove the excess grease.

    Note: Be sure to remove the excess grease from the cleaning stick or it may fall off the stick and onto the platen or your media.


12. Fully submerge the tip of the cleaning stick into the grease, rotate the stick two or three times, and remove it from the grease. Then apply the grease to pad A on the end of the grease tool.

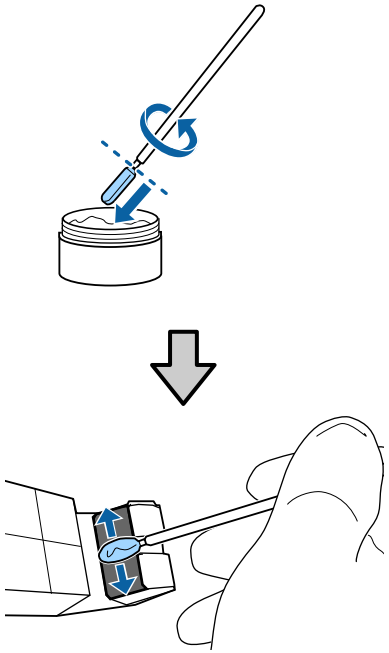


13. Hold the grease tool against the back of carriage rod A and smoothly slide it back and forth twice across the carriage rod to grease the rod, as shown in step 8.
14. To grease carriage rod B, locate pad B that came with your product.

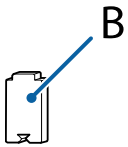


15. Hold pad B against the front of carriage rod B and smoothly slide it back and forth across the carriage rod twice to wipe off any stains.

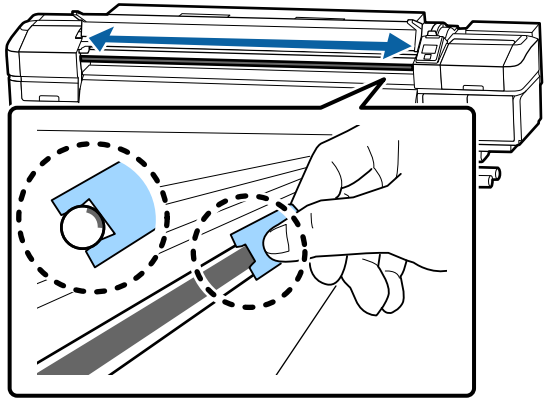

16. Fully submerge the tip of a cleaning stick into the grease, rotate the stick two or three times, and remove it from the grease. Then apply the grease to a new pad B.

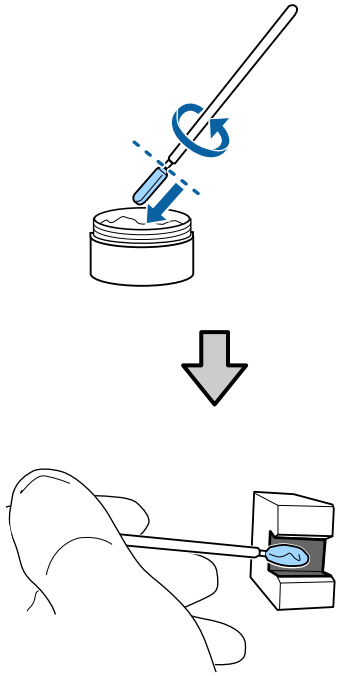

17. Hold pad B against the front of carriage rod B and smoothly slide it back and forth twice across the carriage rod to grease the rod.

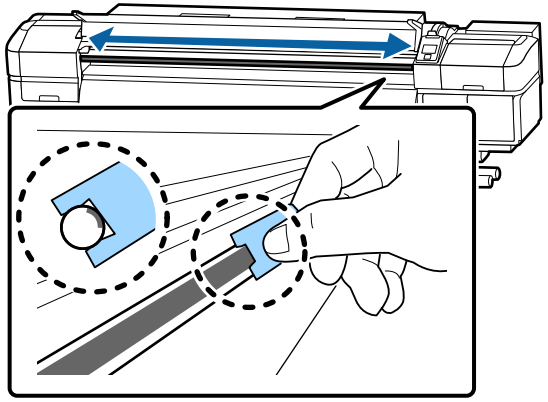

18. Close the front cover and press the **OK** button on the product control panel.

    The carriage moves back and forth.

19. Remove the used pad A from the grease tool, and dispose of pad A and pad B according to the used parts disposal guidelines; see the link below. Close the grease container and store it out of direct sunlight and at room temperature along with the grease tool and other supplies.

Parent topic: Maintenance

Related references

Maintenance Precautions
Maintenance Supplies
Used Parts Disposal Guidelines

Used Parts Disposal Guidelines

Follow these guidelines when disposing of used parts from your product.

Caution: The used parts in this section are classified as industrial waste. Dispose of these items according to your local laws and regulations, such as entrusting it to an industrial waste disposal

company. When handing over any used part that has waste ink on it to the industrial waste disposal company, make sure you include the Safety Data Sheet (SDS) found on the Epson support website.

- Cleaning stick
- Wipes
- Ink cleaner
- Waste ink
- Waste ink bottle
- Wiper unit
- Flushing pad
- Air filter
- Printed media

Parent topic: Maintenance

Moving or Transporting the Product

When moving the product, see these sections to prepare and move the product, and set it back up after moving it.

If you need to transport the product a long distance, contact Epson support.

Prepare to Move the Product
Setting Up the Product After Moving


Prepare to Move the Product

Do the following before moving the product:


Note: Do not disconnect the ink unit from the product. Transport the product with the ink tube connector connected to the back of the product and the connector locked. Also make sure that the fixing wire is securely fastened.

1. Remove any loaded media from the printer and auto take-up reel.
2. Turn off the product.
3. Remove the waste ink bottle.
4. Remove all power cords and cables from the product and the ink unit.
5. Remove the overturn-prevention plates from the ink unit.

6. Release all four of the caster locks on the product.

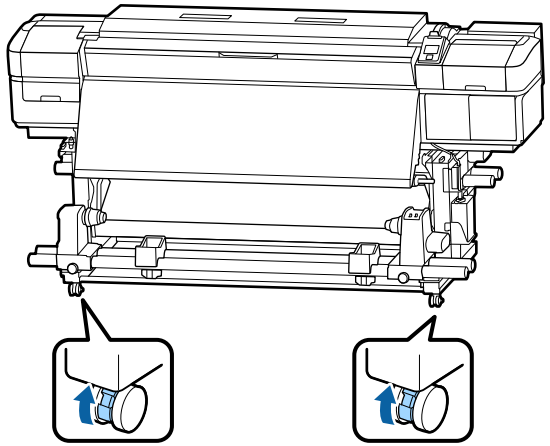

7. Make sure the adjusters rest higher than the casters. If necessary, use the included wrench to loosen the nut on top of each adjuster. Turn the nut on the bottom counter-clockwise to raise the adjuster.

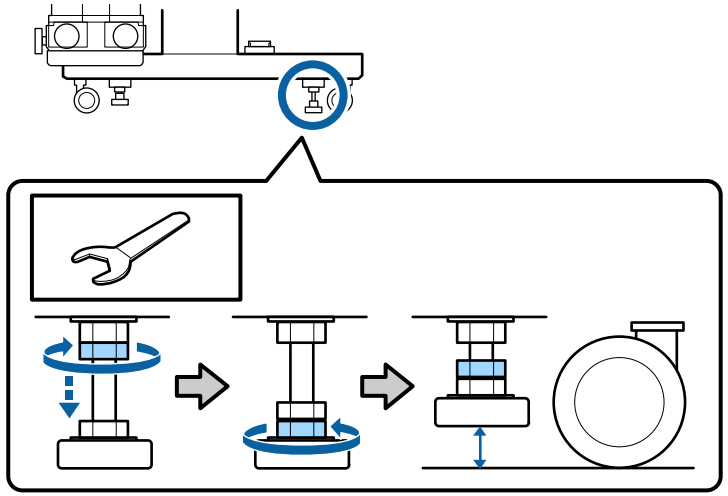

8. Use three people to move the product and the ink unit (2 for the product and 1 for the ink unit).

Caution: Roll the product on the casters for only a short distance over a level floor. Do not transport the product a long distance using the casters. Do not tilt the product more than 10 degrees.

Parent topic: Moving or Transporting the Product

Related references

Maintenance Precautions

Product Parts - Ink Unit

Related tasks

Replacing the Waste Ink Bottle

Related topics

Removing Printed Media

Setting Up the Product After Moving

Follow these steps to set up the product after moving it.

1. Verify that the location is suitable for installation.
2. Install the waste ink bottle.
3. Connect the power cables to an electrical outlet and turn on the product.
4. Load media in the product.
5. Perform a nozzle check and confirm that there are no clogged nozzles.
6. Perform media adjustment and check the print quality.

Parent topic: Moving or Transporting the Product

Related concepts

Print Head Maintenance

Related references

Maintenance Precautions

Related tasks

Replacing the Waste Ink Bottle

Solving Problems

Check these sections for solutions to problems you may have using your product.

Uninstall Your Product Software
Product Status Messages
Solving Printer Problems
Solving Printing Problems
Solving Print Quality Problems
Where to Get Help

Uninstall Your Product Software

If you have a problem that requires you to uninstall and re-install your software, follow the instructions for your operating system.

Uninstalling Product Software - Windows
Uninstalling Product Software - Mac

Parent topic: Solving Problems

Uninstalling Product Software - Windows

You can uninstall and then re-install your printer software to solve certain problems.

1. Turn off the product.
2. Disconnect any interface cables.
3. Do one of the following:
   - **Windows 10**: Right-click and select **Control Panel** > **Programs** > **Programs and Features**. Select the uninstall option for your Epson product, then select **Uninstall/Change**.

     Note: If you see a **User Account Control** window, click **Yes** or **Continue**.

     Select your product again, if necessary, then select **OK**, and click **Yes** to confirm the uninstallation.
   - **Windows 8.x**: Navigate to the **Apps** screen and select **Control Panel** > **Programs** > **Programs and Features**. Select the uninstall option for your Epson product, then select **Uninstall/Change**.

Note: If you see a **User Account Control** window, click **Yes** or **Continue**.

Select your product again, if necessary, then select **OK**, and click **Yes** to confirm the uninstallation.

- **Windows (other versions)**: Click  or **Start**, and select **All Programs** or **Programs**. Select **Epson**, select your product, then click **EPSON Printer Software Uninstall**.

  Note: If you see a **User Account Control** window, click **Yes** or **Continue**.

  In the next window, select your product and click **OK**. Then follow any on-screen instructions.

4. Restart your computer, then re-install your software.

Note: If re-installing your product software does not solve a problem, contact Epson support.

Parent topic: Uninstall Your Product Software

Uninstalling Product Software - Mac

In most cases, you do not need to uninstall your product software before re-installing it. However, you can download the Uninstaller utility from the Epson support website to uninstall your product software as described here.

Note: If re-installing your product software does not solve a problem, contact Epson support.

1. To download the Uninstaller utility, visit epson.com/support (U.S.), epson.ca/support (Canada), or epson.com.jm/support (Caribbean) and select your product.
2. Click **Downloads**.
3. Select your operating system, click **Utilities**, locate the Uninstaller utility, and click **Download**. (If you do not see an Uninstaller utility, search for "Uninstaller" using the site search field.)
4. Run the file you downloaded.
5. Double-click the **Uninstaller** icon.
6. In the Epson Uninstaller screen, select the checkbox for each software program you want to uninstall.
7. Click **Uninstall**.
8. Follow the on-screen instructions to uninstall the software.

9. Reinstall your product software.

Note: If you uninstall the printer driver and your product name remains in the **Print & Fax**, **Print & Scan**, or **Printers & Scanners** window, select your product name and click the **–** (remove) icon to remove it.

Parent topic: Uninstall Your Product Software

Product Status Messages

You can often diagnose problems with your product by checking the messages or icons on its LCD screen.

LCD screen message	Solution
Prepare empty waste ink bottle.	The waste ink bottle is almost full. Make sure you have a replacement waste ink bottle handy.
Ink Supply Unit Error Ink supply unit cannot be recognized. Re-insert or replace it.	Remove and reinstall the ink pack. If the error recurs, replace the ink pack with a new one. Condensation may have formed inside the pack. Leave the pack at room temperature for at least four hours before installing it.
Ink Supply Unit Error Ink supply unit cannot be detected. Re-insert or replace it.	
Cleaning Ink Expended Replace cleaning supply unit.	Remove and reinstall the cleaning pack. If the error recurs, insert a new cleaning pack. Condensation may have formed inside the pack. Leave the cleaning pack at room temperature for at least four hours before installing it.
Ink Low	The ink is low. Make sure you have a replacement ink pack handy.
Warming Up... Force to start printing.	One or more heaters is warming up to the specified temperature. To start printing without waiting for the heater to warm up, press the **OK** button.
Command Error Check print settings on RIP.	Press the **II**·🗑 pause/cancel button and select **Job Cancel**. Make sure the installed RIP software is compatible with the product.
Clogged nozzles detected. Cleaning recommended.	Perform head cleaning if necessary.

LCD screen message	Solution
F/W Install Error Firmware update failed. Restart the printer.	Turn off the product, wait a few minutes, and turn it on again. Then reinstall the firmware again. If this message persists, contact Epson for support.
Print head is nearing end of service life.	The print head is nearing the end of its service life. Contact Epson for support.
Auto Take-up Reel Unit stopped.	Press the **II**·🗑 pause/cancel button and select **Job Cancel** to cancel printing. Then set the **Auto** switch on the auto take-up reel to the **off** position, set it back to the original position, and reattach the media to the auto take-up reel.
Media Size Error Load correct size media.	Raise the media loading lever and remove the currently loaded media. Be sure the media is at least 11.8 inches (300 mm) wide. If this message appears even when the media is the correct width, turn off the **Media Size Check** setting and try printing again.
Media Sensor Error Loaded media or sensor has a problem. Refer to manual for error details.	Press the **II**·🗑 pause/cancel button to clear the message. **Auto Nozzle Check** and automatic media adjustment in Easy Media Setup are not available under the following conditions: • Loaded media is transparent or colored • Loaded media has an uneven surface • Loaded media bleeds through easily • **Platen Gap** setting is set to **2.5** • The printer is exposed to direct sunlight or interference from other ambient light sources If necessary, set the **Auto Nozzle Check** and **Media Adjust** settings manually.
Media Sensor Error Refer to manual for error details. Adjust manually?	
Roll Type Error Release and then reset the media loading lever, then match Roll Type setting to actual media.	Make sure the **Roll Type** setting matches the loaded roll type.
Press maintenance and perform Head Maintenance.	This message is displayed when regular cleaning has not been performed for more than one month.

LCD screen message	Solution
3 layer printing is only available with 2 Head Mode	Set the product to use both print heads by selecting **2 Heads Mode** as the **Head Mode** setting in the Printer Setup menu.
Maintenance Request Replace Part Now or Replace Part Soon XXXXXXXXXX	The product part indicated is nearing or at the end of its service life. Contact Epson for support and provide them with the service code shown on the LCD screen. You must replace the part before printing again. If you continue to print, a call for service occurs.
Call For Service XXX Error XXX Power off and then on. If this doesn't work, note the code and call for service.	A call for service occurs when: • The power cable is not connected securely • An error occurs that cannot be cleared When a call for service has occurred, the printer automatically stops printing. Turn off the printer, disconnect the power cable from both the outlet and the printer, and then reconnect them. Turn the printer on and off several times. If the same call for service is displayed on the LCD screen, contact Epson for support and provide them with the service code shown on the LCD screen.

Parent topic: Solving Problems

Related concepts

Print Head Maintenance

Related references

Where to Get Help
Printer Setup Menu Settings
Consumables and Replacement Parts

Related tasks

Replacing the Waste Ink Bottle
Replacing the Ink Packs

Solving Printer Problems

Check these sections if you have problems operating your product.

Printer Does Not Turn On
LCD Screen Shuts Off

After Heater Shuts Off
Forgot the Administrator Password
Red Light Shines Inside the Printer

Parent topic: Solving Problems

Printer Does Not Turn On

If the printer does not turn on, try these solutions:

- Make sure the power cable is securely connected.
- Make sure the power outlet works by connecting the power cable for another electronic device.

Parent topic: Solving Printer Problems

LCD Screen Shuts Off

If the LCD screen shuts off intermittently, the printer may be in sleep mode. Try these solutions:

- Press any of the buttons on the control panel to reactivate the display. Then perform a hardware operation such as opening the printer cover or sending a job to the printer.
- You can adjust the delay time before the product enters sleep mode in the Printer Setup menu.

Parent topic: Solving Printer Problems

Related references

Printer Setup Menu Settings

After Heater Shuts Off

If the after heater turns off automatically, try these solutions:

- Press any of the buttons on the control panel to reactivate the display. Then perform a hardware operation such as opening the printer cover or sending a job to the printer.
- You can adjust the time before the after heater turns off in the control panel to lengthen the time before they turn off automatically.
- You can adjust the delay time before the product enters sleep mode in the Printer Setup menu.

Parent topic: Solving Printer Problems

Related references

Printer Setup Menu Settings

Forgot the Administrator Password

If you forgot the administrator password you created during network setup, contact Epson for support.

Parent topic: Solving Printer Problems

Related references

Where to Get Help

Red Light Shines Inside the Printer

The red light always shines inside the printer. This is normal.

Parent topic: Solving Printer Problems

Solving Printing Problems

Check these sections if you have problems printing with your product.

Nothing Prints
Cannot Print Over a Network
Print Head Moves But Nothing Prints
Printing Continues After Media Roll Empties
Removing Jammed Media

Parent topic: Solving Problems

Nothing Prints

If you have sent a print job and nothing prints, try these solutions:

- Make sure your printer is turned on.
- Make sure any interface cables are connected securely at both ends. If you have a spare cable, try connecting with the spare cable.
- Check the model and specifications of the interface cable to see if the cable is appropriate for your computer and printer.
- If you connected your printer to a USB hub, make sure it is a first-tier hub. If it still does not print, connect your printer directly to your computer instead of the hub.
- Make sure the USB hub is recognized correctly on the computer. Disconnect all USB hubs from the computer and connect the printer directly to the computer's USB port.
- Make sure the USB cable length does not exceed 10 feet (3 m).

Parent topic: Solving Printing Problems

Cannot Print Over a Network

If you cannot print over a network, try these solutions:

- Make sure that your printer is turned on.
- If you are using TCP/IP, make sure the printer's IP address is set correctly for your network. If your network does not assign IP addresses using DHCP, set the IP address manually.
- Check your wired LAN router or access point to see if the LED for the port to which your printer is connected is on or flashing. If the link LED is off, try the following:
  - Make sure the Ethernet cable is securely connected to your printer and to your router, access point, switch, or hub.
  - Try connecting your printer to a different port or a different router, access point, switch, or hub.
  - Try connecting with a different Ethernet cable.
  - Try printing to your printer from another computer on the network.
  - Try connecting your printer directly to the computer using a USB cable.

Parent topic: Solving Printing Problems

Print Head Moves But Nothing Prints

If the print head is moving and nothing prints, try these solutions:

- Print a nozzle check pattern. If the pattern does not print correctly, clean the print head again. (If the printer has not been used for a long time the nozzles may be clogged.)
- If you see the message **Circulating ink** on the product's LCD screen, the printer is automatically circulating the White or Metallic Silver ink packs to prevent sedimentation. Wait a few moments for the message to disappear or press the **II**·🗑 pause/cancel to cancel the process.

Parent topic: Solving Printing Problems

Related concepts

Print Head Maintenance

Printing Continues After Media Roll Empties

If printing does not stop when the media roll ends, make sure the **Media End Check** setting is set to **On**. For best results, leave this setting turned on.

Parent topic: Solving Printing Problems

Related references

Printer Setup Menu Settings

Removing Jammed Media

If media jams in the printer, check the following:


- Make sure the media is not curled, creased, or folded on the leading edge. Do not use media that exhibits these problems.
- Check the media specifications to make sure you can use the media with your printer and your RIP software. Check the RIP software manufacturers media guidelines.

Follow the steps here if media becomes jammed in the product.


1. Turn off the printer.

   Note: If you see a message on the product control panel and the product will not turn off, unplug the power cable.

2. Open the front cover.

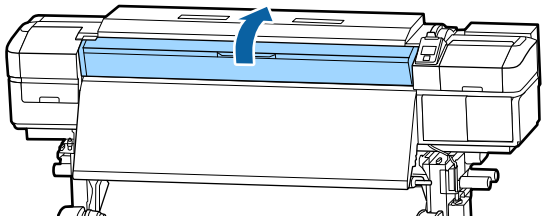


3. Grasp the tabs on the media holding plates and slide them to the left and right sides.

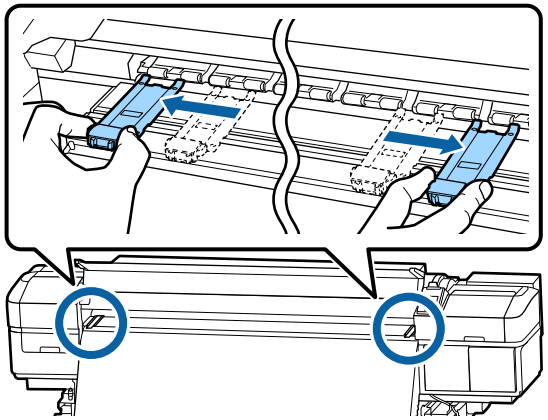


Caution: If the media holding plates are deformed or damaged, do not continue to use them or you could damage the pressure rollers or print heads. Replace the media holding plates before continuing with these steps to remove jammed media.


4. If the print head is over the media, move it away from the jam area by hand.

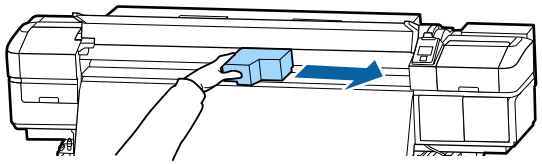

5. Raise the media loading lever.

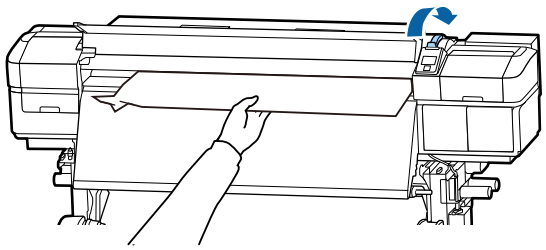

6. Pull the media to the cutter groove and cut off the torn or creased media from the roll.

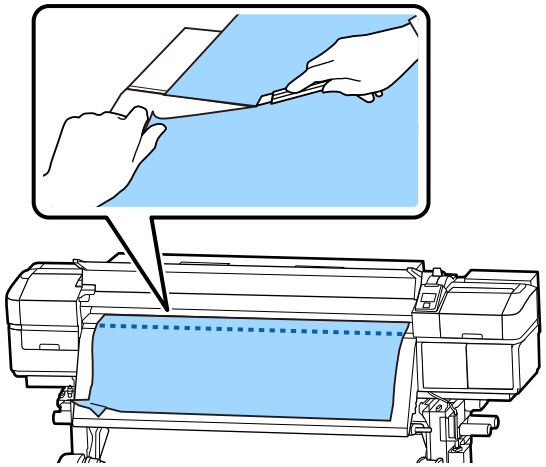

7. Manually rewind the media.
8. Remove any media that remains inside the product.
9. Turn the product back on, load media, run a nozzle check and, if necessary, clean the print heads.

   Caution: Do not leave the product turned off with the print heads in an uncapped position for an extended period. The print heads may dry out and the product may not print properly.

Parent topic: Solving Printing Problems

Related concepts
Print Head Maintenance

Related references
Media Setup Menu Settings

Related tasks
Loading Media
Replacing the Media Edge Plates

Related topics
Removing Printed Media

Solving Print Quality Problems

Check these sections if you have problems with print quality.

Nozzle Check Pattern Prints Incorrectly
Overall Print Quality Is Poor
Image Is Not Positioned Correctly On the Media

Parent topic: Solving Problems

Nozzle Check Pattern Prints Incorrectly

If the nozzle check pattern does not print correctly, try these solutions:

- Clean the print head and print the check pattern again.
- If the printer has not been used for a long time, nozzles may be dried and clogged. Turn the printer on at least once every two weeks to prevent the nozzles from clogging.

Parent topic: Solving Print Quality Problems

Related tasks
Cleaning the Print Head Nozzles
Checking for Clogged Print Head Nozzles

Overall Print Quality Is Poor

If you notice that your print quality is uneven, too light, too dark, or there are vertical or horizontal lines in the print (banding), try these solutions:

- Run a nozzle check to see if any of the print head nozzles are clogged. Then clean the print head, if necessary.
- Align the print head.
- Perform Feed Adjustment for the media. For the most accurate adjustment, print a test pattern using the **Manual > 500mm Pattern** setting. The same media in a different width may require different adjustment values.
- Raise the temperature of the after heater, and give the after heater and your media time to warm up before printing again.
- Make sure the media settings in your RIP software are correct for the media you are using.
- Set the **Head Movement** setting to **Printer Full Width** on the product control panel for higher quality printouts.

- If you are comparing the print result with the image on your computer screen, the colors may not match. Since monitors and printers produce colors differently, printed colors and screen colors do not always look the same.
- Make sure that the front cover is closed. Do not open any covers during printing. This can cause the print head to stop abruptly, resulting in uneven color.
- If you are printing with the White or Metallic Silver ink packs, remove and shake the ink pack, reinstall the ink pack, and perform **Ink Circulation** from the Maintenance menu several times (SC-S80600L).

Parent topic: Solving Print Quality Problems

Related concepts

Print Head Maintenance

Related references

Media Setup Menu Settings

Maintenance Menu Settings

Consumables and Replacement Parts

Related tasks

Adjusting Heating and Drying During Printing

Image Is Not Positioned Correctly On the Media

If the printed image is not positioned correctly on your media, try these solutions:

- Make sure you loaded the media correctly and selected the correct margin and start positions for it on the product control panel.
- Turn on the **Media Skew Check** and **Media Size Check** settings on the product control panel to prevent your image from printing outside the printable area.

Parent topic: Solving Print Quality Problems

Related references

Printer Setup Menu Settings

Related tasks

Loading Media

Where to Get Help

Epson provides technical support and information on the installation, configuration, and operation of professional printing products through the Epson Preferred Limited Warranty Plan. Dial (888) 377-6611,

6 AM to 6 PM, Pacific Time, Monday through Friday. Days and hours of support are subject to change without notice.

Note: If you experience difficulty with the toll-free number, call (562) 276-1305 (U.S.).

Before you call, make sure you have your printer serial number and proof of purchase.

Visit epson.com/support (U.S.) or epson.ca/support (Canada) and select your product for solutions to common problems. You can download drivers, firmware, and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

Note: For help using any other software on your system, see the documentation for that software for technical support information.

Purchase Supplies and Accessories

You can purchase genuine Epson ink, paper, and accessories from an Epson authorized reseller. To find the nearest reseller, visit proimaging.epson.com (U.S.) or proimaging.epson.ca (Canada), select your product series and product, and click the **Where to Buy** button. Or call 800-GO-EPSON (800-463-7766) in the U.S. or 800-807-7766 in Canada.

Parent topic: Solving Problems

Technical Specifications

These sections list the technical specifications for your product.

Note: Epson offers a recycling program for end of life Epson products. Please go to this site (U.S) or this site (Canada) for information on how to return your Epson products for proper disposal.

Epson Control Dashboard System Requirements
Printing Specifications
Paper Specifications
Ink Pack Specifications
Electrical Specifications
Environmental Specifications
Dimension Specifications
Interface Specifications
Network Interface Specifications
Safety and Approvals Specifications

Epson Control Dashboard System Requirements

To use Epson Control Dashboard, your computer should meet these requirements.

Note: Make sure to disable your computer's hibernate or sleep mode or the software will not be able to monitor your printer correctly.

Windows

Microsoft Windows OS version (32- and 64-bit compatible)	Windows 7, Windows 8.x, Windows 10
CPU	Intel Core 2 Duo 3.0 GHZ or better
Memory	4GB or more
Hard disk space available	2GB or more

Interface	High-Speed USB port compatible with USB 2.0 Specification
	Ethernet 1000BASE-T
Display resolution	SXGA (1280 × 1024) or higher
Browser	Windows Internet Explorer (latest version recommended), Microsoft Edge

OS X

OS X version	10.7.x, 10.8.x, 10.9.x, 10.10.x, 10.11.x
CPU	Intel Core 2 Duo 3.0 GHZ or better
Memory	4GB or more
Hard disk space available	2GB or more
Interface	High-Speed USB port compatible with USB 2.0 Specification
	Ethernet 1000BASE-T
Display resolution	SXGA (1280 × 1024) or higher
Browser	Safari 6 or later

Note: For the latest product software available for your operating system, visit the Epson support site at epson.com/support (U.S.), epson.ca/support (Canada), or epson.com.jm/support (Caribbean), select your product, and select **Downloads**.

Parent topic: Technical Specifications

Printing Specifications

Printing method	On-demand ink jet
Nozzle configuration	**SC-S60600L**: 360 nozzles × 2 × 2 rows × 4 colors **SC-S80600L**: 360 nozzles × 2 rows × 10 colors
Resolution	1440 × 1440 dpi maximum

Control code	ESC/P raster (undisclosed command)
Media feed method	Friction feed
Built-in memory	**SC-S60600L**: Main memory: 512MB Network: 128MB **SC-S80600L**: Main memory: 2GB Network: 128MB

Parent topic: Technical Specifications

Paper Specifications

Print quality is greatly affected by the type and quality of media used. Always test a sample of media before purchasing large quantities or printing large jobs.

Note: Do not use media that is wrinkled, scratched, torn, or dirty.

Roll media

Roll core size	2 or 3 inches (50.8 to 76.2 mm)
Roll outer diameter	Up to 9.8 inches (250 mm) In auto take-up reel: up to 7.9 inches (200 mm)
Media width	11.8 to 64.0 inches (300 to 1626 mm)
Media thickness	Up to 0.04 inch (1 mm)
Roll weight	Up to 99.2 lb (45 kg)

Cut media

Media width	11.8 to 64 inches (300 to 1626 mm)
Media length	19.7 inches (500 mm) or longer
Media thickness	Up to 0.04 inch (1 mm)

Parent topic: Technical Specifications

Ink Pack Specifications

Note: This printer is designed for use with Epson ink packs only, not third-party ink packs or ink. Other brands of ink supplies are not compatible and, if described as compatible, may not function properly or continuously.

The included initial ink packs are designed for reliable printer setup and cannot be used as replacement ink packs or resold. After setup, the remaining ink is available for printing. Yields are based on ISO 24711 in default mode, printing continuously. Yields vary due to print images, settings, and temperatures. Printing infrequently or primarily with one color reduces yields. All ink packs must be installed with ink for printing and printer maintenance. For print quality, some ink remains in replaced ink packs.

Color	**SureColor S60600L**:
	Black, Cyan, Magenta, Yellow
	SureColor S80600L:
	Orange, Light Black, Black, Cyan, Magenta, Yellow, Red, Light Cyan, Light Magenta, White/Metallic Silver
Ink pack life	Opened package: 6 months from date installed
	Unopened package: do not use if the date on the package and ink pack has expired (when stored at normal temperature)
Storage temperature	Uninstalled:
	–4 to 104 ºF (–20 to 40 ºC); within 4 days at –4 ºF (–20 ºC), within 1 month at 104 ºF (40 ºC)
	Installed:
	–4 to 104 ºF (–20 to 40 ºC); within 4 days at –4 ºF (–20 ºC), within 4 days at 104 ºF (40 ºC)
	Transporting:
	–4 to 140 ºF (–20 to 60 ºC); within 4 days at –4 ºF (–20 ºC), within 1 month at 104 ºF (40 ºC), within 72 hours at 140 ºF (60 ºC)

Parent topic: Technical Specifications

Related references

Consumables and Replacement Parts

Electrical Specifications

Rated voltage (total for AC inlets #1 and #2; including additional print drying system [SureColor S60600L])	AC 100 to 120 V AC 220 to 240 V
Rated frequency (total for AC inlets #1 and #2)	50/60 Hz
Rated frequency (for additional print drying system [SureColor S60600L])	50/60 Hz
Rated current (total for AC inlets #1 and #2)	100 to 120 V model: 10 A 220 to 240 V model: 5 A
Rated current (for additional print drying system [SureColor S60600L])	100 to 120 V model: 1 A 220 to 240 V model: 0.5 A
Power consumption (total for AC inlets #1 and #2; including additional print drying system [SureColor S60600L])	**SureColor S60600L**: Printing: approximately 820 W Ready mode: approximately 480 W Sleep mode: approximately 22 W Power off mode: approximately 1.5 W **SureColor S80600L**: Printing: approximately 640 W Ready mode: approximately 400 W Sleep mode: approximately 24 W Power off mode: approximately 1.5 W

Parent topic: Technical Specifications

Environmental Specifications

Temperature	Operating: 59 to 95 °F (15 to 35 °C); 68 to 89.6 °F (20 to 32 °C) recommended
	Storage: –4 to 104 °F (–20 to 40 °C)
	1 month at 104 °F (40 °C)
Humidity	Operating: 20 to 80% RH; 40 to 60% RH recommended
(non-condensing)	Storage: 5 to 85% RH

Parent topic: Technical Specifications

Dimension Specifications

Height	Stored: 52.7 inches (1338 mm)
	Printing: 65.8 inches (1671 mm)
Width	Stored: 108.9 inches (2766 mm)
	Printing: 108.9 inches (2766 mm)
Depth	**SureColor S60600L**:
	Stored: 38.3 inches (972 mm)
	Printing: 45.2 inches (1147 mm)
	SureColor S80600L:
	Stored: 34.6 inches (880 mm)
	Printing: 42.9 inches (1090 mm)
Weight	**SureColor S60600L**:
(without ink packs)	740.8 lb (336 kg)
	SureColor S80600L:
	723.1 lb (328 kg)

Parent topic: Technical Specifications

Interface Specifications

Interface type	Hi-Speed USB; compatible with USB 2.0 Specification

Parent topic: Technical Specifications

Network Interface Specifications

Ethernet

Communication mode	Ethernet 100BASE-TX/10000BASE-T Use a shielded twisted pair cable (category 5e or better).

Parent topic: Technical Specifications

Safety and Approvals Specifications

United States	Safety: UL60950-1
	EMC: FCC part 15 Subpart B class A
Canada	Safety: CAN/CSA C22.2 No. 60950-1
	EMC: CAN/CSA-CEI/IEC CISPR 22 Class A

Parent topic: Technical Specifications

Notices

Check these sections for important notices about your product.

Note: Epson offers a recycling program for end of life Epson products. Please go to this site (U.S) or this site (Canada) for information on how to return your Epson products for proper disposal.

Important Safety Instructions
Software License Terms
FCC Compliance Statement
Binding Arbitration and Class Waiver
Trademarks
Copyright Notice

Important Safety Instructions

Before using your Epson product, read and follow these safety instructions.

General Product Safety Instructions
Ink Pack Safety Instructions

Parent topic: Notices

General Product Safety Instructions

- Be sure to follow all warnings and instructions marked on the product.
- Use only the type of power source indicated on the product's label.
- Use only the power cord that comes with the product. Use of another cord may cause fires or shock. Do not use the cord with any other equipment.
- Place the product near a wall outlet where the plug can be easily unplugged.
- This product has two power systems. Unplug the two power cords during maintenance to avoid the risk of electric shock. If you are using the print drying system, unplug the power cord for it as well.
- Connect your product to a properly grounded power outlet. Avoid plugging the product into an outlet on the same circuit as a photo copier or air control system that regularly switches on and off, or on an outlet controlled by a wall switch or timer.
- Make sure the plug is fully inserted into the outlet.

- Do not let the power cord become damaged or frayed. Place it to avoid abrasions, cuts, fraying, crimping, and kinking. Do not place objects on top of it and do not allow it to be stepped on or run over. Be careful to keep the cord straight at each end.
- If you use an extension cord with the product, make sure the total ampere rating of the devices plugged into the extension cord does not exceed the cord's ampere rating. Also, make sure the total ampere rating of all devices plugged into the wall outlet does not exceed the wall outlet's ampere rating.
- If damage occurs to the plug, replace the cord set or consult a qualified electrician. If there are fuses in the plug, make sure you replace them with fuses of the correct size and rating.
- Always turn off the product using the power button, and wait until the power light stops flashing before unplugging the product or cutting off power to the electrical outlet.
- If you will not be using the product for a long period, unplug the power cord from the electrical outlet.
- Place the product on a flat, stable surface that extends beyond its base in all directions. It will not operate properly if it is tilted or at an angle.
- Avoid locations that are subject to rapid changes in heat or humidity, shocks or vibrations, or dust.
- Do not place or store the product outdoors.
- Do not place the product near excessive heat sources or in direct sunlight.
- Leave enough room around the product for sufficient ventilation. Do not block or cover openings in the cabinet or insert objects through the slots.
- Keep the product away from potential sources of electromagnetic interference, such as loudspeakers or the base units of cordless telephones.
- When connecting the product to a computer or other device with a cable, ensure the correct orientation of the connectors. Each connector has only one correct orientation. Inserting a connector in the wrong orientation may damage both devices connected by the cable.
- Do not move the print head by hand; this may damage the product.
- Do not spill liquid on the product or use the product with wet hands.
- Do not insert or unplug the plug with wet hands.
- Do not use aerosol products that contain flammable gases inside or around the product. Doing so may cause fire.
- Except as specifically explained in your documentation, do not attempt to service the product yourself.
- Unplug the product and refer servicing to qualified service personnel under the following conditions: if the power cord or plug is damaged; if liquid has entered the product; if the product has been dropped

or the cabinet damaged; if the product does not operate normally or exhibits a distinct change in performance. Adjust only those controls that are covered by the operating instructions.

- When storing or transporting the product, do not tilt it, stand it on its side, or turn it upside down; otherwise ink may leak.

Note: The lithium batteries in this product contain Perchlorate Material - special handling may apply. Click here for details.

Parent topic: Important Safety Instructions

Ink Pack Safety Instructions

- Keep ink packs out of the reach of children and do not drink the ink.
- Be careful when you handle used ink packs; there may be ink remaining around the ink supply port. If ink gets on your skin, wash it off with soap and water. If it gets in your eyes, flush them immediately with water.
- Wear a mask, gloves, and protective eye wear when replacing the waste ink bottle. Should waste ink get on your skin, immediately wash it off using soap and water. Consult a physician if the skin appears irritated or is discolored. If waste ink gets in your eyes, rinse immediately with water. Failure to observe this precaution could result in bloodshot eyes or mild inflammation. If waste ink is swallowed, consult a physician immediately; do not induce vomiting.
- After replacing the waste ink bottle, wash your hands thoroughly.
- Do not put your hand inside the product or touch any ink packs during printing.
- Install a new ink pack immediately after removing an expended one. Leaving ink packs uninstalled can dry out the print head and may prevent the product from printing.
- Install ink packs in all the ink trays. You cannot print if any of the trays are empty.
- Dried ink on the supply port may cause ink leaks when the ink pack is reinserted and used. Wipe off any excess ink before reinserting.
- Do not insert or remove replacement ink packs during printing.
- Do not remove the transparent seal from the ink supply port. This may cause the ink pack to become unusable.
- The green IC chip on this ink pack retains a variety of ink pack-related information, such as the ink pack status, so that the ink pack may be removed and reinserted freely. Do not touch the green IC chip on the side of the ink pack. This may prevent normal operation and printing.

- If you remove an ink pack for later use, protect the ink supply area from dirt and dust and store it in the same environment as the product. Note that there is a valve in the ink supply port, making covers or plugs unnecessary, but care is needed to prevent the ink from staining items that the ink pack touches. Do not touch the ink pack ink supply port or surrounding area.
- To ensure print quality, use an ink pack before the date printed on its package.
- Do not dismantle or alter an ink pack. This could damage the print head and may prevent the product from printing.
- Do not drop ink packs or bump them against hard objects; otherwise, the ink may leak.
- Store ink packs at room temperature in a location that is not exposed to direct sunlight.
- After bringing an ink pack inside from a cold storage site, allow it to warm up at room temperature for at least four hours before using it.

Parent topic: Important Safety Instructions

Software License Terms

Bonjour

This printer product includes the open source software programs which apply the Apple Public Source License Version1.2 or its latest version ("Bonjour Programs").

We provide the source code of the Bonjour Programs pursuant to the Apple Public Source License Version1.2 or its latest version until five (5) years after the discontinuation of same model of this printer product. If you desire to receive the source code of the Bonjour Programs, contact Epson support.

You can redistribute Bonjour Programs and/or modify it under the terms of the Apple Public Source License Version1.2 or its latest version.

These Bonjour Programs are WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

The Apple Public Source License Version1.2 is as follows. You also can see the Apple Public Source License Version1.2 at http://www.opensource.apple.com/apsl/.

APPLE PUBLIC SOURCE LICENSE

Version 2.0 - August 6, 2003

1. General; Definitions. This License applies to any program or other work which Apple Computer, Inc. ("Apple") makes publicly available and which contains a notice placed by Apple identifying such program or work as "Original Code" and stating that it is subject to the terms of this Apple Public Source License version 2.0 ("License"). As used in this License:

1.1 "Applicable Patent Rights" mean:(a) in the case where Apple is the grantor of rights, (I) claims of patents that are now or hereafter acquired, owned by or assigned to Apple and (ii) that cover subject matter contained in the Original Code, but only to the extent necessary to use, reproduce and/or distribute the Original Code without infringement; and (b) in the case where You are the grantor of rights, (I) claims of patents that are now or hereafter acquired, owned by or assigned to You and (ii) that cover subject matter in Your Modifications, taken alone or in combination with Original Code.

1.2 "Contributor" means any person or entity that creates or contributes to the creation of Modifications.

1.3 "Covered Code" means the Original Code, Modifications, the combination of Original Code and any Modifications, and/or any respective portions thereof.

1.4 "Externally Deploy" means:(a) to sublicense, distribute or otherwise make Covered Code available, directly or indirectly, to anyone other than You; and/or (b) to use Covered Code, alone or as part of a Larger Work, in any way to provide a service, including but not limited to delivery of content, through electronic communication with a client other than You.

1.5 "Larger Work" means a work which combines Covered Code or portions thereof with code not governed by the terms of this License.

1.6 "Modifications" mean any addition to, deletion from, and/or change to, the substance and/or structure of the Original Code, any previous Modifications, the combination of Original Code and any previous Modifications, and/or any respective portions thereof. When code is released as a series of files, a Modification is:(a) any addition to or deletion from the contents of a file containing Covered Code; and/or (b) any new file or other representation of computer program statements that contains any part of Covered Code.

1.7 "Original Code" means (a) the Source Code of a program or other work as originally made available by Apple under this License, including the Source Code of any updates or upgrades to such programs or works made available by Apple under this License, and that has been expressly identified by Apple as such in the header file(s) of such work; and (b) the object code compiled from such Source Code and originally made available by Apple under this License.

1.8 "Source Code" means the human readable form of a program or other work that is suitable for making modifications to it, including all modules it contains, plus any associated interface definition files, scripts used to control compilation and installation of an executable (object code).

1.9 "You" or "Your" means an individual or a legal entity exercising rights under this License. For legal entities, "You" or "Your" includes any entity which controls, is controlled by, or is under common control with, You, where "control" means (a) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (b) ownership of fifty percent (50%) or more of the outstanding shares or beneficial ownership of such entity.

2. Permitted Uses; Conditions & Restrictions. Subject to the terms and conditions of this License, Apple hereby grants You, effective on the date You accept this License and download the Original Code, a

world-wide, royalty-free, non-exclusive license, to the extent of Apple's Applicable Patent Rights and copyrights covering the Original Code, to do the following:

2.1 Unmodified Code. You may use, reproduce, display, perform, internally distribute within Your organization, and Externally Deploy verbatim, unmodified copies of the Original Code, for commercial or non-commercial purposes, provided that in each instance:

(a) You must retain and reproduce in all copies of Original Code the copyright and other proprietary notices and disclaimers of Apple as they appear in the Original Code, and keep intact all notices in the Original Code that refer to this License; and

(b) You must include a copy of this License with every copy of Source Code of Covered Code and documentation You distribute or Externally Deploy, and You may not offer or impose any terms on such Source Code that alter or restrict this License or the recipients' rights hereunder, except as permitted under Section 6.

2.2 Modified Code. You may modify Covered Code and use, reproduce, display, perform, internally distribute within Your organization, and Externally Deploy Your Modifications and Covered Code, for commercial or non-commercial purposes, provided that in each instance You also meet all of these conditions:

(a) You must satisfy all the conditions of Section 2.1 with respect to the Source Code of the Covered Code;

(b) You must duplicate, to the extent it does not already exist, the notice in Exhibit A in each file of the Source Code of all Your Modifications, and cause the modified files to carry prominent notices stating that You changed the files and the date of any change; and

(c) If You Externally Deploy Your Modifications, You must make Source Code of all Your Externally Deployed Modifications either available to those to whom You have Externally Deployed Your Modifications, or publicly available. Source Code of Your Externally Deployed Modifications must be released under the terms set forth in this License, including the license grants set forth in Section 3 below, for as long as you Externally Deploy the Covered Code or twelve (12) months from the date of initial External Deployment, whichever is longer. You should preferably distribute the Source Code of Your Externally Deployed Modifications electronically (e.g. download from a web site).

2.3 Distribution of Executable Versions. In addition, if You Externally Deploy Covered Code (Original Code and/or Modifications) in object code, executable form only, You must include a prominent notice, in the code itself as well as in related documentation, stating that Source Code of the Covered Code is available under the terms of this License with information on how and where to obtain such Source Code.

2.4 Third Party Rights. You expressly acknowledge and agree that although Apple and each Contributor grants the licenses to their respective portions of the Covered Code set forth herein, no assurances are provided by Apple or any Contributor that the Covered Code does not infringe the patent or other intellectual property rights of any other entity. Apple and each Contributor disclaim any liability to You for

claims brought by any other entity based on infringement of intellectual property rights or otherwise. As a condition to exercising the rights and licenses granted hereunder, You hereby assume sole responsibility to secure any other intellectual property rights needed, if any. For example, if a third party patent license is required to allow You to distribute the Covered Code, it is Your responsibility to acquire that license before distributing the Covered Code.

3. Your Grants. In consideration of, and as a condition to, the licenses granted to You under this License, You hereby grant to any person or entity receiving or distributing Covered Code under this License a non-exclusive, royalty-free, perpetual, irrevocable license, under Your Applicable Patent Rights and other intellectual property rights (other than patent) owned or controlled by You, to use, reproduce, display, perform, modify, sublicense, distribute and Externally Deploy Your Modifications of the same scope and extent as Apple's licenses under Sections 2.1 and 2.2 above.

4. Larger Works. You may create a Larger Work by combining Covered Code with other code not governed by the terms of this License and distribute the Larger Work as a single product. In each such instance, You must make sure the requirements of this License are fulfilled for the Covered Code or any portion thereof.

5. Limitations on Patent License. Except as expressly stated in Section 2, no other patent rights, express or implied, are granted by Apple herein. Modifications and/or Larger Works may require additional patent licenses from Apple which Apple may grant in its sole discretion.

6. Additional Terms. You may choose to offer, and to charge a fee for, warranty, support, indemnity or liability obligations and/or other rights consistent with the scope of the license granted herein ("Additional Terms") to one or more recipients of Covered Code. However, You may do so only on Your own behalf and as Your sole responsibility, and not on behalf of Apple or any Contributor. You must obtain the recipient's agreement that any such Additional Terms are offered by You alone, and You hereby agree to indemnify, defend and hold Apple and every Contributor harmless for any liability incurred by or claims asserted against Apple or such Contributor by reason of any such Additional Terms.

7. Versions of the License. Apple may publish revised and/or new versions of this License from time to time. Each version will be given a distinguishing version number. Once Original Code has been published under a particular version of this License, You may continue to use it under the terms of that version. You may also choose to use such Original Code under the terms of any subsequent version of this License published by Apple. No one other than Apple has the right to modify the terms applicable to Covered Code created under this License.

8. NO WARRANTY OR SUPPORT. The Covered Code may contain in whole or in part pre-release, untested, or not fully tested works. The Covered Code may contain errors that could cause failures or loss of data, and may be incomplete or contain inaccuracies. You expressly acknowledge and agree that use of the Covered Code, or any portion thereof, is at Your sole and entire risk. THE COVERED CODE IS PROVIDED "AS IS" AND WITHOUT WARRANTY, UPGRADES OR SUPPORT OF ANY KIND AND APPLE AND APPLE'S LICENSOR(S) (COLLECTIVELY REFERRED TO AS "APPLE" FOR THE PURPOSES OF SECTIONS 8 AND 9) AND ALL CONTRIBUTORS EXPRESSLY DISCLAIM ALL

WARRANTIES AND/OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, OF SATISFACTORY QUALITY, OF FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY, OF QUIET ENJOYMENT, AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. APPLE AND EACH CONTRIBUTOR DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE COVERED CODE, THAT THE FUNCTIONS CONTAINED IN THE COVERED CODE WILL MEET YOUR REQUIREMENTS, THAT THE OPERATION OF THE COVERED CODE WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE COVERED CODE WILL BE CORRECTED. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY APPLE, AN APPLE AUTHORIZED REPRESENTATIVE OR ANY CONTRIBUTOR SHALL CREATE A WARRANTY. You acknowledge that the Covered Code is not intended for use in the operation of nuclear facilities, aircraft navigation, communication systems, or air traffic control machines in which case the failure of the Covered Code could lead to death, personal injury, or severe physical or environmental damage.

9. LIMITATION OF LIABILITY. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL APPLE OR ANY CONTRIBUTOR BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR RELATING TO THIS LICENSE OR YOUR USE OR INABILITY TO USE THE COVERED CODE, OR ANY PORTION THEREOF, WHETHER UNDER A THEORY OF CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE), PRODUCTS LIABILITY OR OTHERWISE, EVEN IF APPLE OR SUCH CONTRIBUTOR HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND NOTWITHSTANDING THE FAILURE OF ESSENTIAL PURPOSE OF ANY REMEDY. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OF LIABILITY OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS LIMITATION MAY NOT APPLY TO YOU. In no event shall Apple's total liability to You for all damages (other than as may be required by applicable law) under this License exceed the amount of fifty dollars ($50.00).

10. Trademarks. This License does not grant any rights to use the trademarks or trade names "Apple", "Apple Computer", "Mac", "Mac OS", "QuickTime", "QuickTime Streaming Server" or any other trademarks, service marks, logos or trade names belonging to Apple (collectively "Apple Marks") or to any trademark, service mark, logo or trade name belonging to any Contributor. You agree not to use any Apple Marks in or as part of the name of products derived from the Original Code or to endorse or promote products derived from the Original Code other than as expressly permitted by and in strict compliance at all times with Apple's third party trademark usage guidelines which are posted at http://www.apple.com/legal/guidelinesfor3rdparties.html.

11. Ownership. Subject to the licenses granted under this License, each Contributor retains all rights, title and interest in and to any Modifications made by such Contributor. Apple retains all rights, title and interest in and to the Original Code and any Modifications made by or on behalf of Apple ("Apple Modifications"), and such Apple Modifications will not be automatically subject to this License. Apple may, at its sole discretion, choose to license such Apple Modifications under this License, or on different terms from those contained in this License or may choose not to license them at all.

12. Termination.

12.1 Termination. This License and the rights granted hereunder will terminate:

(a) automatically without notice from Apple if You fail to comply with any term(s) of this License and fail to cure such breach within 30 days of becoming aware of such breach;

(b) immediately in the event of the circumstances described in Section 13.5(b); or

(c) automatically without notice from Apple if You, at any time during the term of this License, commence an action for patent infringement against Apple; provided that Apple did not first commence an action for patent infringement against You in that instance.

12.2 Effect of Termination. Upon termination, You agree to immediately stop any further use, reproduction, modification, sublicensing and distribution of the Covered Code. All sublicenses to the Covered Code which have been properly granted prior to termination shall survive any termination of this License. Provisions which, by their nature, should remain in effect beyond the termination of this License shall survive, including but not limited to Sections 3, 5, 8, 9, 10, 11, 12.2 and 13. No party will be liable to any other for compensation, indemnity or damages of any sort solely as a result of terminating this License in accordance with its terms, and termination of this License will be without prejudice to any other right or remedy of any party.

13. Miscellaneous.

13.1 Government End Users. The Covered Code is a "commercial item" as defined in FAR 2.101. Government software and technical data rights in the Covered Code include only those rights customarily provided to the public as defined in this License. This customary commercial license in technical data and software is provided in accordance with FAR 12.211 (Technical Data) and 12.212 (Computer Software) and, for Department of Defense purchases, DFAR 252.227-7015 (Technical Data -- Commercial Items) and 227.7202-3 (Rights in Commercial Computer Software or Computer Software Documentation). Accordingly, all U.S. Government End Users acquire Covered Code with only those rights set forth herein.

13.2 Relationship of Parties. This License will not be construed as creating an agency, partnership, joint venture or any other form of legal association between or among You, Apple or any Contributor, and You will not represent to the contrary, whether expressly, by implication, appearance or otherwise.

13.3 Independent Development. Nothing in this License will impair Apple's right to acquire, license, develop, have others develop for it, market and/or distribute technology or products that perform the same or similar functions as, or otherwise compete with, Modifications, Larger Works, technology or products that You may develop, produce, market or distribute.

13.4 Waiver; Construction. Failure by Apple or any Contributor to enforce any provision of this License will not be deemed a waiver of future enforcement of that or any other provision. Any law or regulation which provides that the language of a contract shall be construed against the drafter will not apply to this License.

13.5 Severability. (a) If for any reason a court of competent jurisdiction finds any provision of this License, or portion thereof, to be unenforceable, that provision of the License will be enforced to the maximum extent permissible so as to effect the economic benefits and intent of the parties, and the remainder of this License will continue in full force and effect. (b) Notwithstanding the foregoing, if applicable law prohibits or restricts You from fully and/or specifically complying with Sections 2 and/or 3 or prevents the enforceability of either of those Sections, this License will immediately terminate and You must immediately discontinue any use of the Covered Code and destroy all copies of it that are in your possession or control.

13.6 Dispute Resolution. Any litigation or other dispute resolution between You and Apple relating to this License shall take place in the Northern District of California, and You and Apple hereby consent to the personal jurisdiction of, and venue in, the state and federal courts within that District with respect to this License. The application of the United Nations Convention on Contracts for the International Sale of Goods is expressly excluded.

13.7 Entire Agreement; Governing Law. This License constitutes the entire agreement between the parties with respect to the subject matter hereof. This License shall be governed by the laws of the United States and the State of California, except that body of California law concerning conflicts of law.

Where You are located in the province of Quebec, Canada, the following clause applies: The parties hereby confirm that they have requested that this License and all related documents be drafted in English.

Les parties ont exigé que le présent contrat et tous les documents connexes soient rédigés en anglais.

EXHIBIT A.

"Portions Copyright © 1999-2003 Apple Computer, Inc. All Rights Reserved.

This file contains Original Code and/or Modifications of Original Code as defined in and that are subject to the Apple Public Source License Version 2.0 (the 'License'). You may not use this file except in compliance with the License. Please obtain a copy of the License at http://www.opensource.apple.com/apsl/ and read it before using this file.

The Original Code and all software distributed under the License are distributed on an 'AS IS' basis, WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, AND APPLE HEREBY DISCLAIMS ALL SUCH WARRANTIES, INCLUDING WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT OR NON-INFRINGEMENT. Please see the License for the specific language governing rights and limitations under the License."

Info-ZIP copyright and license

This is version 2007-Mar-4 of the Info-ZIP license. The definitive version of this document should be available at ftp://ftp.info-zip.org/pub/infozip/license.html indefinitely and a copy at http://www.info-zip.org/pub/infozip/license.html.

Copyright © 1990-2007 Info-ZIP. All rights reserved.

For the purposes of this copyright and license, "Info-ZIP" is defined as the following set of individuals:

Mark Adler, John Bush, Karl Davis, Harald Denker, Jean-Michel Dubois, Jean-loup Gailly, Hunter Goatley, Ed Gordon, Ian Gorman, Chris Herborth, Dirk Haase, Greg Hartwig, Robert Heath, Jonathan Hudson, Paul Kienitz, David Kirschbaum, Johnny Lee, Onno van der Linden, Igor Mandrichenko, Steve P. Miller, Sergio Monesi, Keith Owens, George Petrov, Greg Roelofs, Kai Uwe Rommel, Steve Salisbury, Dave Smith, Steven M. Schweda, Christian Spieler, Cosmin Truta, Antoine Verheijen, Paul von Behren, Rich Wales, Mike White.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the above disclaimer and the following restrictions:

1. Redistributions of source code (in whole or in part) must retain the above copyright notice, definition, disclaimer, and this list of conditions.

2. Redistributions in binary form (compiled executables and libraries) must reproduce the above copyright notice, definition, disclaimer, and this list of conditions in documentation and/or other materials provided with the distribution. The sole exception to this condition is redistribution of a standard UnZipSFX binary (including SFXWiz) as part of a self-extracting archive; that is permitted without inclusion of this license, as long as the normal SFX banner has not been removed from the binary or disabled.

3. Altered versions--including, but not limited to, ports to new operating systems, existing ports with new graphical interfaces, versions with modified or added functionality, and dynamic, shared, or static library versions not from Info-ZIP--must be plainly marked as such and must not be misrepresented as being the original source or, if binaries, compiled from the original source. Such altered versions also must not be misrepresented as being Info-ZIP releases--including, but not limited to, labeling of the altered versions with the names "Info-ZIP" (or any variation thereof, including, but not limited to, different capitalizations), "Pocket UnZip," "WiZ" or "MacZip" without the explicit permission of Info-ZIP. Such altered versions are further prohibited from misrepresentative use of the Zip-Bugs or Info-ZIP e-mail addresses or the Info-ZIP URL(s), such as to imply Info-ZIP will provide support for the altered versions.

4. Info-ZIP retains the right to use the names "Info-ZIP," "Zip," "UnZip," "UnZipSFX," "WiZ," "Pocket UnZip," "Pocket Zip," and "MacZip" for its own source and binary releases.

Parent topic: Notices

FCC Compliance Statement

For United States Users

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful

interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

For Canadian Users

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

WARNING

This is a Class A product. In a domestic environment this product may cause radio interference, in which case the user may be required to take adequate measures.

Parent topic: Notices

Binding Arbitration and Class Waiver

1. DISPUTES, BINDING INDIVIDUAL ARBITRATION, AND WAIVER OF CLASS ACTIONS AND CLASS ARBITRATIONS

1.1 **Disputes**. The terms of this Section 1 shall apply to all Disputes between you and Epson. The term "Dispute" is meant to have the broadest meaning permissible under law and includes any dispute, claim, controversy or action between you and Epson arising out of or relating to this Agreement, Epson branded products (hardware and including any related software), or other transaction involving you and Epson, whether in contract, warranty, misrepresentation, fraud, tort, intentional tort, statute, regulation, ordinance, or any other legal or equitable basis. "DISPUTE" DOES NOT INCLUDE IP CLAIMS, or more

specifically, a claim or cause of action for (a) trademark infringement or dilution, (b) patent infringement, (c) copyright infringement or misuse, or (d) trade secret misappropriation (an "IP Claim"). You and Epson also agree, notwithstanding Section 1.6,that a court, not an arbitrator, may decide if a claim or cause of action is for an IP Claim.

1.2 **Binding Arbitration**. You and Epson agree that all Disputes shall be resolved by binding arbitration according to this Agreement. **ARBITRATION MEANS THAT YOU WAIVE YOUR RIGHT TO A JUDGE OR JURY IN A COURT PROCEEDING AND YOUR GROUNDS FOR APPEAL ARE LIMITED**. Pursuant to this Agreement, binding arbitration shall be administered by JAMS, a nationally recognized arbitration authority, pursuant to its code of procedures then in effect for consumer related disputes, but excluding any rules that permit joinder or class actions in arbitration (for more detail on procedure, see Section 1.6 below). You and Epson understand and agree that (a) the Federal Arbitration Act (9 U.S.C. §1, et seq.) governs the interpretation and enforcement of this Section 1, (b) this Agreement memorializes a transaction in interstate commerce, and (c) this Section 1 shall survive termination of this Agreement.

1.3 **Pre-Arbitration Steps and Notice**. Before submitting a claim for arbitration, you and Epson agree to try, for sixty (60) days, to resolve any Dispute informally. If Epson and you do not reach an agreement to resolve the Dispute within the sixty (60) days), you or Epson may commence an arbitration. Notice to Epson must be addressed to: Epson America, Inc., ATTN: Legal Department, 3840 Kilroy Airport Way, Long Beach, CA 90806 (the "Epson Address"). The Dispute Notice to you will be sent to the most recent address Epson has in its records for you. For this reason, it is important to notify us if your address changes by emailing us at EAILegal@ea.epson.com or writing us at the Epson Address above. Notice of the Dispute shall include the sender's name, address and contact information, the facts giving rise to the Dispute, and the relief requested (the "Dispute Notice"). Following receipt of the Dispute Notice, Epson and you agree to act in good faith to resolve the Dispute before commencing arbitration.

1.4 **Small Claims Court**. Notwithstanding the foregoing, you may bring an individual action in the small claims court of your state or municipality if the action is within that court's jurisdiction and is pending only in that court.

1.5 **WAIVER OF CLASS ACTIONS AND CLASS ARBITRATIONS. YOU AND EPSON AGREE THAT EACH PARTY MAY BRING DISPUTES AGAINST THE OTHER PARTY ONLY IN AN INDIVIDUAL CAPACITY, AND NOT AS A PLAINTIFF OR CLASS MEMBER IN ANY CLASS OR REPRESENTATIVE PROCEEDING, INCLUDING WITHOUT LIMITATION FEDERAL OR STATE CLASS ACTIONS, OR CLASS ARBITRATIONS. CLASS ACTION LAWSUITS, CLASS-WIDE ARBITRATIONS, PRIVATE ATTORNEY-GENERAL ACTIONS, AND ANY OTHER PROCEEDING WHERE SOMEONE ACTS IN A REPRESENTATIVE CAPACITY ARE NOT ALLOWED. ACCORDINGLY, UNDER THE ARBITRATION PROCEDURES OUTLINED IN THIS SECTION, AN ARBITRATOR SHALL NOT COMBINE OR CONSOLIDATE MORE THAN ONE PARTY'S CLAIMS WITHOUT THE WRITTEN CONSENT OF ALL AFFECTED PARTIES TO AN ARBITRATION PROCEEDING.**

1.6 **Arbitration Procedure**. If you or Epson commences arbitration, the arbitration shall be governed by the rules of JAMS that are in effect when the arbitration is filed, excluding any rules that permit arbitration on a class or representative basis (the "JAMS Rules"), available at http://www.jamsadr.com or by calling 1-800-352-5267, and under the rules set forth in this Agreement. All Disputes shall be resolved by a single neutral arbitrator, and both parties shall have a reasonable opportunity to participate in the selection of the arbitrator. The arbitrator is bound by the terms of this Agreement. The arbitrator, and not any federal, state or local court or agency, shall have exclusive authority to resolve all disputes arising out of or relating to the interpretation, applicability, enforceability or formation of this Agreement, including any claim that all or any part of this Agreement is void or voidable. Notwithstanding this broad delegation of authority to the arbitrator, a court may determine the limited question of whether a claim or cause of action is for an IP Claim, which is excluded from the definition of "Disputes" in Section 1.1 above. The arbitrator shall be empowered to grant whatever relief would be available in a court under law or in equity. The arbitrator may award you the same damages as a court could, and may award declaratory or injunctive relief only in favor of the individual party seeking relief and only to the extent necessary to provide relief warranted by that party's individual claim. In some instances, the costs of arbitration can exceed the costs of litigation and the right to discovery may be more limited in arbitration than in court. The arbitrator's award is binding and may be entered as a judgment in any court of competent jurisdiction.

You may choose to engage in arbitration hearings by telephone. Arbitration hearings not conducted by telephone shall take place in a location reasonably accessible from your primary residence, or in Orange County, California, at your option.

a) Initiation of Arbitration Proceeding. If either you or Epson decides to arbitrate a Dispute, both parties agree to the following procedure:

(i) Write a Demand for Arbitration. The demand must include a description of the Dispute and the amount of damages sought to be recovered. You can find a copy of a Demand for Arbitration at http://www.jamsadr.com ("Demand for Arbitration").

(ii) Send three copies of the Demand for Arbitration, plus the appropriate filing fee, to: JAMS, 500 North State College Blvd., Suite 600 Orange, CA 92868, U.S.A.

(iii) Send one copy of the Demand for Arbitration to the other party (same address as the Dispute Notice), or as otherwise agreed by the parties.

b) Hearing Format. During the arbitration, the amount of any settlement offer made shall not be disclosed to the arbitrator until after the arbitrator determines the amount, if any, to which you or Epson is entitled. The discovery or exchange of non-privileged information relevant to the Dispute may be allowed during the arbitration.

c) Arbitration Fees. Epson shall pay, or (if applicable) reimburse you for, all JAMS filings and arbitrator fees for any arbitration commenced (by you or Epson) pursuant to provisions of this Agreement.

d) Award in Your Favor. For Disputes in which you or Epson seeks $75,000 or less in damages exclusive of attorney's fees and costs, if the arbitrator's decision results in an award to you in an amount greater than Epson's last written offer, if any, to settle the Dispute, Epson will: (i) pay you $1,000 or the amount of the award, whichever is greater; (ii) pay you twice the amount of your reasonable attorney's fees, if any; and (iii) reimburse you for any expenses (including expert witness fees and costs) that your attorney reasonably accrues for investigating, preparing, and pursuing the Dispute in arbitration. Except as agreed upon by you and Epson in writing, the arbitrator shall determine the amount of fees, costs, and expenses to be paid by Epson pursuant to this Section 1.6d).

e) Attorney's Fees. Epson will not seek its attorney's fees and expenses for any arbitration commenced involving a Dispute under this Agreement. Your right to attorney's fees and expenses under Section 1.6d) above does not limit your rights to attorney's fees and expenses under applicable law; notwithstanding the foregoing, the arbitrator may not award duplicative awards of attorney's fees and expenses.

1.7 **Opt-out. You may elect to opt-out (exclude yourself) from the final, binding, individual arbitration procedure and waiver of class and representative proceedings specified in this Agreement by sending a written letter to the Epson Address within thirty (30) days of your assent to this Agreement (including without limitation the purchase, download, installation of the Software or other applicable use of Epson Hardware, products and services) that specifies (i) your name, (ii) your mailing address, and (iii) your request to be excluded from the final, binding individual arbitration procedure and waiver of class and representative proceedings specified in this Section 1. In the event that you opt-out consistent with the procedure set forth above, all other terms shall continue to apply, including the requirement to provide notice prior to litigation.**

1.8 **Amendments to Section 1**. Notwithstanding any provision in this Agreement to the contrary, you and Epson agree that if Epson makes any future amendments to the dispute resolution procedure and class action waiver provisions (other than a change to Epson's address) in this Agreement, Epson will obtain your affirmative assent to the applicable amendment. If you do not affirmatively assent to the applicable amendment, you are agreeing that you will arbitrate any Dispute between the parties in accordance with the language of this Section 1 (or resolve disputes as provided for in Section 1.7, if you timely elected to opt-out when you first assented to this Agreement).

1.9 **Severability**. If any provision in this Section 1 is found to be unenforceable, that provision shall be severed with the remainder of this Agreement remaining in full force and effect. **The foregoing shall not apply to the prohibition against class or representative actions as provided in Section 1.5. This means that if Section 1.5 is found to be unenforceable, the entire Section 1 (but only Section 1) shall be null and void.**

Parent topic: Notices

Trademarks

EPSON® and SureColor® are registered trademarks, and EPSON Exceed Your Vision is a registered logomark of Seiko Epson Corporation.

Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries.

Mac, OS X, Bonjour, Safari, and Apple are trademarks of Apple Inc., registered in the U.S. and other countries.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.



Parent topic: Notices

Copyright Notice

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this Epson product. Epson is not responsible for any use of this information as applied to other products.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

Seiko Epson Corporation shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Epson approved Products by Seiko Epson Corporation.

This information is subject to change without notice.

A Note Concerning Responsible Use of Copyrighted Materials

Copyright Attribution

Parent topic: Notices

A Note Concerning Responsible Use of Copyrighted Materials

Epson encourages each user to be responsible and respectful of the copyright laws when using any Epson product. While some countries' laws permit limited copying or reuse of copyrighted material in certain circumstances, those circumstances may not be as broad as some people assume. Contact your legal advisor for any questions regarding copyright law.

Parent topic: Copyright Notice

Copyright Attribution

© 2019 Epson America, Inc.

10/19

CPD-58108

Parent topic: Copyright Notice