


# AOC

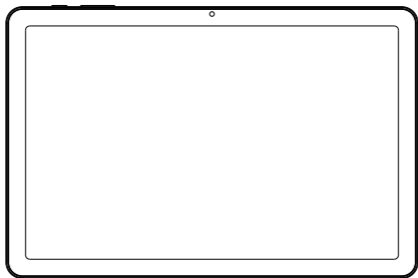

Tablet PC **M10**


## **USER GUIDE**

English(1-27) 日本語(28-53)

## CONTENTS

PRODUCT OVERVIEW .....	01
GETTING STARTED .....	01
Power On/Off .....	01
Battery .....	02
Sleep Mode .....	02
Screenshot .....	02
HOME SCREEN .....	03
Icons on the Bottom Menu .....	03
Home Settings, Widgets and Wallpapers .....	03
SETTING BASICS .....	04
Quick Settings .....	04
More Settings .....	05
NETWORK CONNECTION .....	11
WiFi Connection .....	11
APP MANAGEMENT .....	13
App Download and Installation .....	13
App Management .....	13
INTERNET NAVIGATION .....	14
MULTIMEDIA .....	14
Connecting to a Computer .....	14
Connecting to an External Device .....	16
TROUBLESHOOTING .....	18

# Product Overview

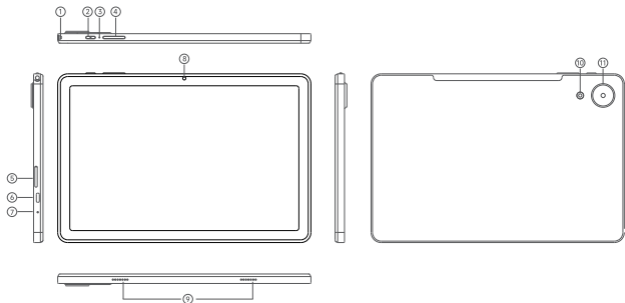

1.3.5mm Headphone Jack

2.Power Button

3.Reset

4.Volume Buttons+/-

5.TF card tray

6.USB 2.0 Type-C Port

7.Microphone

8.Front Camera

9.Speakers

10.Flash light

11.Rear Camera

\*Google, Android, Google Play and other marks are trademarks of Google LLC.

## GETTING STARTED

### Power On/Off

- \* Press and hold the power button for 3-5s to turn on your tablet. Select your language and set up your tablet following the start guide.
- \* Press and hold the power button for 2s, then release it. It will show Power off and Restart on the screen. Tap Power off to turn off the tablet.
- \* Press and hold the power button for 10s to do a forced reboot when it's frozen.

## Battery

- \* A rechargeable Li-ion battery is installed in the tablet.
- \* DO NOT attempt to replace the tablet battery by yourself because you may damage the battery, which might cause overheating, fire or injury.
- \* DO NOT dispose of tablet in a fire.
- \* DO NOT expose the tablet battery to any heat source, direct sunlight or high temperature.
- \* Only use the ORIGINAL power adapter provided by us to charge the tablet battery.
- \* We suggest you fully drain the battery once a month if you use your tablet only occasionally.
- \* The Li-ion battery in your tablet should be serviced by authorized service provider, and must be recycled or disposed of separately from household waste.
- \* Dispose of battery according to your local environmental laws and regulations.

## Sleep Mode

Simply press the power button once to switch the tablet to the sleep mode when the tablet is ON; press again to wake it up.

### Tip:

Go to Settings > Display > Screen timeout to set the time of entering the sleep mode

## Screenshot

Press and hold the Volume-button and the Power On/Off button together to take a screenshot.


# HOME SCREEN

## Icons on the Bottom Menu



1. Back
2. Home Screen
3. Recent Activities

## Home settings, Widgets and Wallpapers

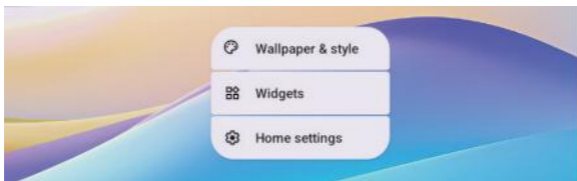

Tap and hold the empty section of a Home screen, Home settings, Widgets and Wallpapers will be displayed.

1. Tap Home settings to start customizing your Home Screen.

Notification dots:

Show/hide the small circular dots that sit on the upper right corner of your App icons.

Add icon to Home Screen:

Allow the new Apps installed on Play Store to be displayed on the Home Screen.

Show google App:

Show google Apps when you swipe leftward on the main Home Screen.


\*Tap Widgets, touch and hold any application (e.g. Clock), then slide and add it to a Home screen. Remove it by sliding it to **Remove**









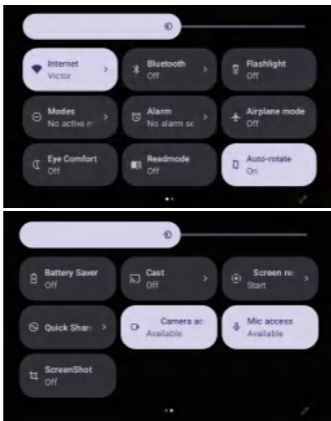


\*Tap Wallpapers to change the current wallpaper of the tablet from the default wallpapers, live Wallpapers or your photos.


## SETTING BASICS

### Quick Settings


Swipe down from the top of the screen to access Quick Settings.





-  : WiFi. Tap to connect/disconnect to a wireless network.
-  : Do Not Disturb. Block sound after enabling this function.
-  : Auto-rotate. Turn on/off the Auto-rotate of the screen.
-  : Battery Saver. Tap to choose the power setting you prefer to save the battery time.
-  : Airplane Mode. Turn on/off all the network connectivity.
-  : Eye comfort. Enable/disable the eye protection mode.
-  : Read mode. The screen will be black and white after enabling this option.
-  : Flashlight. Turn on/off the torch.
-  : Screen Cast. Mirror the display of the tablet to compatible devices,e.g. TV box or Fire TV Stick.
-  : Screen record. Start and end the screen recording.
-  : Location. Enable/disable the location services.

「」 Tap the icon to change the options in the Quick Settings. Long press each icon to enter the interface of its detailed settings.

## More Settings

Swipe down from the top of the screen,then tap the  icon to enter the detailed setting interface. Or, tap the Settings App on the Home screen to enter.

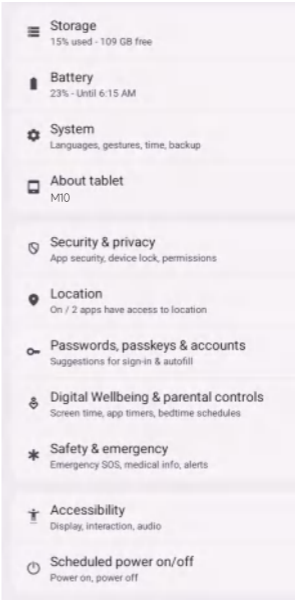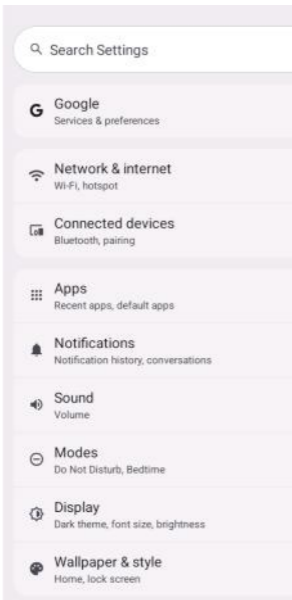

## Network & internet

- \* Connect to any working WiFi
- \* Enable/disable the Airplane Mode
- \* Turn on/off the Data Saver
- \* Add VPN Connections
- \* Select a private DNS mode

## Apps

- \* Check the Apps recently opened
- \* Check all the Apps on the tablet
- \* Clear the cache of the Apps
- \* Uninstall the third-party Apps
- \* Set default apps
- \* Check the screen time for Apps  
and more

## Notifications

- \* Turn on/off the notification for each app.
- \* Show or hide the notification history.
- \* Check priority and modified conversations
- \* Allow or disallow the apps to show bubbles
- \* Set privacy preferences for notifications
- \* Enable or disable Notification dot on an app icon  
and more

## **Battery**

- \* Check the time for Battery usage since full charge
- \* Enable/disable Battery percentage and Battery Manager
- \* Display or hide the remaining power as a percentage

## **Storage**

- \* View and manage your storage space

## **Sound**

- \* Set sound level for Media, Alarm and Notification
- \* Enable/disable Do Not Disturb to mute sound
- \* Show/hide the media player when the media session has ended
- \* Set default notification sound alarm sound
- \* Enable/disable Screen locking sound, Charging sounds, and Touch sounds and more

## Display

- \* Adjust the screen brightness
- \* Enable/disable the Dark theme
- \* Turn on/off Night Light
- \* Change the wallpaper
- \* Adjust the time of entering the sleep mode
- \* Turn on/off the auto-rotation of the screen
- \* Adjust the font size and display size
- \* Set a screen saver
- \* Set what to show when the tablet is locked and more

## Accessibility

- \* For vision and hearing impaired users, manage settings for Downloaded apps, Display, Interaction controls, Captions, Audio and General.

## Privacy

- \* Check and set app permissions
- \* Enable or disable the Camera access and Microphone access.
- \* Set to show/hide the password when input a password
- \* Set what to show when the tablet is locked and more

## Location

Turn on/off the location services for specific Apps

- \* Set apps that have access to location

Check and set Location services and more

## Passwords & accounts

- \* Add and remove the google accounts, manage google passwords.

## Digital Wellbeing & parental controls

- \* Check your app usage based on Screen time, Notifications received, or Times opened from Dashboard

- \* Manage the related notification settings to reduce interruptions


- \* Set up Parental controls to help your kids balance their screen time and more

## Google

- \*Set the preferences for Google™ related services

## System

- \* Set Language

Tap Languages & input > Languages > +Add a language to add your language. After adding, hold and slide the  to the top to change the language

- \* Set gestures of using the tablet

- \* Set the date and time
- \* Turn on/off the option of Backup
- \* Check and update the tablet's system
- \* Manage multiple users and profiles
- \* Restore factory setting Tap Reset options >Erase all data (factory reset) to restore the factory setting
- \* Reset WiFi, and app preferences

## About tablet

Check the detailed information about the tablet

# NETWORK CONNECTION

## WiFi Connection


Go to network settings from the Settings App or by long pressing the WiFi icon in Quick Settings.

1. Tap Network & internet and turn on the WiFi. All the WiFi connections available will be listed.
2. Select your WiFi and input the correct password.


# Network & internet

 Internet  
Victor

 Ethernet

 Airplane mode




 Hotspot & tethering  
Off




## Internet

Wi-Fi




 Victor  
Connected




 DIRECT-XRCUDYmsMT



 JiuTong\_Guest



 JiuTong\_Work



# APP MANAGEMENT

## App Download and Installation


1. Tap and open Play Store on the home screen.
2. Log into your google account, search and download the App you need.

## App Management

### Move the App

Tap and hold the App, then slide it to a desired screen.

### Remove the App from the Home screen

Touch and hold the App, then slide to  to remove it from your home screen.

### Uninstall the App

Touch and hold the App, then slide to the  to uninstall the App.

### Clear the Cache of the App

1. Go to Settings > Apps.
2. Select an App > Storage & cache > CLEAR CACHE to clear the cache.

## INTERNET NAVIGATION

Please make sure the tablet is connected to a working WiFi network before navigating the Internet.

You may use the pre-installed Chrome browser or use another browser downloaded from Play Store.

## MULTIMEDIA



### Connecting to a Computer


1. Connect your tablet to the computer with a USB cable.
2. File Transfer is the default setting. Go to your computer and find your tablet to transfer files between your tablet and computer.

### Tips:

Go to Quick Settings, tap USB file transfer turned on > Tap for more options > USB Preferences to select the option preferred.


- \* Select MIDI to play MIDI instruments on the tablet.
- \* Select PTP to transfer photos between the devices.
- \* Select No data transfer to charge your tablet.

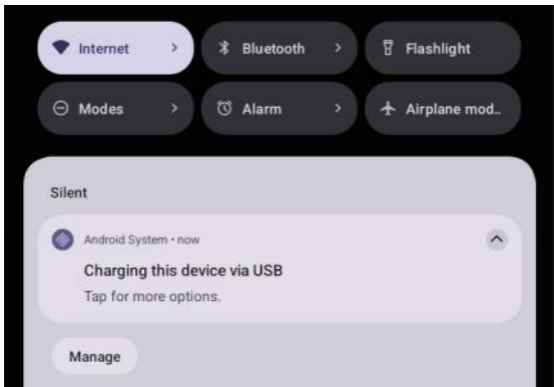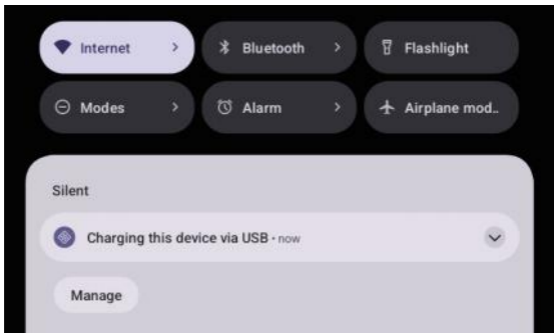

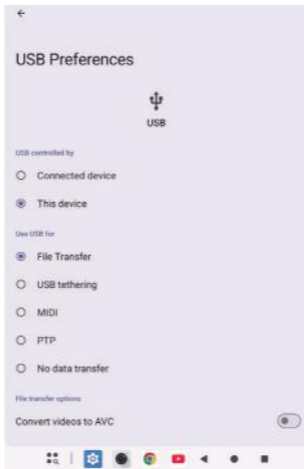


## Connecting to an External Device

1. Insert a memory card into the memory card tray using the pin in the box when the tablet is off.

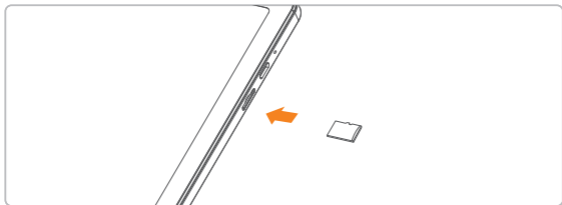


2. Turn on the tablet, then go to Settings > Storage > SD card
3. Select the menu button  and select Format.



### Format SD card for portable storage

Store photos, videos, music, and more and access them from other devices. [Learn more about setting up an SD card.](#)



# TROUBLESHOOTING

## **Q1. The tablet doesn't power on.**

- \* Reboot your tablet after charging for more than 30 minutes.
- \* Press the power button to check if the tablet is in the sleep mode.
- \* Press and hold the power button for 10s to do a forced reboot.

## **Q2. The tablet doesn't charge.**

- \* Make sure the USB cable is properly plugged into the charging port.
- \* Try another compatible USB cable and adapter.

## **Q3. Error message occurs during the operation.**

- \* Uninstall the App with the error message, then download and install again
- \* Press and hold the power button for 10s to do a forced reboot.

## **Q4. The tablet cannot be detected by the computer.**

- \* Make sure the tablet is powered on.
- \* Try another USB cable.
- \* Try another USB port on the computer.
- \* Instead of No data transfer, choose File Transfer or PTP when connecting the tablet to the computer.

### **Q5. The tablet cannot connect to the WiFi.**

- \* Make sure the WiFi in your tablet is ON.
- \* Make sure you input the correct password when connecting the WiFi.
- \* Restart the router.
- \* Make sure there is no filter setting or device connection limitation in the settings of the router.
- \* Forget the current WiFi, reset the router and connect the WiFi again.

### **Q6. The storage space of the tablet is not enough.**

- \* Delete the Apps you don't use.
- \* Clear the cache of the Apps regularly.
- \* Install a memory card to expand the storage.

### **Q7. The tablet comes with scratches on the screen.**

- \* Check if the scratches are on the film. If yes, please remove the film.

### **Q8. The screen is unresponsive.**

- \* Check if the screen is dusty or greasy. If yes, please gently wipe the screen with a cloth to clean it.

### **Q9. The font size is too small to read.**

- \* Please go to Settings > Display > Advanced > Font Size to adjust the text size.

## **Q10.How to use your voice to search a fact?**

\* Tap the microphone icon on Google Search bar, tell the tablet what you want to know and it will show you the search results.

## **Q11. The memory card is not recognized.**

The tablet only supports memory cards in FAT32 format. If the memory card format is not supported by the tablet, you can format it by going to "Quick Settings" > "Touch to modify" > "External Storage" > "Format SD Card". All data stored on the memory card will be erased and the memory card will become usable.

## **Handling Precautions**

1. Purchase a special protective film/case to protect the screen of your device.
2. If you are not using the tablet and you place it on a table, we recommend placing it with the screen facing down at the back. This helps prevent other objects from falling on the tablet or knocking it off the table, which could damage the screen.
3. Do not place the tablet directly on the bed before going to sleep. If you unconsciously press the screen with gravity while sleeping, it is likely to damage the screen.
4. Keep out of reach of children.

## **Caution**

We do not guarantee that the product will work in all situations when actually used.

In addition, if the investigation reveals that the failure was caused by improper handling by the customer, it will not be covered by the warranty.

# Thank you for your purchase

## Congratulations on your purchase and welcome to AOC!

To get the most of your product and enjoy all AOC has to offer.

### **Note:**

- Please read the safety instructions in the "Safety & Precaution" section before use.

### **Tips:**

- AOC continuously strives to improve its products. Due to software upgrading, some content in this user guide may be different from your product. AOC reserves the right to revise this user guide or withdraw it at any time without prior notice. Please take your product as standard.

### **Note:**

- This guide is protected under copyright law, reproduction in whole or in part without permission is prohibited.

## Trademark Declaration

Android™ is a trademark of Google LLC.

Google, Android, Google Play and other marks are trademarks of Google LLC.

## Safety & Precaution

### **Precaution**

Keep your tablet away from small children.

Keep your tablet and all accessories out of the reach of small children. Small parts may cause choking or serious injury if swallowed.

## **Radio Waves**

Your tablet operates with the following frequency and maximum radio-frequency power limitations:

- - Wi-Fi(2.4G): 2400-2483.5 MHz (TX/RX);
- - Wi-Fi (5G):
- - Band 1:5150-5250 MHz(TX/RX); Band 3: 5470-5725 MHz(TX/RX);
- - Band 2: 5250-5350 MHz(TX/RX);

Check with the vehicle manufacturer that electronic equipment used in your vehicle will not be affected by radio energy.

## **Switch off your tablet...**

Turn off the tablet when in an aircraft. The use of tablets in an aircraft may be dangerous for the operation of the aircraft,disrupt the tablet network and may be illegal.

In hospitals, clinics, other health care centers and anywhere else where you may be in the close vicinity of medical equipment.

In areas with a potentially explosive atmosphere (e.g. petrol stations and also areas where the air contains dust particles,such as metal powders).

In a vehicle transporting flammable products or a vehicle powered by liquefied petroleum gas (LPG).In quarries or other areas where blasting operations are in progress.

## **Your tablet and your car**

Avoid using your tablet while driving and obey all regulations that restrict the use of tablets while driving. Use hands free accessories to increase your safety when possible. Ensure that your tablet and car kit do not block any air bags or other safety devices fitted in your car.

## **Handle your tablet carefully and sensibly**

For the optimal and satisfactory operation of the phone you are recommended to use the tablet in the normal operating position.

- - Do not expose your tablet to extreme temperatures.
- - Do not immerse the tablet in any liquid; if your tablet is damp, switch it off, remove the battery and let them dry for 24hrs before using them again.
- - To clean the tablet, wipe it with a soft cloth.
- - In hot weather or after prolonged exposure to the sun (e.g., behind a window or a wind screen), the temperature of your tablet's casing might increase. Be very careful in this case when picking up your tablet and also avoid using it with an ambient temperature over 35°C or under 0°C.


## **Protect batteries from damage**

You should only use Manufacturer Authentic Accessories, as the use of any other accessories may damage your tablet and may be dangerous, and will make all guarantees for your AOC tablet null and void. The use of an unspecified type of battery may also cause an explosion.


Make sure damaged parts are replaced immediately by a qualified technician and that they are replaced with genuine manufacturer replacement parts.

- - Your tablet is powered by a rechargeable battery.
- - Use specified charger only.
- - Do not incinerate.
- - Do not deform or open the battery.
- - Do not allow metal objects (such as keys in your pocket) to short circuit the battery contacts.
- - Avoid exposure to excessive cold or heat (under -20°C or over 60°C), moisture or caustic environments.

## Environmental care


 Remember to observe the local regulations regarding the disposal of the packaging materials, exhausted batteries and old tablet and please promote their recycling. Manufacturer has marked the battery and packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.

 : The labeled packaging material is recyclable.

 : A financial contribution has been made to the associated national packaging recovery and recycling system.

 : The plastic material is recyclable (also identifies the type of plastic).

## Hearing Protection

 When listening to music, adjust the volume to a moderate level. Continuous exposure to high volume may impair your hearing. It is recommended to keep it away from your body and head at least 15mm during operation.

## WEEE Marking in the DFU: "Information to the Consumer"



Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

## Warranty Statement

We warrant the Product to be free from defects in materials and workmanship, arising under normal use from the date of original purchase when brand new.

This warranty is subject to the following terms and conditions:

1. The Warranty is given only to the original purchaser of the Product("Customer").
2. The Warranty will be valid for twelve (12) months from the date of original purchase for tablet. Customer should present the PROOF OF PURCHASE/invoice for claiming this Warranty.
3. For the entire Warranty period, AOC authorized service centre / personnel will, at their discretion, without any charges and subject to Clause 6 repair or replace a defective Product. Repair or replacement may involve the use of same or equivalent reconditioned unit. We will return the repaired tablet or can replace with another same or equivalent tablet to the Customer in full working condition. All replaced faulty parts or components will become the property of our authorized service centre.
4. For the tablets available beyond the municipal limits of the available service centre, it is the responsibility of the Customer to bring the tablet to the nearest service centre at his/her own risk and expenses.
5. For any tablet repaired or replaced during the warranty period, the repaired or replaced tablet shall continue to be within warranty period for the remaining time of the original warranty period of original tablet.
6. The warranty will be declared void under the following circumstances:
  - a) The tablet serial number, the accessory date code, water indicator or the warranty seal has been removed, erased defaced, altered or is illegible;
  - b) Deterioration of the product due to normal wear and tear;
  - c) Usage other than accordance with the user manual, rough handling, ingress or exposure to any kind of liquid (water, sweat, beverages, oils etc.), exposure to moisture, dampness or exposure to extreme thermal or environmental conditions, corrosion, oxidation, unauthorized repairs, unauthorized spare parts usage, accidents, forces of nature, or other

beyond the reasonable control of warrantor was caused directly by defects in material or workmanship. The Warranty will also not cover any physical damage to the surface of the tablet including but not limited to cracks or scratches on the LCD or camera lens;

d) Any defects caused by the fact that the battery has been short-circuited or by the fact that the seals of the battery casing or the cells are broken or show evidence of tampering or by the fact that battery has been used in equipment other than those for which it has been specified;

e) The defect was caused by a defective function of the service provider cellular network or other system.

7. Any claim under the warranty is subject to notification to an AOC authorized service centre for the alleged defect within a reasonable time of its occurrence and in no event later than the expiry of the warranty period. The warranty terms state the entire warranty given by AOC to the customer.

AOC Authorized service centres will not be responsible for any kind of direct or indirect loss of customer's data stored/saved in the tablet (including phone book contacts, SMS, emails, pictures, ring tones other downloaded software, etc.) due to any kind of incidental failure of the tablet and also at the time of service. It is advised that before bringing the tablet for service, kindly make proper backup of the entire personal data, and remove any confidential, proprietary, or personal information from the tablet.

8. Our authorized service centre reserves the right to charge a service fee for repair/ service of any nature that is not covered by this warranty.

9. Our obligation under this warranty shall be limited to repair or provide replacement of parts only. The maximum claim entertained by the warrantor will be subject to maximum retail price of the tablet purchased or the purchase price, whichever is lower.

10. In event of any unforeseen circumstances, there is unavailability of certain spare parts; prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs.

# FCC STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

## FCC SAR:

### FCC Radio Frequency Exposure Information and Statement:


The SAR in the United States (FCC) is below the limit of 1g 1.6 W/kg. Device Type: Tablet PC (FCC ID: 2A7JV-M10) has also been tested against this SAR limit. During product certification, when properly worn on the body, the maximum SAR value reported in accordance with this standard is less than 1.6 W/kg. The device has been tested for typical body-worn operation and has a back

The Tablet PC is kept 0 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0 cm distance between the user's body and the back of the Tablet PC. The use of belt clips, holsters and similar accessories should not include metal parts in their assembly. Use of accessories that do not meet these requirements may not meet FCC RF exposure requirements and should be avoided.

## コンテンツ

各部の名前と機能 .....	28
開始する .....	28
電源を入れる/切る .....	28
バッテリー .....	29
スリープモード .....	29
画面の保存 .....	29
ホームページ .....	30
底部メニューのアイコン .....	30
ホームの設定、ウィジェットと壁紙 .....	30
基本設定 .....	31
クイック設定 .....	32
ほかの設定 .....	32
ネットワーク接続 .....	38
WiFi接続 .....	38
アプリ管理 .....	40
アプリのダウンロードとインストール .....	40
アプリ管理 .....	40
WEB閲覧 .....	41
マルチメディア .....	41
パソコンに接続する .....	41
外部ストレージへの接続手順 .....	43
トラブルシューティング .....	45

## 製品の概要

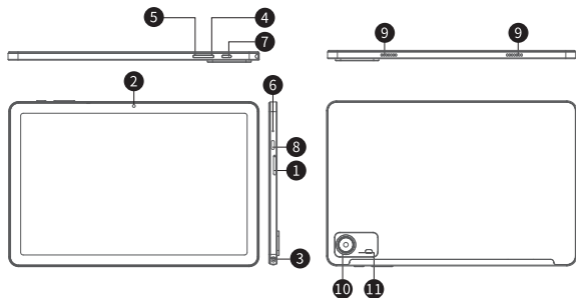

- |              |            |           |
|--------------|------------|-----------|
| 1.メモリーカードトレイ | 5.音量-      | 9.スピーカー   |
| 2.フロントカメラ    | 6. マイク     | 10. リアカメラ |
| 3.ヘッドホンジャック  | 7.電源ボタン    | 11.フラツシュ  |
| 4.音量+        | 8.USB-Cポート |           |

\* 「Android」という名称、Androidロゴ、「Google Play」ブランド、その他のGoogle商標は、Google LLCの所有物です。

## 開始する

### 電源を入れる/切る

- 「電源ボタン」を3-5秒押すとタブレットの電源を入れます。それから、画面の指示に従って言語を選び、初期設定を行います。
- 「電源ボタン」を2秒押すと、画面に「電源を切る」と「再起動」のオプションが表示されます。「電源を切る」をタッチするとタブレットの電源を切ります。
- 「電源ボタン」を10秒押して、フリーズした時に強制的に再起動できます。

## バッテリー

- \* 本製品の内蔵電池は、リチウムイオン電池です。
- \* 本製品の電池は内蔵されており、お客様自身では電池を交換しないでください。発熱破裂・発火の原因となります。
- \* 火の中に投入しないでください。
- \* 高温になる場所（火のそば、暖房器具のそば、こたつの中、直接日光に当たる場所など）で放置しないでください。
- \* 充電時は必ず当社純正充電器を使用してください。
- \* 使用頻度が少なくなった場合は、月に1回は放電することを推奨いたします。
- \* タブレットのリチウムイオン電池は、法律に基づいてメンテナンス或いは廃棄を行われるべきであり、生活ゴミと分別回収または処置されなければなりません。
- \* 使用済み電池を適正に処理してください。処理の際は、地方自治体の条例または規則に従ってください。

## スリープモード

電源を入れている状態で、電源ボタンを軽く押すと「スリープモード」に入ります。再びスイッチを押すとタブレットを再起動させます。

### ご注意:

「設定」>「ディスプレイ」>「画面消灯」になる時間を設定することができます。

## 画面の保存

「音量ボタン-」と「電源ボタン」を同時に2秒押すと、長押しとスクリーンショットが撮れます。


# ホームページ

## 底部メニューのアイコン



1. 戻る
2. ホーム
3. 最近利用したアプリ

## ホームの設定、ウィジェットと壁紙

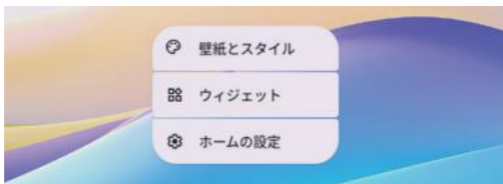

ホーム画面の空白部分を長押しすると、「ホームの設定」、「ウィジェット」と「壁紙」が画面に表示されます。

1. 「ホームの設定」をタッチすれば、ホーム画面のカスタマイズ力開始されます。

Show Google App:

メイン画面を右にスライドすれば、Googleアプリが現れます。


ホーム画面にアイコンを追加:

「Play Store」よりインストールした新しいアプリを許可すると、メイン画面にそのアイコンが表示されます。

通知ドット:

アプリアイコンの右上角の小さい丸い点で表示または隠すを切り替えます。

\*「ウィジェット」をタッチすると、ある簡易型のアプリ(例えば時計)を長押し、ホーム画面にスライドさせてから追加できます。

 へスライドさせてからこのアプリを削除できます。












\*「壁紙」をタッチすると、初期設定の壁紙とライブ壁紙もしくは撮影された写真に設定できます。


## 基本設定

### クイック設定

画面頂部から下へスライドして、「クイック設定」に入ります。



-  : WiFiをタッチし、それに「接続/切断」します。
-  : サイレントモード・起動後、タブレットはミュートになり、バイブを停止します。
-  : 自動回転・「自動回転」をタップし、オン/オフにします。
-  : バッテリーセーバー・クリックしてお気に入りの省電力モードを選択します。
-  : 機内モード・ネットワーク接続をすべてオン/オフにします。
-  : 目の保護・起動後、ブルーライトがカットされ、画面が淡いイエローになります。
-  : 読書モード・起動後、画面が白黒になります。
-  : ライト・タッチをオン/オフにします。
-  : 画面のキャスト・タブレットのディスプレイをTV BOXやTVスティックなどの互換性のあるデバイスに投影します。
-  : スクリーンレコード・画面記録の開始と終了。
-  : 位置情報・ロケーションアクセスを有効または無効します。

「」をタッチし、「クイック設定」のオプションを変更できます。各アイコンを長押しして詳細設定のインターフェースに入ります。

## ほかの設定

「クイックセッティング」に入ります。「」をタッチし、詳しい設定画面に入ります。またホーム画面の「設定」アプリをタッチして入られます。



## ネットワークとインターネット

- \* 利用可能なWi-Fiに接続する
- \* 「機内モードの」オン/オフ
- \* 「データセーバー」のオン/オフを切り替える
- \* VPN接続を追加する
- \* プライベートDNSモードを選択します。

## アプリ

- \* 最近使用したアプリ
  - \* タブレットのアプリ一覧
  - \* アプリのキャッシュを削除する
  - \* サードパーティのアプリをアンインストールする
  - \* デフォルトのアプリケーションを設定する
  - \* アプリのスクリーンタイムを確認する
- アプリの権限を設定するなど

## 通知

- \* 各アプリの通知をオン/オフにする
- \* 通知履歴を表示または非表示にする
- \* 優先度と変更された会話を確認する
- \* アプリにバブルを表示することを許可または禁止する
- \* 通知のプライバシー設定を設定する
- \* 「アプリアイコンの通知ドット」を有効または無効にするなど

## バッテリー

- \* 「バッテリー使用量」の時間を確認してください
- \* 「バッテリーマネージャ」または「電池残量」のオン/オフ
- \* バッテリー残量をパーセンテージで表示または非表示にする

## ストレージ

- \* ストレージの表示と管理

## 音

- \* 「メディア」、「アラーム」、「通知」の音量を設定する
- \* 「サイレントモード」を有効/無効にする
- \* メディアセッションが終了したときにメディアプレーヤーを表示/非表示にする
- \* デフォルトの通知音とアラーム音を設定する
- \* 「画面ロックの音」、「充電時の音とバイブレーション」、「タッチ操作音」を有効/無効にする

## ディスプレイ

- \* 画面の明るさを調整
- \* 「ダークモード」を有効/無効にする  
「夜間モード」モードをオン/オフ  
スリープモードになる時間を設定
- \* 「画面の自動回転」をタップし、オン/オフにする
- \* フォントサイズと表示サイズを調整
- \* スクリーンセーバーを設定
- \* タブレットがロックされたときに何を表示するかを設定するなど

## ユーザー補助

- \* 視覚・聴覚の障害者の方に「ダウンロードしたアプリ」、「表示」「操作のコントロール」、「字幕」、「音声」と「全般」などを提供する

## セキュリティとプライバシー

- \* セキュリティ状況を確認する
- \* ロック画面モードを設定する。例:パスワード、PINコードなど
- \* ロックパターンを事前設定した場合、デバイスのロックを解除したままにするスマートロックを選択する
- \* 管理アプリを起動してタブレットを見つける
- \* 紛失したデバイスをロックまたは消去するなど
- \* アプリの権限を確認して設定する
- \* 「カメラアクセス」と「マイクアクセス」をオン/オフにする
- \* パスワード入力の時、パスワード文字の表示/非表示を設定するなど

## 位置情報

- \* 特定のアプリの位置情報サービスをオン/オフにする
- \* 場所にアクセスできるアプリを設定する
- \* 位置情報サービスの確認と設定  
など

## パスワードとアカウント

- \* Googleアカウントの追加と削除、Googleパスワードの管理

## Digital Wellbeingと保護者による使用制限

- \* 「ダッシュボード」からアプリの「利用時間」、「受信した通知数」、または「起動した回数」の使用状況を確認する
- \* 作業の中断を減らすため、通知の受信設定を管理する
- \* 「保護者による使用制限」を使って、お子様の利用時間を設定することができる

## Google

- \* Googleサービスを設定する

## システム

- \* 言語変更  
「言語と入力」>「言語」>「言語を追加」をタッチして言語を追加します  
その後、「＝」を長押しして頂部へスライドさせてから言語を変更することができます
- \* タブレットを使用するジェスチャーを設定する

\*日付と時刻設定

\*「バックアップ」のオン/オフ

\*タブレットのシステムを確認して更新します

\*複数のユーザーとプロフィールを管理する

\*工場出荷時の設定に戻す「リセットオプション」>「すべてのデータを消去（出荷時リセット）」をタッチして工場出荷時の設定に戻します

\*WiFi、モバイル、アプリの設定をリセットする

## タブレット情報

\*タブレットの関連情報をチェックする


# ネットワーク接続

## WiFi接続


アプリ「設定」を開くか、または「クイックセッティング」のWiFiアイコンを長押しします。

1. 「ネットワークとインターネット」をタッチして、「WiFi」をオンにします。その後、すべてのネットワーク名が表示されます。
2. WiFiをタッチし、正しいパスワードを入力してください。


## ネットワークとインターネット

 インターネット  
Vic

 インターネット

 機内モード



 アクセスポイントとテザリング  
OFF


## インターネット

Wi-Fi




 Victor  
接続済み




 DIRECT-XRCUDYmsMT



 JiuTong\_Guest



 JiuTong\_Work



# アプリ管理

## アプリのダウンロードとインストール

1. ホーム画面に「Playストア」アプリをタップしオンにします。
2. Googleアカウントをログインし、必要なアプリを検索してからダウンロードします。

## アプリ管理


### アプリ移動

アプリを長押しし、移動したい画面へドラッグします。

### ホーム画面からアプリを削除する

アプリを長押しし、の中へスライドさせてから削除できます。

### アプリをアンインストールする

アプリを長押しし、へドラッグしてアプリをアンインストールできます。

### アプリのキャッシュを削除する

1. 「設定」>「アプリ」をタッチします。
2. あるアプリを選びます。そして、「ストレージとキャッシュ」>「キャッシュを削除」を選びます。

## WEB閲覧

ウェブを閲覧する前に、タブレットが利用可能なWi-Fiに接続しているかを確認してください。プリインストールされた「Chrome」ブラウザもしくは「Playストア」からダウンロードされたブラウザを使用できます。

## マルチメディア

### パソコンに接続する


1. USBケーブルを使用し、タブレットをパソコンと接続します。
2. 「ファイル転送」はデフォルト設定です。コンピュータにアクセスしてタブレットを見つけてから、コンピュータとタブレットの間でファイルを転送できます。

#### ご注意:

「クイック設定」に移動し、「USBファイル転送モードON」>「タップしてその他のオプションを表示します」>「USBの設定」をクリックして適切なオプションを選択します。


- \* 「充電」を選び、タブレットに充電します。
- \* 「MIDI」を選択して、タブレットをMIDIデバイスに接続します。
- \* 「PTP」を選び、タブレットとコンピュータ間で画像を転送します。



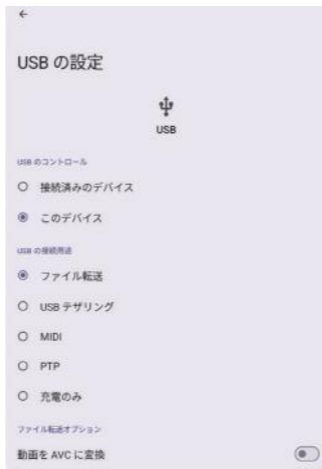

## 外部ストレージへの接続手順

1. メモリカードをメモリカードトレイに差し込みます。

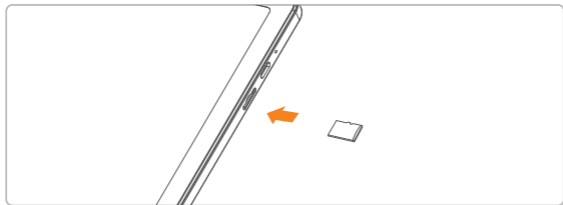

2. タブレットの電源を入れ、[設定] > [ストレージ] > [SDカード]に進みます。
3. メニューボタン [ ⋮ ] を選択し、[フォーマット] をタップします。



# トラブルシューティング

## Q1.電源が入らない。

- \* タブレットを最低30分以上充電してからもう一度電源を入れます。
- \* スイッチを軽くタッチして「スリープモード」になっていないかをご確認ください。
- \* 「電源ボタン」を10秒押して、フリーズした時に強制的に再再起動できます。

## Q2.充電できない。

- \* USBケーブルとアダプターが正しく充電ポートに差し込まれているかをご確認ください。
- \* ほかのUSBケーブルとアダプターを試してください。

## Q3.使用中、エラーが発生した。

- \* エラーが発生したアプリをアンインストールしてから、もう一度インストールしてみてください。
- \* 「電源ボタン」を10秒押して、フリーズした時に強制的に再起動できます。

## Q4.パソコンがタブレット接続を認識していない。

- \* タブレットの電源が入っているかをご確認ください。
- \* ほかのUSBケーブルを使ってください。
- \* パソコンのほかのUSBポートに差し込んでください。
- \* パソコンに接続する場合、「充電」ではなく、「ファイ」転送」もしくは「PTP」を選んでください。

## Q5. WiFiに接続できない。

- \* タブレットの「WiFi」を「オン」になっているかをご確認ください。
- \* 正しいパスワードを入力したかをご確認ください。
- \* ルーターの再起動を行ってください。
- \* ルーターのフィルタリストもしくはデバイス接続制限が設定されていません。
- \* 前のWiFi接続を切り、ルーターの再起動を行ってから、もう一度WiFiに接続します。

## Q6. タブレットが容量不足になった。

- \* 不必要なアプリを削除します。
- \* アプリのキャッシュを定期的に削除します。
- \* メモリーカードを差し込んでメモリー容量を拡張します。

## Q7. タブレットの画面に傷が付いています。

- \* 保護フィルムの傷かどうかをご確認ください。そうであれば、保護フィルムを取り除いてください。

## Q8. スクリーンが無反応になる。

- \* スクリーンにはほこりや油汚れがないかを確認してください。ほこりや油汚れがある場合は、布で軽く拭いてきれいにしてください。

## Q9. フォントサイズが小さすぎて、見えない。

- \* 「設定」>「ディスプレイ」>「表示サイズとテキスト」>「フォントサイズ」に入り、テキストサイズを調整してください。

## Q10.音声検索機能の使用方法。

\* Google検索バーのマイクアイコンをタップし、知りたいことをタブレットに伝え、検索結果が表示されます。

## Q11. メモリカードが認識されません。

\* タブレットはFAT32形式のメモリカードのみ対応しています。メモリカードの規格がタブレットに対応していない場合は、「クイック設定」>「タッチし修正してください」>「外部ストレージ」>「SDカードをフォーマット」の手順でフォーマットを行い、保存されているすべてのデータが消去され、メモリカードが使用できるようになります。

## 取扱上のご注意

1. 専用保護フィルム/専用ケースを購入して、デバイスのスクリーンを保護します。
2. タブレットを使わず、テーブルの上にタブレットを置く場合には、スクリーンを下にして奥の位置に置くことをおすすめします。別の物がタブレットに落下して、或はテーブルから落として、スクリーンにダメージを与えることが避けられます。
3. 寝る前に、ベッドの上タブレット直接置かないでください。熟睡時に無意識にスクリーンに重力押しすと、スクリーンにダメージを与える可能性が高いです。
4. お子様の手の届かない所に保管してください。

## ご注意

・実際の使用にあたって、すべての状況での動作を保証するものではありません。  
また、調査の結果、お客様の取り扱いの不備による故障と判明した場合、保証の対象外となります。

# ご購入ありがとうございます

## AOCへようこそ!

製品を最大限にご活用いただき、AOCが提供するすべてのサービスをお楽しみいただくために、以下の内容をご確認ください。

### ご注意

- 使用前に「Safety & Precaution（安全上のご注意）」セクションを必ずお読みください。

### ヒント

- AOCは製品の継続的な改善に努めています。ソフトウェアのアップデートにより、本取扱説明書の内容が製品と異なる場合があります。AOCは予告なく本取扱説明書を改訂または廃止する権利を留保しますので、あらかじめご了承ください。

### ご注意

- 本取扱説明書は著作権法により保護されています。無断で全部または一部を転載・複製することを禁じます。

## 商標に関する表示

Android™ は Google LLC の商標です。

Google、Android、Google Play およびその他のマークは Google LLC の商標です。

# 安全上のご注意

## ⚠️ ご注意事項

本取扱説明書は著作権法により保護されています。無断で全部または一部を転載・複製することを禁じます。

## ⚠️ 電波について

本製品は以下の周波数帯および最大送信出力で動作します。

- - Wi-Fi (2.4GHz帯) : 2400~2483.5 MHz (送受信)
- - Wi-Fi (5GHz帯)
- - バンド1: 5150~5250 MHz (送受信)
- - バンド2: 5250~5350 MHz (送受信)
- - バンド3: 5470~5725 MHz (送受信)

車載機器で使用する場合は、車両メーカーに電波干渉の有無をご確認ください。

## ⚠️ 使用禁止場所

以下の場合には必ず電源を切り、本製品を使用しないでください。

- - 飛行機内: 航空機の運航に支障をきたすおそれがあります。
- - 病院・クリニック等の医療機器近傍: 誤動作を引き起こす可能性があります。
- - 揮発性・可燃性ガスが発生する場所 (ガソリンスタンド、粉塵の多い場所など)
- - 液化石油ガス (LPG) を燃料とする車両内
- - 採石場や鉱山など、爆破解除作業を行っている現場

## 車内でのご使用について

運転中の本製品操作はおやめください。手ぶら操作アクセサリ（ハンズフリー機器）をご利用のうえ、安全運転を心がけてください。エアバッグやその他安全装置の作動を妨げないように、設置場所にもご注意ください。


## 取り扱い上のご注意

- - 本製品は、通常の使用姿勢でお使いください。
- - 高温多湿、極端に低温または高温の環境（0°C未満、35°C超）では使用しないでください。
- - 水中に沈めたり、液体をかけたりしないでください。万が一水滴などで濡れた場合は、電源を切り、バッテリーを取り外した上で24時間以上十分に乾燥させてからご使用ください。
- - お手入れの際は、柔らかい乾いた布で優しく拭いてください。


## バッテリーおよび付属品の取り扱い


- - 本製品には、指定の充電器および純正アクセサリのみをご使用ください。純正品以外の使用は、本製品の故障や発火・爆発などの危険を伴い、メーカー保証の対象外となります。
- - バッテリーを変形させたり、分解・改造したりしないでください。
- - 金属製品（鍵など）でバッテリー端子をショートさせないようにご注意ください。
- - -20°C未満、60°C超の環境や、湿気・腐食性の高い環境での保管は避けてください。

## 環境への配慮


-  お住まいの地域の規制に従い、パッケージ材料、使用済みバッテリー、古いタブレットの廃棄を行い、リサイクルを促進してください。  
メーカーはバッテリーおよびパッケージに、廃棄物のリサイクルと適切な処理を促進するための標準マークを付しています。

 : 表示のあるパッケージ材料はリサイクル可能です。

 : 関連する国内のリサイクル回収システムに対して、財政的な寄付がなされています。


 : プラスチック材料はリサイクル可能です。  
(プラスチックの種類も識別可能)

## 聴覚保護

 音楽を聴く際は、適度な音量に調整してください。長時間の大音量は聴力を損なう恐れがあります。

使用中はイヤホン/ヘッドホンを目や体から少なくとも15mm以上離して使用することをおすすめします。

## WEEEマーク（消費者向け情報）

 製品に添付された×印の付いたホイール付きごみ箱記号は、欧州指令2002/96/ECの対象製品であることを示します。  
使用済み電気・電子機器は、お住まいの地域の分別回収システムに従って廃棄してください。

通常のご家庭ごみとして廃棄せず、適切にリサイクルすることで、環境や人の健康への悪影響を防ぎます。

## 保証規定

当社はお買い上げいただいた製品が、正常な使用状態において、購入日より12か月間、素材および製造上の欠陥がないことを保証します。

1. 本保証は製品の正規購入者（以下「お客様」といいます）に対してのみ適用されます。
2. 本保証の有効期間は、タブレットの購入日より12か月間です。保証を請求される際は、購入証明書または領収書の提示が必要です。
3. 保証期間内に欠陥が確認された場合、AOC認定サービスセンターまたは認定修理担当者が、以下のいずれかを無償で行います（第6条の規定に従います）：修理または交換。修理や交換には、同等の性能を有する再生品が使用される場合があります。修理完了後または交換後の製品は正常に動作する状態でお客様に返却されます。交換された部品はAOC認定サービスセンターの所有物となります。
4. 最寄りのサービスセンターから離れた地域でご使用の場合、お客様のご都合とご負担でサービスセンターへお持ち込みいただく必要があります。
5. 修理または交換されたタブレットは、元の保証期間の残存期間内であれば引き続き保証の対象となります。
6. 下記の場合には保証が無効となります：
  - (a) 端末のシリアル番号、付属品の日付コード、防水インジケータまたは保証シールが除去、消去、改ざん、損傷されている場合
  - (b) 通常使用による摩耗や経年劣化
  - (c) 取扱説明書に反する使用、乱暴な扱い、液体（汗や飲料水、オイル等）への浸入、湿気や過度の温度環境などの影響、腐食、酸化、不正な修理や部品使用、事故、天災など、保証対象外の事由による損傷（液晶やカメラレンズのひび割れや傷を含む）

(d) バッテリーの短絡、バッテリーケースやセルのシール破損、改ざん等の事由、または本来の機器以外での使用による不具合

(e) 通信事業者のネットワークやその他システムの機能不良が原因の場合

7. 保証を請求される際は、欠陥発生後速やかに（遅くとも保証期間満了前までに）AOC認定サービスセンターへご連絡ください。本保証規定は、AOCがお客様に提供する保証の全てを定めるものです。認定サービスセンターは、データ（電話帳、SMS、Eメール、写真、着信音、ダウンロードしたソフトウェア等）の紛失について一切責任を負いません。サービスに出される前に、個人データのバックアップを行い、機密情報を取り除いてください。
8. 保証対象外の修理やサービスには、認定サービスセンターの定める実費サービス料が発生する場合があります。
9. 当社の責任は、部品の修理または交換に限られます。最大補償額は、元のタブレットの小売価格または購入価格のいずれか低い方を上限とします。
10. 部品の入手不可などやむを得ない事情が生じた場合は、経年減価償却に基づく補償を実施することがあります。



## CUSTOMER SUPPORT

English [AOC-After-Sales@customerafter-sales.com](mailto:AOC-After-Sales@customerafter-sales.com)

カスタマーサポート

日本 [JP-service@customerafter-sales.com](mailto:JP-service@customerafter-sales.com)

Manufacturer: TPV Audio and Visual Technology (Shenzhen) Co., Ltd.  
All visuals provided are for reference purposes only. Actual product features such as tablet colors and screenshots may vary from those pictured.

FC CE RoHS



MADE IN CHINA