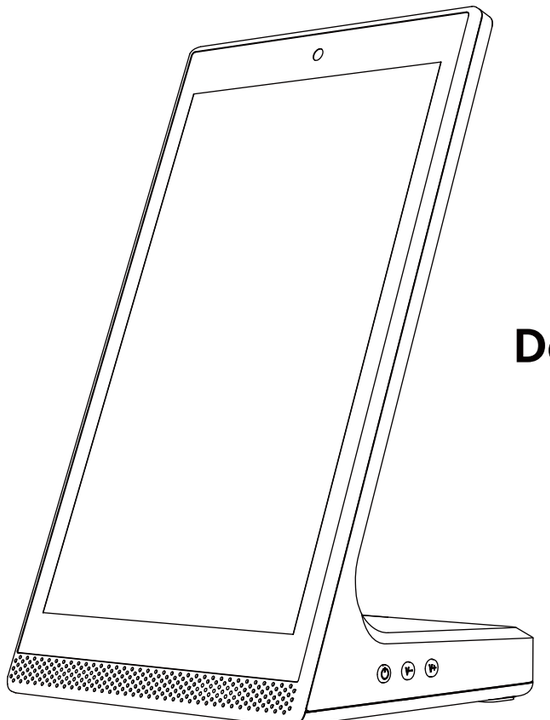


Desktop Digital Signage

Product User Manual 1.1

Catalogue

I Attention 1

II Component Introduction 2

III Specifications 3

IV Introduction of Button and Interfaces 4

V Send programs via LedArt 6


VI Play programs via USB flash drive 13

1. Attention


- Before starting the machine, please read this manual carefully to understand the usage and precautions of this machine.
- 1) The contents covered in the manual are based on the latest information of the machine at the time of compiling the manual. In case of any change to the product contents any parameters, the current product shall prevail without further notice.
- 2) Please use the original power adapter and related accessories.
- 3) Please unplug the power cord when the machine is not used for a long time it thunderstorm weather.
- 4) Do not disassemble the product by yourself. Do not use alcohol, diluent or benzine to scrub the surface of the product.
- 5) The company shall not be responsible for the loss of memory or damage caused by other reasons.
- 6) Please do not put the product in the place where sunlight can directly shine, high temperature, humidity or dust.
- 7)Please avoid falling or strong collision with the product. Do not let the display screen suffer violent vibration and impact,
- otherwise the display screen may be damaged or abnormal.
- 8)Please do not disconnect suddenly when the machine is formatting or uploading or downloading data, otherwise the equipment may be damaged.

2.Component Introduction

The attachments received are subject to

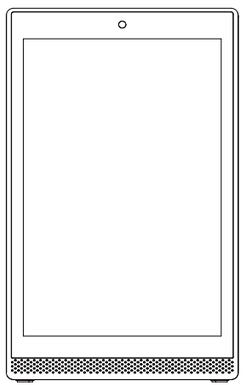

Digital Signage

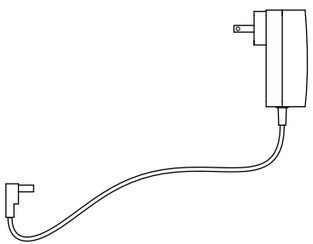

Power adapter




Instructions


3.Specifications

System	CPU	A133 quad core 64 bit Cortex-A53
	RAM	2 GB
	ROM	32 GB
	System Version	Android 10
	Language	Default English,and multiple language supported
	Touch screen	10-Point capacitive touch
Display	Panel	10.1" high-definition full view screen
	Resolution	800×1280
	Viewing angle	85/85/85/85(L/R/U/D)
	Contrast	1000:1
	Screen scale	16：10
Multi-Media	Video	MPEG-1, MPEG-2, MPEG-4, H.263, H.264, RV, etc.
	Audio	MP3, WMA, AAC , etc.
	Picture	JPEG、JPG
Interface	USB	×2
	RJ45	×1
	Power suppply	AC 100-240V 50/60Hz
Other parameters	Camera	Standard 2.0MP pixel camera
	Speaker	2W*2
	Working Temperature	0℃---50℃
Attachment	Adapter	12V/2A
	User Manual	×1

4.Introduction of Buttons and Interfaces

Plug in the power supply to automatically enter the boot interface. Press and hold the power button for about 1 second to access the shutdown menu, and a shutdown dialog box will appear. Tap “Power Off”.

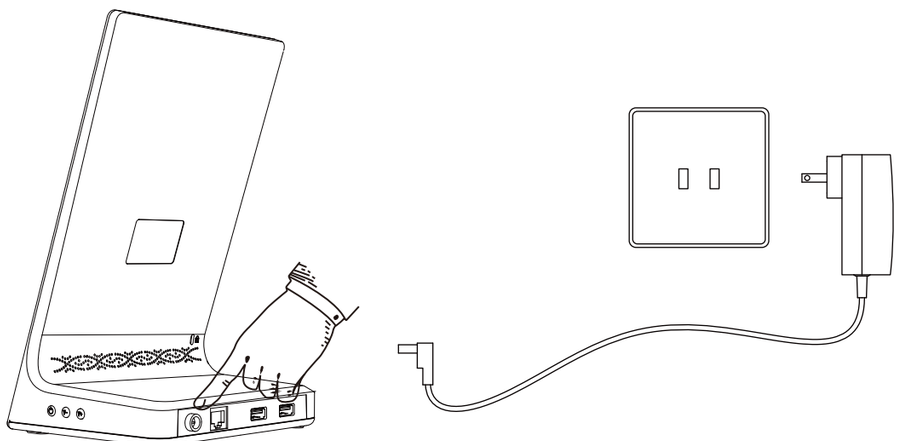

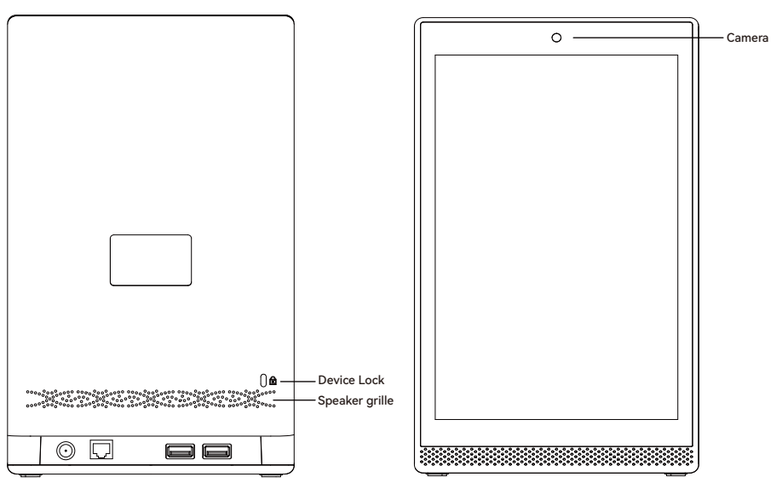






5.Send Programs via Led Art

1) Download the cell phone app **“Led Art”**, it can be directly searched and downloaded in Play Store or App Store. Or scan the QR code below to install.


2) We need to turn on the Wi-Fi hotspot of the device. You can quickly tap any corner of the screen three times to open the MagicPlayer menu. Then tap **"Wi-Fi hotspot"** and turn it on, the **Hotspot name** is usually “133M-...”. And you can see the default Wi-Fi password.
Note: If there’s a WiFi or Ethernet available, skip this hotspot setting step. And make sure your phone and the device are connected to the same Wi-Fi.

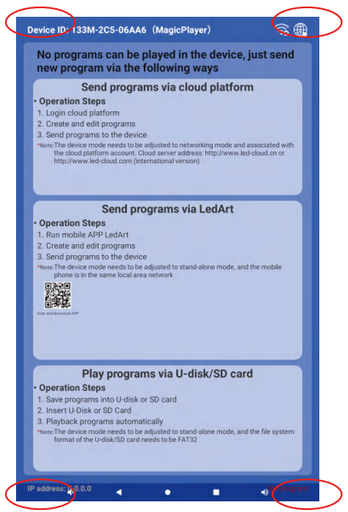


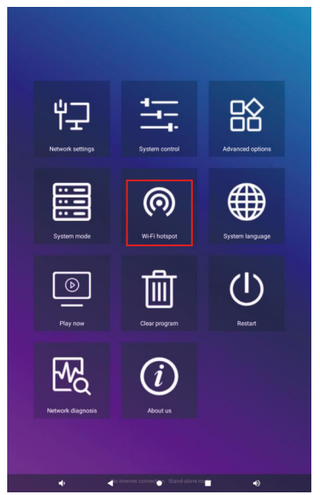

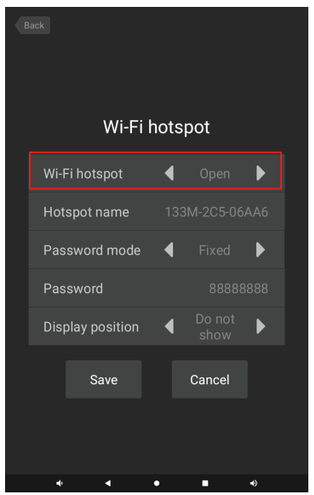



3) Open the Wi-Fi settings on your phone, find the device's hotspot name, enter the password, and connect. Open the **Led Art** app. After a successful connection, the Led Art can automatically detect the device information.

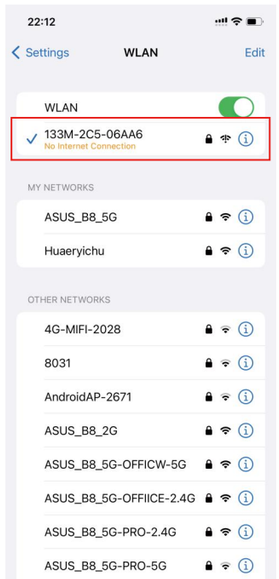


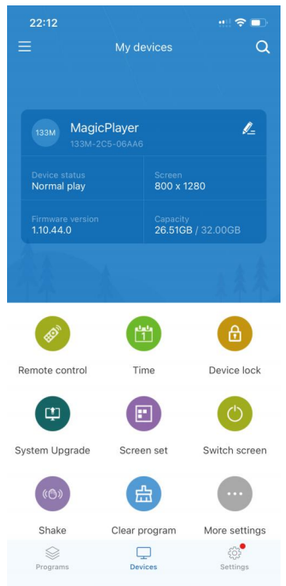


4) Select the **"Programs"** module, click **"New Screen"**, it will automatically search for online devices, select a device, read back the device's screen default size, and then tap **"OK"**.

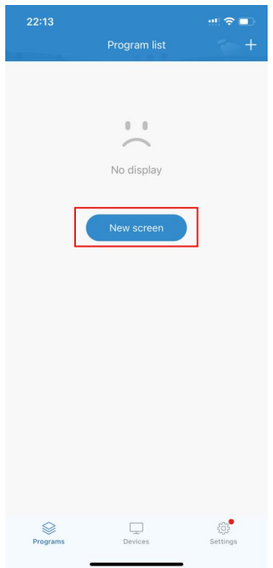

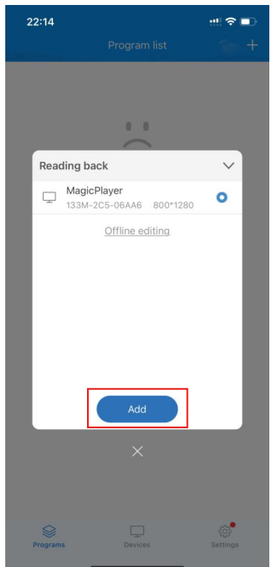


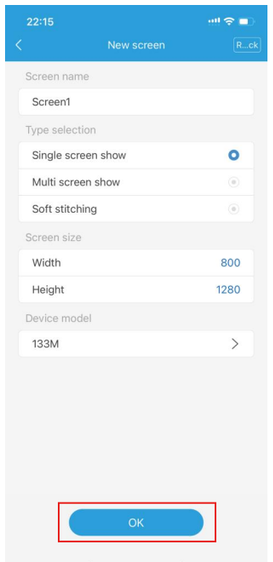

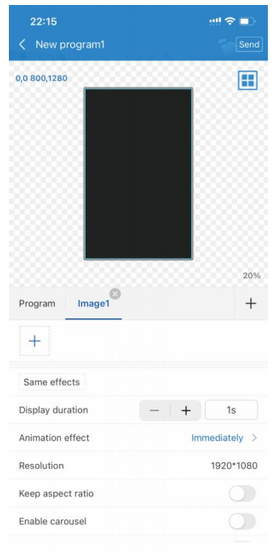


5) Add video

After entering the program editing interface, tap the "+" on the right to add a video area, then enlarge the video area in the analog display area, and then tap the "+" below to add multiple videos. The videos will play in a loop.

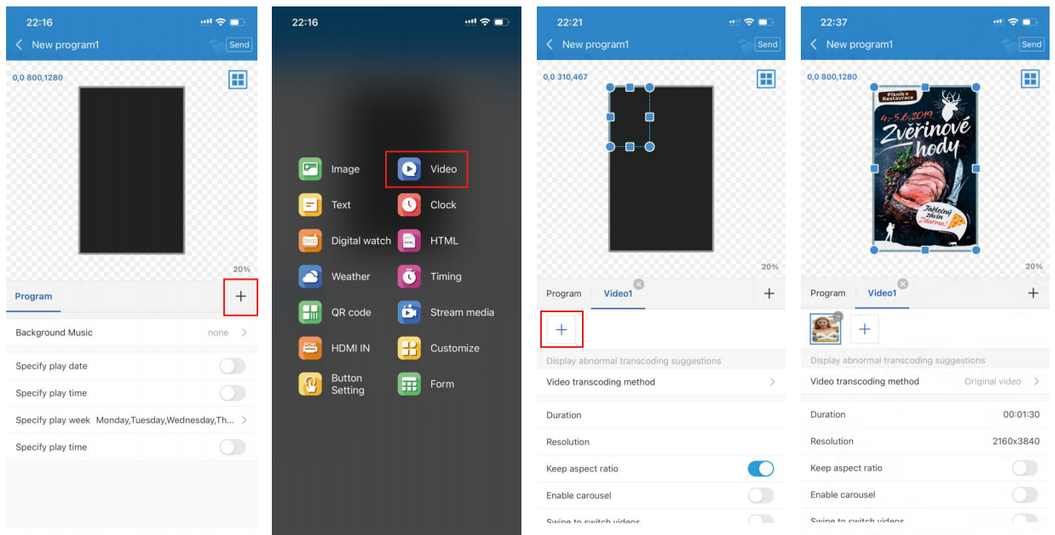

6) Add pictures


Similar to video, click the "+" on the right to add a picture area, then enlarge the picture area in the simulation display area, and then tap the "+" below to add multiple pictures, and the pictures will play in a loop.

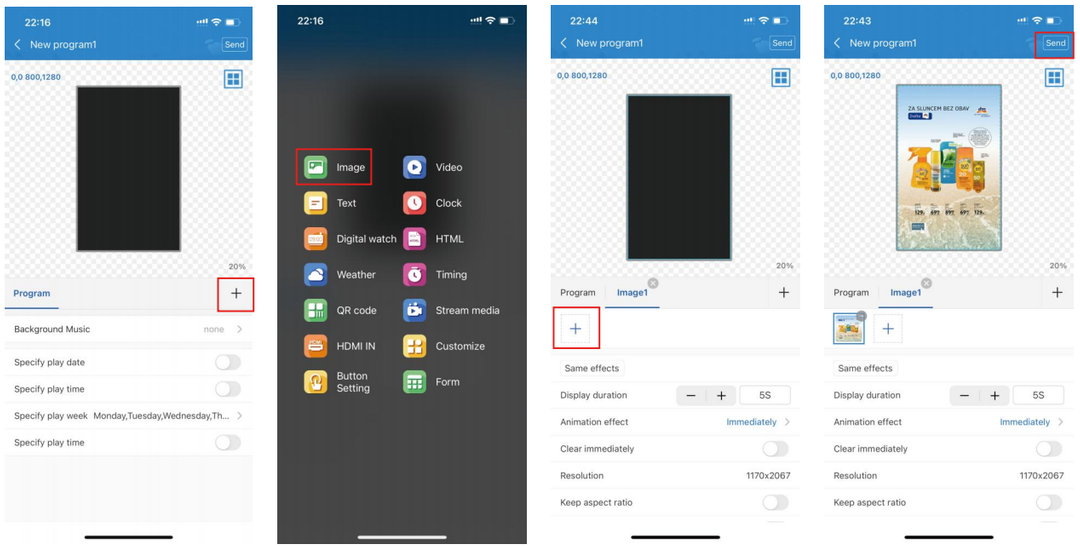

After adding a picture, you can modify the picture display duration, animation effects, and display effects below the picture list.

7) Layer overlay

The bottom layer is added first, and the overlays added later are displayed on top. As shown in the figure below, the picture area is superimposed on the video area to play, and the text area is superimposed on the video and picture area to play.

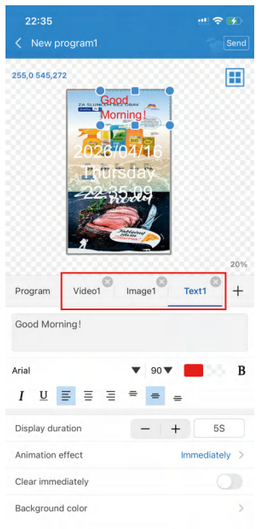

Features:

1) Each area can be enlarged and reduced and dragged arbitrarily;

2) The background of text and clock is transparent by default, so you can add video / picture as the background before adding text / clock first.

6. Play programs via USB flash drive.

- Copy the video or picture content you need to display to USB flash drive, insert the USB flash drive into the USB port of the device, the device will automatically copy and display the program content, after that you can remove your USB flash disk.
- (The video or picture content ratio should be matched or closed to the screen ratio. If the ratio with big difference, the video with full screen display will get stretched out.)



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

The equipment complies with FCC Radiation exposure limits set forth for uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

