



慎防来自应用下载网页的诈骗。请不要点击任何广告。
仅点击“Android”或“iOS”下载我们的应用。
我们的应用是免费的。任何情况下请不要绑定您的信用卡！！！

Avoid scam from app downloading webpage.
Please do NOT click any ads.
Click “Android” or “iOS” to download our app.
Our app is FREE of charge.
Do NOT bind your credit card in any case!!!!

Evita estafas de páginas web de descarga de aplicaciones.
Por favor, NO hagas clic en ningún anuncio.
Haz clic en “Android” o “iOS” para descargar nuestra aplicación.
Nuestra aplicación es GRATIS.
¡NO vincules tu tarjeta de crédito bajo ninguna circunstancia!



V-C Smart Watch EN

Quick Guide To Use

Downloading the APP

Scan the following QR code, download and install the APP.



Download and install the APP

Connecting the watch

Open the APP and set up your profile



Go to the "Device", Click "Add Device"



Click on your device in the scanned devices list



Binding completed


1. Make sure the Wireless of your cell Phone is turned on
2. Show the "MAC" address of your watch in "Settings" - "About".
3. When the watch is linked to the APP for the first time, wait for a pop-up message to allow the watch to use Wireless permission (if you have accidentally restored the factory settings of the watch, please repeat the above operation to connect the watch).
4. If the watch is turned on for more than 120 seconds without connecting to the APP, the watch will automatically turn off the Wireless. If you want to connect the APP at this time, you need to turn on the Wireless ON/OFF in the "Settings"_"Watch" of the watch, and then do the above operation.

Watch charging and activation

Before first use, the watch needs to be charged and activated; the Wireless charging with the connected wireless charging electro-magnetic suction cup on the back of the watch.

“(Please use 5V 1A and below charger to charge the device)”

Watch operating instructions

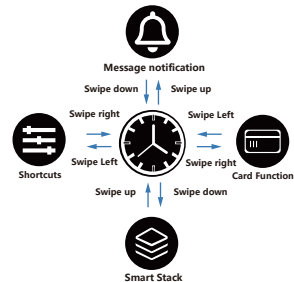

Watch Features

- Wireless Call**
Open the APP to link the Wireless of the watch, and after synchronizing the phone, you can make, answer or reject calls on the watch.
- Message Reminder**
To push all messages and social media notifications, you must turn on the notification authorization on your phone.
- Sports Mode**
Enter the exercise mode (running, jumping rope, cycling, climbing) selection interface and start data monitoring.
- Exercise Record**
Record all exercise data.
- Pedometer**
Counts your pedometer data of the day, clears the data at 00:00am and can be viewed in the APP.
- Sleep Monitor**
Enable Sleep Monitor to monitor the quality of your sleep while you are sleeping

- Remote Shutter**
After the watch is connected to the phone, open the shutter mode of the "APP" interface, click or shake the watch to take pictures, and the pictures will be automatically stored in the phone.
- Music Players**
After connecting the device, you can remote control the music player on your phone.
- Find Mobile Phone**
When the watch and mobile phone are connected, tap the watch to find the mobile phone, long press the magnifying glass icon, the mobile phone will ring.
- Weather**
It could show the weather info of current and tomorrow on the weather page. Weather info is synced after connecting with the APP it will not be updated after a long disconnection.
- Stop Watch**
Tap the start button on stopwatch page to start timing, and tap the stop button to stop timing
- Alarm**
Alarms can be set in the APP or the watch, up to 8 alarms can be set. The watch will display an alarm icon and vibrate at the set time
- Sedentary Reminder**
Set the sedentary time, when the time comes, the bracelet will vibrate to remind you, and the interface has a reminder label display
- Always on Display**
After setting, the watch screen will display the time after it turns off
- Watch Face Style**
UI style can be set to change
- About**
Display the MAC address, Wireless name, and version number of the device.
- Brightness**
You can set the brightness level and backlight off time
- Settings**
You can set the vibration on or off and adjust the volume.
- Language**
After connecting to the APP, you can set the language on the APP or the watch side, and the language will be synchronised.

Why the watch can't receive push notifications?

Phone settings.

1. Make sure the message push on/off is turned on in your mobile Phone.
2. Make sure the message can be displayed in the notification bar of your Phone. The device information depends on whether the information can be read in the notification bar of the Phone. If there are no notifications on the Phone, the device will not be able to receive push messages. (You need to find the notification settings in your Phone to turn on/off the multimedia message alerts)
3. Turn on the accessibility settings of your device. (You will need to find the accessibility settings in your Phone settings and turn on the accessibility settings for your device) Phone Settings

1. Make sure the message push on/off is turned on for your Phone.
2. Make sure the message can be displayed in the notification bar of your Phone. (You need to find the notification setting in your Phone and turn on/off the multimedia message alert)

Why can't wear a watch in a hot bath?

The temperature of the bath water is relatively high, and a lot of water vapor will be generated, and the water vapor is in the gas phase, and its molecular radius is small. It's easy to penetrate through the gap of the device case. When the temperature drops, it will condense into liquid water droplets again, which will easily cause a short circuit internal and damage the circuit board, and then damage the whole device.

Warning:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

Important: Change or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



V-C Reloj inteligente ES

Guía rápida de uso

Descargar la APP

Escanee el siguiente código QR, descargue e instale la APP.



Descargar e instalar la APP

Conectar el reloj

Abre la APP y configura tu perfil



Vaya a "Dispositivo" y haga clic en "Añadir dispositivo".



Haga clic en su dispositivo en la lista de dispositivos escaneados



Conexión completa

1. Asegúrate de que el Wireless de tu móvil está activado
2. Muestra la dirección "MAC" de tu reloj en "Ajustes" - "Acerca de".
3. Cuando el reloj se vincule a la APP por primera vez, espere a que aparezca un mensaje emergente para permitir que el reloj utilice el permiso Wireless (si ha restaurado accidentalmente Phone ajustes de fábrica del reloj, repita la operación anterior para conectar el reloj).
4. Si el reloj se enciende durante más de 120 segundos sin conectarse a la APP, el reloj apagará automáticamente la conexión inalámbrica. Si desea conectar la APP en este momento, deberá activar la conexión inalámbrica ON/OFF en «Ajustes»_«Reloj» del reloj y, a continuación, realizar la operación anterior.

Carga y activación del reloj

Antes de utilizarlo por primera vez, el reloj debe cargarse y activarse. Utilice el cargador magnético equipado para fijarlo a Phone contactos metálicos de la parte posterior del reloj, y el otro extremo del cargador puede enchufarse a un cabezal de carga USB o al puerto USB del ordenador.

"(Utilice un cargador de 5V 1A o inferior para cargar el dispositivo)"

Ver instrucciones de funcionamiento



Características del reloj

- Llamada inalámbrica**
Abre la aplicación para vincular la conexión inalámbrica del reloj y, después de sincronizar el teléfono, podrás realizar, responder o rechazar llamadas en el reloj.
- Recordatorio de mensaje**
Para recibir todos los mensajes y notificaciones de redes sociales, debes activar la autorización de notificaciones en tu teléfono.
- Modo deportivo**
Ingresa a la interfaz de selección del modo de ejercicio (correr, saltar la cuerda, andar en bicicleta, escalar) y comience el monitoreo de datos.
- Registro de ejercicios**
Registre todos los datos del ejercicio.
- Podómetro**
Cuenta los datos de tu podómetro del día, borra los datos a las 00:00 a. m. y se pueden ver en la aplicación.
- Monitor de sueño**
Habilite el Monitor de sueño para monitorear la calidad de su sueño mientras duerme

- Obturador remoto**
Una vez que el reloj esté conectado al teléfono, abra el modo de obturador de la interfaz "APP", haga clic o agite el reloj para tomar fotografías y las fotografías se almacenarán automáticamente en el teléfono.
- Reproductores de música**
Después de conectar el dispositivo, puede controlar de forma remota el reproductor de música en su teléfono.
- Encontrar teléfono móvil**
Cuando el reloj y el teléfono móvil estén conectados, toque el reloj para encontrar el teléfono móvil, mantenga presionado el icono de la lupa, el teléfono móvil sonará.
- Clima**
Podría mostrar la información meteorológica actual y de mañana en la página del tiempo. La información meteorológica se sincroniza al conectarse a la aplicación y no se actualiza tras una desconexión prolongada.
- Cronómetro**
Toque el botón de inicio en la página del cronómetro para comenzar a cronometrar y toque el botón de parada para detener el cronometraje.
- Alarma**
Se pueden configurar hasta 8 alarmas en la aplicación o en el reloj. El reloj mostrará un icono de alarma y vibrará a la hora establecida.
- Recordatorio de sedentarismo**
Establezca el tiempo de sedentarismo, cuando llegue el momento, la pulsera vibrará para recordárselo y la interfaz tiene una pantalla de etiqueta de recordatorio.
- Siempre en exhibición**
Después de la configuración, la pantalla del reloj mostrará la hora después de que se apague.
- Estilo de la esfera del reloj**
El estilo UL se puede configurar para cambiar
- Información**
Muestra la dirección MAC, el nombre inalámbrico y el número de versión del dispositivo.
- Brillo**
Puede configurar el nivel de brillo y el tiempo de apagado de la luz de fondo.
- Ajustes**
Puede activar o desactivar la vibración y ajustar el volumen.
- Idioma**
Después de conectarse a la aplicación, puede configurar el idioma en la aplicación o en el lado del reloj, y el idioma se sincronizará.

¿Por qué el reloj no puede recibir notificaciones push?

Ajustes del teléfono .

1. Asegúrate de que la activación/desactivación de push de mensajes está activada en tu teléfono móvil.
 2. Asegúrate de que el mensaje se puede mostrar en la barra de notificaciones de tu teléfono. La información del dispositivo depende de si la información se puede leer en la barra de notificaciones del teléfono. Si no hay notificaciones en el teléfono, el dispositivo no podrá recibir mensajes push. (Necesitas encontrar Phone ajustes de notificación en tu teléfono para activar/desactivar las alertas de mensajes multimedia)
 3. Activa Phone ajustes de accesibilidad de tu dispositivo. (Tendrás que encontrar Phone ajustes de accesibilidad en Phone ajustes de tu teléfono y activar Phone ajustes de accesibilidad de tu dispositivo)
- Ajustes del Phone
1. Asegúrate de que la opción de enviar mensajes está activada en tu teléfono.
 2. Asegúrate de que el mensaje puede mostrarse en la barra de notificaciones de tu teléfono. (Necesitas encontrar la configuración de notificaciones en tu teléfono y activar/desactivar la alerta de mensajes multimedia)

Advertencia:

Nota: Este equipo ha sido sometido a pruebas y se ha determinado que cumple los límites establecidos para los dispositivos digitales de Clase B, de conformidad con el apartado 15 de las normas de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias perjudiciales en una instalación residencial. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede causar interferencias perjudiciales en las comunicaciones por radio.

No obstante, no se garantiza que no se produzcan interferencias en una instalación concreta. Si este equipo causa interferencias perjudiciales en la recepción de radio o televisión, lo que puede determinarse apagando y encendiendo el equipo, se recomienda al usuario que intente corregir la interferencia mediante una o más de las siguientes medidas:

- Reorientar o reubicar la antena receptora.
- Aumentar la separación entre el equipo y el receptor.
- Conecte al equipo a una toma de corriente de un circuito distinto al que está conectado el receptor.
- Consulte al distribuidor o a un técnico experto en radio/TV para obtener ayuda.

Importante: Los cambios o modificaciones no aprobados expresamente por el fabricante responsable del cumplimiento podrían anular la autoridad del usuario para utilizar el equipo.

L'APPareil a été évalué pour répondre aux exigences générales en matière d'exposition aux radiofréquences. L'APPareil peut être utilisé sans restriction dans des conditions d'exposition portable.



!NO vincules tu tarjeta de crédito bajo ninguna circunstancia!

Nuestra aplicación es GRATIS.

aplicación.

Haz clic en "Android" o "iOS" para descargar nuestra

Para favor, NO haga clic en ningún anuncio.

Evita estarás de páginas web de descarga de aplicaciones.

Do NOT bind your credit card in any case!!!

Our app is FREE of charge.

Click "Android" or "iOS" to download our app.

Please do NOT click any ads.

Avoid scam from app downloading webpage.

我们的应用是免费的。任何情况下请不要绑定您的信用卡!

仅点击"Android"或"iOS"下载我们的应用。

慎防来自应用下载网页的诈骗。请不要点击任何广告。



FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.