
Our Place®

Perfect Power Pot™ User Manual

APL.EPC.ESN
120V 60Hz 700W
1.6L

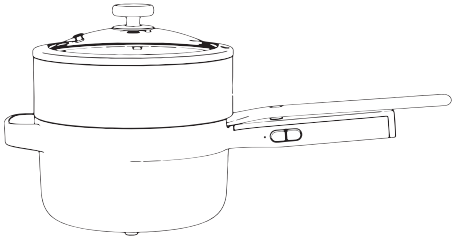

POWERFUL. PORTABLE. PERFECT.

At Our Place, we believe people should be able to make delicious homemade meals wherever, whenever. The Perfect Power Pot™ was designed to do just that. Wherever life takes you, nourishing made-by-you meals are yours to enjoy. It covers all the basics and then some (hello, built-in steamer and spatula). You might love it so much that you'll never want to use a standard stove again!

⚠ **IMPORTANT**

SAVE THESE INSTRUCTIONS

Please read and keep these instructions handy. These instructions will help you learn to use your Perfect Power Pot™ properly and thoroughly so that you can achieve consistent, professional results.

FOR HOUSEHOLD USE ONLY. NOT INTENDED FOR COMMERCIAL USE.

Contents

Important Safeguards	1
Safety Precautions	3
Parts and Accessories	7
Control Panel	8
Before First Use	9
Instructions for Use	9
Care and Cleaning	10
Troubleshooting	11
Replacement Parts	12
Warranty	13

SAVE THESE INSTRUCTIONS.

FOR HOUSEHOLD USE ONLY. NOT INTENDED FOR COMMERCIAL USE.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

⚠ WARNING

1. Read all instructions.
2. **DO NOT** touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or outer pot body and long handle in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. **DO NOT** operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the manufacturer for examination, repair, or adjustment. If the detachable power cord is damaged, please contact hello@fromourplace.com.
7. The use of accessory attachments not provided or recommended by Our Place may cause injuries.
8. **DO NOT** use outdoors.
9. **DO NOT** let cord touch hot surfaces or hang over the edge of a table or counter.
10. **DO NOT** place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, toggle the switch to the right to the “Off” position (empty circle), then remove plug from handle and wall outlet.

SAVE THESE INSTRUCTIONS.

FOR HOUSEHOLD USE ONLY. NOT INTENDED FOR COMMERCIAL USE.

13. **DO NOT** use appliance for anything other than its intended use.
14. This appliance is not intended for deep frying foods.
15. This appliance is for household use only.

Special Cord Instructions

1. A short power-supply cord (or detachable power-supply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
2. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
3. If a longer detachable power-supply cord or extension cord is used:
    a. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
    b. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally; and
    c. If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

SAVE THESE INSTRUCTIONS.

FOR HOUSEHOLD USE ONLY. NOT INTENDED FOR COMMERCIAL USE.

SAFETY PRECAUTIONS

General Instructions

- To eliminate choking hazards for young children, remove and safely discard any packing materials before using the appliance for the first time.
- Take inventory of all contents to ensure you have all parts needed to properly and safely operate your appliance. See Parts and Accessories on page 7.
- **Unplug appliance from the handle and outlet when not in use and before cleaning. Allow to cool before cleaning or handling, and putting on or taking off parts.**

Placement

- **INTENDED FOR COUNTERTOP USE ONLY.** Ensure the surface is stable, non-combustible, level, clean, and dry. **DO NOT** place the appliance near the edge of a countertop during operation.
- A fire may occur if the appliance is covered or touching flammable materials, including curtains, draperies, and walls when in operation.
- Use the appliance in a well-ventilated area. Keep at least 4 inches of space on all sides of the appliance to allow adequate air circulation.
- **DO NOT** use near water or flames.
- To avoid possible steam damage, place the appliance away from walls and cabinets during use. **DO NOT** use under cabinets or in an enclosed space.

General Use

- **ALWAYS** ensure the appliance is properly assembled before use.
- This appliance generates heat and steam during use. Take proper precautions to avoid burns, fire, and personal or property damage.
- **DO NOT** move the appliance when in use.
- Only use the handles to carry or move the appliance.
- **DO NOT** touch hot surfaces. Appliance surfaces are hot during and after operation. To prevent burns or personal injury, **ALWAYS** use heat-resistant gloves, pads, or oven mitts, and use available handles.
- **DO NOT** fill with liquid past the underside of the handles to prevent water splashing out and scalding.

SAFETY PRECAUTIONS

- **DO NOT** use empty. When sautéing, **ALWAYS** use high smoke point oils and avoid aerosol spray oil.
- If the Glass Lid has chipped or cracked, stop using and contact hello@fromourplace.com.
- **DO NOT** lean over or place your hands or face over the appliance while it is in operation. This could result in burns or personal injury.
- The appliance has a ceramic nonstick coating. **DO NOT** use sharp or metal utensils to remove food from the appliance. Please use silicone or wooden tools to prevent damage to the non-stick coating.
- **DO NOT** use with power converters or adapters, timer switches, or separate remote-control systems.

Care and Storage

- Let the appliance cool before handling, cleaning, or storing.
- **DO NOT** place anything — other than the Glass Lid or Steamer Insert — on top of the appliance when assembled, when in use, and when stored. **DO NOT** store any materials in this appliance when not in use, including the cord.
- **DO NOT** place any of the following materials in the appliance: cardboard, plastic, paper, or anything similar which may catch fire or melt.
- Cleaning and user maintenance should not be done by children.
- **DO NOT** use harsh abrasives, caustic cleaners, or oven cleaners when cleaning this appliance. Refer to the “Care and Cleaning” section on page 10.

Electrical Warning

The appliance body contains electrical components that are an electrical shock hazard. Failure to follow these instructions may result in electric shock.


To protect against electric shock:

- Turn off by toggling the switch to the right to the ‘off’ position (empty circle), and then remove the plug from the handle and outlet. Always unplug when not in use, as well as before adding or removing parts and before cleaning. To unplug, grasp the plug and pull from the outlet. **NEVER** pull from the power cord.

SAFETY PRECAUTIONS

- **DO NOT** attempt to repair, replace, or modify components of the appliance, unless expressly noted as replaceable throughout this user manual, as this may cause electric shock, fire, personal injury, and/or property damage and will void the limited U.S. warranty.
- To protect against fire, electric shock, or injury, **DO NOT** immerse the cord, plug or appliance (including the long handle) in water or other liquids. **DO NOT** splash water on the appliance.
- This appliance has a 3-prong grounding plug and should only be used with 120V, 60Hz electrical systems in North America. To reduce the risk of electric shock: **ONLY** plug the power cord into a grounded electrical outlet; **DO NOT** modify the plug in any way.
- **DO NOT** clean the appliance by rinsing it under a faucet. Refer to the “Care and Cleaning” section on page 10.

PARTS AND ACCESSORIES

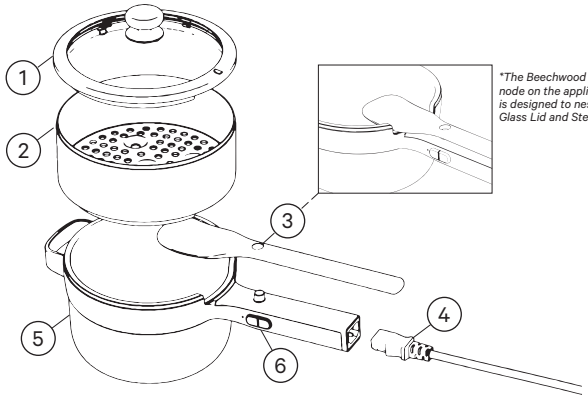


**The Beechwood Spatula sits on a node on the appliance handle and is designed to nest under the Glass Lid and Steamer Insert.*


1.	Glass Lid	4.	Detachable Power Cord
2.	Steamer Insert	5.	Appliance Body
3.	*Beechwood Spatula	6.	Control Panel

The Steamer Insert is designed to sit on top of the appliance body. You can also operate the appliance without the Steamer Insert with just the Glass Lid on.


Appliance With Steamer Insert

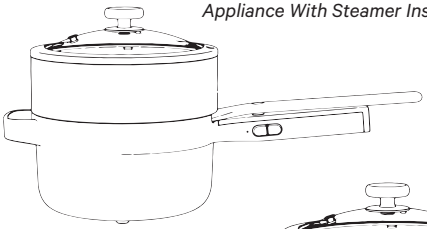

Appliance Without Steamer Insert

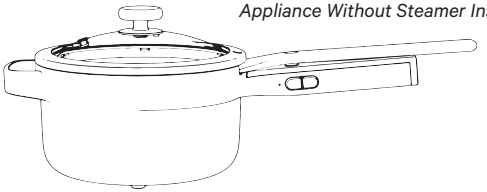

CONTROL PANEL

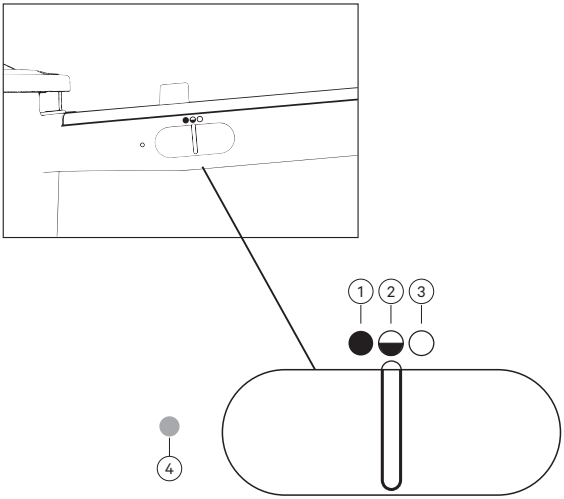

1. Level 2 (Full Circle): High Heat + On (700W)
2. Level 1 (Half Circle): Low Heat + On (350W)
3. Empty Circle: Off
4. When illuminated, the appliance is ON and HOT; when not illuminated, the appliance is OFF but may still be HOT. The LED Indicator will be illuminated when using both Level 1 and Level 2 heat settings.

NOTE: Preheat time is 3.5 minutes to full temperature for Level 1 (low heat) and 3 minutes for Level 2 (high heat).

BEFORE FIRST USE

IMPORTANT: Review all important safeguards on pages 1-5 before proceeding.

1. Remove and discard all packaging materials from the appliance.
2. Remove all components from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
3. Before using the product for the first time, remove and thoroughly hand wash and dry the appliance body, Steamer Insert, Glass Lid, and Beechwood Spatula in warm, soapy water. See “Care and Cleaning” on page 10 for more information.
4. Place the appliance body on a clean, dry, level surface, such as a counter or table.
5. When using this appliance, provide adequate space (at least 4 inches on all sides) for air circulation.

Note: The appliance may have a slight odor during the first use. This is normal. If the odor does not decrease after the first use, please contact customer support at hello@fromourplace.com.

INSTRUCTIONS FOR USE

1. Insert the detachable power cord into the appliance handle and then plug the power cord into an outlet.
2. Toggle the switch on the appliance handle to the desired heat setting: Level 2 (high) or Level 1 (low).
3. Add food and cook for the required amount of time. See the provided recipe booklet for ideas on what you can cook with your Perfect Power Pot™.
    a. Use the provided Beechwood Spatula as-needed, or silicone and wooden tools to prevent damage to the non-stick coating; **DO NOT** use sharp or metal utensils to remove food from the appliance.
    b. When sautéing, **ALWAYS** use high smoke point oils and avoid aerosol spray oil.
    c. The preheat time for Level 1 (low heat) is 3 ½ minutes; the preheat time for Level 2 (high heat) is 3 minutes.
4. Once cooking is complete, toggle the switch to the OFF position.
5. Allow the product to cool before hand-washing.

How to Use the Steamer Insert:

1. Fill the appliance body with water. **DO NOT** fill with liquid past the underside of the handles to prevent water splashing out and scalding.

Tip: Make sure there is enough water to boil for the desired amount of time and check periodically throughout cooking. **DO NOT** let the water evaporate.

2. Place food in the Steamer Insert and place on top of the appliance body.
3. Place Glass Lid on the Steamer Insert.
4. Toggle the switch on the appliance handle to the Level 2 setting.

NOTE: Exercise care when removing the Glass Lid and Steamer Insert, as there may still be steam omitting from the appliance. To prevent burns or personal injury, use heat-resistant gloves, pads, or oven mitts.

Tip: The Steamer Insert can steam 5 eggs in the designated egg holders.

For more cooking tips and recipes, see the supplied Perfect Power Pot™ recipe booklet.

CARE AND CLEANING

1. After the appliance is completely cool, separate all parts. Make sure the appliance is unplugged from both the handle and outlet before cleaning.
2. If used during cooking, hand wash the Glass Lid, Steamer Insert and Beechwood Spatula in warm, soapy water and allow parts to air dry.
3. Hand wash the inner portion of the appliance body with warm, soapy water, and wipe clean with a cloth or sponge. Take care to prevent water from coming in contact with the handle plug input.
4. Wipe the outer portion of the appliance body with a warm cloth or sponge. **DO NOT** submerge in water.

Tip: **DO NOT** use scouring pads. If scrubbing is necessary, use a non-abrasive cleaner or liquid dish soap with a nylon pad or brush.

5. After cleaning, store the product in a cool, dry place.

CAUTION: To protect against electrical shock, **DO NOT** immerse the cord, plugs, or pot body and long handle in water or other liquid.

Troubleshooting

⚠ **Warning:** To reduce the risk of shock and unintended operation, always unplug the appliance before troubleshooting.

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
The switch is set to the desired heat setting but the LED indicator is not illuminated.	The power cord is not plugged into the handle and/or the wall outlet.	Ensure that the power cord is properly installed at both areas.
Smell and minimal smoke on initial use.	Packaging material still present in the appliance.	This is normal. However, ensure all packaging material has been removed from in and around the appliance and wash parts thoroughly.

Replacement Parts

Scan this QR code for information on replacement parts, as well as recipes, FAQs and more.



Warranty

We stand by our products. We want you to have the best experience with your Perfect Power Pot™, so our team is here to help. Please contact us at hello@fromourplace.com if you have any questions regarding our warranty program or need advice on using your product. Lagom Kitchen Company, d/b/a "Our Place" ("Our Place", "we", or "our") offers a limited warranty for the Perfect Power Pot™ if purchased and used in the United States. This Limited Warranty is made solely by Our Place and no other person or entity and is offered on the terms and conditions set forth in this Limited Warranty, also available on www.fromourplace.com/warranty.

What does this warranty cover?

This warranty covers defects in materials and workmanship for the Perfect Power Pot™ when used normally in accordance with Our Place's user manual.

What does this warranty not cover?

This warranty does not cover any damages due to:

- Use of the product not for regular household purposes;
- Misuse, abuse, or negligent handling;
- Failure to follow the user manual (e.g. use, warning, maintenance, and care instruction);
- Normal wear and tear;
- Modifications to the product or use with products or parts not approved by Our Place;
- Cosmetic changes, including stains and discolorations;
- Glass parts and other accessory items that are packed with the unit;
- Installation with an incorrect electric current, voltage, circuit breaker rating, extension cord, or power supply;
- Damages or defects caused by service or repair of the product performed by an unauthorized service provider;
- Loss or damage in transit after initial delivery; and
- Accidents or other actions beyond our reasonable control.

Who is covered by this warranty?

This limited warranty covers the original retail consumer purchaser of a covered product or a consumer that receives the product new and unused as a gift from the original retail purchaser. Coverage terminates if a covered consumer sells or otherwise transfers the product. This limited warranty applies only to products

purchased directly from Our Place or an Our Place authorized retailer. This limited warranty is not transferable.

How long does this warranty last?
The warranty period for the Perfect Power Pot™ is limited to one (1) year from the date of delivery to the purchaser.

How do you exercise your rights under the Limited Warranty program?
Please complete our Warranty Claim form available at fromourplace.com/pages/warranty to submit a claim for evaluation. Proof of purchase is required for all claims, including gifted products. As part of the investigation into the claim, we may require you to submit photos, answer questions about the product and your use of the product, and/or try recommended techniques to rectify the issue first.

If your claim is approved, Our Place will either repair, replace or refund the purchase price of the product, as determined by Our Place in its sole discretion. If we require the defective item to be returned to us, we will pay for return shipping if the item is returned within the country of purchase for our non-appliance products. For appliances, you will be responsible for the costs incurred to mail the returned product to us, including any applicable accessories.

While we will strive to exchange your product for the same make, color and model as your original purchase, we cannot make any guarantees. If an Our Place product, component or product color has been discontinued at the time of repair or replacement or if Our Place determines, in its sole discretion, that such repair or replacement is not commercially practicable or cannot be timely made, Our Place reserves the right to repair or replace such product or product component with a product model or color that is similar but not exactly the same as the product or component model originally purchased. Replacement with the same color cannot be guaranteed. At its sole discretion, Our Place is entitled to replace each defective component individually, as opposed to the entire product, and some assembly may be required by you. For example, if you purchase the Perfect Power Pot™ and only one component is found defective, Our Place may, at its discretion, opt to replace either the defective component or the entire Perfect Power Pot™. Our Place reserves the right to utilize comparable reconditioned, refurbished, repaired, or re-manufactured products or parts in the warranty repair or replacement process. Such products and parts will be comparable in function and performance to an original product or part. The

original warranty period will remain and will not restart with this replacement item, regardless of the time remaining under the original warranty period.

Disclaimer of Implied Warranties

EXCEPT AS EXPRESSLY PROVIDED HEREIN AND TO THE EXTENT PERMITTED BY LAW, THIS WARRANTY AND THE REMEDIES SET FORTH ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL, WRITTEN, STATUTORY, EXPRESS OR IMPLIED. OUR PLACE DISCLAIMS ALL STATUTORY AND IMPLIED WARRANTIES INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WORKMANSHIP, MERCHANTABILITY, MERCHANTABLE QUALITY, DURABILITY AND WARRANTIES AGAINST HIDDEN OR LATENT DEFECTS, TO THE MAXIMUM EXTENT PERMITTED BY LAW. IN SO FAR AS SUCH WARRANTIES CANNOT BE DISCLAIMED, OUR PLACE LIMITS THE DURATION AND REMEDIES OF SUCH WARRANTIES TO THE DURATION OF THIS EXPRESS WARRANTY AND, AT OUR PLACE'S OPTION, THE REPAIR OR REPLACEMENT SERVICES DESCRIBED HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY (OR CONDITION) MAY LAST, SO THE LIMITATION DESCRIBED ABOVE MAY NOT APPLY TO YOU.

Limitation of Liability

THE REMEDIES DESCRIBED ABOVE ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND OUR PLACE'S ENTIRE LIABILITY FOR ANY BREACH OF THIS WARRANTY. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state, or country to country.

OUR PLACE'S LIABILITY WILL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT. OUR PLACE WILL NOT UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCTS OR DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, PERSONAL INJURY, LOSS OF PROPERTY, LOSS OF REVENUES OR PROFITS, LOSS OF ENJOYMENT OR USE, COSTS OF REMOVAL, INSTALLATION OR OTHER INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE OR KIND. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the preceding limitation or exclusion may not apply to you.

Scan this QR code for information on replacement parts, as well as recipes, FAQs and more.

Our Place®

Need help? We're always here at hello@fromourplace.com