mooka

AIR PURIFIER

USER MANUAL


PM2.5
Air Quality Display

Timer Setting

A
Auto Mode

Sleep Mode

Speed Control

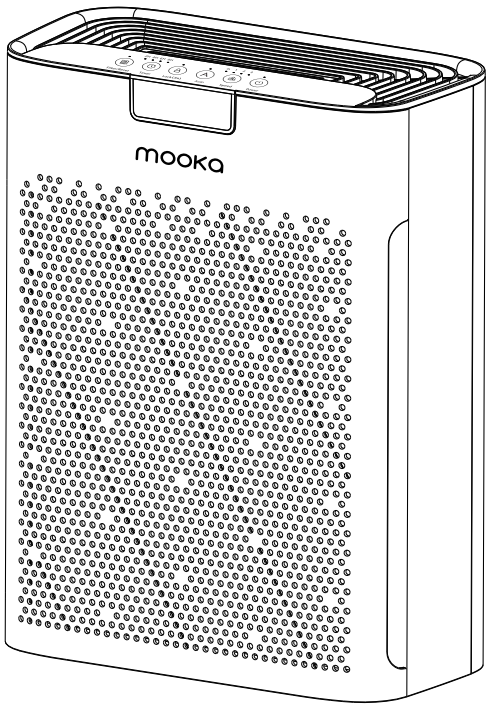

Model: KJ190H

CUSTOMER SERVICE

Our customer service team is standing by to assist you if you have any questions or concerns.

www.mookashops.com

support@mookashops.com

1-855-666-9955

m.me/MookaUS

CONTENT

INSTRUCTIONS FOR SAFE OPERATION ---- 01

PRODUCT OVERVIEW ---- 04

PRODUCT SPECIFICATIONS ---- 05

SAFETY WARNING ---- 06

ABOUT THE FILTER ---- 07

ADD AROMATHERAPY ---- 07

GETTING STARTED ---- 08

CONTROL PANEL ---- 09

CARE & MAINTENANCE ---- 10

TROUBLESHOOTING ---- 11

INSTRUCTIONS FOR SAFE OPERATION

When using this product, please follow the basic warnings as follows:

Read all warnings before use

Warnings - To reduce the risk of fire, electric shock, damage, observe the following requirements:

1. Disconnect the air purifier with the power source when you do not use it or before maintenance.
2. To reduce the risk of electric shock, do not use outdoors or on wet surfaces.
3. Please use the product in accordance with this manual and use only the functions recommended in this manual.
4. It is recommended to use a separate power outlet instead of a multi-outlet socket to avoid the danger due to overheating.
5. Please place the product on a stable table or floor, and do not use it on the edge of the table or an inclined surface to avoid accidental damage to the product.
6 Before using the product, please remove the packages of the main body of air purifier and all its filters, and ensure that the filters are installed correctly according to this manual.
7. To open the front panel and replace the filter, be sure to turn off the power.
8. Do not block the air inlet and outlet when using the appliance, so as to avoid damage caused by overheating of the appliance. Do not use it near a soft object, such as curtains. And please ensure that there is 30cm clearance around the appliance.


INSTRUCTIONS FOR SAFE OPERATION

9. Do not use non-original accessories or parts to avoid damage to the product. If non-original parts or accessories are used, the applicable after-sales terms will be invalid.
10. If the power cord is damaged and it is necessary to replace the power cord, it must be done by a professional or in a designated maintenance station.
11. This product cannot replace the ventilation fan, vacuum cleaner or range hood in the kitchen.
12. Do not insert your fingers or other objects into the air outlet of the appliance to avoid damage to the appliance or personal injury.
13. If the dominant air quality of the room is bad (such as oil fumes and unusual smell in newly decorated apartment), it is highly recommended that you open the windows at the same time when your use this product for better effect.
14. When the product has an unusual smell or noise, disconnect the power supply and contact the after-sales service station.
15. Do not use flammable cleaning agents such as gasoline; otherwise there is a risk of fire.
16. Do not use the product in an environment where explosive materials, flammable liquids, or flammable gases are in close proximity, and do not use it near heating or high-temperature objects. This may result in an explosion.
17. Unplug the power cord before cleaning, maintenance and repair.


INSTRUCTIONS FOR SAFE OPERATION


18. Do not pull the power cord while unplugging it. The correct way is to hold the plug and pull it out.
19.When unplugging the power cord and moving the appliance, please keep your hands dry.
20.When the product is not in use, please put it back in the box and store it in a safe and cool place. Keep it away from direct sunlight.
21 . This product is for home use only. If you need to give the product to someone else, please send the manual together.
22. Please keep this manual properly.
This product is not suitable for some special groups of people, such as children, people with disabilities and mental illness, or people who lack relevant use experience and knowledge unless they are using the product under supervision to ensure safety. Please ensure that children do not use this product as a toy.

PRODUCT OVERVIEW

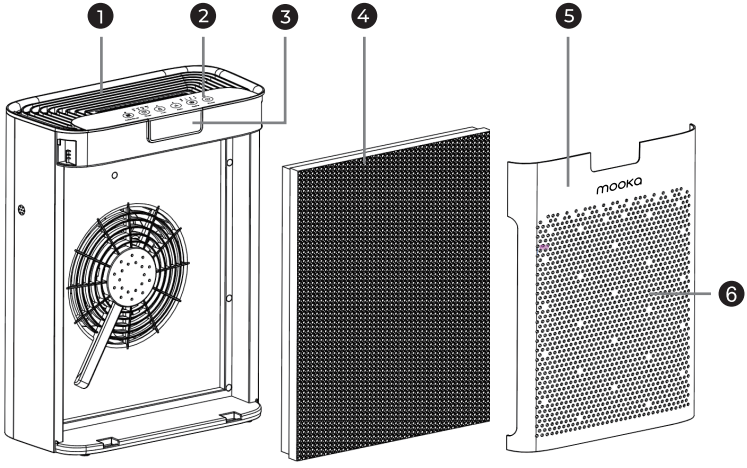

1. Air Outlet
2. Control Panel
3. Display
4. Filter
5. Front Cover
6. Air Inlet
7. Aromatherapy cover

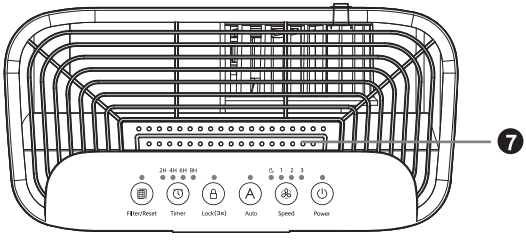

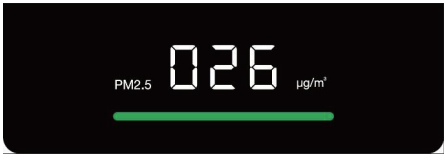

Display

Air Quality Indicator Chart		
PM2.5 Range	Air Quality	Indicator Color
0-75	Good	Green
76-150	Moderate	Yellow
＞150	Poor	Red

PRODUCT SPECIFICATIONS

Description	Air Purifier
Model	KJ190H
Voltage	120 V / 60 Hz
Rated power	26 W
N.W/G.W	3.0 / 3.7 kg
Dimension	310*153*400 mm

What's in the box ?

Air Purifier ×1
True HEPA Filter ×1
User Manual ×1
Aroma Pad ×2

SAFETY WARNING


1

Do not cover the air outlet with a tower or other object to avoid damage to the appliance and personal injury.




2

When plugging in the power cord, please make sure your hands are dry. Only use dry hands to insert the plug into the socket. Do not handle air cleaners or plugs with wet hands.

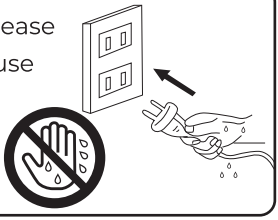


3

Do not pull the power cord while unplugging it. The correct way is to hold the plug and pull it out to avoid damage to the cord.

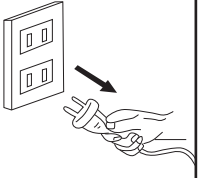


ABOUT THE FILTER


DIAGRAM OF PURIFICATION

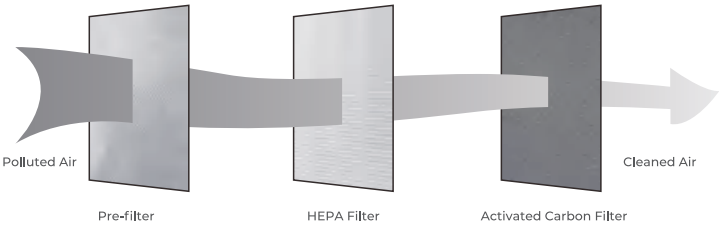

The multi-functional filter includes a pre-filter, HEPA layer, and activated carbon layer for comprehensive air purification, can filter and purify dust, pollen and smoke in the air.

ADD AROMATHERAPY

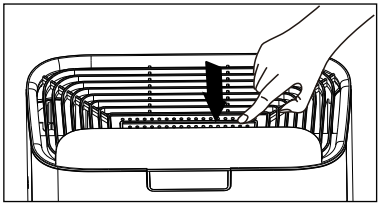

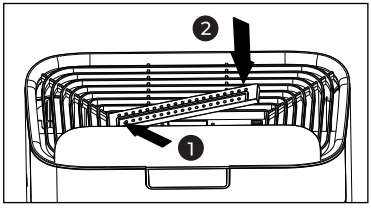

1. Press the aromatherapy cover to open it.
2. Add 8-12 drops of aromatherapies into the aromatherapy pad.
3. Insert one end of the aromatherapy cover into the slot and press to lock it.

ATTENTION:
The aroma pad of a new air purifier is dry. When you use it for the first time, it is recommended to moisten the pad with more essential oil.

GETTING STARTED

1. Pull the front cover from the top to remove front cover (Fig 1).

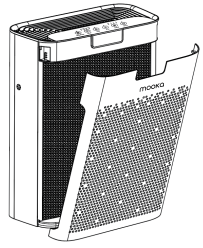


Fig 1

2. Remove plastic wrapping of filters (Fig 2) .

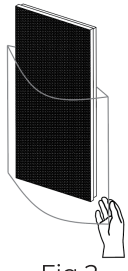


Fig 2

3. After the filter plastic bag is removed, put the filter back into the product and install the front cover of the product to the buckle.


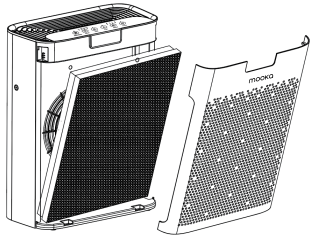


Fig 3

CONTROL PANEL

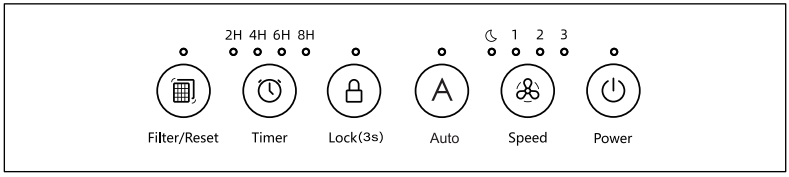

Icon	Name	Description
	Power Button	Touch the power switch button to turn the power on and off.
	Fan Speed Button	Touch the button each time to select sleep mode / speed 1 / speed 2 / speed 3 . In sleep mode, the purifier operates quietly, all lights are off except the sleep mode button and sleep mode indicator.
	Auto Button	The Auto Mode uses a dust sensor inside the air purifier, to adjust the fan speed automatically based on air quality. If the air quality is bad, the fan will automatically adjust to a high- speed mode to intelligent and fast air purification. If the air quality is good, the fan will automatically adjust to a low-speed mode to achieve energy saving.
	Child Lock Button	Long Press Child lock button for 3 seconds to activate/deactivate the Child lock function.
	Timer Button	Press the button to set the automatic shutdown time of 2/4/6/8H.
	Filter Reset Button	When the filter has been used for over 2000 hours, this button LED will be lightened that indicates you need to replace a new filter. After changing filter, press and hold the button for 3 seconds, to reset the indicator light, timer restarts.

CARE & MAINTENANCE

Cleaning the Air Purifier


- Unplug before cleaning.
- Wipe the outside of the air purifier with a soft, dry cloth. If necessary, wipe the housing with a damp cloth, then immediately dry.
- Vacuum the inside of the air purifier.
- Do not clean with abrasive chemicals or flammable cleaning agents.

Cleaning the Dust Sensor Inlet

It is recommended to clean the Sensor Inlet every 2 months to help maintain the efficiency of the sensor. If the Air Quality Indicator is red (indicating “Bad” air quality) more than usual, you may need to clean your sensor inlet.

Note: How often you clean the sensor inlet will depend on the air quality of your environment. If your air is often polluted with dust, dander, smoke, and other particles, you may need to clean your sensor inlet more often.


1. Unplug the air purifier.
2. Use a clean soft cloth to clean the sensor inlet.

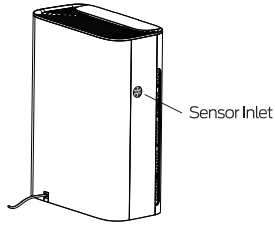


Cleaning the Filter

Newly upgraded multi-layer filter system with a removable filter in front.

1. After taking out the filter element, remove the Pre-filter (Black sponge).
2. Clean with water, then dry it.
3. Reinstall the Pre-filter to the filter element.
4. Installed the filter into the air purifier and start working.

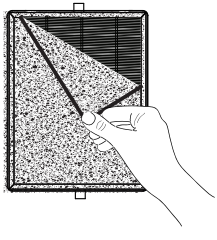

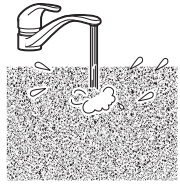

When Should I Replace the Filter?

The True HEPA / Activated Carbon Filter should be replaced every 3-6 months. You may need to replace your filter earlier or later depending on how often you use your air purifier. Using your air purifier in an environment with relatively high pollution may mean you will need to replace the filter more often, even if the Check Filter Indicator is off.

You may need to replace your filter if you notice:
- The air purifier does not effectively filter certain odors anymore.
- Increased noise when the air purifier is on.
- Decreased airflow from the top of the air purifier.
- Unusual odors.
- The HEPA filter is visibly dusty or discolored after removing the filter.

IMPORTANT: To maintain the performance of your air purifier, only use official mooka filters. For more information, contact Customer Support.

TROUBLESHOOTING

Problem	Possible Solution
Air purifier will not turn on.	Plug in the air purifier.
	Check to see if the power cord is damaged. If it is, stop using the air purifier and contact Customer Support.
	Plug the air purifier into a different outlet.
	The air purifier may be malfunctioning. Contact Customer Support.
Strange smell coming from the air purifier.	Clean the filter, or replace if necessary.
	Contact Customer Support.
	Make sure not to use your air purifier in an area with high humidity or while diffusing essential oils.
Air Quality Indicator always stays green or yellow, even when the air quality is poor.	Clean the dust sensor.
	The dust sensor detects airborne particles, but it cannot detect gas. Make sure there aren't gasses polluting the air.
The display shows E2	Contact Customer Support.

Problem	Possible Solution
Air Quality Indicator always stays red.	Clean the dust sensor.
	If you're using an ultrasonic humidifier near the air purifier, the mist may affect the accuracy of the dust sensor. The dust sensor will detect the large mist particles, and the Air Quality Indicator may turn red. Avoid using an ultrasonic humidifier near the air purifier.
Airflow is significantly reduced.	Make sure the filter is removed from its packaging and properly in place.
	Tap speed button to increase the fan speed.
	Leave 15 inches / 38 cm of clearance from the front of the air purifier.
	Replace the filter.
Air purifier makes an unusual noise.	Make sure the filter is properly in place with plastic packaging removed.
	Make sure the air purifier is operating on a hard, flat, level surface.
	Replace the filter.
	The air purifier may be damaged, or a foreign object may be inside. Stop using the air purifier and contact Customer Support . Do not try to repair the air purifier. Contact Customer Support.
Poor air purification quality.	Tap speed button to increase the fan speed.
	Make sure no objects are blocking the front, sides, or top of the air purifier.
	Make sure the filter is removed from its packaging and properly in place.
	Close doors and windows while using the air purifier.
	If the room is too larger, air purification will take longer.
	Replace the filter.

Note: If your problem is not listed, please contact Customer Support.

mooka

Beyond Elegance

www.mookashops.com

support@mookashops.com

1-855-666-9955

m.me/MookaUS

Made in China