34212_IS
Designer: CA
Docket:05-095-26
Factory: ZHEJIANG AMAN LIGHTING

PRINTING SPECIFICATIONS FOR SKU:
印刷品颜色要求
C M Y K
PANTONE 2C · PANTONE 3C · PANTONE 4C · PANTONE 5C

CARD DIMENSION
卡片尺寸
h
w (width): 431.8 mm
h (height): 279.4 mm
w

说明书展开尺寸43.18×27.94cm（17*11 inch）

正面

反面

SMART BULB



Step-by-step Product Instruction Video

Scan with your mobile device

FEATURES

- LED integrated - dimmable through the app
- RGB: Choose from a full spectrum of colours
- Tunable white (2000 K - 5000 K): Choose from a focused bright white to a relaxed sunset glow
- Set schedules and control your light from anywhere

SPECIFICATIONS

- 800 lumens (at 5000 K)
- 2000-5000 K
- RGB
- 9 watts
- E26 medium base
- Lasts 15,000 hours
- For indoor and weather protected fixtures
- 120 V - 60 Hz

Certified to California Title 20 Appliance Database

LIMITED WARRANTY: This bulb is warranted to last 2 years from the date of purchase based on use of 3 hours per day. If it fails before that time, we will replace it. Send Globe Electric the bulb, proof of purchase and register receipt along with your complete name and address. See caution text for proper use. This warranty is void if this product is misused in any way. This replacement is the sole remedy available and liability for incidental or consequential damage is expressly excluded.

CAUTION: DO NOT USE WITH STANDARD DIMMER. Only use the control provided with or specified by these instructions to control this bulb. This bulb will not operate properly when connected to a standard (incandescent) dimmer or dimming control. The bulb can be switched to different operating modes and is dimmable through the Globe Suite™ app. For use only in 120VAC/60HZ circuits. Risk of electrical shock. Do not open, no user-serviceable parts inside. This device is not intended for use with emergency exit fixtures or emergency exit lights, photocells and electronic timers. This device is intended for indoor use. Do not use where directly exposed to water. Minimum operating temperature is -20°C (-4°F).

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. This Class B digital apparatus complies with CAN ICES (B).

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

RF EXPOSURE
The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 20cm between the radiator & your body.

USER MANUAL NOTICE FOR LICENCE-EXEMPT RADIO APPARATUS
This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development (ISED) Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. The device has been evaluated to meet general RF exposure requirement, CAN ICES (B).

RADIATION EXPOSURE STATEMENT
This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

FCC RESPONSIBLE PARTY
Globe Electric
6364 East 6th Street
San Bernardino, CA 92410
www.globe-electric.com

WARNING: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.
The device has been evaluated to meet general RF exposure requirement.

CONNECTING INSTRUCTIONS











1 Download the Globe Suite™ app

Make sure your mobile device is running iOS 9.0/watchOS 2.0/Android™ 4.4 or higher.

- Download the **Globe Suite™** app from the iOS or Android store.
- Use your email to create an account and log in.

2 Set your smart bulb in pairing mode

- Once the smart bulb is screwed in correctly and is powered on, the light should be pulsing, indicating it is in pairing mode.
- If it is not, turn the power switch controlling the light "Off / On / Off / On / Off / On."

3 Connect to the Globe Suite™ app

On your mobile device, please ensure all requested permissions are enabled:
Wi-Fi, Bluetooth, Location Services.

- Select the "+" icon in the top right of the Globe Suite™ app home screen.
- If the light is pulsing rapidly, the "scan" mode will detect your bulb within a few seconds. When discovered, select the bulb icon, and tap on "Next."
- Enter your Wi-Fi credentials correctly. If the Wi-Fi connection is unstable, use the alternate connection method available on this screen.
Note that with this method, remote control, smart scenes, device sharing, schedule, and third-party voice assistance features are not available.

4 Your smart bulb is ready!

- Name your device and choose which room to place it in.
- You can now control your smart bulb directly from the Globe Suite™ app.
- Still need help? Select the "How do I set device into pairing mode" link on the "scan" page and follow the in-app instructions or view the video.
- You can also scan the QR code for a short instructional video (see page 1).

5 Set up voice assistance

- On the home screen, select "Profile," and select "Integration." Choose your voice assistant and follow the instructions within the app.
- Create Siri Shortcuts (for iOS)


  - On the home screen, select "Smart Scenes," then select the "+" icon to add a Trigger Scene.

  - Once completed, select "Add to Siri" and add the phrase to Siri Shortcuts.

Please note that the exact phrase must be said to execute the Trigger Scene with Siri.

CONTROLLING THE SMART BULB THROUGH THE APP

Please note that the device UI panel is subject to change without any prior notice.

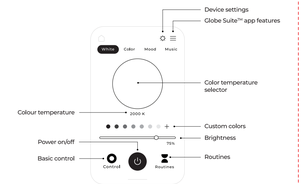

DEVICE SETTINGS

Power on behaviour
Determine how your light behaves when reconnected to a power source.

ROUTINES

Timer
Set a countdown for your light to turn on or off once the timer runs out.

Wake up
Set your light to gradually fade in to help you wake up.

Bedtime
Set your light to gradually fade out to off to help you sleep.

Vacation
Schedule your device to automatically turn on and off to give the appearance someone is home while you are away.

Add a new schedule
Set a time and date for your bulb to either turn on or off to create additional routines that fit your specific needs.

BASIC CONTROL

Tunable white
2000K - 5000K adjustable colour temperature

RGB
16+ million colours

Mood
Preset colour combinations

Dimmable
Adjustable brightness level through the app

Music
Music-reactive light effects

APP FEATURES

Device offline notification
Select to receive a notification if your device goes offline.

Device sharing
Share access to your connected device with another Globe Suite™ app user.

Device grouping
Group multiple Globe bulbs together to control them in unison, rather than individually.

Add to home screen
Create a widget on your phone and/or tablet's home screen for easy access to the device.

Scan the QR code for a more in-depth look of how the features work.

BOMBILLA INTELIGENTE



Video de instrucciones paso a paso del producto

Escanee con su dispositivo móvil

CARACTERÍSTICAS

- Led integrado. Intensidad regulable con la aplicación Globe Suite
- RVA: Elija en base a una gama de colores completa
- Blanco dinámico (2 000 K - 5 000 K): Elija entre un blanco brillante y un brillo tenue simulando el atardecer
- Establezca horarios y controle la luz desde cualquier lugar

ESPECIFICACIONES

- 800 lúmenes (a 5000 K)
- 2000-5000 K
- RVA
- 9 vatios
- E26 base mediana
- Dura 15,000 horas
- Para uso en interiores, o en lamparas resistentes a la interperie
- 120 V - 60 Hz

Certificado según la base de datos de electrodomésticos (Appliance Efficiency Standards) del Título 20 de California

GARANTÍA LIMITADA: Esta bombilla tiene una garantía de 2 años a partir de la fecha de compra basada en un uso de 3 horas por día. Si falla antes de ese tiempo, lo reemplazaremos. Envíe a Globe Electric la bombilla, el comprobante de compra y el recibo junto con su nombre y dirección completos. Vea el texto de precaución para un uso adecuado. Si este producto se ha utilizado incorrectamente de alguna manera, esta garantía queda anulada. El reemplazo es el único recurso disponible. Se excluye expresamente toda responsabilidad por daños incidentales o consecuentes.

PRECAUCIÓN: NO UTILIZAR CON UN REGULADOR DE INTENSIDAD ESTÁNDAR. La bombilla puede ser ajustada a diferentes modos de funcionamiento y se regula a través de la aplicación Globe Suite™. Únicamente para uso en circuitos de 120 V/60 HZ. Riesgo de choque eléctrico. No abrir, no contiene partes reparables por el usuario. Este dispositivo no está diseñado para utilizarse como iluminación de salida de emergencia o luces de emergencia, fotocélulas o cronómetro electrónico. Este dispositivo está destinado para uso interior. No utilizar si ha sido expuesto al agua. La temperatura mínima de funcionamiento es de -20°C (-4°F).

Este dispositivo cumple con el Apartado 15 de las normas FCC. La operación del producto se encuentra sujeta a las dos condiciones siguientes: (1) Este dispositivo podría no causar interferencia perjudicial. (2) Este dispositivo debe aceptar cualquier interferencia que se reciba, incluyendo aquellas interferencias que pueden provocar un funcionamiento no deseado. Cualquier cambio o modificación no aprobados explícitamente por el fabricante puede anular la autorización del usuario para utilizar el equipo. El presente aparato digital clase B cumple con la norma canadiense CAN ICES (B).

ADVERTENCIA: Cambios o modificaciones a esta unidad no aprobados explícitamente por el ente autorizado de conformidad, podrían anular la autoridad del usuario para utilizar el equipo. NOTA: Este equipo ha sido examinado y cumple con los límites de dispositivos digitales Clase B, conforme a la Parte 15 de las normas FCC. Estos límites están diseñados para proveer una protección razonable contra interferencia perjudicial en instalaciones residenciales. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y se utiliza de acuerdo con las instrucciones suministradas, podría ocasionar interferencias perjudiciales para las comunicaciones por radio. Sin embargo, no se puede garantizar que la interferencia no ocurra en una instalación específica. Si este equipo ocasiona interferencias perjudiciales en la recepción de radio o televisión, que puede comprobarse encendiendo y apagando el equipo, el usuario debe intentar corregir la interferencia mediante una de las siguientes medidas: Cambie la orientación o ubicación de la antena receptora. Aumentar la distancia que separa el equipo y el receptor. Conectar el equipo a un tomacorriente o a un circuito diferente al cual el receptor se encuentra conectado. Solicitar ayuda con el distribuidor o con un técnico experimentado de radio/televisión.

EXPOSICIÓN RF
El equipo cumple con los límites de exposición a la radiación de la FCC establecidos para un entorno no controlado. Este dispositivo debe instalarse y utilizarse con una distancia mínima de 20 cm entre el artefacto y su cuerpo.

AVISO DE LA GUÍA DEL USUARIO PARA APARATOS DE RADIO EXENTOS DE PERMISO
Este dispositivo cumple con las normas RSS exentas de licencia de Industry Canada. Su funcionamiento está sujeto a las dos condiciones siguientes: (1) este dispositivo no puede causar interferencias, y (2) este dispositivo debe aceptar cualquier interferencia, incluidas las que puedan causar un funcionamiento no deseado del dispositivo.
CAN ICES (B).

DECLARACIÓN DE EXPOSICIÓN A LA RADIACIÓN:
Este equipo cumple con los límites de exposición a la radiación IC establecidos para un entorno no controlado. Este equipo debe instalarse y utilizarse con una distancia mínima de 20 cm entre el artefacto y su cuerpo.

ENTIDAD RESPONSABLE DE LA FCC :
Globe Electric
6364 East 6th Street
San Bernardino, CA 90410
www.globe-electric.com

ADVERTENCIA: Este equipo contiene transceptores exentos de licencia que cumplen con el RSS exento de licencia de Innovación, Ciencia y Desarrollo Económico de Canadá. Su funcionamiento está sujeto a las dos condiciones siguientes: 1. Este dispositivo no debe causar interferencias. Este dispositivo no debe causar interferencias, 2. Este dispositivo debe aceptar cualquier interferencia, incluidas las interferencias que puedan causar un funcionamiento no deseado del dispositivo.El dispositivo ha sido evaluado para cumplir los requisitos generales de exposición a RF.

INSTRUCCIONES PARA LA CONEXIÓN











1 Cómo descargar la aplicación de Globe Suite™

Asegúrese de que su dispositivo móvil funcione con **iOS 9.0/watchOS 2.0/Android™ 4.4 o una versión superior.**

- Descargue la aplicación de **Globe Suite™** desde la tienda de iOS o Android.
- Utilice su correo electrónico para crear una cuenta e inicie sesión.

2 Cómo configurar la bombilla inteligente en modo de emparejamiento

- Una vez que la bombilla inteligente se haya configurado de forma correcta, la luz debe parpadear, lo que indica que está en modo de emparejamiento.
- Si no es así, apague/encienda/apague/encienda/ apague/encienda el interruptor que controla la luz.

3 Conecte la aplicación de Globe Suite™

En su dispositivo móvil, asegúrese de que todos los permisos que se soliciten estén activados: servicios de wifi, bluetooth, localización.

- Seleccione el icono «+» en la parte superior derecha de la pantalla de inicio de la aplicación Globe Suite™.
- Si la luz parpadea rápidamente, el modo de escaneo detectará la bombilla inteligente en pocos segundos. Cuando lo detecte, seleccione el icono de la bombilla y seleccione «Next».
- Ingresa correctamente tus datos de Wi-Fi. Si la conexión Wi-Fi es inestable, usa el método de conexión alternativo disponible en esta pantalla. Ten en cuenta que con este método no estarán disponibles las funciones de control remoto, escenas inteligentes, compartir dispositivo, programación ni asistencia por voz de terceros.

4 ¡La bombilla inteligente está lista!

- Dele un nombre al dispositivo y elija en qué habitación lo va a colocar.
- Ahora puede controlar la bombilla inteligente directamente desde la aplicación Globe Suite™.
- ¿Necesita más ayuda? Seleccione el enlace «How do I set device into pairing mode» de la página de escaneo y siga las instrucciones en la aplicación o mire el video.
- O consulte el código QR para ver un breve video de instrucciones (consulte la página 1).

5 Cómo configurar el asistente de voz

- En la pantalla de inicio, seleccione «Profile» y elija «Integration». Elija un asistente de voz y siga las instrucciones de la aplicación.
- Cómo crear accesos directos de Siri (para iOS)


  - En la pantalla de inicio, seleccione «Smart Scenes». Luego, seleccione el icono «+»para agregar una escena de activación (Trigger Scene).

  - Una vez que haya completado este paso, seleccione «Add to Siri» y añada la frase a los accesos directos de Siri.

Tenga en cuenta que debe decir la frase exacta para ejecutarla escena de activación con Siri.

CÓMO CONTROLAR LA BOMBILLA INTELIGENTE CON LA APLICACIÓN

Tenga en cuenta que el panel de la interfaz de usuario del dispositivo está sujeto a cambios sin previo aviso.

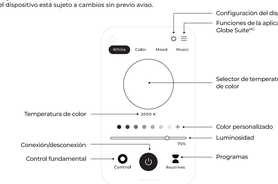

CONFIGURACIÓN DEL DISPOSITIVO

Comportamiento de encendido
Determine cómo se comporta la bombilla cuando se vuelve a conectar a una fuente de alimentación.

RUTINAS

Temporizador
Configure una cuenta regresiva para que la bombilla inteligente se encienda o apague una vez que el temporizador se agote.

Amanecer
Configure la bombilla para que la luz se intensifique de forma gradual y lo ayude a despertar.

Modo noche
Configure la luz para que se desvanezca de forma gradual hasta apagarse para ayudarlo a dormir.

Vacaciones
Programe el dispositivo para que se encienda y apague de forma automática. Así parecerá que hay alguien en casa mientras usted no está.

Agregar un nuevo horario
Si desea crear rutinas adicionales que se ajusten a sus necesidades específicas, configure una hora y una fecha para que la luz se encienda o se apague.

Escanee el código QR para conocer más a fondo el funcionamiento de las funciones.

CONTROL BÁSICO

Blanco dinámico
Temperatura ajustable del color (2 000 K - 5 000 K)

RVA
Más de 16 millones de colores

Ambiente
Combinaciones de colores preestablecidas

Regulable
Nivel de brillo ajustable a través de la aplicación

Música
Efectos de iluminación reactivos a la música

CARACTERÍSTICAS DE LA APLICACIÓN

Notificación de desconexión
Seleccione para recibir una notificación si la bombilla inteligente se desconecta.

Compartir el dispositivo
Comparta el acceso al dispositivo conectado con otro usuario de la aplicación Globe Suite™.

Agrupación de dispositivos
Agrupe varios dispositivos de Globe Suite™ para controlarlos al mismo tiempo, en lugar de hacerlo de forma individual.

Agregar a la pantalla de inicio
Cree un widget en la pantalla de inicio del teléfono y/o la tableta para acceder con facilidad la bombilla inteligente.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.