




Digital Video Recorder Quick Start Guide

For more information of your new system, please refer to www.zositech.com

V2 .D.01.Z

Contents

EN	01
ES	13

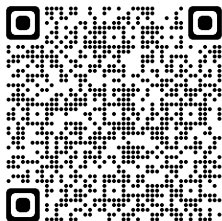

The electronic user manual can be viewed on your mobile devices by scanning the QR code using a browser or camera.

1 What's in the box



DVR



DVR Power Adapter



USB Mouse




Ethernet Cable




Quick Start Guide

NOTE: Products and accessories vary by product models, please refer to the actual product.


2 Introduce the DVR

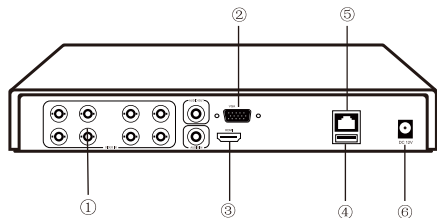

- ① Camera
- ② Monitor(VGA)
- ③ Monitor(HDMI)
- ④ Mouse/USB 2.0
- ⑤ Router
- ⑥ Power Supply
- ⑦ Audio(3.5mm)

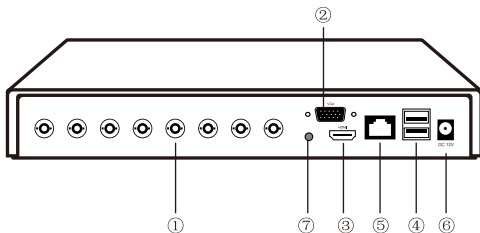

NOTE: The actual appearance and components may vary with different products, please refer to the actual product.

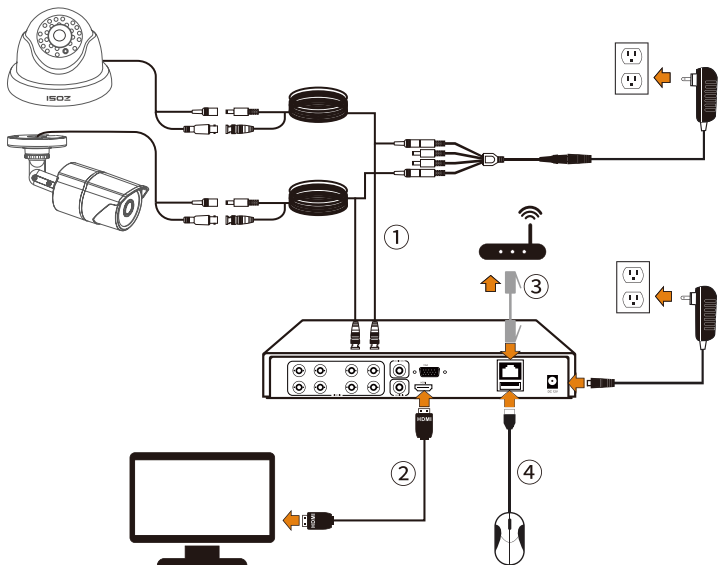

- ① Connect the Cameras to the DVR via BNC cable.
- ② Connect monitor to DVR via HDMI cable or VGA cable.
- ③ Connect DVR to router via Ethernet cable.
- ④ Connect Mouse to the USB port on DVR, then power on DVR and cameras.

NOTE: To ensure the device works properly, it is recommended to power on the DVR first for testing before a final installation.

3 Access the System via Smartphone or PC

3.1. Smartphone

Search “ZOSI Smart” in the APP Store or use a browser to scan the QR code below, download and install the app and follow the instructions to register an account.



Zosi Smart



App (IOS/Android)



App video
operation link

3.2. PC

Download path: Go to <https://www.zositech.com/pages/app>.

4 Set up the DVR System


4.1. Mouse Operation:

Left Button:

- Preview or Playback Interface: Double-click a single channel to enter full screen and double-click again to exit full screen.
- Navigation Menu: Left click to select a menu option.

Right Button:

- Right click to bring up the main menu when the mouse is on the preview interface.
- Navigation Menu: Right click to exit the menu or return to previous menu option.

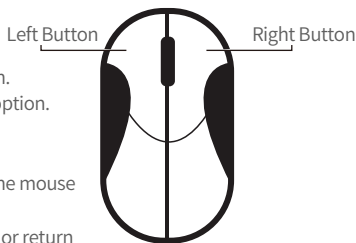

4.2. Introduce the Menu Bar:

Right-click anywhere on the screen to open the menu bar.




- Single - Select single channel for live viewing
- Multi - Select multi-channel for live viewing
- PTZ: Control the rotation of PTZ camera
- Start Scan - Start/Stop Scan
- Colour - Adjust colour and image settings
- E-Zoom - E-Zoom the preview interface
- Audio - Adjust the camera volume
- Snap - Snap and save the live view images
- Stop Record - Start/stop record
- Playback - Search Video playback and quick playback
- Main Menu - Enter the Main Menu

4.3. System Password:

The factory default username is “admin” and the password is empty, so the first time users can login the system directly.

A login dialog box with a dark blue header bar containing the word 'Login' and a refresh icon. The main area has a dark background. It contains two text input fields: the first is labeled 'User Name' and contains the text 'admin'; the second is labeled 'Password' and is empty. At the bottom, there are two buttons: 'Login' and 'Cancel'.

Change Password Path: Right click the mouse-Main Menu-Setup-Users-Change Password
NOTE: The new password setting cannot be less than 6 characters, please keep the password properly.

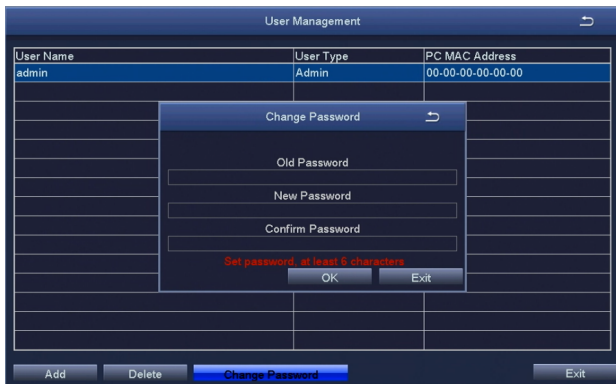

5 Date & Time Setting


Right click the mouse - Main Menu - Setup - Basic - Date & Time - Choose the corresponding time according to your region and then click “Apply” to save.
NOTE: The default time zone is GMT, please choose the corresponding time according to your region



6 Video Playback

Right click the mouse - Playback - Video Playback/Quick Playback,
Video Playback: Playback the video clips via time search or event search.
Quick Playback: Quick playback of the first 30 minutes of video.



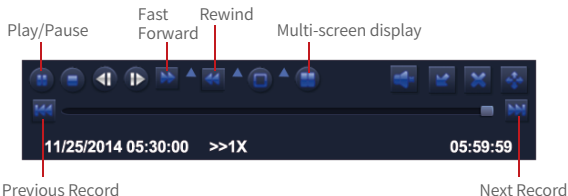

Previous Video: Play the previous video.

Next Video: Play the next video.

Fast forward: You can play the video clips at 1/4 time speed to 16 times speed.

Rewind: You can rewind the video clips at 1 time speed, 8 times speed, 16 times speed, and 32 times speed.

Screen Modes: Single Channel Playback/Multi-channel Playback. Channels without video playback will show a black screen.

7 Backup

① Insert a USB into the USB 2.0 port on the DVR.

② Right click the mouse > Main Menu > Backup > Select channels and time period > Search > Select the video clips you want to back up > Click “Apply” .



8 Usage Specification

- Read this guide carefully and keep it for future reference.
- Follow all instructions for safe use of the product and handle with care.
- Use the product within given temperature, humidity, voltage level noted in the device's specifications.
- Do not disassemble the product.
- Use only a regulated power supply with the product (optional). Use of a non-regulated, non-conforming power supply can damage the product and void the warranty.
- Periodic cleaning may be required. Use a damp cloth only. Do not use any harsh, chemical-based cleaners.
- Do not use the product in a sealed, humid environment. It is recommended to place it in a location that is easily ventilated for installation.
- Do not disassemble the device while power is on.

9 FAQ

Q: No Video Output on the Monitor?

- Ensure the lowest resolution of the monitor is no less than 720p.
- Ensure the NVR is powered on normally.
- Check the connection of the HDMI/VGA cable or use another cable to try again.

Q: Failed to Remotely Access the Camera via Mobile Phone or Computer?

- Ensure the DVR is connected to the network normally, you can go to the DVR Menu-Network-Test
- Test and verify whether you can access the Internet by connecting your phone or computer to the same network as the DVR.
- Reboot your DVR or router.

Q: Does the system support motion detection and image capture?

- It captures images automatically when people, cars, are detected or when there is a change in detected images. Users can also manually capture images using our ZOSI Smart APP.

FCC Compliance Statement

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including inference that may cause undesired operation.

Simplified EU Declaration of Conformity

ZOSI declares that the device is in compliance with the essential requirements and other relevant provisions of Directive 2014/30/EU.



Correct Disposal of this Product

This marking indicates that this product cannot be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal and promote the sustainable reuse of material resources, please recycle it responsibly. To return your used device, please visit the Return and Collection System or contact the retailer from whom the product was purchased. They can take this product away for environmentally safe recycling.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- DEATH or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek Immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) The compatible battery type: CR2032
- e) The nominal battery voltage: 3V
- f) Non-rechargeable batteries are not to be recharged.
- g) Do not force discharge, recharge, disassemble, heat above 60°C (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

Products with non-replaceable button/coin cell batteries shall additionally include a statement indicating the product contains non-replaceable batteries

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Warning Statements:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment shall be installed and operated with minimum distance 20cm between the radiator & body.

For USA: The frequency stability of all transmission frequencies of U-NII-1, U-NII 2A, U-NII 2C and U-NII-3 meets the requirements of 47 CFR FCC Part15.407(g), and the manufacturer declares that their transmission is maintained at Band U-NII-1, U-NII 2A, U-NII 2C and U-NII-3.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L' émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d' Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L' exploitation est autorisée aux deux conditions suivantes:

- (1) L' appareil ne doit pas produire de brouillage;
- (2) L' appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d' en compromettre le fonctionnement.

ISED Radio Frequency Exposure Statement:

The device has been evaluated to meet general RF exposure requirements. The device can be used in mobile exposure conditions. The min separation distance is 20 cm.

ISED Déclaration d'exposition aux radiofréquences:

L'appareil a été évalué pour répondre aux exigences générales en matière d'exposition aux RF. L'appareil peut être utilisé dans des conditions d'exposition mobiles. La distance de séparation minimale est de 20 cm.

Operation of this device is restricted to indoor use only. (5150-5350MHz)
Le fonctionnement de cet appareil est limité à une utilisation en intérieur uniquement. (5150-5350MHz)

For Canada: The frequency stability of all transmission frequencies of U-NII-1, U-NII 2A, U-NII 2C and U-NII-3 meets the 47 CFR FCC Part15.407(g) requirements, and the manufacturer states that their transmissions remain within the U-NII-1, U-NII 2A, U-NII 2C and U-NII-3 bands.

Pour le Canada : La stabilité de fréquence de toutes les fréquences de transmission de U-NII-1, U-NII 2A, U-NII 2C et U-NII-3 est conforme aux exigences 47 CFR FCC Part15.407(g), et le fabricant déclare que leurs transmissions restent dans les bandes U-NII-1, U-NII 2A, U-NII 2C et U-NII-3.

1 Lista de empaque



DVR



Fuente de alimentación
para DVR



Ratón USB




Cable Ethernet




Manual

NOTA: Los productos y accesorios varían por diferentes modelos, por favor consulte el producto específico.


2 Introducción del DVR

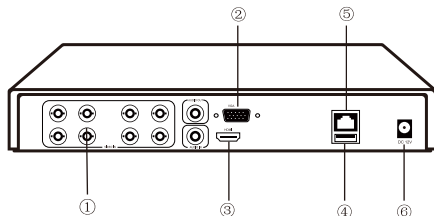

- ① Entrada de cámara
- ② Monitor VGA
- ③ Monitor HDMI
- ④ Ratón/USB 2.0
- ⑤ Enrutador
- ⑥ Adaptador de corriente
- ⑦ Audio(3.5mm)

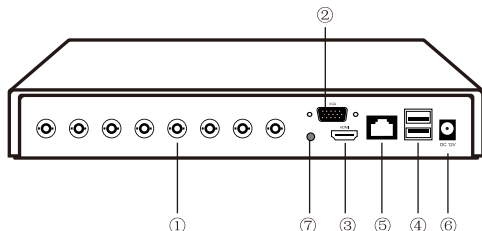

NOTA: La apariencia y los componentes variarán por diferentes productos, por favor consulte el producto específico.

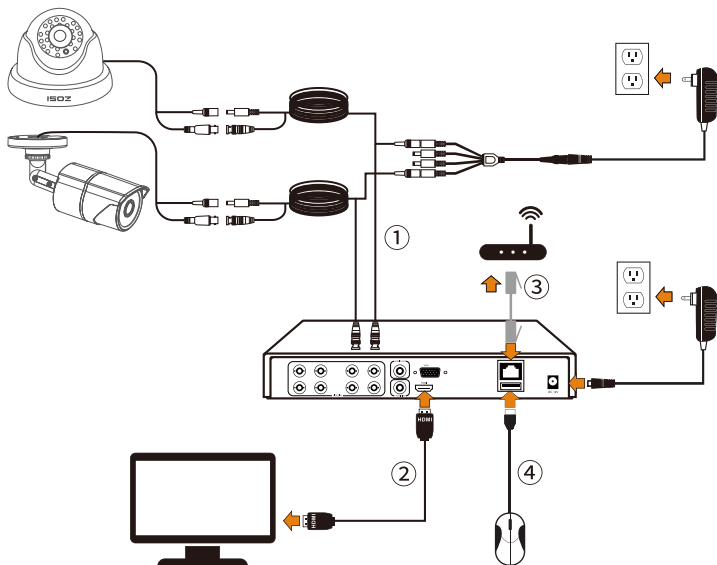

- ① Conecte la cámara al grabador usando un cable BNC.
- ② Conecte el grabador al monitor mediante un cable HDMI o un cable VGA (no suministrado).
- ③ Conecte el grabador al enrutador mediante un cable Ethernet.
- ④ Conecte el ratón al puerto USB, luego conecte la fuente de alimentación para encender el grabador y la cámara.

NOTA: Para asegurarse de que el dispositivo funcione correctamente, se recomienda que pruebe el dispositivo antes de la instalación.

3 Acceso al sistema a través de Teléfono Móvil o PC

3.1. Teléfono Móvil

Busque "Zosi Smart" en la APP Store o escanee el código QR a continuación, descargue e instale la aplicación siguiendo las instrucciones para registrar una cuenta.



Zosi Smart



App (IOS/Android)



Enlace de video de operación de la aplicación

3.2. PC

Página web de descarga: <https://www.zositech.com/pages/app>.

4 Configuración del sistema DVR


4.1. Operación del ratón:

Botón izquierdo:

- Interfaz de vista previa o reproducción: Haga doble clic en único canal para entrar en la pantalla completa y haga doble clic de nuevo para salir de la pantalla completa.
- Menú de navegación: haga clic con el botón izquierdo para seleccionar una opción en el menú.

Botón derecho:

- Haga clic con el botón derecho para entrar en el menú principal cuando el ratón esté en la interfaz de vista previa.
- Menú de navegación: haga clic con el botón derecho para salir del menú o volver a la opción anterior.

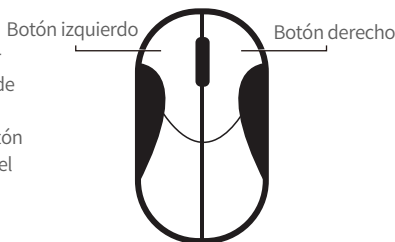

4.2. Introducción del menú:

Haga clic derecho en cualquier lugar de la pantalla para abrir el menú.



- Único: Seleccione un solo canal para vista en vivo
- Múltiples: Seleccione múlti-canales para vista en vivo
- Iniciar escaneo: Iniciar/Detener escaneo
- Color: Ajuste la configuración de color e imagen
- E-Zoom: Agrande la interfaz de vista previa
- Audio: Ajuste el volumen de la cámara
- Foto: Capture y guarde imágenes de vista en vivo
- Detener la grabación: Iniciar/Detener las grabaciones
- Reproducir: Busque reproducción de video y reproducción rápida
- Menú principal: Entre al Menú principal

4.3. Contraseña del sistema:

El nombre de usuario por defecto es "admin" y la contraseña está vacía, así que los usuarios pueden iniciar sesión en el sistema directamente por primera vez.

A login window titled 'Iniciar sesión' with a back arrow icon in the top right. It contains two input fields: 'Nombre' with the text 'admin' and 'Contraseña' which is empty. At the bottom are two buttons: 'Iniciar sesión' and 'Cancelar'.

NOTA: La nueva contraseña no puede ser menos de 6 caracteres, por favor conserve la contraseña correctamente.

5 Configuración de la fecha y hora

NOTA: El horario predeterminado es GMT, elija la hora correspondiente según su región.

17

6 Reproducción de vídeos

Haga clic derecho del ratón - Reproducir - Reproducción de video/Reproducción rápida, Reproducción de video: reproduzca videos a través de la búsqueda de tiempo o la búsqueda de evento.

Reproducción rápida: reproduzca rápidamente el video de 30 minutos antes.

Buscar

Búsqueda por hora Búsqueda por evento Imagen

Comienzo
00 : 00 : 00

00:00 04:00 08:00 12:00 16:00 20:00


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16

2021 11

Su	Mo	Tu	We	Th	Fr	Sa
	1	2	3	4	5	6
7	8	9	10	11	12	13
14	15	16	17	18	19	20
21	22	23	24	25	26	27
28	29	30				

☐	☒	1	☒	2	☒	3	☒	4
☒	☒	5	☒	6	☒	7	☒	8
☒	☒	9	☒	10	☒	11	☒	12
☒	☒	13	☒	14	☒	15	☒	16



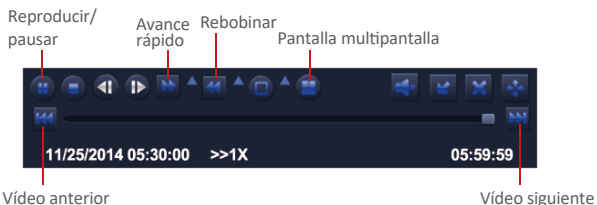

Anterior video: reproduzca el video anterior.

Siguiente video: reproduzca el siguiente video.

Avance rápido: puede reproducir videos a una velocidad de 1/4 a 16 veces.

Rebobinar: puede rebobinar videos a una velocidad de 1 vez, 8 veces, 16 veces y 32 veces.

Modos de pantalla: Reproducción de Único Canal/Reproducción Múlti-canales. Los canales sin reproducción de video mostrarán una pantalla negra.

7 Copia de seguridad

- ① Inserte un pendrive USB en el puerto USB 2.0 del DVR.
- ② Haga clic derecho del ratón - Menú principal - Copia de seguridad - Elija el canal y el período de tiempo - Buscar - Elija los videos que desea copiar > Haga clic en "Aplicar".

Copia de seguridad

Canal	Comienzo	Final
☐ 1	26/09/2019 00:00:00	26/09/2019 00:09:05
☐ 2	26/09/2019 00:00:00	26/09/2019 00:04:32
☐ 3	26/09/2019 00:00:00	26/09/2019 00:17:46
☐ 4	26/09/2019 00:00:01	26/09/2019 00:01:58
☐ 4	26/09/2019 00:01:58	26/09/2019 00:29:08
☐ 2	26/09/2019 00:04:32	26/09/2019 00:28:36
☐ 1	26/09/2019 00:09:05	26/09/2019 00:31:10
☐ 3	26/09/2019 00:17:46	26/09/2019 00:36:40
☐ 2	26/09/2019 00:28:36	26/09/2019 00:52:45
☐ 4	26/09/2019 00:29:08	26/09/2019 00:56:20
☐ 1	26/09/2019 00:31:10	26/09/2019 00:53:14
☐ 3	26/09/2019 00:36:40	26/09/2019 00:55:32
☐ 2	26/09/2019 00:52:45	26/09/2019 01:16:52
☐ 1	26/09/2019 00:53:14	26/09/2019 01:15:19
☐ 3	26/09/2019 00:55:32	26/09/2019 01:14:26
☐ 4	26/09/2019 00:56:20	26/09/2019 01:23:30

1/16 Todos ☐ << < > >>

Comienzo 26 / 09 / 2019 00 : 00 : 00

Final 26 / 09 / 2019 23 : 59 : 59

☐ 1 ☐ 2 ☐ 3 ☐ 4

Copia de seguridad Buscar Salida

8 Especificación de uso

- Lea esta guía detenidamente y consérvela para consultarla en el futuro.
- Siga todas las instrucciones para un uso seguro del producto y manéjelo con cuidado.
- Utilice el producto dentro de la temperatura, la humedad y el nivel de voltaje indicados en las especificaciones del dispositivo.
- No desmonte el producto.
- Use una fuente de alimentación regulada con el producto (opcional) solamente. El uso de una fuente de alimentación no regulada y no conforme puede dañar el producto y anular la garantía.
- Es posible que se requiera una limpieza periódica. Utilice únicamente un paño húmedo. No utilice limpiadores agresivos a base de productos químicos.
- No utilice el producto en un entorno húmedo y sellado. Se recomienda colocarlo en un lugar que sea fácilmente ventilado para su instalación.
- No desmonte el dispositivo mientras esté encendido.

9 Preguntas frecuentes

Q: ¿No hay salida de vídeo en el monitor?

- Asegúrese de que la resolución mínima del monitor no es inferior a 720p;
- Asegúrese de que el grabador está encendido correctamente;
- Por favor compruebe la conexión del cable HDMI/VGA o cambie un otro cable de conexión/ monitor y vuelva a intentarlo.

Q: ¿No se puede acceder al dispositivo de forma remota por teléfono móvil o PC?

- Asegúrese de que el grabador está correctamente conectado a la red, Menú principal - Red - Prueba;
- Por favor compruebe el estado de la red conectándose a la misma red que el grabador por teléfono móvil o PC para la prueba;
- Reinicie el grabador o el router.

Q: ¿Soporta la detección de movimiento y la captura de imágenes el sistema?

A: Habilitarán la detección de movimiento y la captura de imágenes instantánea si la cámara está conectada a un DVR compatible. Capturará imágenes automáticamente cuando se detectan personas, vehículos o cuando el objetivo detectado mueve. Los usuarios también pueden capturar imágenes manualmente en la aplicación Zosi Smart.

Declaración de Cumplimiento de la FCC

Este dispositivo cumple con la Parte 15 de las Normas de la FCC.

La operación está sujeta a las siguientes dos condiciones:

- (1) Este dispositivo no puede causar interferencias perjudiciales.
- (2) Este dispositivo debe aceptar cualquier interferencia recibida, incluidas las inferencias que puedan provocar una operación no deseada.

Declaración de Conformidad de UE Simplificada

ZOSI declara que el dispositivo cumple con los requisitos esenciales y otras disposiciones relevantes de la Directiva 2014/53/UE.



Eliminación Correcta de este Producto

Esta marca indica que este producto no se puede desechar con otros residuos domésticos en toda la UE. Para evitar posibles daños al medio ambiente o la salud humana por la eliminación descontrolada de desechos y promover la reutilización sostenible de los recursos materiales, recíclelo de manera responsable. Para devolver su dispositivo usado, visite el Sistema de Devolución y Recolección o comuníquese con el minorista donde compró el producto. Pueden llevarse este producto para un reciclaje seguro para el medio ambiente.

⚠️ ADVERTENCIA

- **RIESGO DE INGESTIÓN:** Este producto contiene una pila botón o batería de moneda.
- En caso de ingestión puede producirse la MUERTE o lesiones graves.
- A la ingestión de una pila de botón o batería de moneda puede provocar **Quemaduras Químicas Internas** en tan sólo 2 horas.
- **MANTENGA** pilas nuevas y usadas **FUERA DEL ALCANCE DE LOS NIÑOS.**
- **Busque Atención médica inmediata** si se sospecha que se ha tragado o introducido una pila en cualquier parte del cuerpo.



- a) Retire las pilas usadas y recíclelas o deséchelas inmediatamente de acuerdo con la normativa local y manténgalas fuera del alcance de los niños. NO tire las pilas a la basura doméstica ni las incinere.
- b) Incluso las pilas usadas pueden causar lesiones graves o la muerte.
- c) Llame a un centro de toxicología local para obtener información sobre el tratamiento.
- d) El tipo de pila compatible: CR2032
- e) El voltaje nominal de la pila: 3V
- f) Las pilas no recargables no deben recargarse.
- g) No fuerce la descarga, la recarga, el desmontaje, el calentamiento por encima de 60°C (temperatura nominal especificada por el fabricante) ni la incineración. De lo contrario, podrían producirse lesiones por ventilación, fuga o explosión que provoquen quemaduras químicas.

Los productos con pilas de botón/batería de moneda no sustituibles deberán además incluir una declaración que indique que el producto contiene pilas no sustituibles.

ZOSI



www.zositech.com

Support Email: service@zositech.com

Facebook: <https://www.facebook.com/ZosiTechnology/>

Whatsapp: +1-866-841-6932

UK Whatsapp: +86 18675610962

Copyright © 2025 ZOSI Technology Co., Ltd.

No part of this publication may be reproduced in any way without the written permission of ZOSI. The information in this publication is believed to be accurate in all respects. ZOSI assumes no responsibility for any consequences resulting from their use. As our products require continuous improvement, ZOSI reserves the right to modify product designs, specifications and prices without notice and without any obligation. All rights reserved, and ZOSI reserves the final interpretation right of this manual.



HDMI
HIGH-DEFINITION MULTIMEDIA INTERFACE

F921014Z3008320