

How To Use Your Kidde Extinguisher

Follow instructions shown on the front label of your fire extinguisher.

Cómo Usar Su Extinguidor Kidde

Siga las instrucciones en la etiqueta del frente de su extinguidor.

After the fire is out, clean up dry chemical powder immediately to avoid corrosion.


CAUTION: Under certain fire and heat conditions, the dry chemical powder in ABC type extinguishers will cause damage or prove extremely difficult to remove from oven surfaces, including self-cleaning models. Do not use self-cleaning feature to remove ABC Powder. BC type extinguishers are recommended for cooking areas.

CAUTION: The agent contained in this extinguisher is not toxic, but may cause skin irritation. Avoid inhaling the dry chemical agent. In case of contact, flush affected area with clean, cool water. If irritation persists, contact a physician immediately. Chemical name of agent is printed on extinguisher label.

For more information on fire fighting, contact your local fire department or the U.S. Coast Guard. Additional information on extinguishers can be found in the National Fire Protection Association (NFPA) pamphlet No. 10, "Portable Fire Extinguishers."

Mounting Your Extinguisher


Please follow the instructions and diagrams below for mounting the bracket that was supplied with your fire extinguisher. The hanger or bracket provided with the extinguisher must be used. Use of an existing hanger or bracket may not properly support or retain the extinguisher. U.S. Coast Guard approval is valid only with the marine mounting bracket specified on the instruction label of your extinguisher.

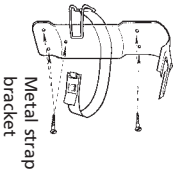

Metal strap
bracket



Plastic wall
hanger




Metal wall
hanger

Plastic Strap Bracket Instructions


Instrucciones del soporte con bandas plasticas en español

1



1. Fasten bracket to wall with appropriate fasteners (not included).
1. Fije el soporte en la pared con los sujetadores apropiados (no están incluidos).

2



2. Place extinguisher into bracket. Buckle straps together to lock in place.
2. Coloque el extinguidor en el soporte. Enganche las abrazaderas hasta unirse en sitio.

IF YOUR EXTINGUISHER WAS SHIPPED WITH A PLASTIC BRACKET AND METAL STRAP

- then mount your extinguisher as follows:
1. Fasten bracket to suitable surface using a screw in the upper bracket mounting hole.
 2. Mount the metal strap provided with your extinguisher in the lower bracket mounting hole using another screw.
 3. Place extinguisher into bracket and latch the strap to hold the extinguisher securely in place.

IF YOUR EXTINGUISHER WAS SHIPPED WITH A HOSE AND HOSE STRAP

then slide the hose strap over the bottom of the cylinder, and secure the nozzle end of the hose to the hose strap before placing your extinguisher in service.

366224R

SI SU EXTINGUIDOR FUE ENVIADO CON UNA BANDA DE METAL

- entonces monte su extinguidor de la siguiente manera:
1. Ponga el soporte en una superficie apropiada usando un tornillo de 1/4 de pulgada en diametro, ponga este en el agujero de arriba de la montura.
 2. Monte la banda de metal que le ha sido proveida con su extinguidor en el agujero de abajo de la montura usando otro tornillo de 1/4 de pulgada en diametro.
 3. Ponga el extinguidor en la montura y apriete la banda para que aguarde el extinguidor seguro en su lugar.

SI SU EXTINGUIDOR FUE ENVIADO CON UNA MANGUERA Y UNA ABRAZADERA DE MANGUERA, entonces, favor de sacar la abrazadera por la parte de abajo del cilindro, ajuste la manguera a la válvula del cuerpo y coloque la punta de la boquilla de la manguera a la abrazadera de la manguera antes de poner su extinguidor en servicio.

TEAR ALONG PERFORATIONS AND REMOVE

SERVICE/INSPECTION RECORD TAG
(REQUIRED FOR UL LISTING)

MODEL NO.: _____
SERIAL NO.: _____
YEAR OF MFG: _____



REPLACE OR RECHARGE IMMEDIATELY AFTER USE

FOR RECHARGE INFORMATION
CALL 1-800-880-6788

IMPORTANT: To ensure fire extinguisher will be ready when needed follow inspection and maintenance instructions in manual and familiarize yourself with operating instructions on the nameplate. Protect tag and extinguisher if exposed to weather.

DO NOT REMOVE OR ALTER THIS TAG



Read fire extinguisher labels completely before you read this owner's manual.

There are two common types of fire extinguishers. Type ABC extinguishers fight wood, paper and cloth fires, plus flammable liquid and electrical fires. Type BC extinguishers are for flammable liquids and electrical fires. To determine which class or classes of fire your extinguisher is designed to fight, locate the use code symbols on the front extinguisher label.

Using the wrong extinguisher on a fire could do more harm than good. Be sure you understand which extinguisher is appropriate for each class of fire. For protection against ALL COMMON CLASSES OF FIRES, you must choose a type ABC extinguisher.

To ensure that your fire extinguisher will be ready when needed:

- Read and follow all instructions on label and in owner's manual.
- Inspect the extinguisher AT LEAST once a month - more frequently if exposed to weather or possible tampering.
- Check that extinguisher is charged. Pointer on pressure indicator MUST be in green section. If pointer is in red or white section extinguisher is NOT ready for use.
- Be sure the lock pin is firmly in place.
- Keep the extinguisher clean. Check for dents, scratches, corrosion or any other damage.
- Check the discharge nozzle. Make sure it is clean and free of obstructions.

PASS

pull the pin	aim at the base of fire	squeeze lever & handle	sweep from side to side
--------------	-------------------------	------------------------	-------------------------



The fire extinguisher is filled with a dry chemical agent. Examine the extinguisher's instruction label to determine the types of fire that can be tackled with this extinguisher.

WILL OCCUR.

Six, Ten or Twelve-Year Limited Warranty (see below for 10 & 12 year applicable models).

KIDDE will repair or replace this product to the original owner free of charge, if defective in material or workmanship. This warranty does not apply to damages resulting from accident, alteration, abuse or failure to follow instructions supplied.

abuse or failure to follow instructions supplied.

KIDDE, at its option, may refund the purchase price in lieu of replacement or repair. ANY AND ALL IMPLIED WARRANTIES, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE SHALL BE LIMITED TO A PERIOD OF SIX (6) YEARS FROM DATE OF PURCHASE. KIDDE, its dealers and distributors shall not be responsible or in any way liable for any special or consequential damages for breach of any warrant or implied warranty.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Ten (10)-Year Warranty applies only to these models: FX10K, FX110E, FX210R, FX3405C-2, FX3406W-2, FX340H, FX3405W, FX340C. Twelve (12)-Year Warranty applies only to the model: FX3405C, XL 2.5 TCZ-4.

Lea todas las etiquetas en el extinguidor antes de leer este manual del usuario

Hay 2 tipos de extinguidores, Tipo ABC para usar en fuegos producidos por madera, papel y telas, así como también líquidos inflamables y fuegos producidos por electricidad. Tipo BC para usar sólo en fuegos producidos por líquidos inflamables y electricidad. Para determinar qué tipo de extinguidor usted posee, localice los símbolos en la etiqueta frontal. Usar un extinguidor no diseñado para una clase de fuego, puede agravar el incendio. Asegúrese de que comprende cuál extinguidor es el más apropiado para cada clase de fuego. Para una completa protección CONTRA TODO TIPO DE FUEGO, elija un extinguidor Tipo ABC.

Para asegurar que su extinguidor esté en buenas condiciones de funcionamiento:

- Lea y siga todas las instrucciones que aparecen en las etiquetas y el manual del usuario.
- Inspeccione su extinguidor POR LO MENOS 1 vez al mes, o más a menudo si se encuentra a la intemperie o existe la posibilidad de que alguien lo haya usado.
- Asegure que el extinguidor tenga su carga. La aguja del indicador de presión debe estar en la zona verde. Si está en las secciones roja o blanca, su extinguidor NO ESTÁ listo para ser usado.
- Controle que el gancho de seguridad esté firmemente ubicado.
- Mantenga el extinguidor limpio. Verifique que la unidad no tenga abolladuras, raspones, óxido o cualquier otro daño.
- Inspeccione la boquilla de descarga. Debe estar limpio y libre de cualquier obstrucción.

Fire Incidents (Types of Fire)



Common Combustibles	Flammable liquids	Electrical Equipment
Wood, paper, textile, plastic, rubber, etc.	Gasoline, kerosene and hydrocarbons	Computer cassettes, etc.

PÉRDIDA DE PRESION.

Seis (6), diez (10), o doce (12) años de garantía limitada (Vea abajo modelos de 10 & 12 años de garantía)

KIDDE reparará o repondrá este producto a su dueño original sin costo alguno, si tiene defecto de materiales o mano de obra. Esta garantía no cubre daños causados por accidentes, alteraciones, mal uso o por no seguir las instrucciones.

Como opción KIDDE devolverá el dinero
vez de reparación o reemplazo.

en vez de repartición o compensación. En todas y cada una de las garantías involucradas, incluyendo cualquier garantía de comerciabilidad o aptitud para un propósito general, deberá limitarse a un período de seis (6) años desde la fecha de compra. KIDDE, sus agentes y distribuidores no serán responsables o en ninguna forma culpables por incumplimiento de cualquier garantía escrita o involucrada debido a causas o daños especiales.

Esta garantía le ofrece derechos legales específicos y también puede tener derechos adicionales que varían de estado a estado.

La garantía de diez (10) años solo se aplica a los modelos: FX10K, FX110E, FX210R, FX340H, FX340SW, FX340C. La garantía de doce (12) años solo se aplica al modelo: FX340SC.

[illegible]

1016 CORPORATE PARK DRIVE
MEBANE, NC 27302-9711, USA
1-800-880-6788 www.kiddle.com

FASTEN TAG TO EXTINGUISHER
BEFORE MOUNTING UNIT
DO NOT REMOVE THIS TAG
INSPECTION RECORD

